

MG1

SERVICEGUIDE



Revision History

Please refer to the table below for the updates made on the MG1 service guide.

Date	Chapter	Updates

Service guide files and updates are available on the ACER/CSD web. For more information, refer to <http://csd.acer.com.tw>

Copyright

© 2008 Gateway, Inc. All rights reserved. Gateway, Gateway Country, the Gateway stylized logo, and the black-and-white spot design are trademarks or registered trademarks of Gateway, Inc. in the United States and other countries. All other brands and product names are trademarks or registered trademarks of their respective companies.

PRINTED IN TAIWAN

Contents

Chapter 1: System specifications	1
Preface	2
Conventions	2
General information	2
Features	2
System block diagram	5
Hardware specifications and configurations	6
CPU	6
Controllers	6
BIOS	7
Memory	7
Hard Disk Drive	8
Optical drive	8
LCD	8
Inverter	8
Video subsystem	8
Keyboard	9
Pointing device	9
Memory card reader	10
ExpressCard	10
Audio	10
Wired LAN	11
Bluetooth	11
Wireless LAN	11
Modem	12
USB	12
Buttons/Indicators/Ports	13
Fingerprint reader	13
Camera	13
Fans	14
Battery	14
Power supply	15
Power savings	15
Notebook product tour	16
Front	16
Left	16
Right	17
Back	18
Bottom	19
Keyboard area	20
LCD panel	21
Using the status indicators	22
Using the keyboard	23
Using the optional fingerprint reader	25

Using the EZ Pad touchpad	30
Using the optional multimedia panel	32
Using the optional webcam	33
Chapter 2: System utilities	37
BIOS Setup Utility	38
Navigating the BIOS Setup Utility	38
BIOS Setup Utility screens	39
BIOS flash utility	48
Removing a password lock	49
Removing a HDD password lock	49
Removing a Supervisor password lock	49
Chapter 3: Replacing notebook components	51
Preventing static electricity discharge	52
Tape	52
Preparing your work space	53
Tools required	54
Preparing the notebook	55
Removing the battery	55
Adding or replacing memory modules	56
Replacing the main cooling assembly	58
Replacing the processor	61
Replacing the IEEE 802.11 wireless card	63
Replacing the CMOS battery	66
Replacing the hard drive	69
Replacing the DVD drive	73
Replacing the keyboard cover	76
Replacing the keyboard	79
Replacing the inverter	82
Replacing the webcam	85
Replacing the lid latches	88
Replacing the LCD assembly	91
Replacing the LCD panel	94
Replacing the LCD panel hinges	98
Replacing the LCD assembly lid	102
Replacing the palm rest	104
Replacing the touchpad board	108
Replacing the touchpad button board	112
Replacing the fingerprint reader	115
Replacing the Bluetooth module	118
Replacing the modem	121
Replacing the speakers	125
Replacing the system board and VGA cooling assembly	128

Replacing the modem jack/USB board	136
Replacing the fan(s)	139
Chapter 4: Troubleshooting	143
Diagnosing problems	144
System test procedures	144
Testing the optical drive	144
Testing the keyboard or auxiliary input device	145
Testing the memory	145
Testing the power system	145
Testing the touchpad	147
Power-On Self-Test (POST) error message	147
Index of error messages	148
Error codes	148
Error messages	148
No-beep error messages	150
Phoenix BIOS beep codes	151
Symptom-to-FRU error messages	156
LCD	156
Power	156
ExpressCard	157
Memory	157
Sound	157
Power management	157
Devices	158
Keyboard and touchpad	158
Modem	159
Intermittent problems	159
Undetermined problems	159
Chapter 5: Connector locations	161
System board top connectors	162
System board bottom connectors	162
Chapter 6: FRU (Field-Replaceable Unit) list	163
Introduction	164
Exploded diagram	165
Notebook chassis	165
Notebook LCD panel	166
FRU list	167
Appendix A: Model definition and configuration	173
Appendix B: Test compatible components	175
Introduction	176

Microsoft® Windows® Vista Environment Test176

Appendix C: Online support information 179

CHAPTER 1

System specifications

- Preface
- Features
- System block diagram
- Hardware specifications and configurations
- Notebook product tour

Preface

Conventions

The following conventions are used in this manual:



Indicates a potential for personal injury.



Caution

Indicates a potential loss of data or damage to equipment.



Important

Indicates information that is important to know for the proper completion of a procedure, choice of an option, or completing a task.

General information

Before using this information and the product it supports, read the following general information.

This service guide provides you with all technical information relating to the **basic configuration** decided for Acer's **global** product offering. To better fit local market requirements and enhance product competitiveness, your regional office **may** decide to extend the functionality of a machine (such as add-on cards, modems, or extra memory capabilities). These **localized features** **not** guide. In such cases, contact your regional offices or the responsible personnel/channel to provide you with further technical details.

When ordering FRU parts: Check the most up-to-date information available on your regional web or channel. If, for whatever reason, a part number change is made, it may not be noted in this printed service guide.

Acer-authorized Service Providers: Your Acer office may have a **different** part number code to those given in the FRU list of this printed service guide. You use the list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

Features

Platform

- [®] Merom or Pentium processor (1.46GHz to 2.80GHz or above) with 800/667/533 MHz FSB.
Core Logic: Intel GM45/GL40 Northbridge, Intel ICH9M/ICH9ME Southbridge
Intel[®], Realtek, Marvell, or Foxconn IEEE1394 a/b/g/n

System Memory

- Dual-Channel DDR2 SDRAM support
Up to 2 GB of DDR2 533/667 MHz memory, upgradeable to 4 GB using two SO-DIMM modules

Display and graphics

- 17" WUXGA/WSXGA TFT LCD display panel
VGA Memory:
[XXX](#)
VGA Controller:
[XXX](#)
Dual independent display support
16.7 million colors
MPEG-2/DVD hardware-assisted capability (acceleration) [<Please verify>](#)
MPEG-2/DVD decoding (for selected models) [<Please verify>](#)
WMV9 (VC-1) support (acceleration) [<Please verify>](#)
WMV9 (VC-1) and H.264 (AVC) decoding (for selected models) [<Please verify>](#)
HDMI™ (High-Definition Multimedia Interface) with HDCP (High-bandwidth Digital Content Protection) support

Storage subsystem

- Industry standard 2.5" 60–120GB 9.5mm height hard disk drive
Optical drive options:
Blu-ray Disc™/DVD-Super Multi double-layer drive
DVD-Super Multi double-layer drive
DVD/CD-RW combo drive
5-in-1 card reader, supporting Secure Digital™ (SD), MultiMediaCard (MMC), Memory Stick® (MS), Memory Stick PRO™ (MS PRO), xD-Picture Card™ (xD)

Input devices

- 103-key keyboard, 2.5 mm (minimum) key travel
- Twelve function keys, four cursor keys, two Windows® keys
- Touchpad pointing device
- Media keys on optional multimedia panel

Audio

-
-
-
-

Communication

-
-
- 2.0+EDR (Enhanced Data Rate)
LAN: 10/100 Ethernet
Modem: 56K ITU V.92 ready Fax/Modem

I/O Ports and devices

-
-
- Modem (RJ11) (optional)
- Ethernet (RJ45)
- IEEE1394
- eSATA
- Headphone/SPDIF Audio Out
- Microphone in
- DC in jack for AC adapter
- ExpressCard™/54 slot
- Fingerprint reader (optional)
- 5-in-1 card reader (SD™, MMC, MS, MS PRO, xD)
- HDMI™ port with HDCP support (optional)

Kensington lock slot

Environment

- - Operating: 32 °F to 90 °F (0 °C to 35 °C)
 - Non-operating: -4 °F to 140 °F (-20 °C to 60 °C)
- Humidity (non-condensing):
- Operating: 10% to 90%
 - Non-operating: 5% to 95%

Hardware specifications and configurations

CPU

Item	Specification
CPU type	Intel Merom Core Duo and Merom-Lite
Core logic	Intel GM45/GL40 + ICH9M/ICH9ME
CPU package	Socket-P, µFCPGA
CPU core voltage	<Please provide>

Controllers

Item	Controller
Core logic	Intel GM45/GL40/PM45 + ICH9M/ICH9ME
VGA	<ul style="list-style-type: none">Intel Crestline-GMNvidia NV8E-GT/NB9E-GT
LAN	<ul style="list-style-type: none">RealTek RTL8111C-GRMarvell 88E8057
USB 2.0	<Please provide>
Super I/O controller	<Please provide>
Modem	Agere Delphi AM5 (MDC 1.5 form factor)
Bluetooth	<Please provide>
Wireless 802.11	<ul style="list-style-type: none">Foxconn T60H928Intel WiFi Link 5100Intel GolanIntel KedronMarvell WN6500MMarvell WN6300MRealtek RTL8187
ExpressCard	<Please provide>
Memory Card Reader	RTS5158
Audio Codec	<ul style="list-style-type: none">Conexant CX2056-15ZSigmaTel STAC9205

BIOS

Item	Specification
BIOS vendor	Phoenix
BIOS Version	<ul style="list-style-type: none">▪ 9C.XX▪ 94.XX
BIOS ROM type	<Please provide>
BIOS ROM size	<Please provide>
BIOS package	<Please provide>
Supported protocols	<p><Please Verify></p> <ul style="list-style-type: none">▪ ACPI 1.0b/2.0/3.0 compliance▪ PCI 2.2 or later▪ System/HDD Password Security Control▪ INT 13H Extensions▪ PnP BIOS 1.0a▪ SMBIOS 2.4 or later▪ BIOS Boot Specification▪ Simple Boot Flag 1.0▪ Boot Block▪ PCI Bus Power Management Interface Specification▪ USB Specification 1.1/2.0▪ IEEE 1394 1.0▪ USB/1394 CD-ROM Boot Up support▪ PC Card Standard 1995 (PCMCIA 3.0 Compliant Device)▪ IrDA 1.0▪ Support HD audio▪ WfM 2.0, PXE 2.1▪ Preboot Execution Environment (PXE) 2.1▪ Boot Integrity Service Application Program Interface (BIS) 1.0▪ PC2002/2005 compliant▪ Intel Enhanced Speedstep Technology▪ ASF 2.0▪ TPM v1.2▪ AHCI support▪ iAMT 4.0 or later (for Intel platform)
BIOS password control	Manually set Supervisor and User passwords.

Memory

Item	Specification
Cache controller	<Please provide>
Cache size	<Please provide>

Item	Specification
Memory controller	Built-in
Memory size	0 MB (no on-board memory)
SO-DIMM socket number	2 sockets

Item	Specification
Supports memory size per socket	<ul style="list-style-type: none"> ▪ 2 GB per SO-DIMM ▪ 4 GB per SO-DIMM
Supports maximum memory size	<ul style="list-style-type: none"> ▪ 4 GB ▪ 8 GB
Supports SO-DIMM type	<ul style="list-style-type: none"> ▪ DDR 2 Synchronous DRAM ▪ DDR 3 Synchronous DRAM
Supports SO-DIMM Speed	<ul style="list-style-type: none"> ▪ 533/667MHz DDR 2 ▪ 800/1066MHz DDR 3
Supports SO-DIMM voltage	<Please provide>
Supports SO-DIMM package	200-pin SO-DIMM
Memory module combinations	You can install memory modules in any combinations as long as they match the above specifications.

Hard Disk Drive

Information not available at time of printing

Optical drive

Information not available at time of printing

LCD

Information not available at time of printing

Inverter

Information not available at time of printing

Video subsystem

Item	Specification
Chipset	<ul style="list-style-type: none"> ▪ Intel Crestline-GM GMZ X3100 ▪ Intel GM45 ▪ Nvidia NB8E-GT ▪ Nvidia NB9E-GT
Memory size	<ul style="list-style-type: none"> ▪ Intel shared memory ▪ Nvidia 512MB or 1GB

Item	Specification
Features	<p><Please Verify></p> <ul style="list-style-type: none"> ▪ Unified Shader Architecture ▪ Support Microsoft® DirectX® 10 Shader Model 4 ▪ Geometry Instancing 2.0 ▪ SGI OpenGL® 2.0 optimizations and support ▪ Adaptive PCI Express interface ▪ High efficiency integrated adaptable and programmable video processor (VP2) ▪ Integrated Bit Stream Processor (BSP) ▪ NVIDIA PureVideo/Pure Video HD technology ▪ Industry video codec standard hardware acceleration ▪ Advanced Spatial Temporal De-Interlacing ▪ Vibrant Color Temperature Correction ▪ LCD Overdrive ▪ High-Quality Real-Time video recording ▪ Best quality 10-bit display pipeline ▪ NVIDIA nView Multi Display Technology ▪ SmartDimmer Technology ▪ Integrated HDMI support ▪ Support for integrated HDCP ▪ NVIDIA Digital Vibrance Control Technology ▪ Integrate HDTV encoder ▪ Dual 400MHz RAMDACs
Core voltage	<Please provide>

Keyboard

Item	Specification
Keyboard controller	Winbond 8763
Total number of keypads	1032-key
Windows logo key	Yes
Internal & external keyboard work simultaneously	Plug USB keyboard to the USB port directly

Pointing device

Item	Specification
Type	Synaptics 372 Touchpad
Buttons	Left/Right
Scrolling	Scroll zone on right side of touchpad

Memory card reader

Item	Specification
Controller	RTS5158
Cards supported	Support 5-in-1 card reader (MMC, MS, MS-pro, SD, and xD)
Compliance	<p><Please Verify></p> <ul style="list-style-type: none"> ▪ Complies to SDIO Host Interface Specification Rev 1.0 ▪ Supports MMC, MMCplus, SD Memory, and SDIO cards ▪ SDIO Version 1.10 compliant with High-Speed Mode ▪ SD Host Interface Specification v1.0 ▪ SD Host Interface Specification v2.0 ▪ SD HC (High Capacity SD memory card) ▪ Supports SD memory card, with CPRM security ▪ Complies to MultiMediaCard™ Version 4.0 ▪ Supports Memory Stick™ and MS PRO media cards ▪ Supports xD-Picture™ card and SmartMedia™ cards

ExpressCard

Item	Specification
Controller	<Please provide>
Supports card type	Type 54
Number of slots	One
Access location	Right panel

Audio

Item	Specification
Audio Controller	SigmaTel STAC9205 Conexant CX2056-15Z
Audio onboard or optional	Built-in
Mono or Stereo	Stereo
Resolution	<ul style="list-style-type: none"> ▪ Ten DAC channels support 16/20/24-bit PCM format for 7.1 sound playback, plus 2 channels of independent stereo sound output (multiple streaming) through the front panel output ▪ Two stereo ADCs support 16/20/24-bit PCM format, one for stereo microphone, one for legacy mixer recording
Compatibility	<ul style="list-style-type: none"> ▪ HD Audio
Sampling rate	<ul style="list-style-type: none"> ▪ All DACs supports 44.1/48/96/192 kHz sample rate ▪ All ADCs support 44.1/48/96 kHz sample rate ▪ Two independent 16/20/24-bit S/PDIF-OUT converters support 44.1/48/96/192 kHz sample rate, one for nominal digital audio, the other one for digital audio output to HDMI transmitter
Internal microphone	With optional webcam

Item	Specification
Internal speaker/quantity	2 speakers (1.5 W per channel)
Features	<ul style="list-style-type: none"> ▪ 97 dB SNR DACs & 90 dB SNR ADCs ▪ Enable VoIP function ▪ Subwoofer support

Wired LAN

Item	Specification
LAN chipset	RealTek RTL8111C-GR Marvell 88E8057
Supports LAN protocol	10/100 Mbps
LAN connector type	RJ45
LAN connector location	Left side
Features	<ul style="list-style-type: none"> ▪ Integrated 10/10 BASE-T transceiver ▪ PCIe v1.1 compliant ▪ Wake on LAN support meeting ACPI requirements

Bluetooth

Item	Specification
Chipset	<Please provide>
Data throughput	2.1 Mbit/s
Protocol	Bluetooth 2.0
Interface	USB (board level)
Connector type	Wireless via Bluetooth protocols

Wireless LAN

Item	Specification
Chipset	<ul style="list-style-type: none"> ▪ Foxconn T60H928 ▪ Intel WiFi Link 5100 ▪ Intel Golan ▪ Intel Kedron ▪ Marvell WN6500M ▪ Marvell WN6300M ▪ Realtek RTL8187
Data throughput	11~54 Mbps, up to 270 Mbps for Draft-N

Item	Specification
Protocol	<ul style="list-style-type: none"> ▪ IEEE 802.11a ▪ IEEE 802.11b ▪ IEEE 802.11g ▪ IEEE 802.11 Draft-N
Interface	PCI bus (mini PCI socket for wireless module)

Modem

Item	Specification
Chipset	Agere Delphi AM5
Form factor	MDC 1.5 form factor
Protocol	<ul style="list-style-type: none"> ▪ ITU-T V.92, V.90 data mode with auto-fallback to V.34, V.32terbo, and V.32bis. ▪ V.42 LAPM and MNP 2-4 error correction. ▪ V.44, V.42bis, and MNP 5 data compression. ▪ Send and receive rates up to 14400 bps, support ITU-T V.17, V.29, V.27ter, and V.21 Ch2 fax. ▪ TIA/EIA 602 Standard for AT command set, and Fax TIA/EIA 578 Class 1 command set.
Interface	RJ11

USB

Item	Specification
Chipset	<Please provide>
USB compliancy level	2.0
OHCI	USB 1.1 and USB 2.0 host controller
Number of USB ports	3
Location	<ul style="list-style-type: none"> ▪ One on the left side ▪ Two on the right side
Serial port function control	Enable/Disable by BIOS Setup

Buttons/Indicators/Ports

Item	Specification
Buttons	<ul style="list-style-type: none"> ▪ Media control buttons and capacitive volume control on media panel ▪ Power button ▪ Windows Hotstart (select models only) ▪ Wireless on/off switch
Indicators	<ul style="list-style-type: none"> ▪ Wireless on/off ▪ Caps Lock ▪ Num Lock ▪ Hard drive activity ▪ Optical drive activity ▪ Power ▪ Battery charge
Ports	<ul style="list-style-type: none"> ▪ USB (three) ▪ External display (VGA) port ▪ Modem (RJ11) (optional) ▪ Ethernet (RJ45) ▪ IEEE1394 ▪ eSATA ▪ Headphone/SPDIF Audio Out ▪ Microphone in ▪ DC in jack for AC adapter ▪ ExpressCard™/54 slot ▪ Fingerprint reader (optional) ▪ 5-in-1 card reader (SD™, MMC, MS, MS PRO, xD) ▪ HDMI™ port with HDCP support (optional)

Fingerprint reader

Item	Specification
Model	UPEK TCS4BB
Interface	8-bit parallel, SPI
Resolution	High-definition 192 × 4 pixel array
Technology	CMOS active capacitive pixel-sensing
Power	3.3V
Software	Protector Suite QL

Camera

Item	Specification
Model	Chicony CNF6141
Interface	USB 2.0
Resolution	1.3 M pixels (1280 x 1024)
Signal to noise ratio	42 dB

Item	Specification
Sensor	CMOS 1/4
Power	5 V
Built-in microphone	Yes
LED	On/Off
Software	Gateway Camera Assistant

Fans

CPU Temperature	Fan Speed (rpm)	Acoustic Level (dBA)
<Please provide>	<Please provide>	<Please provide>

Throttling 50%: % is controlled by operating system. Temperature point is 95°C
OS shut down at 100°C; H/W shut down at 105°C

Battery

Item	Specification
Vendor	<ul style="list-style-type: none"> ▪ Dyna ▪ Sanyo ▪ Simplo
Battery Type	Li-ion
Pack capacity	5772mAH—8658mAH
Number of battery cell	6 or 9
Package configuration	<ul style="list-style-type: none"> ▪ 3 cells in series, 2 series in parallel ▪ 3 cells in series, 3 series in parallel
Normal voltage	11.1V
Charge voltage	12.6V (max)

Power supply

Item	Specification
Vendor	<ul style="list-style-type: none"> ▪ Delta ▪ Hipro
Input rating	90V AC to 264V AC, 47Hz to 63Hz
Maximum input AC current	1.5A (max)
Output rating	19V DC, 4.74A to 6.32A, 90W to 120W

Power savings

ACPI mode	Power Management
Mech. Off (G3)	All devices in the notebook are turned off completely.
Soft Off (G2/S5)	OS initiated shutdown. All devices in the notebook are turned off completely.
Working (G0/S0)	Individual devices such as the CPU and hard disc may be power managed in this state.
Suspend to RAM (S3)	<ul style="list-style-type: none"> ▪ CPU set power down ▪ VGA suspend ▪ PCMCIA suspend ▪ Audio power down ▪ Hard drive power down ▪ Optical drive power down ▪ Super I/O low power mode
Save to Disk (S4)	Also called Hibernation mode. System saves all system states and data onto the disc prior to powering off the whole system.

Notebook product tour



Important

Case color may vary from that shown in the pictures.

Front



Component	Icon	Description
Power indicator		<ul style="list-style-type: none"> LED on - Notebook is on. LED blinking - Notebook is in Sleep or Hybrid Sleep mode. LED off - Notebook is off.
Battery charge indicator		<ul style="list-style-type: none"> LED blue - Battery is fully charged. LED purple - Battery is charging. LED blinking red - Battery charge is very low. LED solid red - Battery is malfunctioning. <p>Important: This LED only lights up when your notebook is connected to AC power or the battery charge is very low.</p>
LCD panel release latch		Press to open the LCD panel.
Wireless network switch		<p>Turn the optional IEEE 802.11 wireless network radio and optional Bluetooth radio on or off.</p> <p>Warning: Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11 and Bluetooth communication devices are examples of devices that provide wireless communication.</p>


Left



Component	Icon	Description
Kensington™ lock slot		Secure your notebook to an object by connecting a Kensington cable lock to this slot.
USB ports		Plug USB devices (such as a diskette drive, flash drive, printer, scanner, camera, keyboard, or mouse) into these ports.

Component	Icon	Description
Ventilation fan		Helps cool internal components. Warning: Do not work with the notebook resting on your lap. If the air vents are blocked, the notebook may become hot enough to harm your skin. Caution: Do not block or insert objects into these slots. If these slots are blocked, your notebook may overheat resulting in unexpected shutdown or permanent damage to the notebook. Caution: Provide adequate space around your notebook so air vents are not obstructed. Do not use the notebook on a bed, sofa, rug, or other similar surface.
DVD drive		Insert CDs or DVDs into this drive.

Right

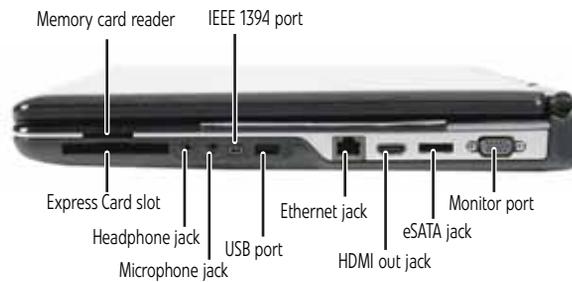

Component	Icon	Description
Memory card reader		Insert a memory card from a digital camera, MP3 player, PDA, or cellular telephone into the memory card reader. The memory card reader supports Memory Stick [®] , Memory Stick Pro [®] , Mini Secure Digital [®] , MultiMediaCard [™] , RS-MultiMediaCard [™] , Secure Digital [™] , and xD-Picture Card [™] cards.
IEEE 1394 port (optional)		Plug an IEEE 1394 (also known as Firewire [®] or i.Link [®]) device (such as a digital camcorder or MP3 player) into this optional 4-pin IEEE 1394 port.
Express Card slot		Insert one Type 54 Express Card into this slot.
Headphone jack		Plug amplified speakers or headphones into this jack. The built-in speakers are turned off when speakers or headphones are plugged into this jack.
Microphone jack		Plug a microphone into this jack. The built-in microphone is turned off while an external microphone is connected.
USB port		Plug a USB device (such as a diskette drive, flash drive, printer, scanner, camera, keyboard, or mouse) into this port.
Ethernet jack		Plug an Ethernet network cable into this jack. Plug the other end of the cable into a cable modem, DSL modem, or an Ethernet network jack.
HDMI out jack (optional)	HDMI	Plug an HDMI device, such as a high definition television, into this optional jack.


Component	Icon	Description
eSATA jack (optional)	eSATA	Connect an external SATA hard drive to this optional jack.
Monitor port		Plug an analog VGA monitor or projector into this port.

Back




Component	Icon	Description
Ventilation fan		Helps cool internal components. Warning: Do not work with the notebook resting on your lap. If the air vents are blocked, the notebook may become hot enough to harm your skin. Caution: Do not block or insert objects into these slots. If these slots are blocked, your notebook may overheat resulting in unexpected shutdown or permanent damage to the notebook. Caution: Provide adequate space around your notebook so air vents are not obstructed. Do not use the notebook on a bed, sofa, rug, or other similar surface.
Power connector		Plug the AC adapter cable into this connector.
Modem jack (optional)		Plug a dial-up modem cable into this optional jack.

Bottom

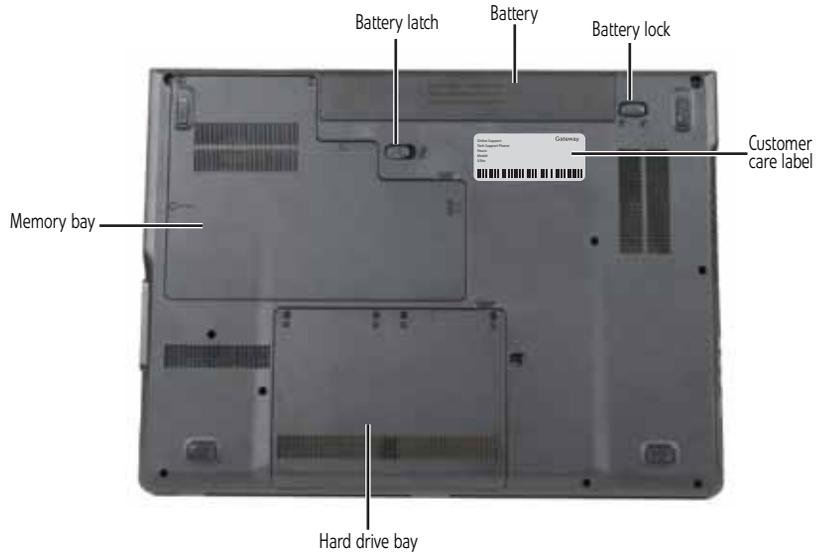


Component	Icon	Description
Memory bay		Memory modules are located in this bay.
Battery latch		Slide to release the battery.
Battery		Provides power when the notebook is not plugged into AC power.
Battery lock		Slide to unlock the battery.
Customer Care label		Includes the Customer Care contact information.
Hard drive bay		The hard drive(s) is (are) located in this bay.

Keyboard area

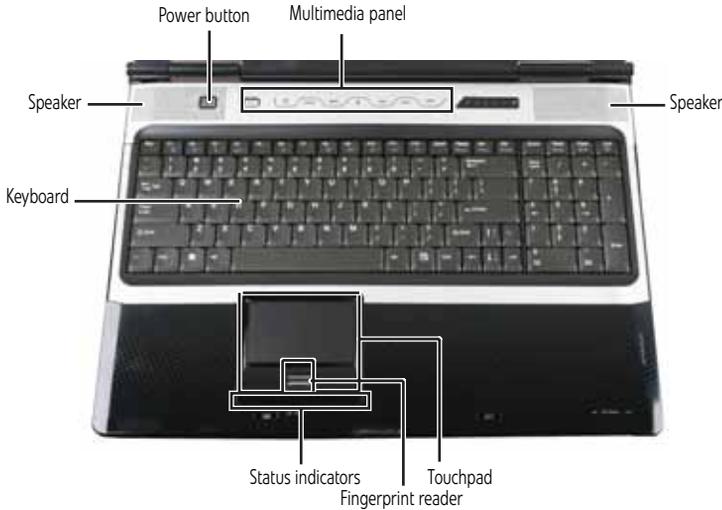

Component	Icon	Description
Keyboard		Provides all the features of a full-sized, computer keyboard.
Speakers		Provide audio output when headphones or amplified speakers are not plugged in.
Power button		Press to turn the power on or off. You can also configure the power button for Sleep/Resume mode.
Multimedia panel (optional)		Use to control playback of CDs and DVDs. The panel includes a capacitive (touch) volume control.
Touchpad		Provides all the functionality of a mouse.
Fingerprint reader (optional)		Provides enhanced security.
Status indicators		Inform you when a drive is in use or when a button has been pressed that affects how the keyboard is used.

LCD panel

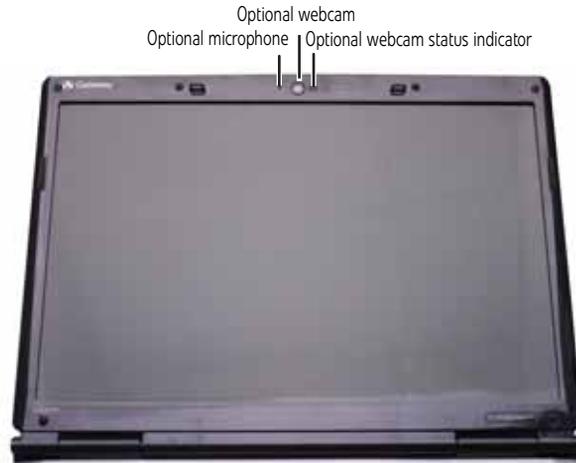

Component	Description
Microphone (optional)	Use to talk through when making Voice over Internet Protocol (VoIP) calls. Important: The optional microphone is only available when purchased with the optional webcam.
Webcam (optional)	Use to let others see who they are communicating with when making VoIP calls.
Webcam status indicator (optional)	Turns on when the webcam is turned on.


Using the status indicators



Important

If none of the indicators are on, you may need to press **Fn+F1** to toggle the status indicators on.


Status indicators inform you when a drive is being used or when a button has been pressed that affects how the keyboard is used. The status indicators are located below the touchpad.

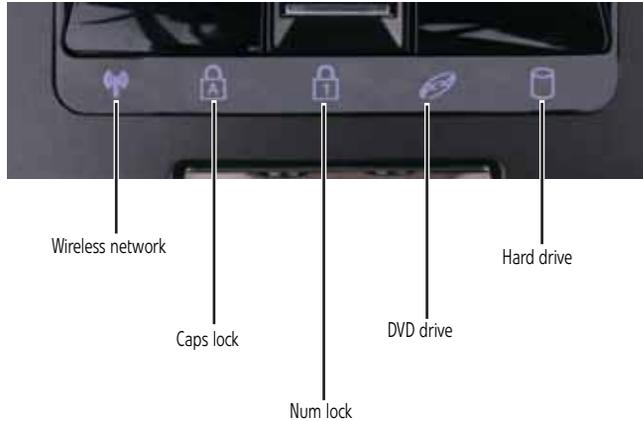

Indicator	Icon	Description
Wireless network		<ul style="list-style-type: none"> LED on - Optional wireless IEEE 802.11 radio is turned on. LED off - Optional wireless IEEE 802.11 radio is turned off.
Caps lock		<ul style="list-style-type: none"> LED on - Caps lock is turned on. LED off - Caps lock is turned off.
Num lock		<ul style="list-style-type: none"> LED on - Numeric keypad is turned on. LED off - Numeric keypad is turned off.
DVD drive		<ul style="list-style-type: none"> LED on - Drive is in use. LED off - Drive is not in use.
Hard drive		<ul style="list-style-type: none"> LED blinking - Hard drive is being accessed. LED off - Hard drive is not being accessed.

Using the keyboard

Your notebook features a full-size keyboard that functions the same as a desktop computer keyboard. Many of the keys have been assigned alternate functions, including shortcut keys for Windows and function keys for specific system operations.

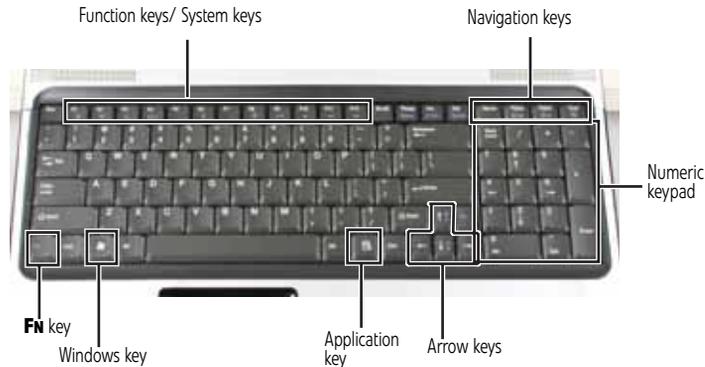

Key types

The keyboard has several different types of keys. Some keys perform specific actions when pressed alone and other actions when pressed in combination with another key.

Key type	Icon	Description
Function keys		Press these keys labeled F1 to F12 to perform actions in programs. For example, pressing F1 may open help. Each program uses different function keys for different purposes. See the program documentation to find out more about the function key actions.
System keys		Press these colored keys in combination with the FN key to perform specific actions.
Navigation keys		Press these keys to move the cursor to the beginning of a line, to the end of a line, up the page, down the page, to the beginning of a document, or to the end of a document.
Numeric keypad		Use these keys to type numbers.
FN key		Press the FN key in combination with a colored system key to perform a specific action.
Windows key		Press this key to open the Windows Start menu. This key can also be used in combination with other keys to open utilities like F (Search utility), R (Run utility), and E (Computer window).
Application key		Press this key for quick access to shortcut menus and help assistants in Windows.
Arrow keys		Press these keys to move the cursor up, down, right, or left.

System key combinations

When you press the **FN** key and a system key at the same time, your notebook performs the action identified by the text or icon on the key.

Press and hold FN, then press this system key... **To...**



Toggle the status indicators on or off.



Turn the optional IEEE 802.11 wireless network radio on or off.
Warning: Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11 communication devices are examples of devices that provide wireless communication.
Important: The wireless network switch must be in the ON position for this button to work.



Enter Sleep mode or Hybrid Sleep mode. Press the power button to leave Sleep mode.



Toggle the notebook display in the following order:

- The LCD
- An external monitor or projector (a monitor or projector must be plugged into the monitor port or HDMI port on your notebook)
- Both displays at the same time



Turn the optional Bluetooth radio on or off.
Warning: Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. Bluetooth communication devices are examples of devices that provide wireless communication.
Important: The wireless network switch must be in the ON position for this button to work.



Increase the LCD panel brightness above the normal brightest setting. Use this feature in bright lighting situations, such as outside in bright sunlight.
 Press a second time to decrease the brightness below the normal lowest brightness setting. Use this feature in dim lighting situations.
 Press a third time to return the display to the normal brightness setting.
Important: Using this feature will affect battery performance.



Play or pause the CD or DVD.



Stop playing the CD or DVD.



Skip back one CD track or DVD chapter.

Press and hold FN, then press this system key...	To...
	Skip ahead one CD track or DVD chapter.
	Increase the brightness of the display.
	Decrease the brightness of the display.
	Increase volume.
	Decrease volume.
	Mute the sound. Press the key combination again to restore the sound.

Using the optional fingerprint reader

Your notebook may include a fingerprint reader that provides enhanced security and convenience. The fingerprint reader is located between the left and right touchpad buttons.



Features include:

- Secure logon to Windows and fast user switching between user accounts
- Password bank feature which records and replays passwords used in Windows and Web-based applications
- A *safe* or folder for storing encrypted files that only a user with a matching fingerprint can access
- Boot level security that requires a fingerprint authentication before the system will boot to Windows
- Scrolling so you can use the fingerprint reader in place of the touchpad

Running the TouchStrip Tutorial

Before using the fingerprint reader the first time, you should run the TouchStrip Tutorial which teaches you the correct method to use the fingerprint reader.

► **To run the TouchStrip Tutorial:**

- 1 Click **Ⓜ** (**Start**), **All Programs, Protector Suite QL**, then click **Fingerprint Tutorial**.
- 2 Click **Next** to proceed through the tutorial.


Enrolling your fingerprints

Before you can use the features of the fingerprint reader, you must enroll your fingerprints so your notebook can identify you.

► **To enroll your fingerprints:**

- 1 Click **Ⓜ** (**Start**), **All Programs, Protector Suite QL**, then click **User Enrollment**. The *Welcome* screen opens.
- 2 Click **Next**. The *Finish* screen opens.
- 3 Select one of the following options, then click **Next**.
 - **Enrollment to the biometric device**—Select this option to save your fingerprint to memory in the fingerprint reader. Use this option to prevent unauthorized use of your notebook even if the hard drive has been removed.
 - **Enrollment to the hard disk**—Select this option to save your fingerprint to the hard drive. If you plan to enroll more than 21 fingerprints, you must select this option.


The *User Enrollment* wizard opens.

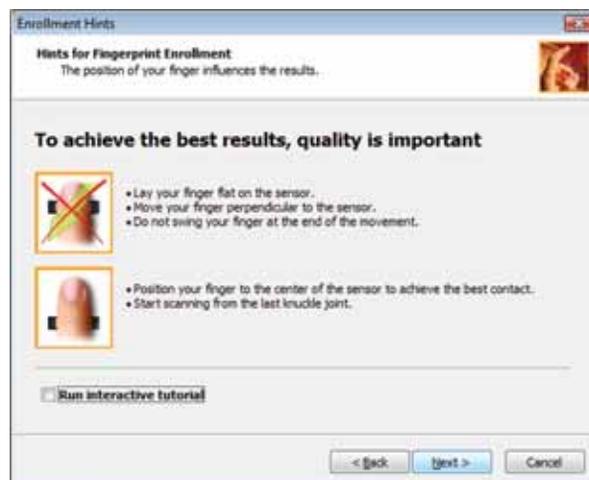

- 4 If you want to run the TouchStrip Tutorial, leave the **Run interactive tutorial** check box selected, then click **Next**. The *TouchStrip Tutorial* runs. After you have completed the tutorial, the *Enrollment* screen appears.

-OR-

If you do not want to run the *TouchStrip Tutorial*, click to uncheck the **Run interactive tutorial** check box, then click **Next**. The *Enrollment* screen appears.

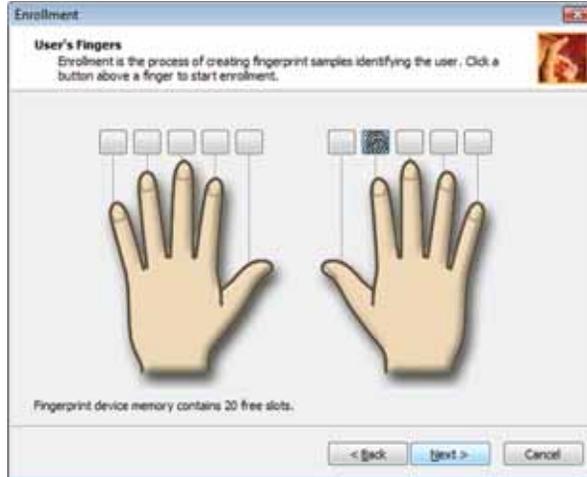

- 5 Click the button above the finger you are enrolling. A new box appears with three empty circles in it.



- 6 Swipe your finger. A sample will be created and is indicated by a fingerprint icon in one of the circles.



- 7 Repeat step [Step 6](#) two more times, then click **Next**. The *Advanced Security* screen appears.



- 8 Type a password in the **Backup password** box, type the same password in the **Retype password** box, then click **Next**.
- 9 Click **Finish**.
-

Using the Fingerprint Control Center

The Fingerprint Control Center lets the administrator of the notebook control how the fingerprint reader is used. You can:

- Add new fingerprints to the database
- Edit or delete fingerprints from the database
- Modify how fingerprints are used for logging onto the notebook
- Modify how the fingerprint reader is used for scrolling

► To use the Fingerprint Control Center:

- 1 Click **Ⓜ (Start), All Programs, Protector Suite QL**, then click **Control Center**. The *Fingerprint Control Center* opens.



- 2 If you are logged into the notebook with administrator privileges, click **Elevate administrative privileges for user** so you can make changes to the settings.

- 3 Click the yellow arrow in front of an option, then click the option or setting you want to change.
■

Using the password bank

The password bank stores registrations to your favorite secure Web sites so that you can access them without having to re-enter your username and password each time you want to log into the site.



Tip

The password bank also works with many computer programs that require entering a username and password.

- ▶ **To create a registration for a Web site:**
 - 1 Go to the Web site using your Internet browser.
 - 2 Log in using your user name and password.
 - 3 Swipe your already enrolled finger over the sensor. The fingerprint reader menu opens.




- 4 Click **Register**.
 - 5 Click on the dialog box or Web site sign in box.
■
- ▶ **To log on to a registered Web site:**
 - 1 Swipe your already enrolled finger over the sensor. The fingerprint reader menu opens.
 - 2 Click **Registered Sites**, then click the Web site you want to log onto.
 - 3 Your Internet browser opens and automatically logs you onto the Web site.
■

Using the fingerprint reader features

For more information about the fingerprint reader and how to use its features, click **® (Start)**, **All Programs**, **Protector Suite QL**, then click **Help**.

Using the EZ Pad touchpad




The EZ Pad™ consists of a touchpad, two buttons, and a scroll zone.

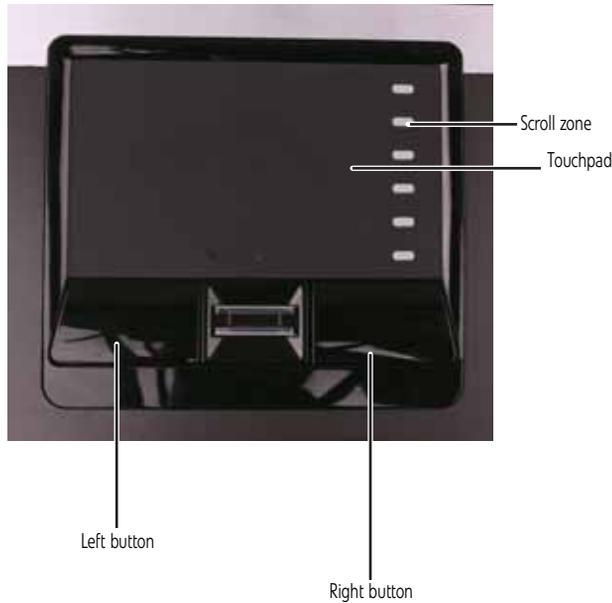


When you move your finger on the touchpad, the *pointer* (arrow) on the screen moves in the same direction. You can use the scroll zone to scroll through documents. Use of the scroll zone may vary from program to program.



You can use the EZ-Pad *left* and *right* buttons below the touchpad to select objects.

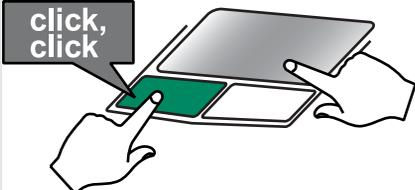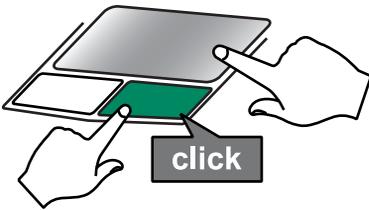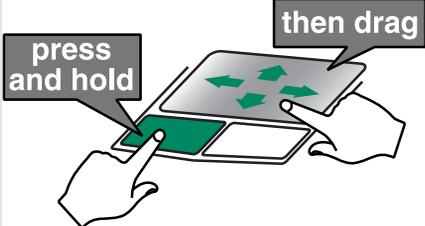To...	Do this...	
Move the pointer on the screen.		Move your finger around on the touchpad. If you run out of space and need to move the pointer farther, lift your finger, move it to the middle of the touchpad, then continue moving your finger.
Select an object on the screen.		Position the pointer over the object. Quickly press and release the left button once. This action is called <i>clicking</i> .
Start a program or open a file or folder.		Position the pointer over the object. Press the left button twice in rapid succession. This action is called <i>double-clicking</i> .
Access a shortcut menu or find more information about an object on the screen.		Position the pointer over the object. Quickly press and release the right button once. This action is called <i>right-clicking</i> .
Move an object on the screen.		Position the pointer over the object. Press the left button and hold it down, then use the touchpad to move (drag) the object to the appropriate part of the screen. Release the button to drop the object where you want it.

Using the optional multimedia panel

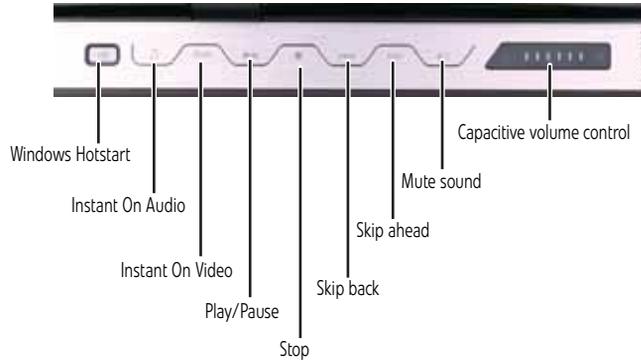

Button	Description
	<p>Windows Hotstart—Turns on the notebook (if turned off) and opens Media Center (Windows Vista Home Premium or Windows Vista Ultimate) or Windows Media Player (Windows Vista Home Basic). Important: You can use this button if the notebook is turned on, turned off, or in Sleep or Hibernate mode. Important: You cannot use this button if you are logged on as a guest.</p>
	<p>Instant on Audio—Opens Media Center (Windows Vista Home Premium or Windows Vista Ultimate) or Windows Media Player (Windows Vista Home Basic).</p>
	<p>Instant on Video—Opens Media Center (Windows Vista Home Premium or Windows Vista Ultimate) or the DVD player program (Windows Vista Home Basic).</p>
	<p>Play or pause the CD or DVD.</p>
	<p>Stop playing the CD or DVD.</p>
	<p>Skip back one CD track or DVD chapter.</p>
	<p>Skip ahead one CD track or DVD chapter.</p>
	<p>Mute the sound. Press again to restore the sound.</p>
	<p>Capacitive volume control—Swipe your finger on the volume sensor strip to change the volume. To increase volume, move from the - towards the +. To decrease volume, move from the + towards the -. Tip:</p> <ul style="list-style-type: none"> ▪ You can start swiping at any point on the strip. ▪ The duration of the swipe determines the amount of the change. ▪ At the end of this swipe, if you keep your finger on the strip, the volume control continues to change in the same direction. ▪ Tapping on the strip does not change the volume.

Using the optional webcam

You can use the optional webcam with many of the available Internet chat programs to add video and audio to your chat session. In addition, by using the software included with the webcam, you can take pictures or create video clips.



► **To use the webcam:**

- 1 Click  (**Start**), **All Programs**, **Camera Assistant Software**, then click **Camera Assistant Software**. The Camera Assistant Toolbar opens.

-OR-

Right-click  (Camera assistant software) on the taskbar, then click **Show Toolbar**. The Camera Assistant Toolbar opens.




Button	Icon	Description
Start camera		Turns on the camera and opens the preview screen.
Effects		Adds a decoration or border to your picture.
Properties		Modifies properties such as zoom, backlight compensation, brightness, and contrast.
Settings		Selects the position of the toolbar or modifies the picture, video, or audio settings.
Help		Opens online help.

 **Important**
 If you do not see the toolbar, the Auto Hide setting may be turned on. Move your pointer around the outside of the screen until the toolbar appears.

- 2 Click  (Start camera). The Camera Assistant opens.



 - 3 Click one of the following:

Button	Icon	Description
Snapshot		Take a picture of what is currently in the preview screen.
Video recording		Create a video recording.
Audio recording		Create an audio recording.
Functions		Change a setting or access online help.
Resolution		Change the size of the picture.
Mute		Turn audio capture on or off.
Effects		Add a decoration or border to your picture.

■

CHAPTER 2

System utilities

- BIOS Setup Utility
- BIOS flash utility
- Removing a password lock

BIOS Setup Utility

The BIOS Setup Utility is a hardware configuration program built into the notebook's BIOS (Basic Input/Output System). The notebook was shipped already properly configured and optimized. However, if the user encounters configuration problems, you may need to run Setup.




Important

Also see Chapter 4 "Troubleshooting" on page 143.

► To run the BIOS Setup Utility:

- 1 Turn on the notebook. You will see **Press <F2> to enter Setup** at the bottom of the screen.
- 2 Press **F2**. The BIOS Setup Utility opens.

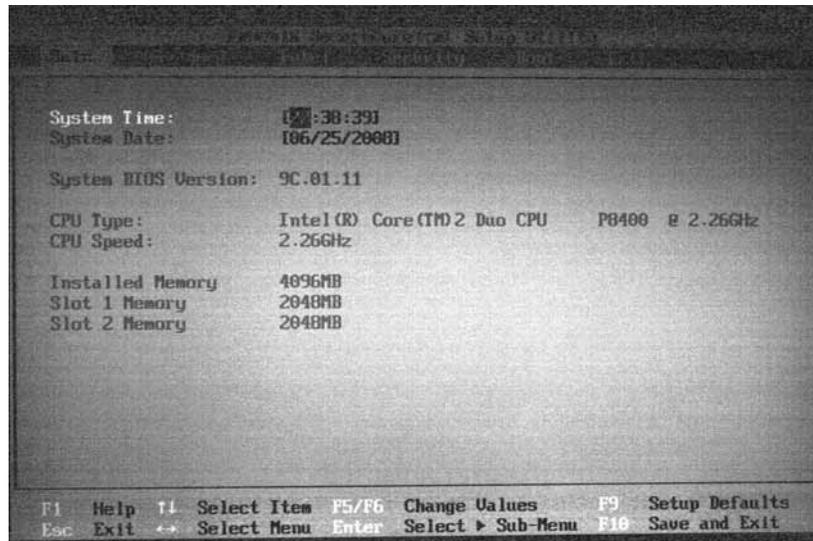

Navigating the BIOS Setup Utility

There are six menu options in the BIOS Setup Utility: Information, Main, Advanced, Intel, Security, Boot, and Exit.

► To use the BIOS Setup Utility:

- To choose a menu, use the left ← and right → arrow keys.
- To choose an item, use the up ↑ and down ↓ arrow keys.
- To change the value of a parameter, press **F5** or **F6**.
- A plus sign (+) indicates the item has sub-items. Press **ENTER** to expand this item.
- Press **ESC** while you are in any of the menu options to go to the Exit menu.
- In any menu, you can load default settings by pressing **F9**. You can also press **F10** to save any changes made and exit the BIOS Setup Utility.



Important

You can change the value of a parameter if it is enclosed in square brackets. Navigation keys for a particular menu are shown on the bottom of the screen. Help for parameters are found in the Item Specific Help part of the screen. Read this information carefully when making changes to parameter values. System information differs by model.


BIOS Setup Utility screens

Important

The screens shown in this section are for informational purposes only. Screen information varies by model, features ordered, and location.

Main screen


The Main screen allows the user to set the system time and date as well as view a summary of your notebook hardware information.

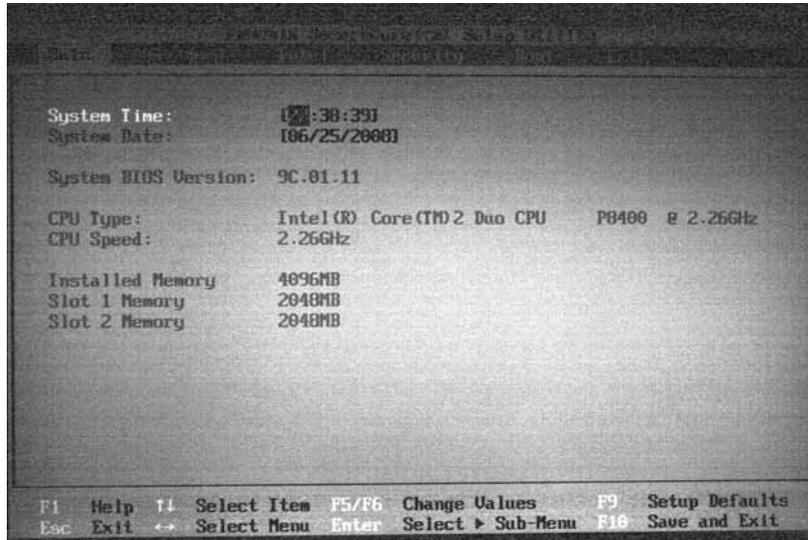

Parameter	Description
System Time	Sets the system time. The hours are displayed in a 24-hour format.
System Date	Sets the system date.
System BIOS Version	Shows the version of the system BIOS.
CPU Type	Shows the type of CPU installed in the notebook.
CPU Speed	Shows the speed of the CPU installed in the notebook.
Total Memory	Shows the total memory in the notebook.
Slot 1 Memory	Shows the memory in slot 1.
Slot 2 Memory	Shows the memory in slot 2.

Advanced screen

The Advanced screen allows the user to configure advanced notebook features.

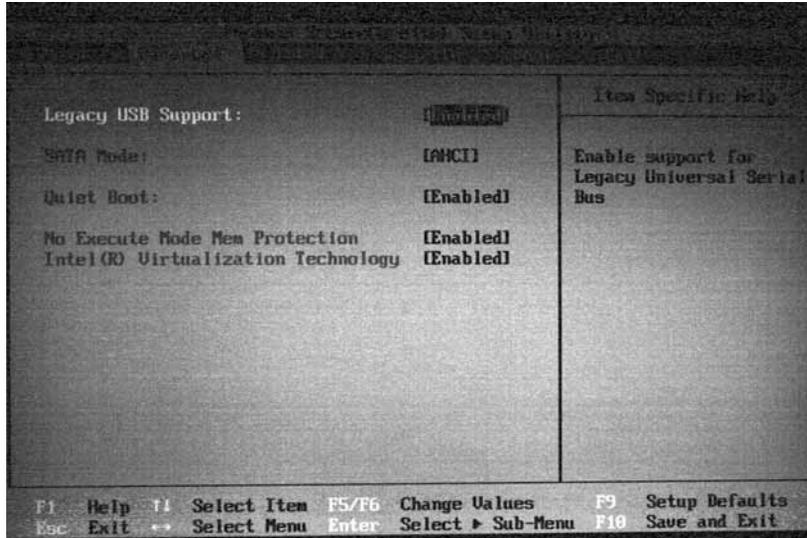


The table below describes the parameters found on this screen.

Parameter	Description	Format/Option
Legacy USB Support	Specifies if the USB devices work under MS-DOS or CMOS SETUP.	Option: Enabled or Disabled
Extreme CPU Speed	Specifies to speed of a GExtreme CPU.	
SATA Mode	Specifies the SATA controller mode.	Option: IDE, AHCI , or RAID
Quiet Boot	Determines if the Summary Screen is disabled or enabled. Enabled: The Gateway logo is displayed, and the Summary Screen is not displayed. Disabled: The Gateway logo is not displayed and the Summary Screen is displayed.	Option: Enabled or Disabled

Security screen

The Security screen contains parameters that help safeguard and protect your notebook from unauthorized use.

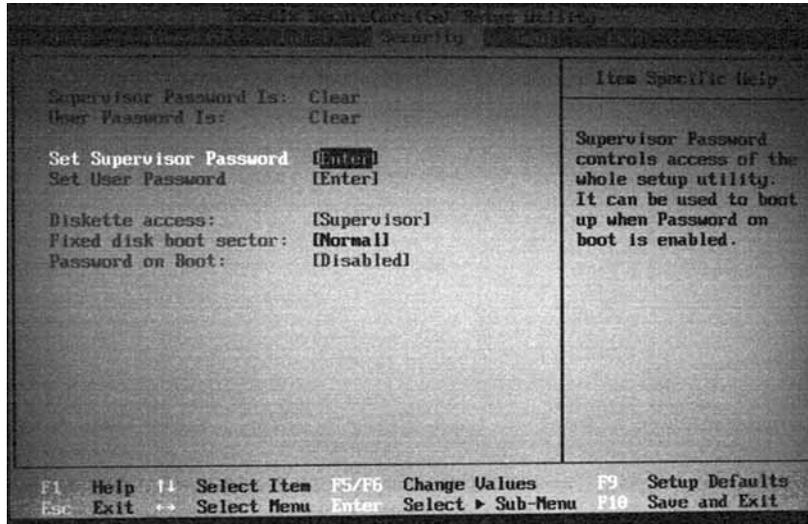

Important

Refer to ["Removing a password lock" on page 49](#) if you need to know how to remove a Hard Drive or BIOS Password.

The table below describes the parameters in this screen. Settings in **boldface** are the default and suggested parameter settings.

Parameter	Description	Option
Supervisor Password Is	Shows the setting of the Supervisor password	Clear or Set
User Password Is	Shows the setting of the User password.	Clear or Set
Set Supervisor Password	Press Enter to set the supervisor password. When set, this password protects the BIOS Setup Utility from unauthorized access. The user cannot enter the Setup Utility without entering this password.	
Set User Password	Press Enter to set the user password. When a user password is set, this password protects the BIOS Setup Utility from unauthorized changes. The user can enter the Setup Utility only and does not have the right to change the value of any parameters. If Password on Boot is enabled, the user must enter the user password each time the notebook is turned on or wakes from Sleep.	

Parameter	Description	Option
Fixed disk boot sector	Write protects the boot sector on the hard drive to protect against viruses.	Normal or Write Protect
Password on Boot	Defines whether a password is required or not while the events defined in this group happened. The sub-options all require the Supervisor password for changes and should be grayed out if the User password was used to enter the Setup Utility.	Disabled or Enabled



Caution

When you are prompted to enter a password, you have three tries before the system halts. Don't forget your password. If you forget your password, you may have to return your notebook to your dealer to reset it.

Setting a Password




Important

You must set a Supervisor password before you can set a User password.

► **To set the Supervisor password:**

- 1 Press **↑** or **↓** to highlight **Set Supervisor Password**, then press **ENTER**. The *Set Supervisor Password* box opens.

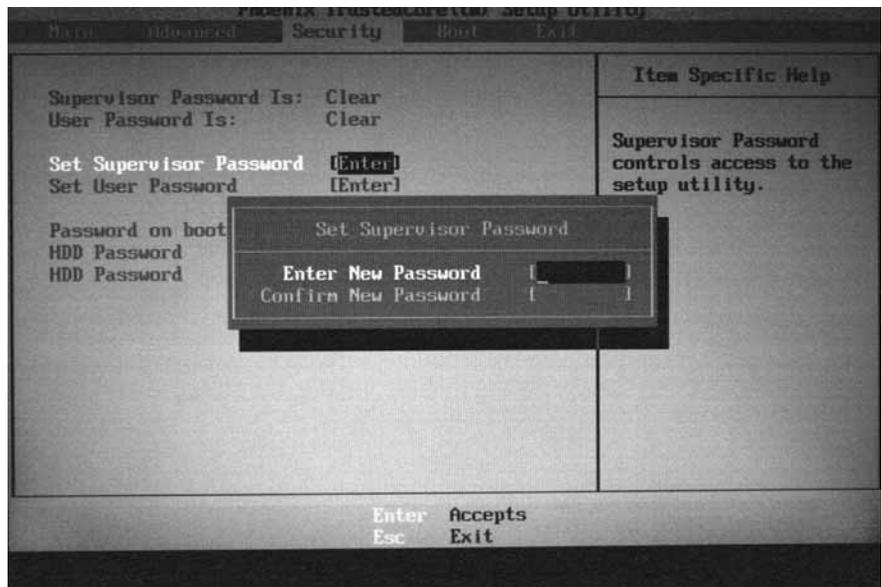

- 2 Type a password in the **Enter New Password** field. The password length cannot exceed eight alphanumeric characters (A-Z, a-z, 0-9). The password is not case sensitive.
- 3 Retype the password in the **Confirm New Password** field.



Caution

Be very careful when typing your password because the characters do not appear on the screen.

- 4 Press **ENTER**. After setting the password, the value of **Supervisor Password** changes to **Set**.
- 5 **Optional:** you can enable the Password on Boot parameter.
- 6 When you are done, press **F10** to save your password and exit the BIOS Setup Utility or you can proceed to setting the User password.

► **To set the User password:**

- 1 Press **↑** or **↓** to highlight **Set User Password**, then press **ENTER**. The *Set User Password* box opens.
- 2 Type a password in the **Enter New Password** field. The password length cannot exceed eight alphanumeric characters (A-Z, a-z, 0-9). The password is not case sensitive.
- 3 Retype the password in the **Confirm New Password** field.



Caution


Be very careful when typing your password because the characters do not appear on the screen.

- 4 Press **ENTER**. After setting the password, the value of **User Password** changes to **Set**.
- 5 When you are done, press **F10** to save your password and exit the BIOS Setup Utility.

Removing a Password

► **To remove a password:**

- 1 Press **↑** or **↓** to highlight **Set Supervisor Password** or **Set User Password**, then press **ENTER**. The *Set Supervisor Password* or *Set User Password* box opens.

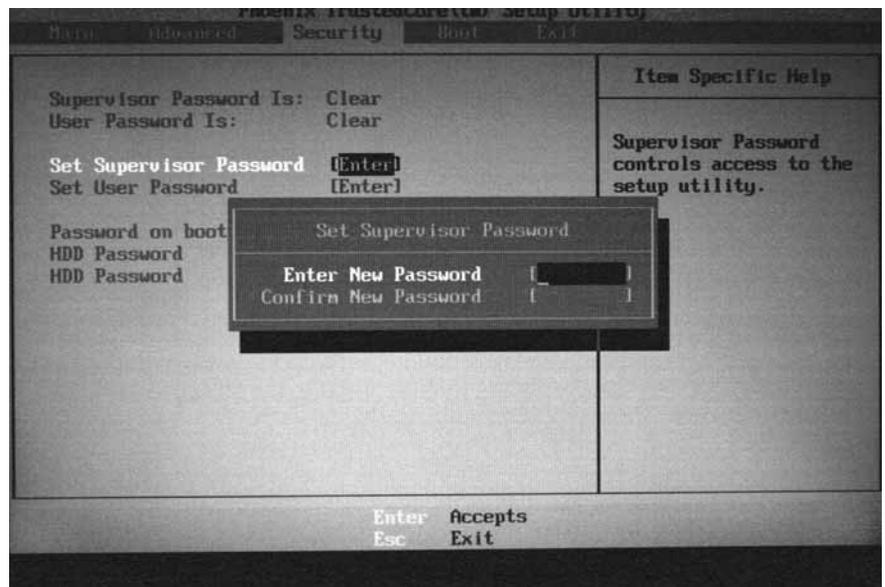


- 2 Type the current password in the **Enter Current Password** field, then press **ENTER**.
- 3 Press **ENTER** twice without typing anything in the **Enter New Password** and **Confirm New Password** fields. After removing the password, the value of **Supervisor Password** changes to **Clear**.
- 4 When you are done, press **F10** to save your password and exit the BIOS Setup Utility.

Changing a Password

► To change a password:


- 1 Press **↑** or **↓** to highlight **Set Supervisor Password** or **Set User Password**, then press **ENTER**. The *Set Supervisor Password* or *Set User Password* box opens.

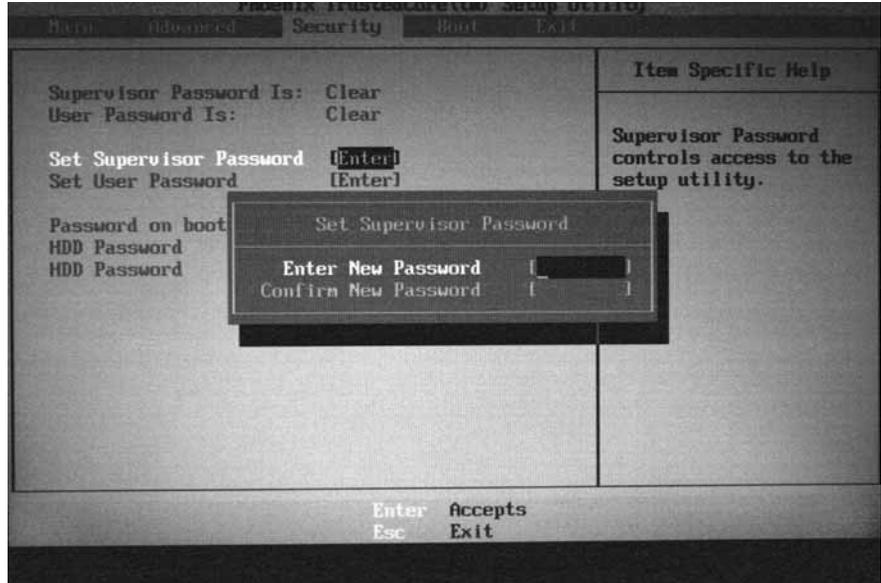

- 2 Type the current password in the **Enter Current Password** field, then press **ENTER**.

✓ Important

If you enter an incorrect current password, the screen displays the following. Press **ENTER**, then re-enter the current password.

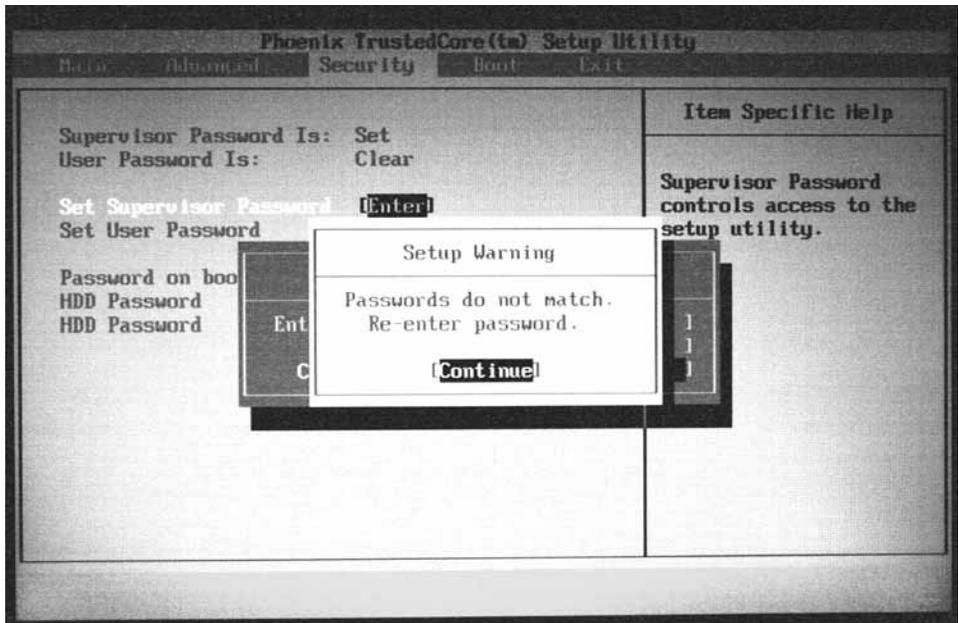


- 3 Type a password in the **Enter New Password** field.

- 4 Retype the password in the **Confirm New Password** field.




Important

If you do not enter the same new password and confirm new password, the screen displays the following. Press **ENTER**, then re-enter the new password and confirmation password.

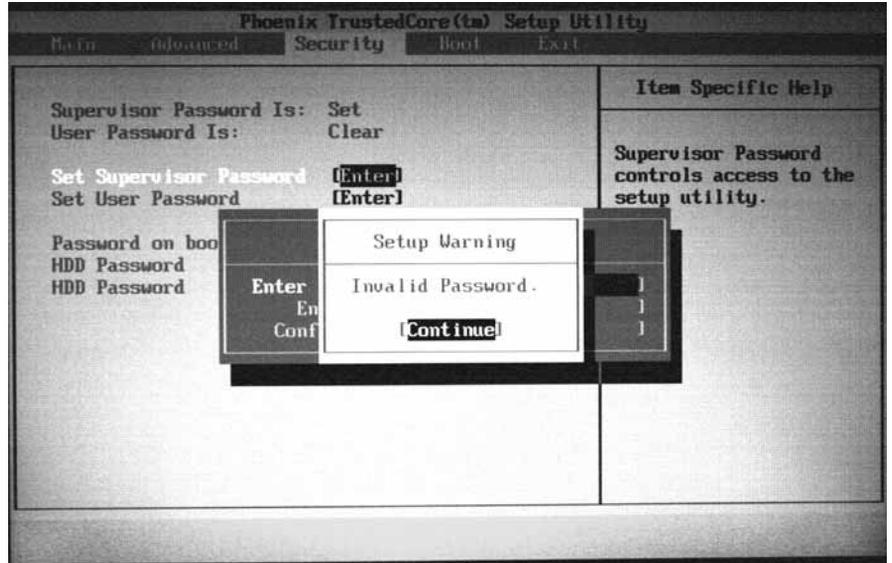


- 5 Press **ENTER**. The screen displays the following.

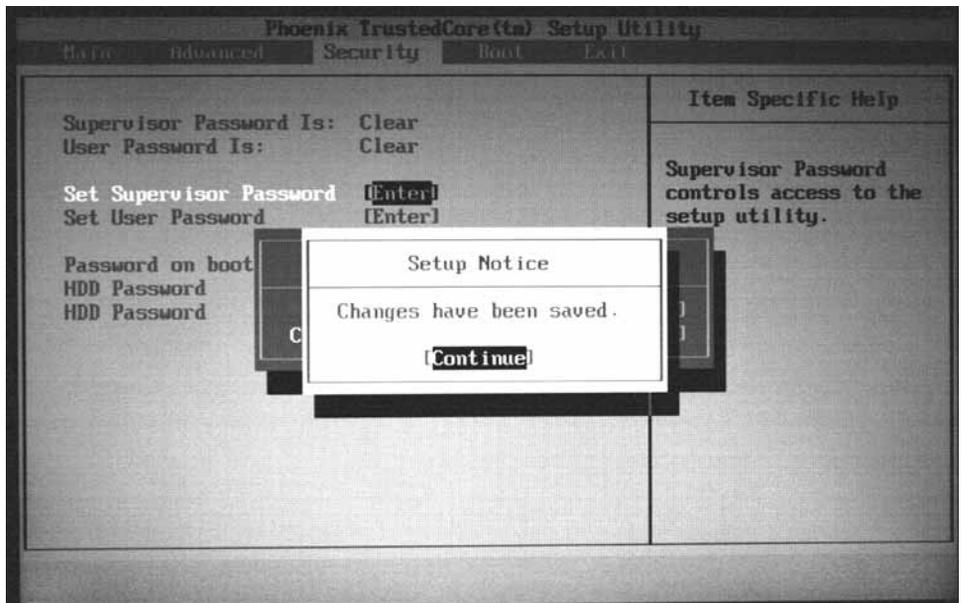

- 6 Press **ENTER**.
- 7 When you are done, press **F10** to save your password and exit the BIOS Setup Utility.


Boot

This menu allows the user to decide the order of boot devices to load the operating system. Bootable devices include the onboard hard disk drive and the optical drive. Follow the instructions in Item Specific Help to change to boot order of the notebook devices.

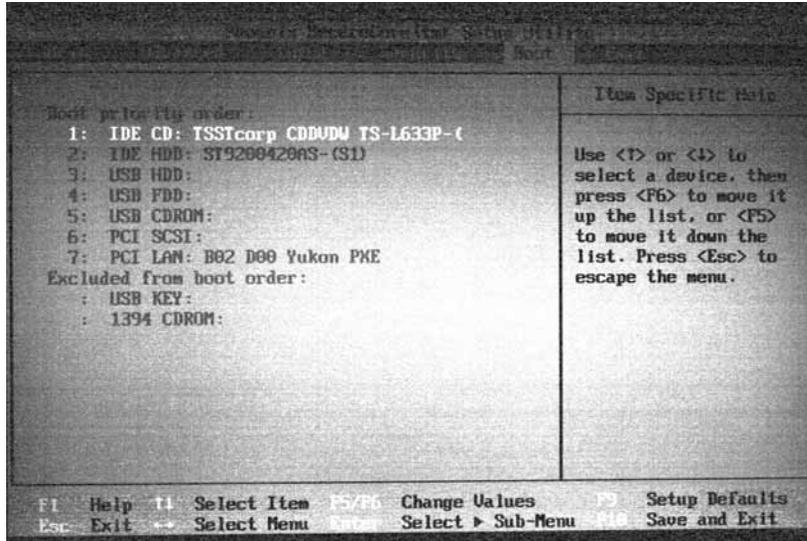

Exit

The Exit screen contains options for leaving the BIOS Setup Utility and starting Windows.

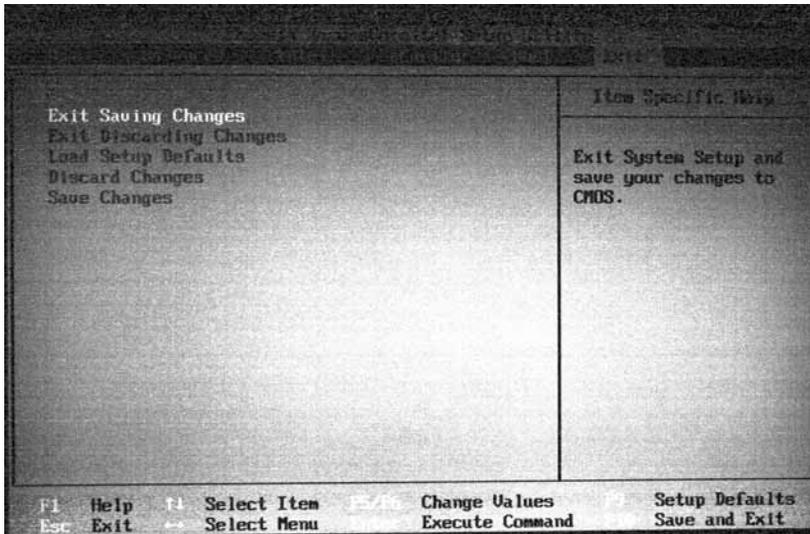

The table below describes the options on this screen.

Option	Description
Exit Saving Changes	Exit the BIOS Setup Utility and save your changes to CMOS.
Exit Discarding Changes	Exit the BIOS Setup Utility without saving your changes to CMOS.
Load Setup Default	Load default values for all SETUP items.

Option	Description
Discard Changes	Load previous values from CMOS for all SETUP items.
Save Changes	Save your changes to CMOS.

BIOS flash utility

Use the BIOS flash memory update for the following conditions:

- Install new versions of system programs.
- Install a new BIOS with updated features or options.
- Restore a BIOS when it becomes corrupted.

Use the Phlash utility to update the system BIOS flash ROM.



Important

Make sure that **emm386.exe** and **himem.sys** are not loaded into memory when using Phlash.



Caution

Use the AC adapter power supply when you run the Phlash or Nkbcf utility. If the battery pack does not contain enough power to finish flashing the BIOS, the notebook may not boot because the BIOS was not completely loaded.

► To use Phlash to update the BIOS:

- 1 Boot your notebook into native MS-DOS mode.
- 2 Make sure that emm386.exe and himem.sys are not loaded into system memory.
- 3 From the CD-ROM drive, type the DOS command **Phlash16** <rom-file name> /c/x/mode=3.
- 4 Press **ENTER**. Phlash runs automatically.

► To use Nkbcf to update the Keyboard BIOS:

- 1 Boot your notebook into native MS-DOS mode.
- 2 Make sure that emm386.exe and himem.sys are not loaded into system memory.
- 3 From the CD-ROM drive, type the DOS command **NKBCF** <kbc-file name>.
- 4 Press **ENTER**. Nkbcf runs automatically.

Removing a password lock

This section provides you with instructions to remove a hard drive or Supervisor password lock.

Removing a HDD password lock

If you type the wrong HDD password three times in a row, the error message **Hdd password error code** is displayed on the screen and the HDD is locked. If you need to solve a HDD password locked problem, you can [<Reviewer: What is the Gateway procedure to remove a HDD password lock? If someone sends the unit in for repair, how does the repair tech remove the lock?>](#)

Removing a Supervisor password lock

If you type the wrong Supervisor password three times in a row, the error message **System Disabled** appears on the screen and the notebook is locked. If you need to solve a BIOS password locked problem, you can [<Reviewer: What is the Gateway procedure to remove a Supervisor password lock? If someone sends the unit in for repair, how does the repair tech remove the lock?>](#)

► **How to remove the Supervisor password lock:**

- 1 [<Need instructions>](#)



Gap G46

CHAPTER 3

Replacing notebook components

- Preventing static electricity discharge
- Preparing your work space
- Tools required
- Preparing the notebook
- Adding or replacing memory modules
- Replacing the main cooling assembly
- Replacing the processor
- Replacing the IEEE 802.11 wireless card
- Replacing the CMOS battery
- Replacing the hard drive
- Replacing the DVD drive
- Replacing the keyboard cover
- Replacing the keyboard
- Replacing the inverter
- Replacing the webcam
- Replacing the lid latches
- Replacing the LCD assembly
- Replacing the LCD panel
- Replacing the LCD panel hinges
- Replacing the LCD assembly lid
- Replacing the palm rest
- Replacing the touchpad board
- Replacing the touchpad button board
- Replacing the fingerprint reader
- Replacing the Bluetooth module
- Replacing the modem
- Replacing the speakers
- Replacing the system board and VGA cooling assembly
- Replacing the modem jack/USB board
- Replacing the fan(s)

Preventing static electricity discharge



Warning

To avoid exposure to dangerous electrical voltages and moving parts, turn off your notebook, remove the battery, and unplug the power cord, modem cable, and network cable before opening the case.



Warning

To prevent risk of electric shock, do not insert any object into the vent holes of the notebook.



Important

Before performing maintenance on the notebook, you should read and understand the information in this section.

The components inside your notebook are extremely sensitive to static electricity, also known as *electrostatic discharge (ESD)*.

Before performing maintenance on the notebook, follow these guidelines:

- Avoid static-causing surfaces such as carpeted floors, plastic, and packing foam.
- Remove components from their antistatic bags only when you are ready to use them. Do not lay components on the outside of antistatic bags because only the inside of the bags provide electrostatic protection.
- Always hold components by their edges. Avoid touching the edge connectors. Never slide components over any surface.
- Wear a grounding wrist strap (available at most electronics stores) and attach it to a bare metal part of your workbench or other grounded connection.
- Touch a bare metal surface on your workbench or other grounded object.

Tape

Some of the procedures in this guide involve removing tape that holds cables or components. Two types of tape are used in this notebook:

- Mylar, non-conductive tape is typically transparent, with a red or brown tint.
- Conductive tape is typically grey or silver.

If the existing tape cannot be reused, replace it with the same type (conductivity) of tape. Both types of replacement tape should be non-ESD generating tape.

Do not use cellophane tape.

Preparing your work space

Before performing maintenance on the notebook, make sure that your work space and the notebook are correctly prepared.

- Wear a grounding (ESD) wrist strap, and use a grounded or dissipative work mat.
- Use a stable and strong table, and make sure that the table top is large enough to hold each component as you remove it.
- Use bright lighting to make part identification easier.
- Keep your work surface free from clutter and dust that may damage components.
- Use a magnetized screwdriver for removing screws.
- When removing components that are attached to the notebook by a cable, unplug the cable before removing the screws, when possible, to avoid damaging the cable.
- As you remove components and screws, lay them toward the rear of your work surface (behind the notebook) or far enough to the side that your arms do not accidentally brush them onto the floor.
- To help keep track of screws, try the following:
 - Place each component's screws in their own section of a parts sorter.
 - Place each component's screws next to the component on your work surface.
 - Print the first page of each task, then place the page toward the rear of your work surface. As you remove screws, place the screws in their respective boxes on the page.
 - After loosening screws that are deeply recessed in a hole (for example, on the bottom of the base assembly), you can leave the screws in the holes if you place small pieces of masking tape over the hole openings. When reassembling the component, just remove the tape and tighten the screws.
 - When you place flat-headed screws on your work surface, stand them on their heads to prevent the screws from rolling off the table.

Tools required

To disassemble the notebook, you need the following tools:

- Wrist grounding strap and conductive mat for preventing electrostatic discharge



- Flat screwdriver



- Phillips screwdriver



- Scribe or non-marring tool



- Tweezers



Preparing the notebook

► **To prepare the notebook for maintenance:**

- 1 Make sure that the disc drive is empty.
- 2 Turn off the notebook.
- 3 Close the LCD panel.
- 4 Disconnect the AC adapter, modem cable, and network cable.
- 5 Disconnect all peripheral devices connected to the notebook and remove any Express Cards and memory cards.
- 6 Remove the battery. For more information, see ["Removing the battery" on page 55](#).

Removing the battery

► **To remove the battery:**

- 1 Turn the notebook over so the bottom is facing up.
- 2 Slide the battery lock to the unlocked position .



- 3 Slide the battery release latch, then slide the battery out of the notebook.



Adding or replacing memory modules



Important

Use only memory modules designed for this Gateway notebook.

Tools you need to complete this task:




Phillips #0 screwdriver



► To add or replace memory modules:


- 1 Complete the steps in [“Preparing the notebook”](#) on page 55.
- 2 Loosen the memory bay cover screws (these screws cannot be removed).

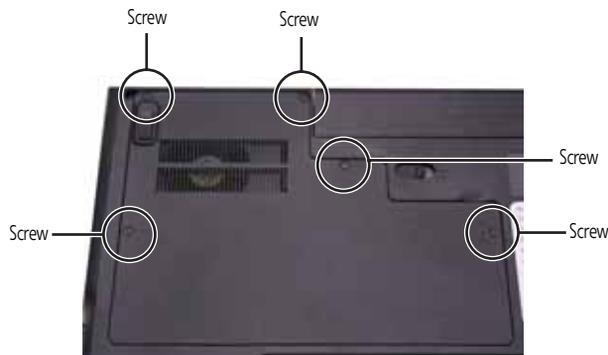

- 3 Use the thumb notch to lift the memory bay cover, then remove it. Be careful not to break off the tabs located on the end of the cover opposite the thumb notch.



- 4 If you are removing a module, gently press outward on the clip at each end of the memory module until the module tilts upward.

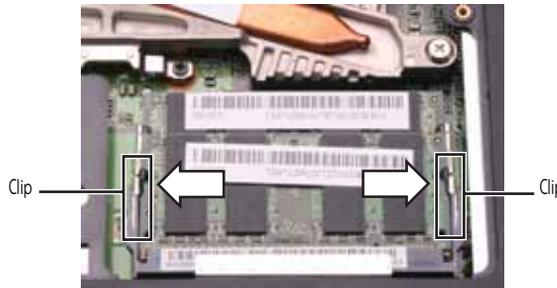

- 5 Pull the memory module out of the slot.




- 6 Hold the new or replacement module at a 30-degree angle and press it into the empty memory slot. This module is keyed so it can only be inserted in one direction. If the module does not fit, make sure that the notch in the module lines up with the tab in the memory bay.
- 7 Press the card down until it clicks into place.
- 8 Replace the memory bay cover, then tighten the cover screws.

Replacing the main cooling assembly

Tools you need to complete this task:



Screws removed during this task:

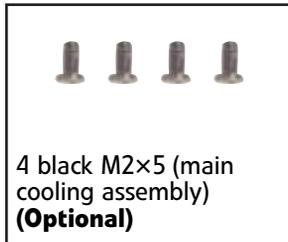


Additional materials you need to complete this task:

- X-23-7762 thermal grease



► To replace the main cooling assembly:

- 1 Complete the steps in [“Preparing the notebook”](#) on page 55.
- 2 Loosen the cooling assembly bay cover screws (these screws cannot be removed).

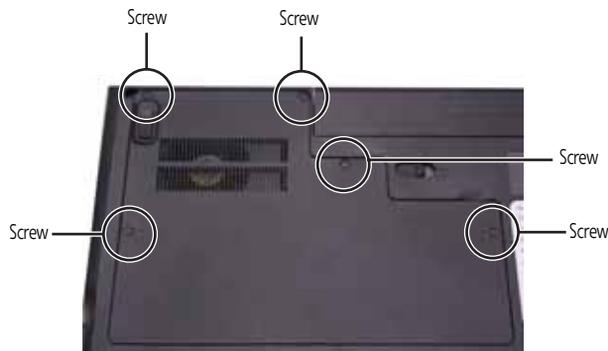

- 3 Use the thumb notch to lift the cooling assembly bay cover, then remove it. Be careful not to break off the tabs located on the end of the cover opposite the thumb notch.




- 4 Loosen or remove the screws that secure the main cooling assembly to the system board. Use the numbers stamped in the metal next to each screw and loosen the screws in reverse numerical order (start with 5, then 4, then 3, then 2, then 1).




Important


Screws 1 - 4 may be captive and you may not be able to remove them.

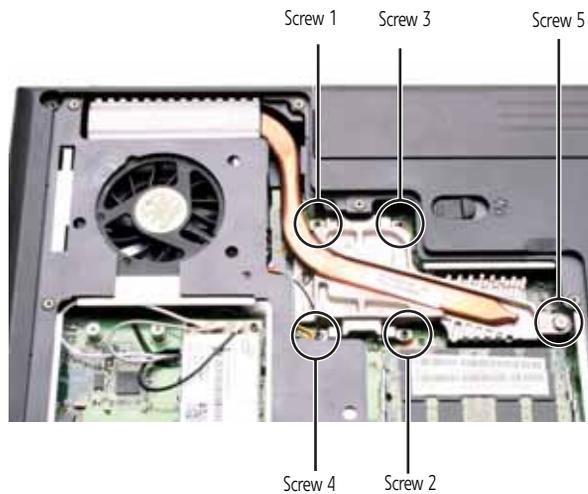

- 5 At the same time as you lift, move the main cooling assembly away from the side of the notebook, then remove the main cooling assembly.

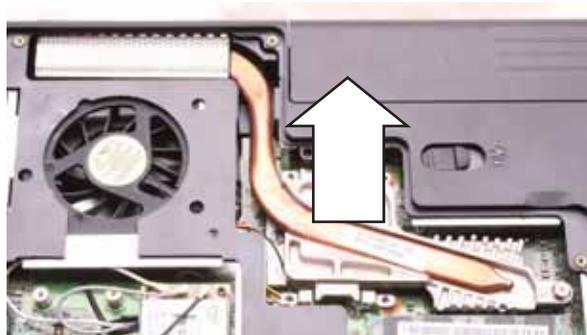

- 6 Remove any thermal grease residue from the processor using a soft cloth and isopropyl alcohol.
- 7 Place new thermal grease on the processor. Use only enough to cover the CPU die.
- 8 Make sure a thermal pad is placed between the main cooling assembly and other components as shown.

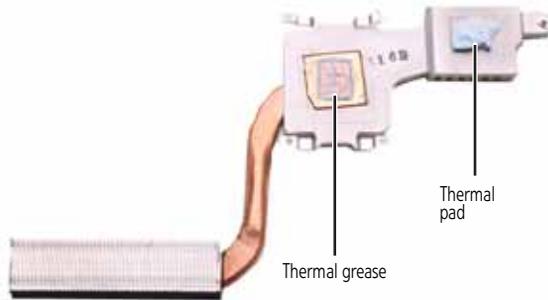

- 9 Insert the new main cooling assembly into the notebook.
- 10 Tighten the screws that secure the main cooling assembly to the system board. Use the numbers stamped in the metal next to each screw and tighten the screws in numerical order (start with 1, then 2, then 3, then 4, then 5).



Caution

When tightening the main cooling assembly's screws into the numbered holes, tighten them in numerical order.

- 11 Replace the cooling assembly bay cover, then tighten the cover screws.
■

Replacing the processor

Tools you need to complete this task:



Phillips #0 screwdriver




Flat-blade driver

Additional materials you need to complete this task:

- X-23-7762 thermal grease

Screws removed during this task:

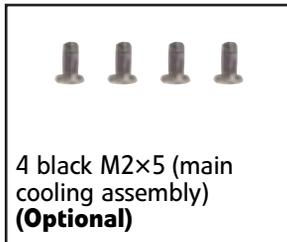

► To replace the processor:


- 1 Complete the steps in ["Preparing the notebook" on page 55](#).
- 2 Remove the cooling assembly by following the steps in ["Replacing the main cooling assembly" on page 58](#).
- 3 Use a flat-blade screwdriver to turn the processor lock screw 1/4-turn counter-clockwise.



- 4 Remove the old processor from the system board.



- 5 Install the new processor onto the system board making sure that Pin 1 on the processor (indicated by the silk-screened arrow on the corner of the processor) aligns with Pin 1 on the processor socket (indicated by the absence of a pin hole in the processor socket), then use a flat-blade screwdriver to turn the processor lock screw 1/4-turn clockwise.
- 6 Remove any thermal grease residue from the cooling assembly using a soft cloth and isopropyl alcohol.
- 7 Place new thermal grease on the processor. Use only enough to cover the CPU die.
- 8 Make sure a thermal pad is placed between the cooling assembly and other components as shown.

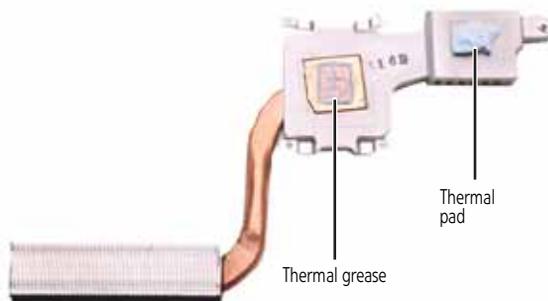

- 9 Replace the cooling assembly by following the instructions in ["Replacing the main cooling assembly" on page 58.](#)



Replacing the IEEE 802.11 wireless card

Tools you need to complete this task:




Screws removed during this task:



► To replace the IEEE 802.11 wireless card:

- 1 Complete the steps in [“Preparing the notebook”](#) on page 55.
- 2 Loosen the wireless bay cover screws (these screws cannot be removed).

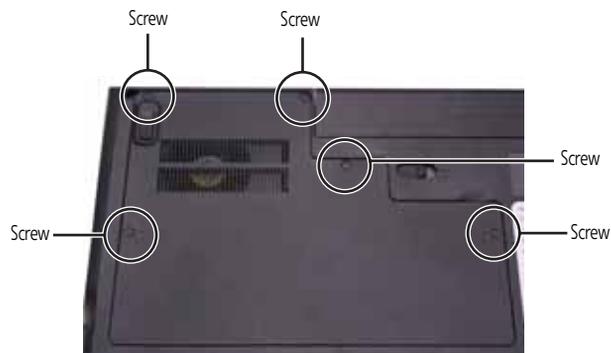

- 3 Use the thumb notch to lift the wireless bay cover, then remove it. Be careful not to break off the tabs located on the end of the cover opposite the thumb notch.




- 4 Unplug the antenna cables. Note which color cable is connected to each of the connectors.




Important


The number of antenna cables varies by the type of wireless network used by the notebook. IEEE 802.11N cards typically have three antenna cables. Other types of wireless network cards typically have two antenna cables.

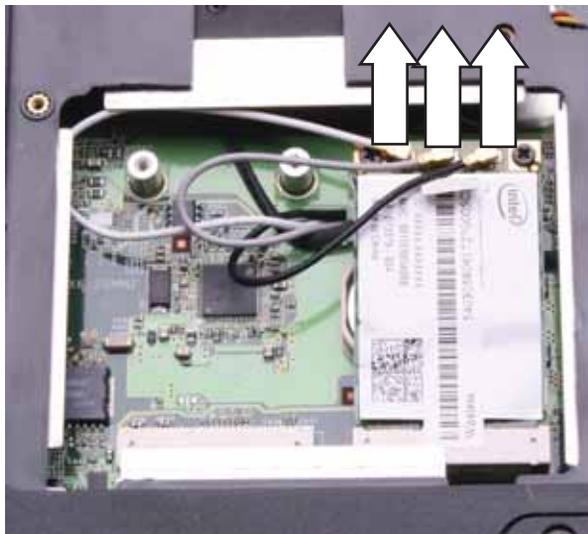

- 5 Remove the wireless card screws.

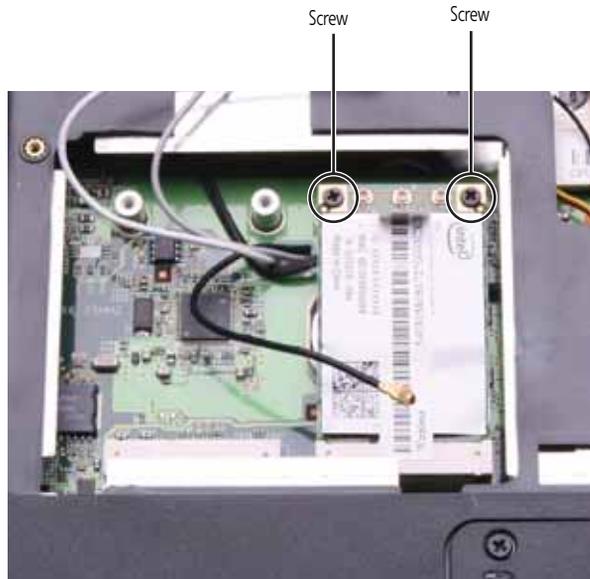

- 6 Pull the card out of the slot.

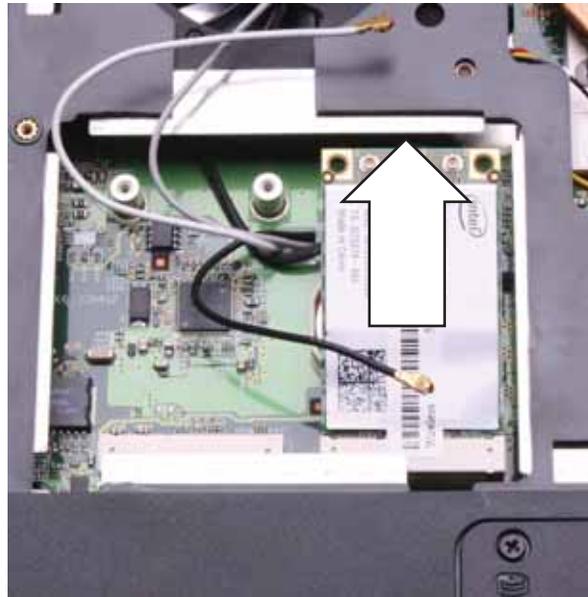

- 7 Move the antenna cables out of the way.
- 8 Hold the new card at a 30-degree angle and slide it into the empty slot. This card is keyed so it can only be inserted in one direction. If the card does not fit, make sure that the notch in the card lines up with the tab in the card slot.
- 9 Replace the screws removed in [Step 5](#).
- 10 Reattach the antenna cables to the connectors.
- 11 Replace the wireless bay cover, then tighten the cover screws.

■


Replacing the CMOS battery




Important

Use only CMOS batteries designed for this Gateway notebook.

Tools you need to complete this task:

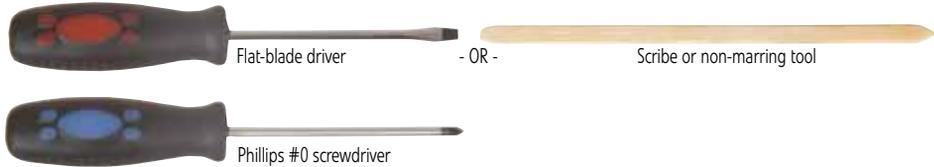

Screws removed during this task:

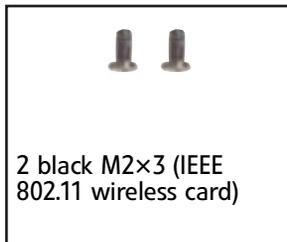


► To replace the CMOS battery:

- 1 Complete the steps in [“Preparing the notebook”](#) on page 55.
- 2 Remove the optional IEEE 802.11 wireless card by following the instructions in [“Replacing the IEEE 802.11 wireless card”](#) on page 63.

- 3 Identify the type of battery used on the notebook. Some batteries are silver disks and fit within a special connector on the system board. Other batteries are encased within a special black sleeve and have a wire connector that connects to the system board.

If the notebook uses a silver disk type battery:

- Insert the small flat-blade screwdriver or non-marring tool under the old battery and gently pry it up until it pops out of the socket.

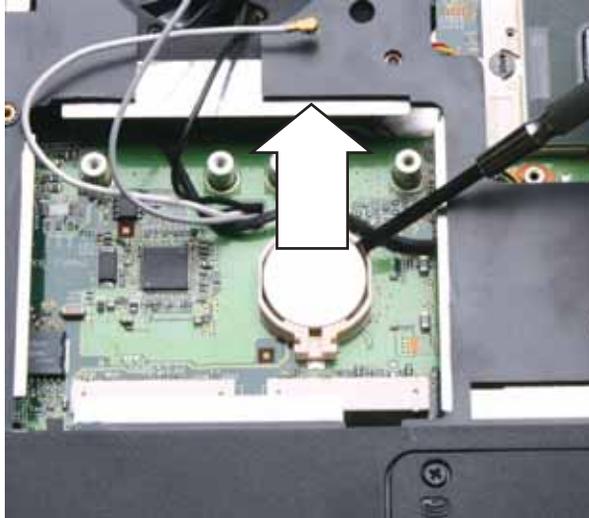

- Make sure that the positive (+) side of the new battery is facing up, then press the battery into the socket until it snaps into place.

If the notebook uses a battery encased in a sleeve:

- Disconnect the old battery from the system board.



- Lift the old battery off of the system board.



Important

The battery is held in place by double-sided tape.

- Connect the new battery to the system board, then place the battery on the system board.



Important

Use double-sided tape to hold the new battery in place.

- 4 Replace the optional IEEE 802.11 wireless card by following the instructions in [“Replacing the IEEE 802.11 wireless card” on page 63](#).





Replacing the hard drive

Tools you need to complete this task:



Phillips #0 screwdriver

Screws removed during this task:

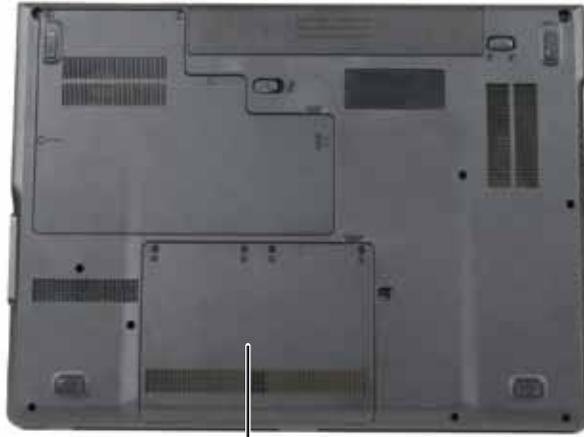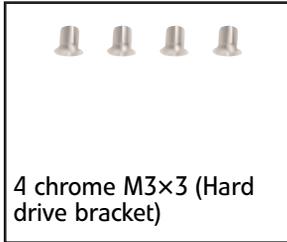


Hard drive bay

► To replace the hard drive:

- 1 Complete the steps in [“Preparing the notebook”](#) on page 55.


- 2 Loosen the hard drive bay cover screws (these screws cannot be removed).

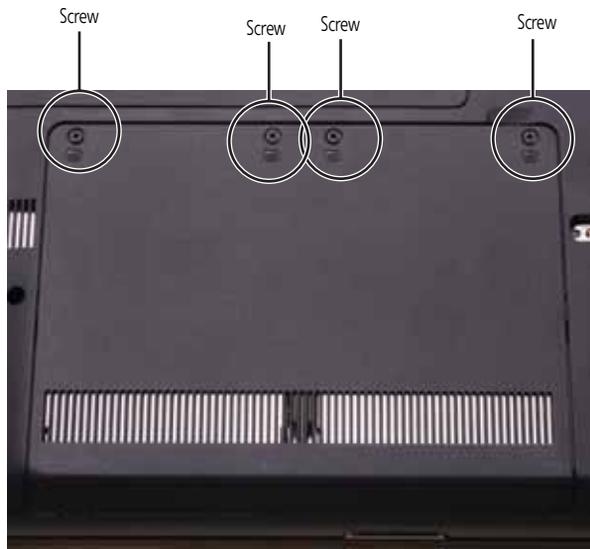

- 3 Use the thumb notch to lift the hard drive bay cover, then remove it. Be careful not to break off the tabs located on the end of the cover opposite the thumb notch.



- Using the plastic tab, slide the hard drive you are replacing, then remove it.

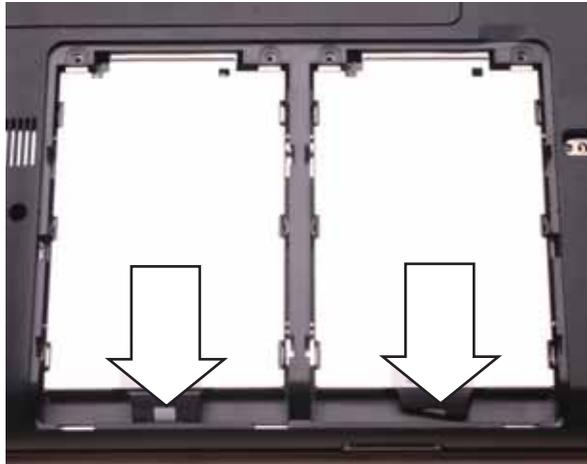

- If your new hard drive already includes the hard drive bracket, go to step [Step 10](#).
-OR-
If you need to move the hard drive bracket from your old hard drive to your new hard drive, go to step [Step 6](#).
- Remove the screws that secure the hard drive to the hard drive bracket.



- 7 Remove the bracket from the old drive.




- 8 Insert the new drive label side up onto the bracket so the screw holes line up.
- 9 Replace the screws that secure the bracket to the drive.
- 10 Slide the new hard drive kit into your notebook.
- 11 Replace the cover, then tighten the screws.





Replacing the DVD drive

Tools you need to complete this task:

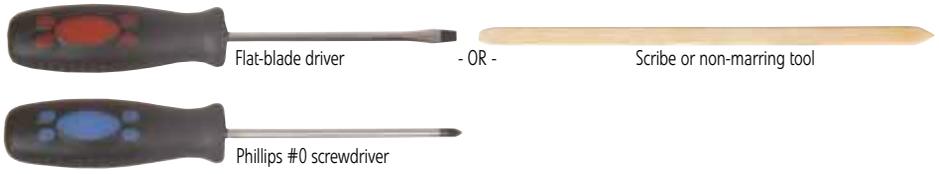


Screws removed during this task:

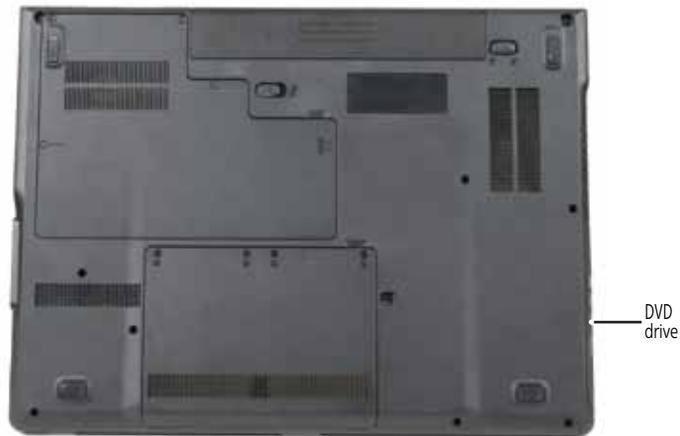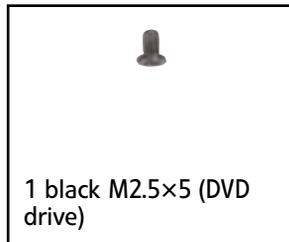

► To replace the DVD drive:

- 1 Complete the steps in ["Preparing the notebook"](#) on page 55.

- 2 Remove the rubber insert from the bottom of the notebook.

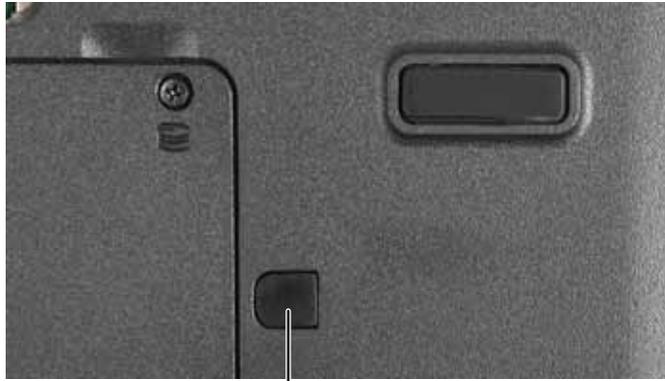

Rubber insert

- 3 Remove the screw that secures the DVD drive to your notebook.



Screw

4 Carefully slide the drive out of the drive bay.



Tip

Use a small screwdriver or other pointed tool to push on the DVD bracket and slide the drive out of the bay.




5 Slide the new DVD drive into the drive bay. Make sure that the drive fits securely in the bay.

6 Replace the screw removed in [Step 3](#).



Replacing the keyboard cover

Tools you need to complete this task:

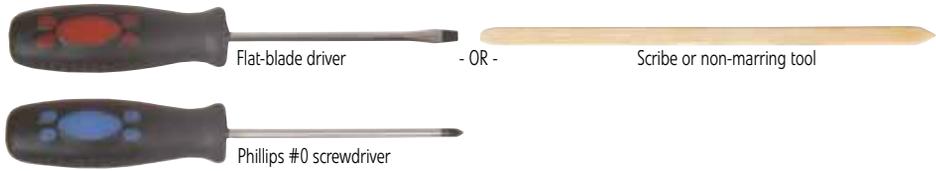

Screws removed during this task:



► To replace the keyboard cover:

- 1 Complete the steps in [“Preparing the notebook” on page 55](#).
- 2 Remove the two keyboard cover screws from the inside of the battery compartment.



- 3 Turn your notebook over so the top is facing up.
- 4 Open the LCD panel to the fully opened position.
- 5 Insert the small flat-blade screwdriver under each of the hinge covers and gently pry them up.



- 6 Pull the cover off the notebook by lifting the back corners of the cover. Be careful to not damage the LCD panel.




Caution


The cover is connected to the notebook by one or more cables. Do not pull on the cables.



- 7 Slide the black clip to the back of the notebook, then slide the cable out of the clip. Be careful not to touch or damage any other components.

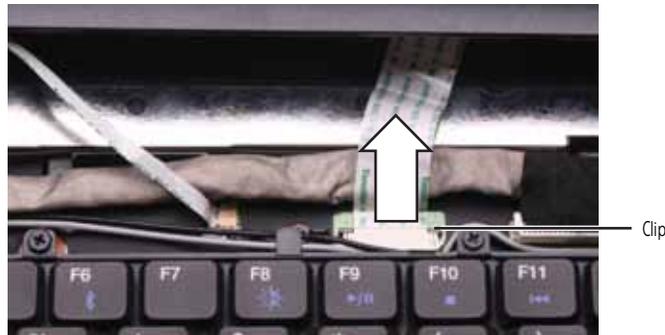

- 8 **Optional:** Slide the white power button cable connector clip to the left of the notebook, then slide the cable out of the clip. Be careful not to touch or damage any other components.

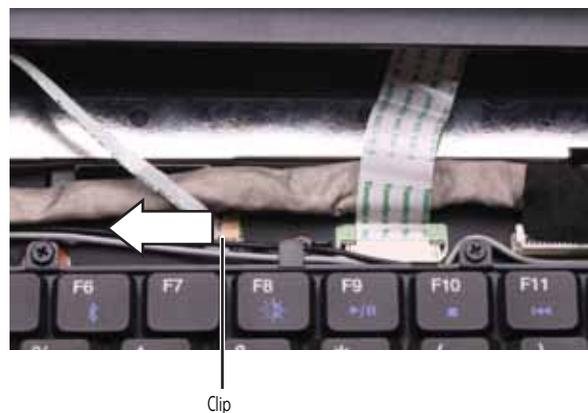

- 9 Remove the old keyboard cover.
- 10 **Optional:** Make sure the white power button cable cover connector clip is fully moved toward the left of the notebook, insert the new keyboard power button cable into the connector, then slide the white clip to the right to lock the connector in place.



Important

The cable is correctly oriented if the blue side is down and the silver contacts are up.

- 11 Make sure the black keyboard cover connector clip is fully moved toward the back of the notebook, insert the cable into the connector, then slide the black clip forward to lock the connector in place.



Important

The cable is correctly oriented if it is not twisted.

- 12 Replace the keyboard cover by first inserting the tabs located on the front of the cover into the slots provided, then pressing down on the back. Press down on the cover in several places until it clicks in place. The cover is correctly mounted when you can run your finger along the cover and find no loose spots. The cover should be flat all the way across.



Caution


If the cover is not correctly replaced, your notebook could be damaged when you try to close the LCD panel.

- 13 Close the LCD panel.
- 14 Turn your notebook over so the bottom is facing up.
- 15 Replace the screws removed in [Step 2](#).




Replacing the keyboard

Tools you need to complete this task:

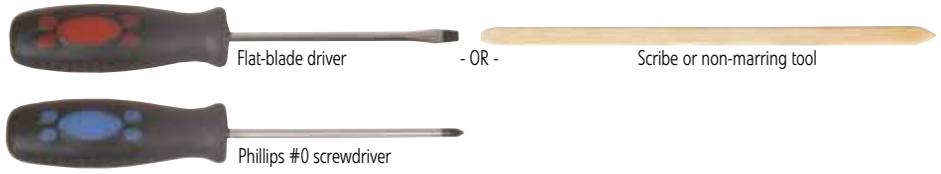

Screws removed during this task:

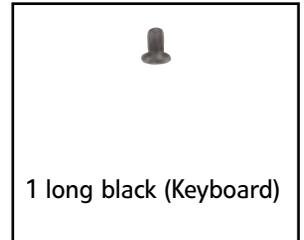


► To replace the keyboard:

- 1 Complete the steps in [“Preparing the notebook” on page 55.](#)
- 2 Remove the keyboard cover by following the steps in [“Replacing the keyboard cover” on page 76.](#)
- 3 Remove the five keyboard screws.



Important


Note the location of the long screw.

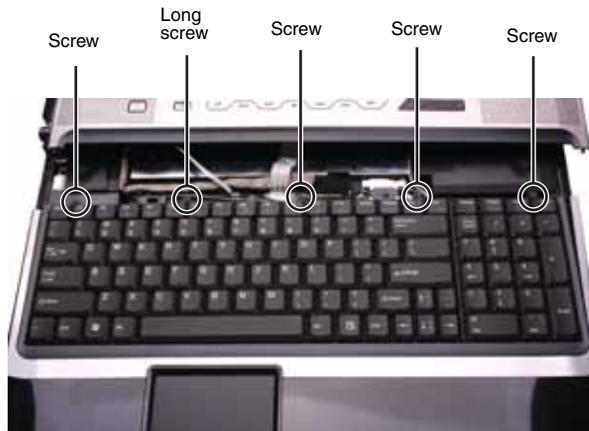

- 4 Lift the back edge of the keyboard slightly, then slowly slide it toward the LCD panel to release the keyboard retaining tabs located on the front edge of the keyboard.



- 5 Slide the keyboard connector clip to the back of the notebook or lift the connector clip off of the cable, then slide the cable out of the clip. Be careful not to touch or damage any other components.

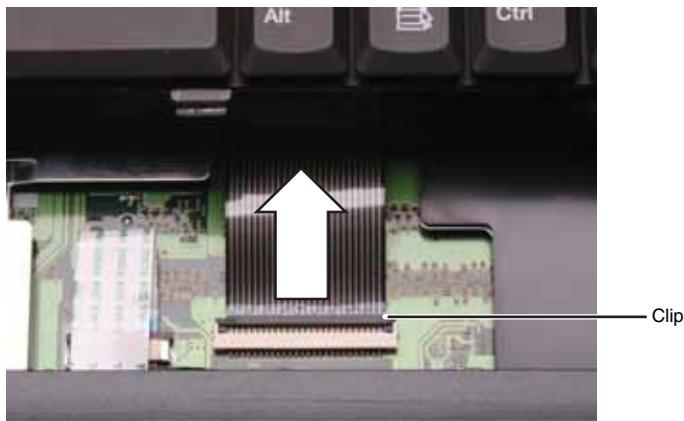

- 6 Place the new keyboard **keys-up** on your notebook with the space bar toward you.
- 7 Make sure the keyboard connector clip is fully moved toward the back of the notebook or lifted into the raised position, insert the cable into the connector, then slide the clip forward or downward to lock the connector in place.



Important

The keyboard cable is correctly oriented if it is not twisted.

- 8 Insert the tabs on the front edge of the keyboard into the slots under the palm rest. You may need to press down on the keyboard keys along the front edge of the keyboard to seat the retaining tabs into their corresponding slots.




- 9 Gently press the keyboard down until it is flat all the way across. The keyboard should easily fall into place. Be careful to not damage the LCD panel.
- 10 Replace the screws removed in [Step 3](#).

- 11 Replace the keyboard cover by following the steps in ["Replacing the keyboard cover"](#) on page 76.




Replacing the inverter

Tools you need to complete this task:

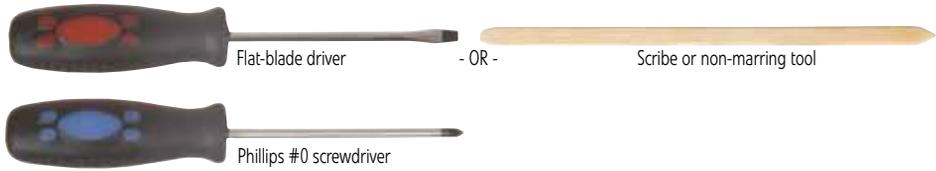

Screws removed during this task:

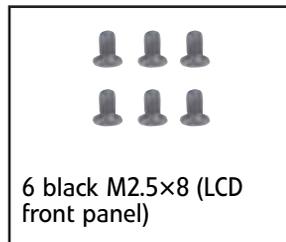


► To replace the inverter:

- 1 Complete the steps in [“Preparing the notebook” on page 55](#).
- 2 Remove the keyboard cover by following the steps in [“Replacing the keyboard cover” on page 76](#).
- 3 Open the LCD panel to the fully open position.
- 4 Remove the rubber inserts from the front of the LCD panel assembly.




Important

You can complete this procedure with the LCD panel assembly connected to the notebook. LCD panel assembly shown removed from notebook for clarity.

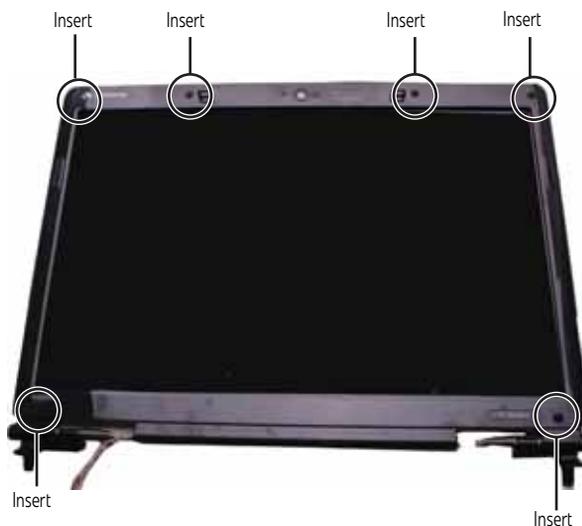

5 Remove the screws from the front of the LCD panel assembly.

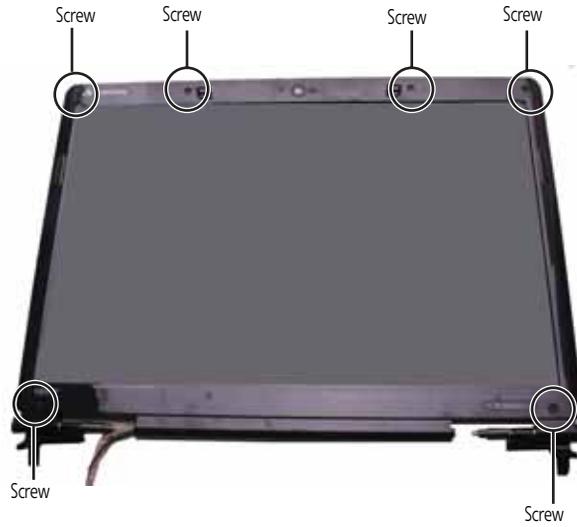


6 Carefully separate the front and back of the LCD panel assembly.



7 Remove the screws connecting the inverter to the LCD panel lid.



8 Lift the inverter from the LCD panel assembly, then turn it over.

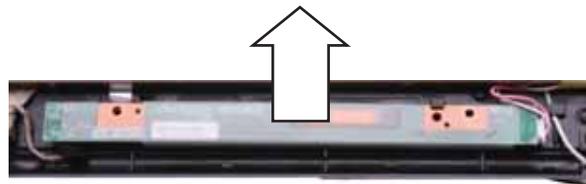

- 9 Disconnect the connectors from the old inverter and connect them to the new inverter.




- 10 Align the new inverter with the screw holes, then replace the screws removed in [Step 7](#).
- 11 Press the LCD panel front and back together. Press the two halves together in several places until they click in place. You should find no loose spots or spots where the two halves do not meet.
- 12 Replace the LCD panel assembly screws removed in [Step 5](#).
- 13 Replace the rubber inserts removed in [Step 4](#).
- 14 Replace the keyboard cover by following the steps in [“Replacing the keyboard cover” on page 76](#).



Replacing the webcam

Tools you need to complete this task:

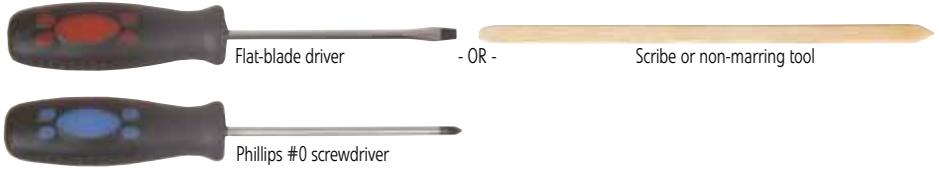

Screws removed during this task:




► To replace the webcam:

- 1 Complete the steps in [“Preparing the notebook” on page 55](#).
- 2 Remove the keyboard cover by following the steps in [“Replacing the keyboard cover” on page 76](#).
- 3 Open the LCD panel to the fully open position.
- 4 Remove the rubber inserts from the front of the LCD panel assembly.




Important

You can complete this procedure with the LCD panel assembly connected to the notebook. LCD panel assembly shown removed from notebook for clarity.

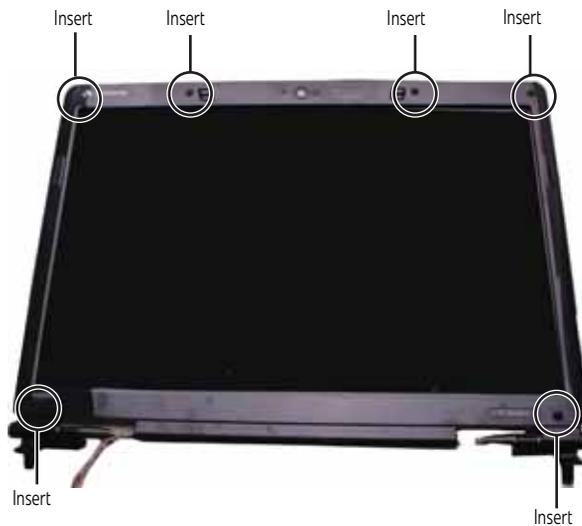

- 5 Remove the screws from the front of the LCD panel assembly.

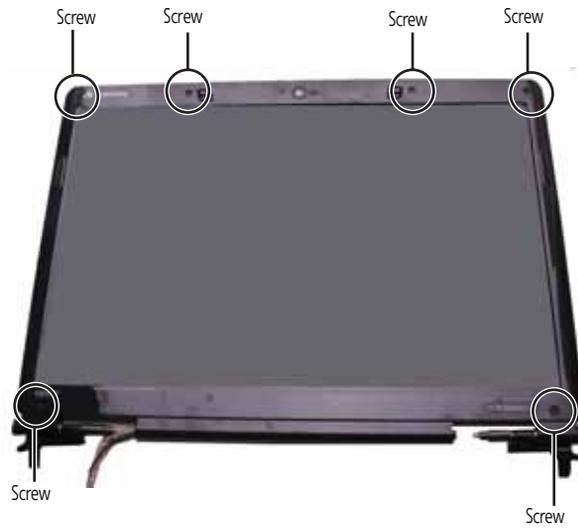

- 6 Carefully separate the front and back of the LCD panel assembly.




- 7 Disconnect the webcam cable from the webcam.



- 8 Remove the screws that connect the webcam bracket to the LCD panel assembly.



- 9 Remove the old webcam.

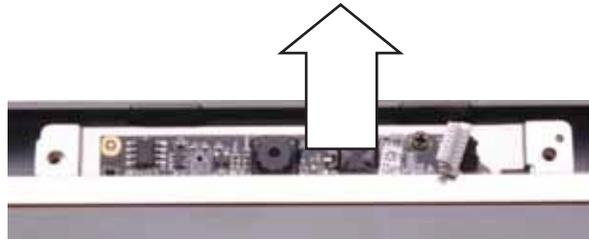


- 10 Install the new webcam.
- 11 Replace the screws that were removed in [Step 8](#).
- 12 Reconnect the webcam cable.
- 13 Press the LCD panel front and back together. Press the two halves together in several places until they click in place. You should find no loose spots or spots where the two halves do not meet.
- 14 Replace the LCD panel assembly screws removed in [Step 5](#).
- 15 Replace the rubber inserts removed in [Step 4](#).
- 16 Replace the keyboard cover by following the steps in "[Replacing the keyboard cover](#)" on [page 76](#).




Replacing the lid latches

Tools you need to complete this task:

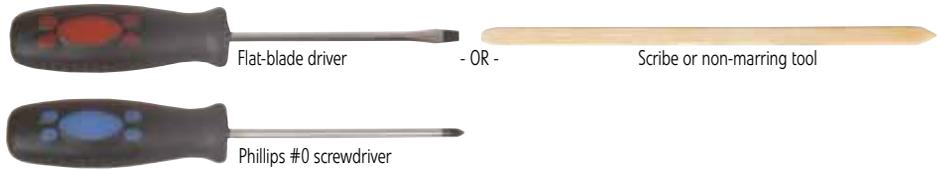

Screws removed during this task:

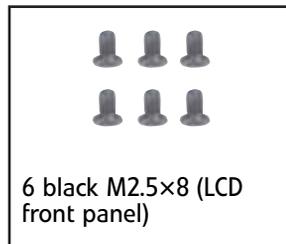


► To replace the lid latches:

- 1 Complete the steps in [“Preparing the notebook” on page 55](#).
- 2 Remove the keyboard cover by following the steps in [“Replacing the keyboard cover” on page 76](#).
- 3 Open the LCD panel to the fully open position.
- 4 Remove the rubber inserts from the front of the LCD panel assembly.




Important


You can complete this procedure with the LCD panel assembly connected to the notebook. LCD panel assembly shown removed from notebook for clarity.

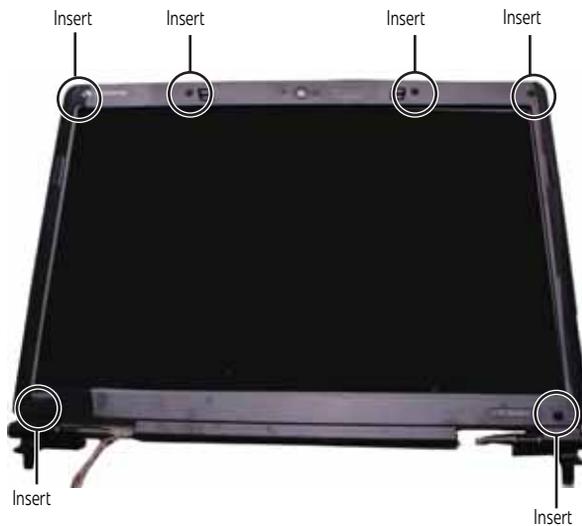

- 5** Remove the screws from the front of the LCD panel assembly.

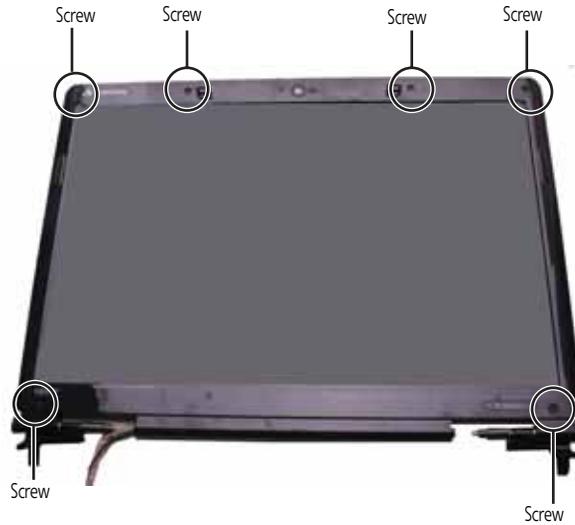

- 6** Carefully separate the front and back of the LCD panel assembly.

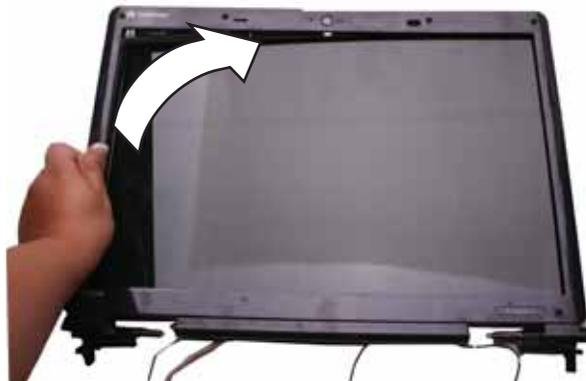

- 7** Remove the screws that connect the lid latches to the LCD panel assembly.



- 8** Remove the old lid latches.




- 9** Install the new lid latches.
10 Replace the screws that were removed in [Step 8](#).
11 Press the LCD panel front and back together. Press the two halves together in several places until they click in place. You should find no loose spots or spots where the two halves do not meet.


- 12 Replace the LCD panel assembly screws removed in [Step 5](#).
- 13 Replace the rubber inserts removed in [Step 4](#).
- 14 Replace the keyboard cover by following the steps in [“Replacing the keyboard cover” on page 76](#).
 -

Replacing the LCD assembly

Tools you need to complete this task:

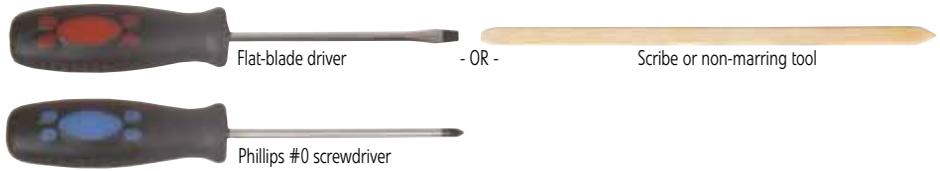

Screws removed during this task:

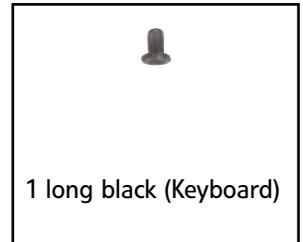

► To replace the LCD assembly:

- 1 Complete the steps in [“Preparing the notebook” on page 55.](#)
- 2 If the notebook has wireless networking built in, unplug the wireless antennas by following the steps in [“Replacing the IEEE 802.11 wireless card” on page 63.](#)
- 3 Remove the keyboard cover by following the steps in [“Replacing the keyboard cover” on page 76.](#)
- 4 Remove the keyboard by following the steps in [“Replacing the keyboard” on page 79.](#)
- 5 Remove the screws on the bottom that secure the LCD panel hinges to the chassis.




- 6 Turn the notebook over so the top is facing up.
- 7 Carefully open the LCD panel to the fully-open position.

- 8 Detach the LCD cable from the system board. Make sure that you grasp the plastic connector carefully and pull to unplug the LCD video cable from the notebook.



Caution

The LCD video cable connector is fragile.

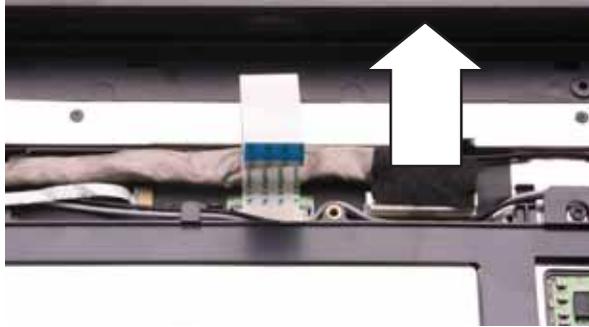


- 9 Taking care to note the cables' routing and positions as they are installed from Gateway, pull the antenna cables out from under the system board, then slide the antenna cables and LCD cables out from under the retaining clips. Remove any tape that may be securing the cables.



- 10 Remove the screws on the top that secure the LCD panel hinge to the chassis.



- 11 Lift the LCD panel assembly up and away from the notebook.

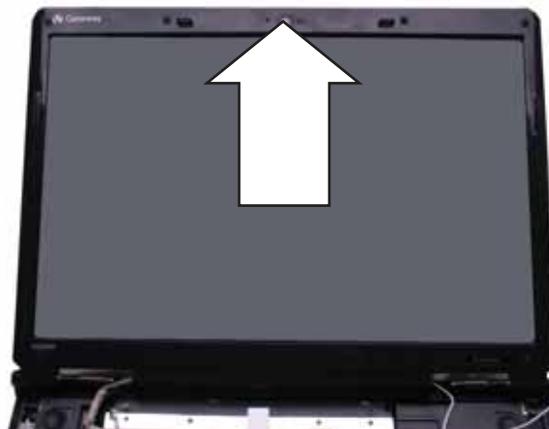


- 12 Place the new LCD panel assembly onto the notebook, then replace the hinge screws removed in [Step 10](#).
- 13 Slide the antenna cables through the retaining clips, under the system board, then into the wireless bay.
- 14 Lay the LCD cable along the flat area under the keyboard, then plug it into the notebook. Run your finger along the cable to re-stick the cable to the notebook.
- 15 Replace any tape that held the antenna wires.
- 16 Close the LCD panel, turn the notebook over so the bottom is facing up, then replace the bottom hinge screws removed in [Step 5](#).
- 17 Replace the keyboard by following the steps in [“Replacing the keyboard” on page 79](#).
- 18 Replace the keyboard cover by following the steps in [“Replacing the keyboard cover” on page 76](#).
- 19 Turn the notebook over so the bottom is facing up.
- 20 Reconnect the antenna wires to the wireless card by following the steps in [“Replacing the IEEE 802.11 wireless card” on page 63](#).
- 21 Replace the wireless bay cover by following the steps in [“Replacing the IEEE 802.11 wireless card” on page 63](#).



■

Replacing the LCD panel

Tools you need to complete this task:

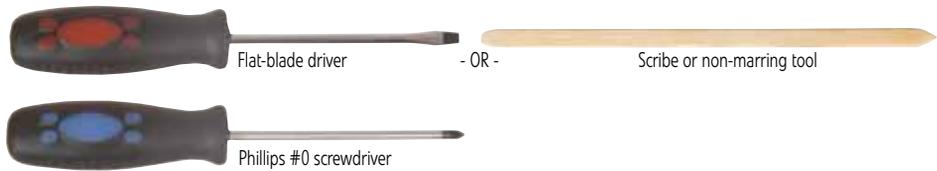


Screws removed during this task:

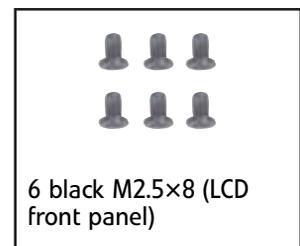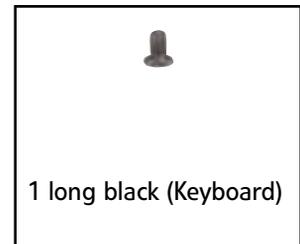


► To replace the LCD panel:

- 1 Complete the steps in [“Preparing the notebook”](#) on page 55.
- 2 If the notebook has wireless networking built in, unplug the wireless antennas by following the steps in [“Replacing the IEEE 802.11 wireless card”](#) on page 63.
- 3 Remove the keyboard cover by following the steps in [“Replacing the keyboard cover”](#) on page 76.
- 4 Remove the keyboard by following the steps in [“Replacing the keyboard”](#) on page 79.
- 5 Remove the LCD assembly by following the steps in [“Replacing the LCD assembly”](#) on page 91.

6 Remove the rubber inserts from the front of the LCD panel assembly.

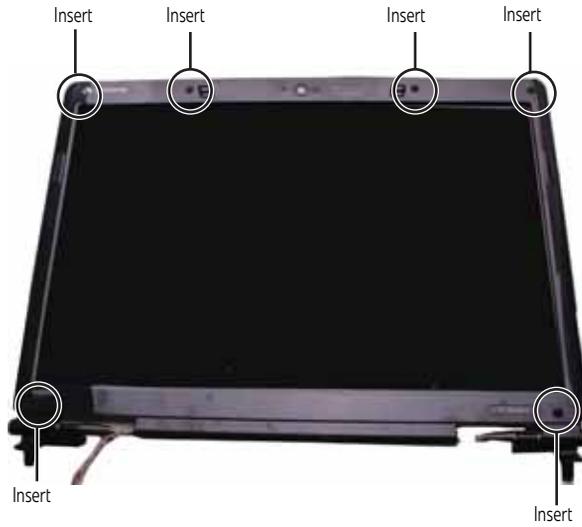

7 Remove the screws from the front of the LCD panel assembly.

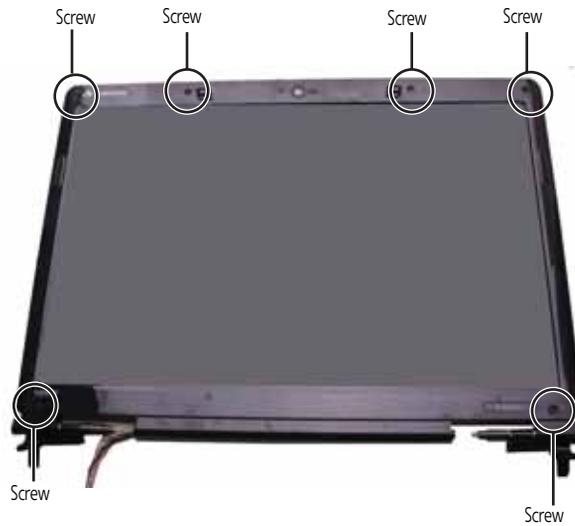

8 Carefully separate the front and back of the LCD panel assembly.



- 9 Remove the screws that secure the LCD panel to the LCD panel lid.



- 10 Remove the inverter by following the steps in ["Replacing the inverter" on page 82](#).
- 11 Disconnect the web cam by following the steps in ["Replacing the webcam" on page 85](#). You do not need to remove the web cam.
- 12 Remove the old LCD panel from the LCD panel lid.
- 13 Place the new LCD panel into the LCD panel lid.
- 14 Reconnect the web cam by following the steps in ["Replacing the webcam" on page 85](#).
- 15 Replace the inverter by following the steps in ["Replacing the inverter" on page 82](#).
- 16 Feed the wiring back into the hinge channels.
- 17 Replace the screws that were removed in [Step 9](#).
- 18 Make sure that the magnet has remained in the magnet bracket.

Magnet bracket and magnet




- 19 Press the LCD panel front and back together. Press the two halves together in several places until they click in place. You should find no loose spots or spots where the two halves do not meet.
- 20 Replace the LCD panel assembly screws removed in [Step 7](#).
- 21 Replace the rubber inserts removed in [Step 6](#).
- 22 Replace the LCD assembly by following the steps in ["Replacing the LCD assembly" on page 91](#).

- 23 Replace the keyboard by following the steps in ["Replacing the keyboard"](#) on [page 79](#).
- 24 Replace the keyboard cover by following the steps in ["Replacing the keyboard cover"](#) on [page 76](#).
- 25 Turn the notebook over so the bottom is facing up.
- 26 Reconnect the antenna wires to the wireless card by following the steps in ["Replacing the IEEE 802.11 wireless card"](#) on [page 63](#).
- 27 Replace the wireless bay cover by following the steps in ["Replacing the IEEE 802.11 wireless card"](#) on [page 63](#).





Replacing the LCD panel hinges

Tools you need to complete this task:

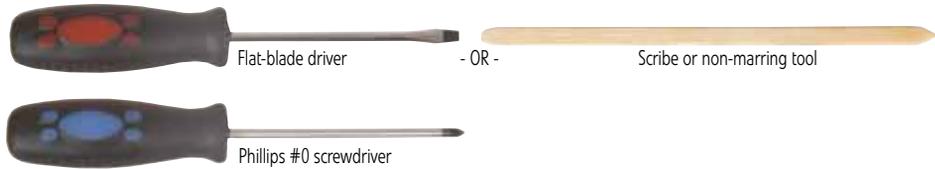


Screws removed during this task:

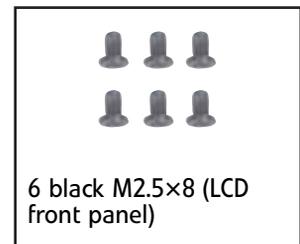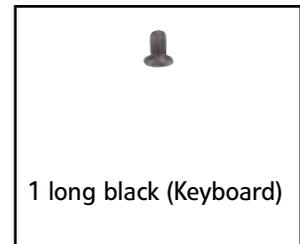


► To replace the LCD panel hinges:

- 1 Complete the steps in [“Preparing the notebook”](#) on page 55.
- 2 If the notebook has wireless networking built in, unplug the wireless antennas by following the steps in [“Replacing the IEEE 802.11 wireless card”](#) on page 63.
- 3 Remove the keyboard cover by following the steps in [“Replacing the keyboard cover”](#) on page 76.
- 4 Remove the keyboard by following the steps in [“Replacing the keyboard”](#) on page 79.
- 5 Remove the LCD assembly by following the steps in [“Replacing the LCD assembly”](#) on page 91.

6 Remove the rubber inserts from the front of the LCD panel assembly.

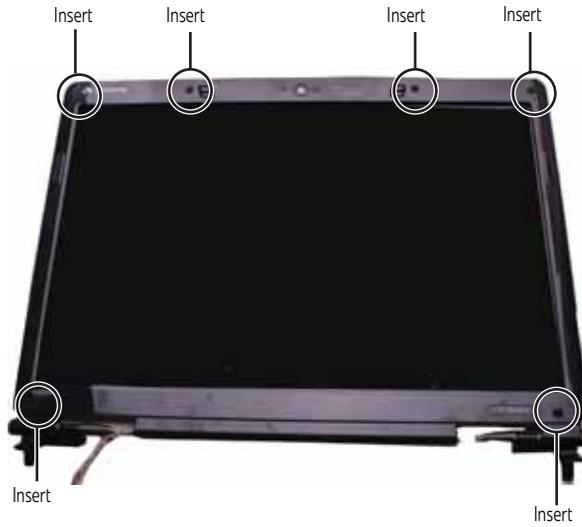

7 Remove the screws from the front of the LCD panel assembly.

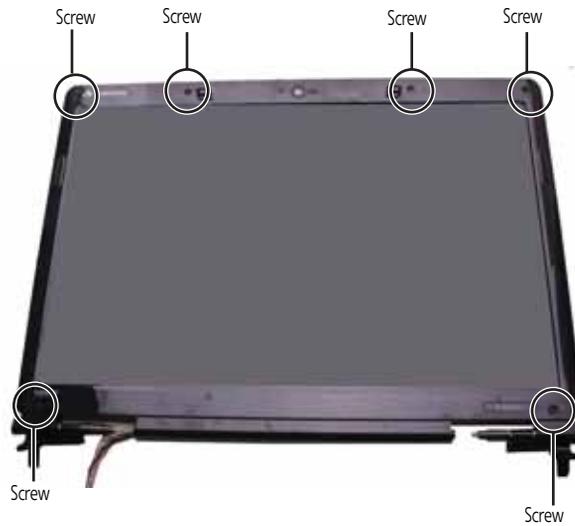


8 Carefully separate the front and back of the LCD panel assembly.



- 9 Remove the screws that secure the LCD panel to the LCD panel lid.



- 10 Carefully raise each of the bottom corners of the LCD panel and replace the old hinges with new hinges.
- 11 Replace the screws that were removed in [Step 9](#).
- 12 Make sure that the magnet has remained in the magnet bracket.

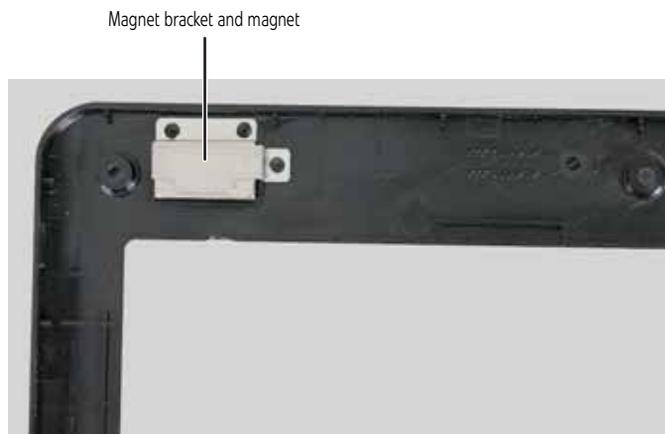


- 13 Press the LCD panel front and back together. Press the two halves together in several places until they click in place. You should find no loose spots or spots where the two halves do not meet.
- 14 Replace the LCD panel assembly screws removed in [Step 7](#).
- 15 Replace the rubber inserts removed in [Step 6](#).
- 16 Replace the LCD assembly by following the steps in ["Replacing the LCD assembly" on page 91](#).
- 17 Replace the keyboard by following the steps in ["Replacing the keyboard" on page 79](#).
- 18 Replace the keyboard cover by following the steps in ["Replacing the keyboard cover" on page 76](#).
- 19 Turn the notebook over so the bottom is facing up.
- 20 Reconnect the antenna wires to the wireless card by following the steps in ["Replacing the IEEE 802.11 wireless card" on page 63](#).

- 21 Replace the wireless bay cover by following the steps in [“Replacing the IEEE 802.11 wireless card” on page 63](#).





Replacing the LCD assembly lid

Tools you need to complete this task:

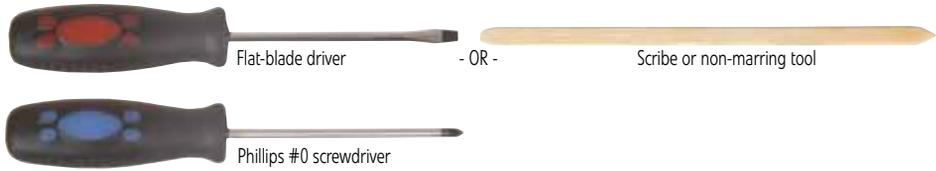

Screws removed during this task:

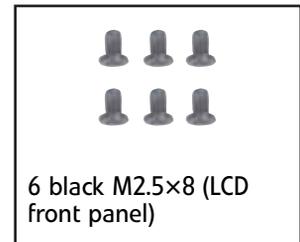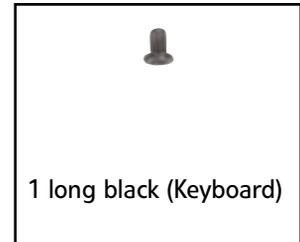

► To replace the LCD assembly lid:


- 1 Complete the steps in [“Preparing the notebook”](#) on page 55.

- 2 If the notebook has wireless networking built in, unplug the wireless antennas by following the steps in ["Replacing the IEEE 802.11 wireless card" on page 63.](#)
- 3 Remove the keyboard cover by following the steps in ["Replacing the keyboard cover" on page 76.](#)
- 4 Remove the keyboard by following the steps in ["Replacing the keyboard" on page 79.](#)
- 5 Remove the LCD assembly by following the steps in ["Replacing the LCD assembly" on page 91.](#)
- 6 Remove the inverter by following the steps in ["Replacing the inverter" on page 82.](#)
- 7 Remove the web cam by following the steps in ["Replacing the webcam" on page 85.](#)
- 8 Remove the lid latches by following the steps in ["Replacing the lid latches" on page 88.](#)
- 9 Remove the LCD panel from the old LCD panel lid by following the steps in ["Replacing the LCD panel" on page 94.](#)
- 10 Remove the LCD panel hinges from the old LCD panel lid by following the steps in ["Replacing the LCD panel hinges" on page 98.](#)
- 11 Place the LCD panel hinges into the new LCD panel lid by following the steps in ["Replacing the LCD panel hinges" on page 98.](#)
- 12 Replace the LCD panel into the new LCD panel lid by following the steps in ["Replacing the LCD panel" on page 94.](#)
- 13 Replace the lid latches by following the steps in ["Replacing the lid latches" on page 88.](#)
- 14 Replace the web cam by following the steps in ["Replacing the webcam" on page 85.](#)
- 15 Replace the inverter by following the steps in ["Replacing the inverter" on page 82.](#)
- 16 Replace the LCD assembly by following the steps in ["Replacing the LCD assembly" on page 91.](#)
- 17 Replace the keyboard by following the steps in ["Replacing the keyboard" on page 79.](#)
- 18 Replace the keyboard cover by following the steps in ["Replacing the keyboard cover" on page 76.](#)
- 19 Turn the notebook over so the bottom is facing up.
- 20 Reconnect the antenna wires to the wireless card by following the steps in ["Replacing the IEEE 802.11 wireless card" on page 63.](#)
- 21 Replace the wireless bay cover by following the steps in ["Replacing the IEEE 802.11 wireless card" on page 63.](#)





■

Replacing the palm rest

Tools you need to complete this task:

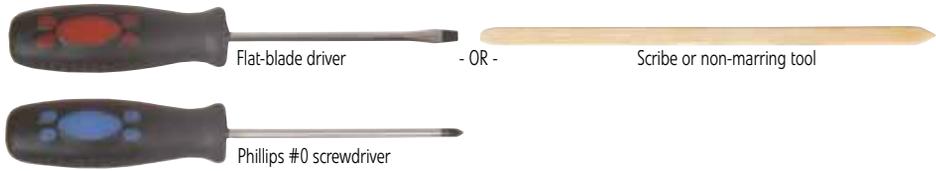


Screws removed during this task:

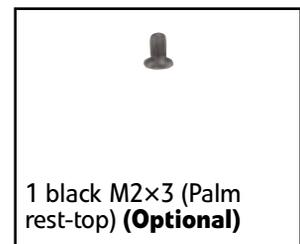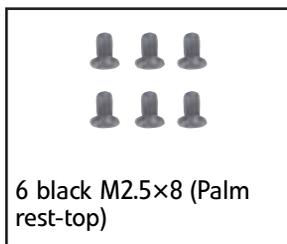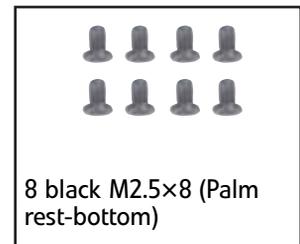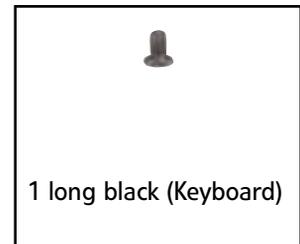


► To replace the palm rest:

- 1 Complete the steps in [“Preparing the notebook”](#) on page 55.

- 2 If the notebook has wireless networking built in, unplug the wireless antennas by following the steps in ["Replacing the IEEE 802.11 wireless card" on page 63.](#)
- 3 Remove the hard drive by following the steps in ["Replacing the hard drive" on page 69.](#)
- 4 Remove the keyboard cover by following the steps in ["Replacing the keyboard cover" on page 76.](#)
- 5 Remove the keyboard by following the steps in ["Replacing the keyboard" on page 79.](#)
- 6 Remove the LCD assembly by following the steps in ["Replacing the LCD assembly" on page 91.](#)
- 7 Slide the brown touchpad connector clip to the back of the notebook, then remove the cable. Be careful not to touch or damage any other components.

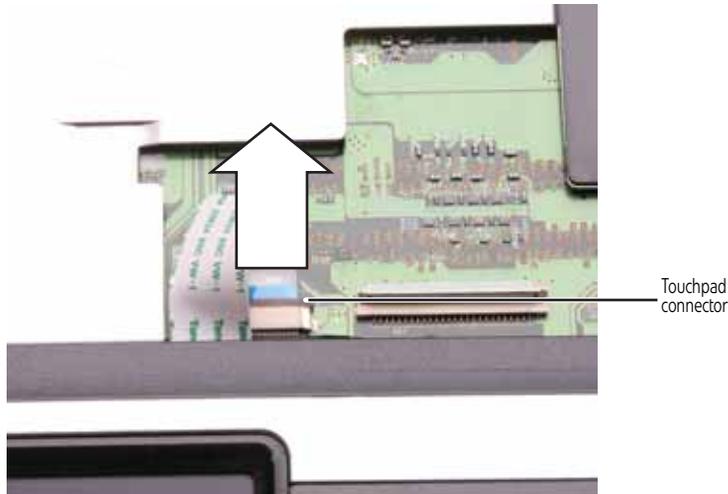


- 8 Turn the notebook over so the bottom is facing up.
- 9 Remove the screws from the bottom of the notebook.

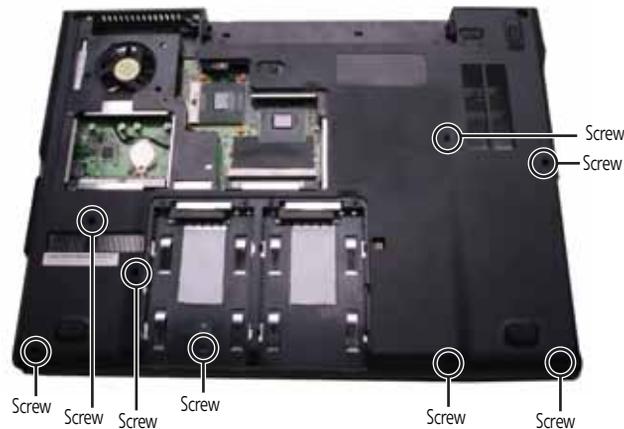


- 10 Turn the notebook over so the top is facing up.

- 11** Remove the screws from the top of the palm rest. Note the location of the screw types and sizes.

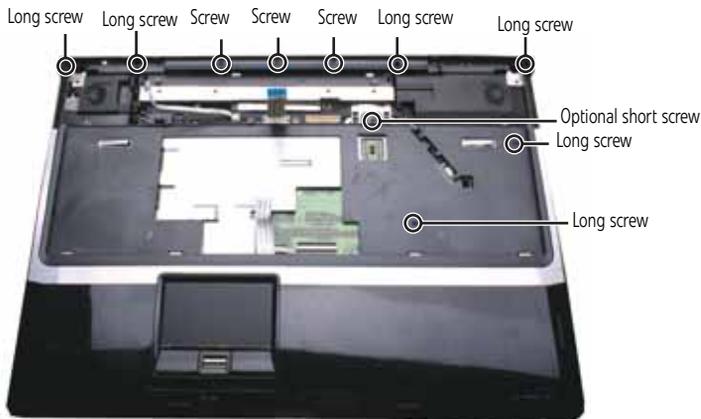

- 12** Lift the palm rest assembly up from the notebook.

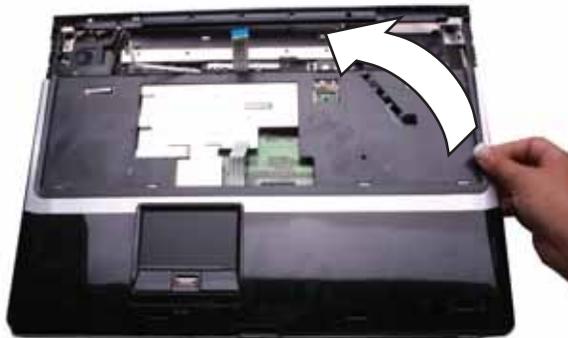

- 13** Remove the touchpad board from the old palm rest by following the instructions in ["Replacing the touchpad board" on page 108](#).
- 14** Remove the touchpad button board from the old palm rest by following the instructions in ["Replacing the touchpad button board" on page 112](#).
- 15** Remove the fingerprint reader from the old palm rest and install it on the new palm rest by following the instructions in ["Replacing the fingerprint reader" on page 115](#).
- 16** Install the touchpad button board on the new palm rest by following the instructions in ["Replacing the touchpad button board" on page 112](#).
- 17** Install the touchpad board on the new palm rest by following the instructions in ["Replacing the touchpad board" on page 108](#).
- 18** Place the new palm rest assembly onto the notebook, then snap the assembly into place.
- 19** Replace the screws removed in [Step 11](#).
- 20** Make sure the brown touchpad connector clip is fully moved to the back of the notebook, insert the cable into the connector, then slide the brown connector clip toward the front to lock the cable in place.



Important

The touchpad cable is correctly oriented if the blue side is showing.


- 21** Turn the notebook over so the bottom is facing up.
- 22** Replace the screws removed in [Step 9](#).

- 23 Replace the LCD assembly by following the steps in ["Replacing the LCD assembly" on page 91.](#)
- 24 Replace the keyboard by following the steps in ["Replacing the keyboard" on page 79.](#)
- 25 Replace the keyboard cover by following the steps in ["Replacing the keyboard cover" on page 76.](#)
- 26 Replace the hard drive by following the steps in ["Replacing the hard drive" on page 69.](#)
- 27 If the notebook has wireless networking built in, reconnect the wireless antennas by following the steps in ["Replacing the IEEE 802.11 wireless card" on page 63.](#)
- 28 Replace the wireless bay cover by following the steps in ["Replacing the IEEE 802.11 wireless card" on page 63.](#)






■

Replacing the touchpad board

Tools you need to complete this task:

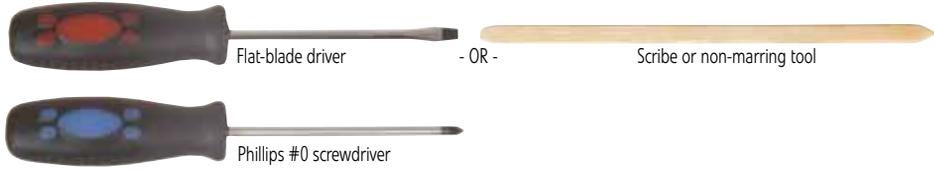

Screws removed during this task:

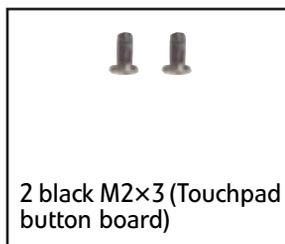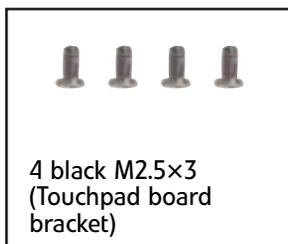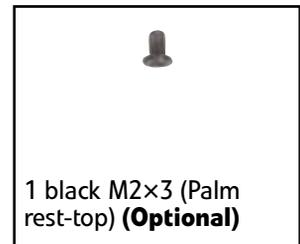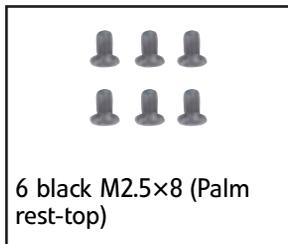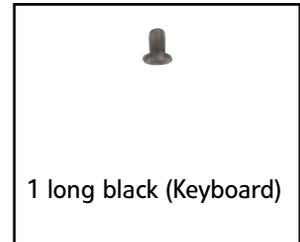


► **To replace the touchpad board:**

- 1 Complete the steps in ["Preparing the notebook"](#) on page 55.


- 2 If the notebook has wireless networking built in, unplug the wireless antennas by following the steps in ["Replacing the IEEE 802.11 wireless card" on page 63.](#)
- 3 Remove the hard drive by following the steps in ["Replacing the hard drive" on page 69.](#)
- 4 Remove the keyboard cover by following the steps in ["Replacing the keyboard cover" on page 76.](#)
- 5 Remove the keyboard by following the steps in ["Replacing the keyboard" on page 79.](#)
- 6 Remove the LCD assembly by following the steps in ["Replacing the LCD assembly" on page 91.](#)
- 7 Remove the palm rest by following the steps in ["Replacing the palm rest" on page 104.](#)
- 8 Turn the palm rest over so the back side is facing up.
- 9 Remove the screws from the touchpad board bracket.




- 10 Remove the screws from the touchpad button board bracket.

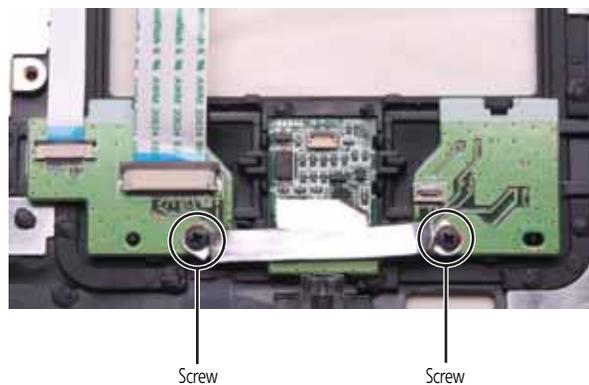


- 11 Swing the brown touchpad connector clip upward, then lift the cable out of the connector. Be careful not to touch or damage any other components.

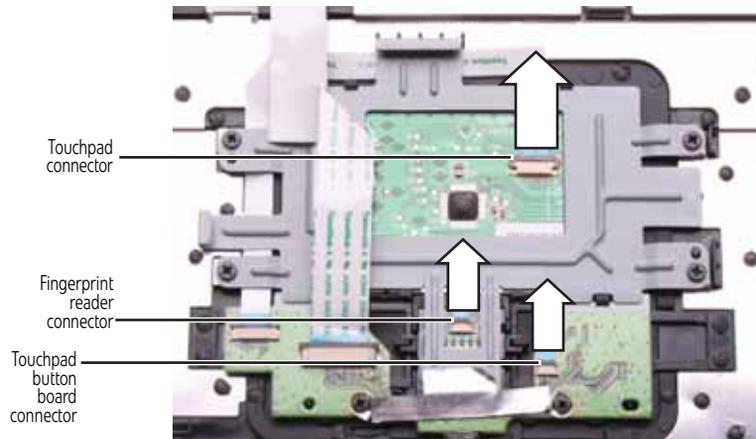

- 12 Remove the touchpad board bracket from the notebook.

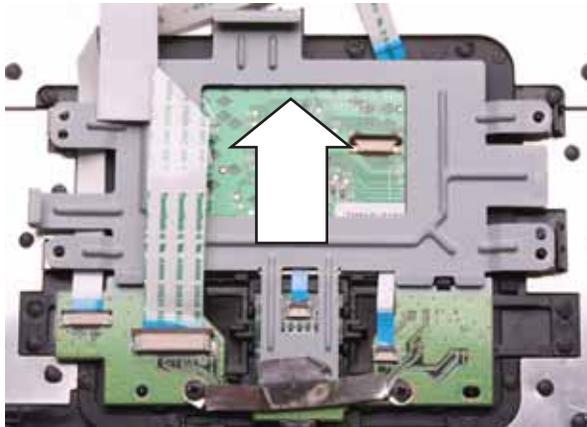

- 13 Remove the touchpad board from the notebook.

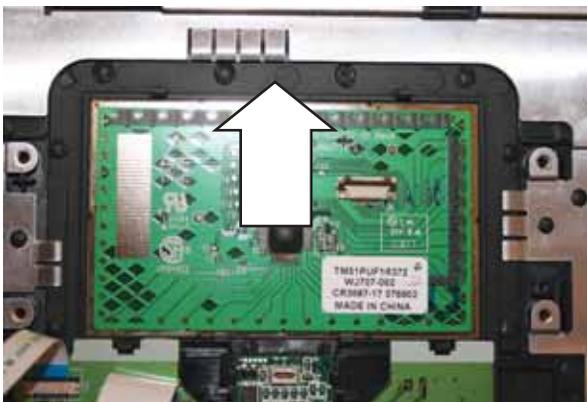

- 14 Place the new touchpad board into the notebook in the same orientation as the old board.
- 15 Replace the screws removed in [Step 9](#).

- 16 Make sure the brown touchpad connector clip is up, insert the cable into the connector, then swing the clip down to lock the connector in place.



Important


The touchpad cable is correctly oriented if the blue side is showing.

- 17 Replace the palm rest by following the steps in ["Replacing the palm rest" on page 104.](#)
- 18 Replace the LCD assembly by following the steps in ["Replacing the LCD assembly" on page 91.](#)
- 19 Replace the keyboard by following the steps in ["Replacing the keyboard" on page 79.](#)
- 20 Replace the keyboard cover by following the steps in ["Replacing the keyboard cover" on page 76.](#)
- 21 Replace the hard drive by following the steps in ["Replacing the hard drive" on page 69.](#)
- 22 If the notebook has wireless networking built in, reconnect the wireless antennas by following the steps in ["Replacing the IEEE 802.11 wireless card" on page 63.](#)
- 23 Replace the wireless bay cover by following the steps in ["Replacing the IEEE 802.11 wireless card" on page 63.](#)









Replacing the touchpad button board

Tools you need to complete this task:

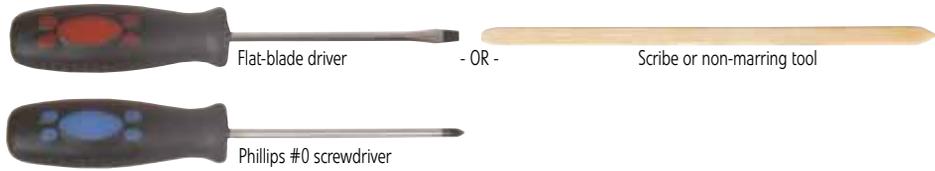


Screws removed during this task:

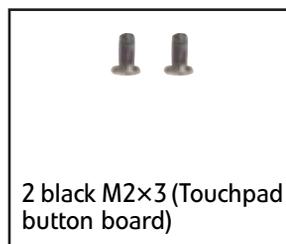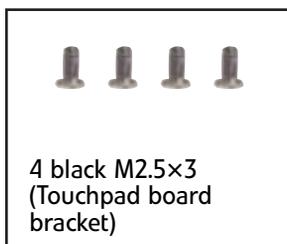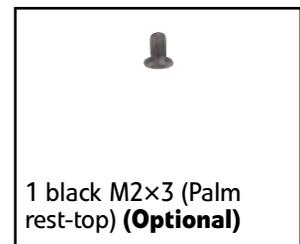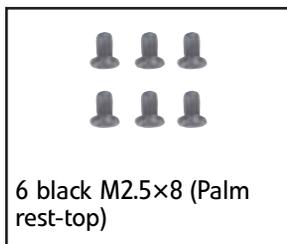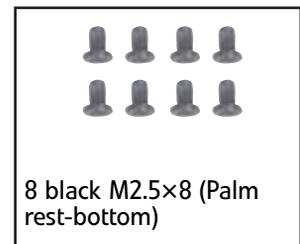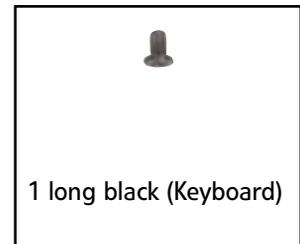


► **To replace the touchpad button board:**

- 1 Complete the steps in [“Preparing the notebook”](#) on page 55.


- 2 If the notebook has wireless networking built in, unplug the wireless antennas by following the steps in ["Replacing the IEEE 802.11 wireless card" on page 63.](#)
- 3 Remove the hard drive by following the steps in ["Replacing the hard drive" on page 69.](#)
- 4 Remove the keyboard cover by following the steps in ["Replacing the keyboard cover" on page 76.](#)
- 5 Remove the keyboard by following the steps in ["Replacing the keyboard" on page 79.](#)
- 6 Remove the LCD assembly by following the steps in ["Replacing the LCD assembly" on page 91.](#)
- 7 Remove the palm rest by following the steps in ["Replacing the palm rest" on page 104.](#)
- 8 Remove the touchpad board by following the steps in ["Replacing the touchpad board" on page 108.](#)
- 9 Remove the screws from the touchpad button board bracket.

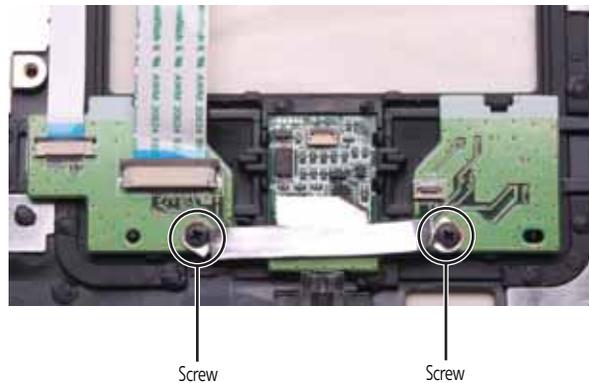

- 10 Swing the black fingerprint reader connector clip upward, then lift the cable out of the connector. Be careful not to touch or damage any other components.

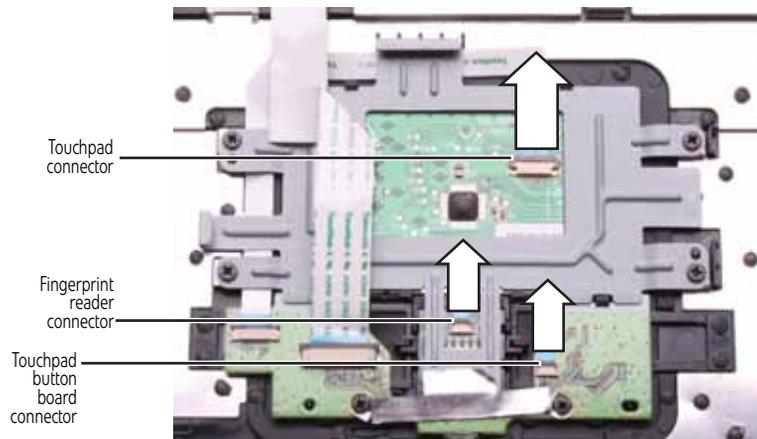

- 11 Remove the touchpad button board from the notebook.

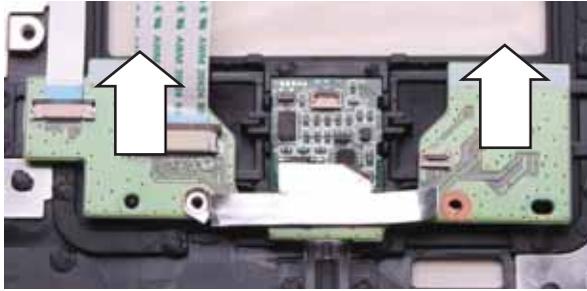

- 12 Place the new touchpad button board into the notebook in the same orientation as the old board.
- 13 Replace the screws removed in [Step 9](#).
- 14 Replace the touchpad board by following the steps in [“Replacing the touchpad board” on page 108](#).
- 15 Transfer all of the ribbon cables from the old touchpad button board to the new board.



Important

The cables are correctly oriented if the blue sides are showing.

- 16 Make sure the black fingerprint reader connector clip is up, insert the cable into the connector, then swing the clip down to lock the connector in place.



Important


The touchpad cable is correctly oriented if the blue side is showing.

- 17 Replace the palm rest by following the steps in [“Replacing the palm rest” on page 104](#).
- 18 Replace the LCD assembly by following the steps in [“Replacing the LCD assembly” on page 91](#).
- 19 Replace the keyboard by following the steps in [“Replacing the keyboard” on page 79](#).
- 20 Replace the keyboard cover by following the steps in [“Replacing the keyboard cover” on page 76](#).
- 21 Replace the hard drive by following the steps in [“Replacing the hard drive” on page 69](#).
- 22 If the notebook has wireless networking built in, reconnect the wireless antennas by following the steps in [“Replacing the IEEE 802.11 wireless card” on page 63](#).
- 23 Replace the wireless bay cover by following the steps in [“Replacing the IEEE 802.11 wireless card” on page 63](#).








Replacing the fingerprint reader

Tools you need to complete this task:

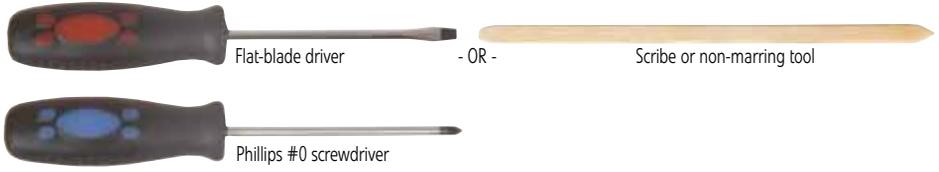


Screws removed during this task:

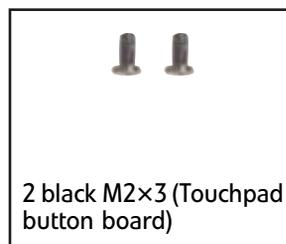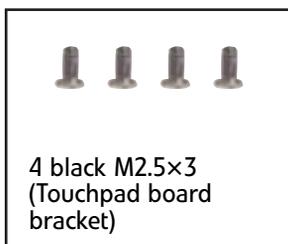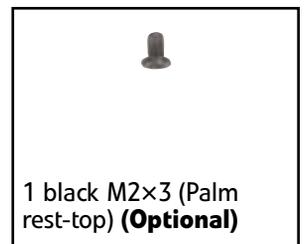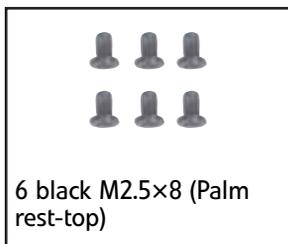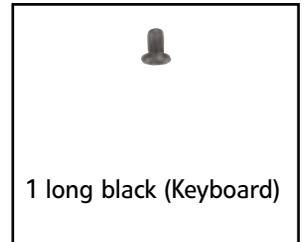

► To replace the fingerprint reader:

- 1 Complete the steps in ["Preparing the notebook"](#) on page 55.

- 2 If the notebook has wireless networking built in, unplug the wireless antennas by following the steps in [“Replacing the IEEE 802.11 wireless card” on page 63.](#)
- 3 Remove the hard drive by following the steps in [“Replacing the hard drive” on page 69.](#)
- 4 Remove the keyboard cover by following the steps in [“Replacing the keyboard cover” on page 76.](#)
- 5 Remove the keyboard by following the steps in [“Replacing the keyboard” on page 79.](#)
- 6 Remove the LCD assembly by following the steps in [“Replacing the LCD assembly” on page 91.](#)
- 7 Remove the palm rest by following the steps in [“Replacing the palm rest” on page 104.](#)
- 8 Remove the touchpad board by following the steps in [“Replacing the touchpad board” on page 108.](#)
- 9 Remove the touchpad button board by following the steps in [“Replacing the touchpad button board” on page 112.](#)
- 10 Remove the fingerprint reader from the notebook.

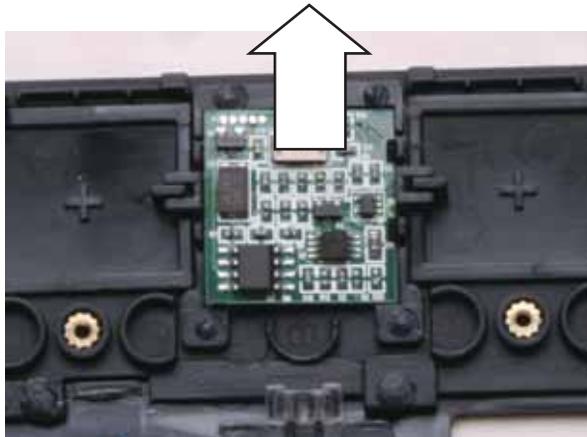


- 11 Place the new fingerprint reader into the notebook in the same orientation as the old reader.
- 12 Replace the touchpad button board by following the steps in [“Replacing the touchpad button board” on page 112.](#)
- 13 Replace the touchpad board by following the steps in [“Replacing the touchpad board” on page 108.](#)
- 14 Replace the palm rest by following the steps in [“Replacing the palm rest” on page 104.](#)
- 15 Replace the LCD assembly by following the steps in [“Replacing the LCD assembly” on page 91.](#)
- 16 Replace the keyboard by following the steps in [“Replacing the keyboard” on page 79.](#)
- 17 Replace the keyboard cover by following the steps in [“Replacing the keyboard cover” on page 76.](#)
- 18 Replace the hard drive by following the steps in [“Replacing the hard drive” on page 69.](#)
- 19 If the notebook has wireless networking built in, reconnect the wireless antennas by following the steps in [“Replacing the IEEE 802.11 wireless card” on page 63.](#)

- 20 Replace the wireless bay cover by following the steps in [“Replacing the IEEE 802.11 wireless card” on page 63](#).








Replacing the Bluetooth module

Tools you need to complete this task:

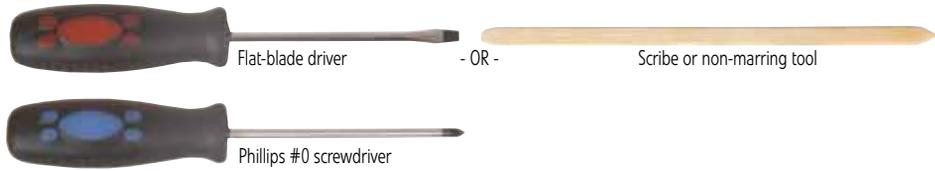


Screws removed during this task:

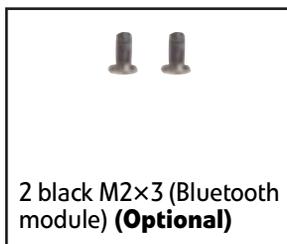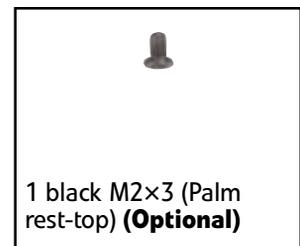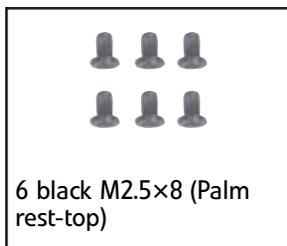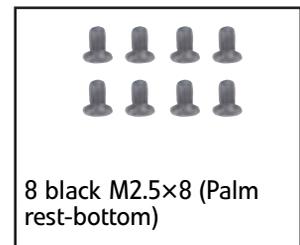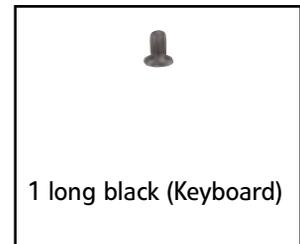

► To replace the Bluetooth module:

- 1 Complete the steps in ["Preparing the notebook"](#) on page 55.

- 2 If the notebook has wireless networking built in, unplug the wireless antennas by following the steps in ["Replacing the IEEE 802.11 wireless card" on page 63.](#)
- 3 Remove the hard drive by following the steps in ["Replacing the hard drive" on page 69.](#)
- 4 Remove the keyboard cover by following the steps in ["Replacing the keyboard cover" on page 76.](#)
- 5 Remove the keyboard by following the steps in ["Replacing the keyboard" on page 79.](#)
- 6 Remove the LCD assembly by following the steps in ["Replacing the LCD assembly" on page 91.](#)
- 7 Remove the palm rest by following the steps in ["Replacing the palm rest" on page 104.](#)
- 8 Remove the screws from the old Bluetooth module, then remove it from the notebook.

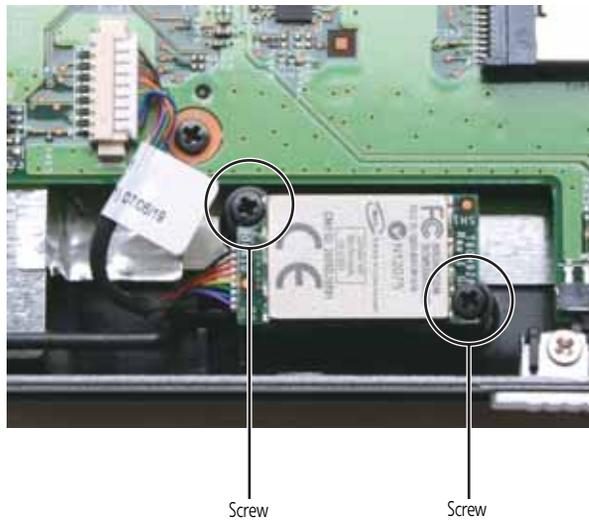

- 9 Disconnect the cable from the old Bluetooth module.




- 10 Connect the cable to the new Bluetooth module.
- 11 Place the new Bluetooth module into the notebook, then replace the screws removed in [Step 8.](#)
- 12 Replace the palm rest by following the steps in ["Replacing the palm rest" on page 104.](#)
- 13 Replace the LCD assembly by following the steps in ["Replacing the LCD assembly" on page 91.](#)




- 14 Replace the keyboard by following the steps in [“Replacing the keyboard”](#) on page 79.
- 15 Replace the keyboard cover by following the steps in [“Replacing the keyboard cover”](#) on page 76.
- 16 Replace the hard drive by following the steps in [“Replacing the hard drive”](#) on page 69.
- 17 If the notebook has wireless networking built in, reconnect the wireless antennas by following the steps in [“Replacing the IEEE 802.11 wireless card”](#) on page 63.
- 18 Replace the wireless bay cover by following the steps in [“Replacing the IEEE 802.11 wireless card”](#) on page 63.
 -

Replacing the modem

Tools you need to complete this task:

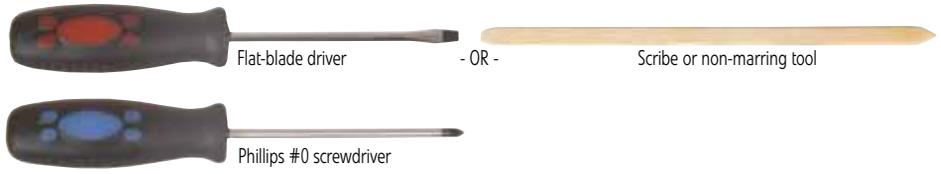


Screws removed during this task:

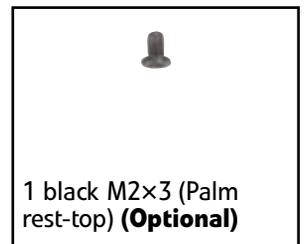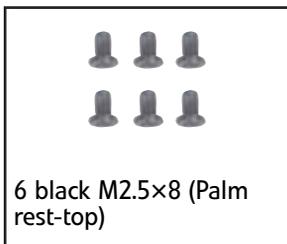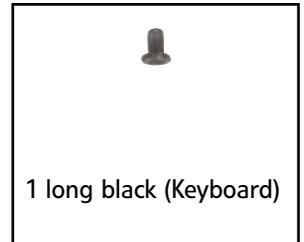

► To replace the modem:

- 1 Complete the steps in ["Preparing the notebook"](#) on page 55.

- 2 If the notebook has wireless networking built in, unplug the wireless antennas by following the steps in [“Replacing the IEEE 802.11 wireless card”](#) on page 63.
- 3 Remove the hard drive by following the instructions in [“Replacing the hard drive”](#) on page 69.
- 4 Remove the keyboard cover by following the steps in [“Replacing the keyboard cover”](#) on page 76.
- 5 Remove the keyboard by following the steps in [“Replacing the keyboard”](#) on page 79.
- 6 Remove the LCD assembly by following the steps in [“Replacing the LCD assembly”](#) on page 91.
- 7 Remove the palm rest by following the steps in [“Replacing the palm rest”](#) on page 104.
- 8 Remove the screws that secure the modem to the notebook.

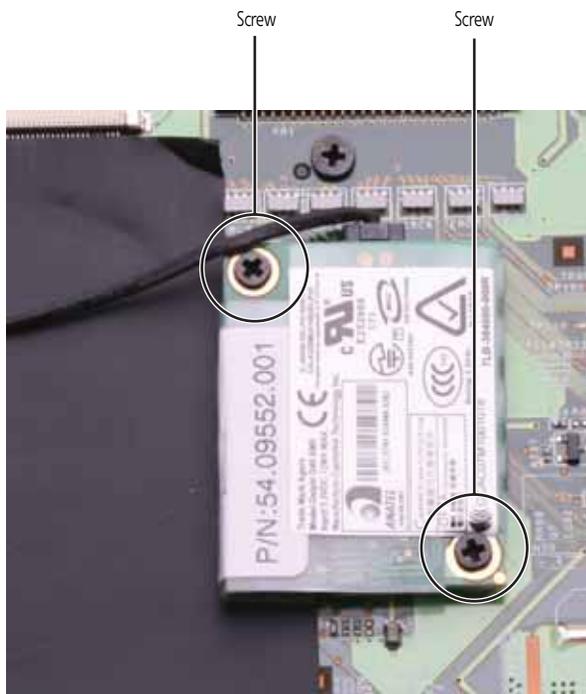

- 9 Lift the modem off of the system board.



- 10 Turn the modem over, then unplug the modem cable from the old modem and plug the cable into the new modem.




- 11 Install the new modem on the system board.
12 Replace the screws remove in [Step 8](#).
13 Replace the palm rest by following the steps in ["Replacing the palm rest" on page 104](#).

- 14 Replace the LCD assembly by following the steps in [“Replacing the LCD assembly” on page 91](#).
- 15 Replace the keyboard by following the steps in [“Replacing the keyboard” on page 79](#).
- 16 Replace the keyboard cover by following the steps in [“Replacing the keyboard cover” on page 76](#).
- 17 Replace the hard drive by following the instructions in [“Replacing the hard drive” on page 69](#).
- 18 If the notebook has wireless networking built in, reconnect the wireless antennas by following the steps in [“Replacing the IEEE 802.11 wireless card” on page 63](#).
- 19 Replace the wireless bay cover by following the steps in [“Replacing the IEEE 802.11 wireless card” on page 63](#).







Replacing the speakers

Tools you need to complete this task:

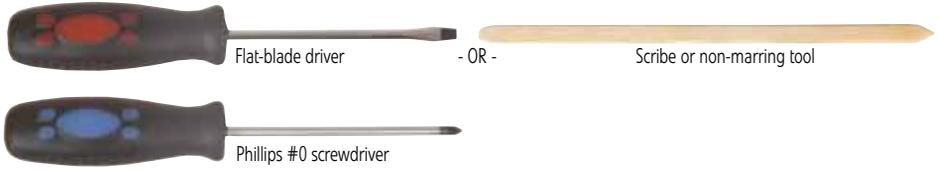


Screws removed during this task:

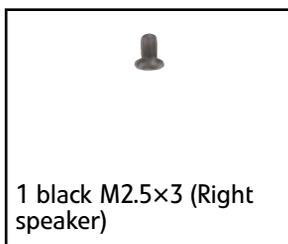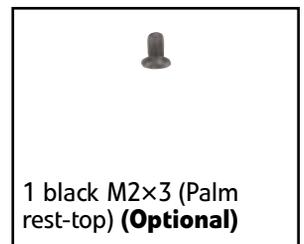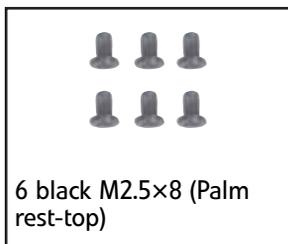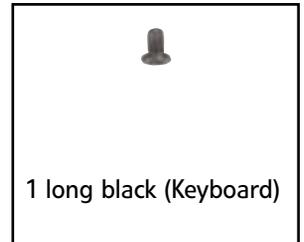

► To replace the speakers:

- 1 Complete the steps in ["Preparing the notebook" on page 55.](#)

- 2 If the notebook has wireless networking built in, unplug the wireless antennas by following the steps in [“Replacing the IEEE 802.11 wireless card”](#) on page 63.
- 3 Remove the hard drive by following the instructions in [“Replacing the hard drive”](#) on page 69.
- 4 Remove the keyboard cover by following the steps in [“Replacing the keyboard cover”](#) on page 76.
- 5 Remove the keyboard by following the steps in [“Replacing the keyboard”](#) on page 79.
- 6 Remove the LCD assembly by following the steps in [“Replacing the LCD assembly”](#) on page 91.
- 7 Remove the palm rest by following the steps in [“Replacing the palm rest”](#) on page 104.
- 8 Disconnect the old speaker cable from the system board.

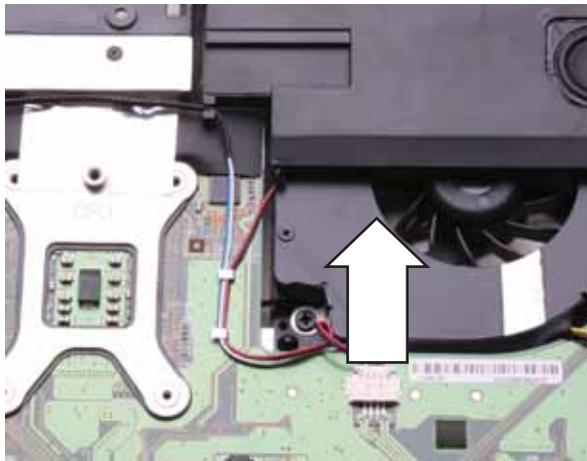

- 9 Remove the speaker screws.



- 10 Lift the old speakers from the notebook.




- 11 Set the new speakers into the notebook, then replace the screws removed in [Step 9](#).
- 12 Connect the cable to the system board.
- 13 Replace the palm rest by following the steps in [“Replacing the palm rest”](#) on page 104.
- 14 Replace the LCD assembly by following the steps in [“Replacing the LCD assembly”](#) on page 91.

- 15** Replace the keyboard by following the steps in ["Replacing the keyboard"](#) on [page 79](#).
- 16** Replace the keyboard cover by following the steps in ["Replacing the keyboard cover"](#) on [page 76](#).
- 17** Replace the hard drive by following the instructions in ["Replacing the hard drive"](#) on [page 69](#).
- 18** If the notebook has wireless networking built in, reconnect the wireless antennas by following the steps in ["Replacing the IEEE 802.11 wireless card"](#) on [page 63](#).
- 19** Replace the wireless bay cover by following the steps in ["Replacing the IEEE 802.11 wireless card"](#) on [page 63](#).



Replacing the system board and VGA cooling assembly







Tools you need to complete this task:

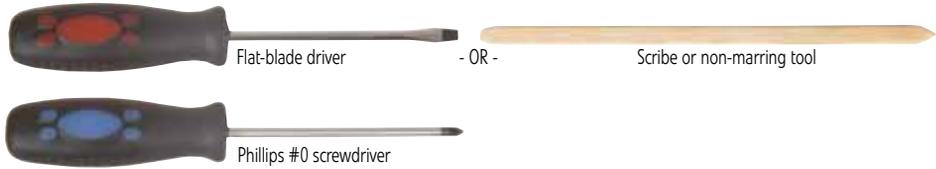




Additional materials you need to complete this task:

- X-23-7762 thermal grease

Screws removed during this task:

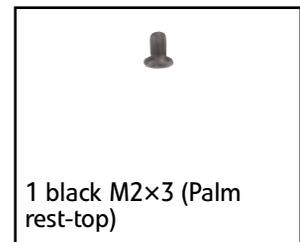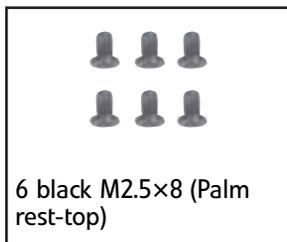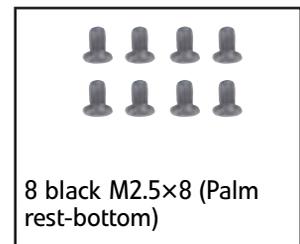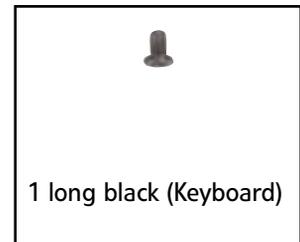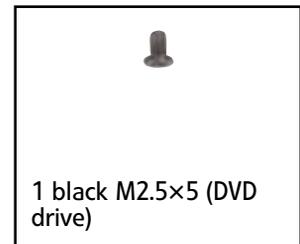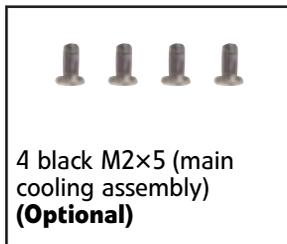


Screws removed during this task (cont):

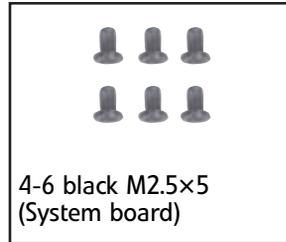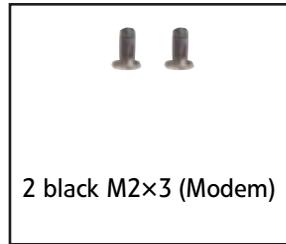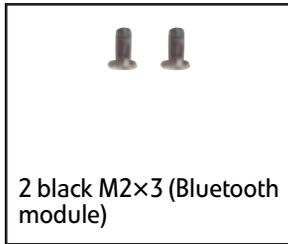


► **To replace the system board and VGA cooling assembly:**

- 1 Complete the steps in [“Preparing the notebook” on page 55](#).
- 2 Remove the memory from the old system board and install it on the new system board by following the instructions in [“Adding or replacing memory modules” on page 56](#).
- 3 Remove the cooling assembly by following the instructions in [“Replacing the main cooling assembly” on page 58](#).
- 4 If your new system board does not include a processor, remove the processor from the old system board and install it on the new system board by following the instructions in [“Replacing the processor” on page 61](#).
- 5 Remove the optional IEEE 802.11 wireless card from the old system board and install it on the new system board by following the instructions in [“Replacing the IEEE 802.11 wireless card” on page 63](#).
- 6 Remove the hard drive by following the instructions in [“Replacing the hard drive” on page 69](#).
- 7 Remove the DVD drive by following the instructions in [“Replacing the DVD drive” on page 73](#).
- 8 Remove the keyboard cover by following the steps in [“Replacing the keyboard cover” on page 76](#).
- 9 Remove the keyboard by following the steps in [“Replacing the keyboard” on page 79](#).
- 10 Remove the LCD assembly by following the steps in [“Replacing the LCD assembly” on page 91](#).
- 11 Remove the palm rest by following the steps in [“Replacing the palm rest” on page 104](#).

- 12 Unplug the Bluetooth module from the system board (one connector).

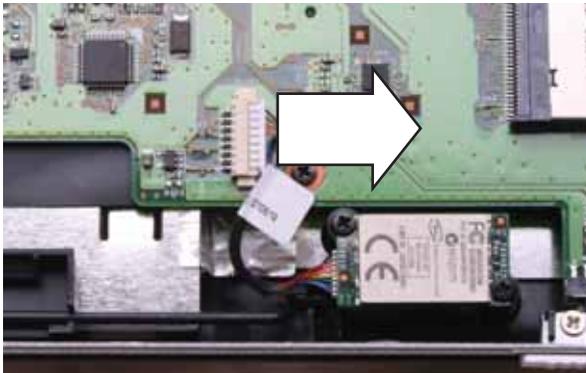

- 13 Unplug the speakers from the system board (one connector).

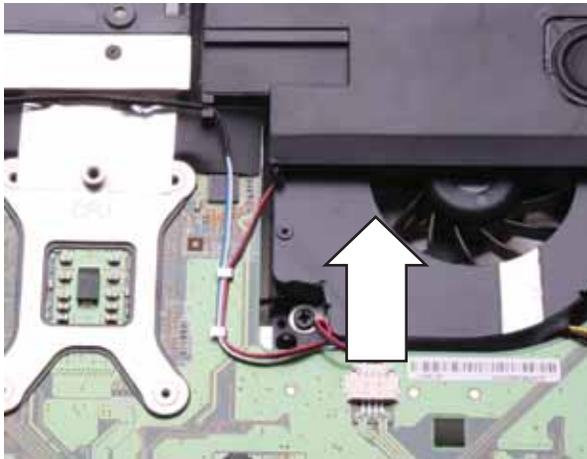


- 14 Remove the modem by following the instructions in [“Replacing the modem”](#) on [page 121](#).




Important

You can keep the modem connected to the modem cable.


- 15 Remove the modem cable from the system board retaining clips.

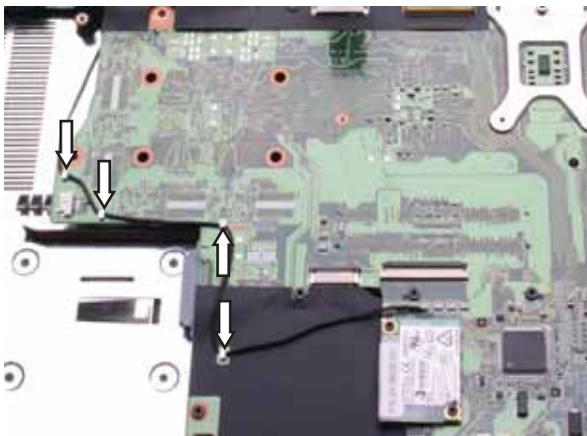


- 16** Remove the screw holding the right speaker to the notebook, then remove the speaker.

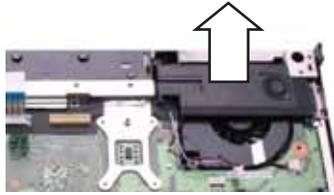


- 17** Unplug the fan(s) from the system board.

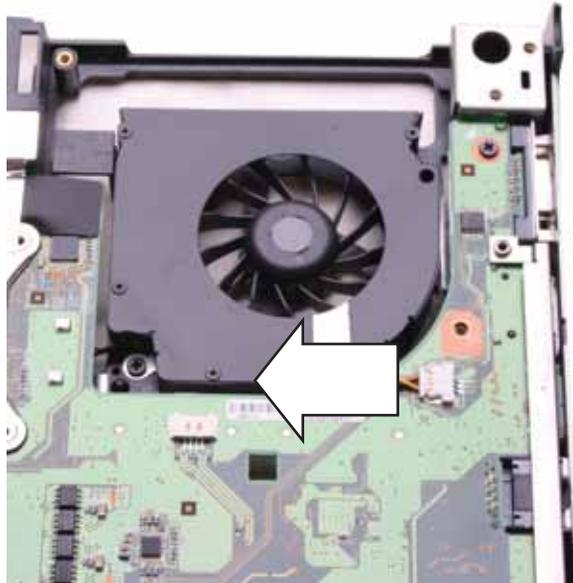


- 18** Remove the optional EMI shield screws.

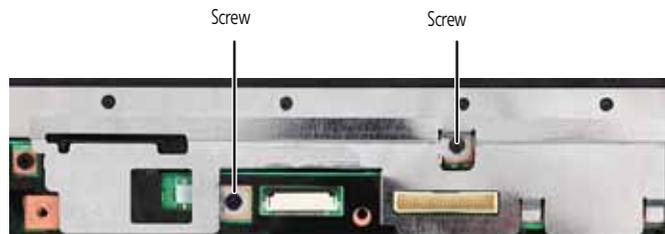


19 Remove the system board screws.

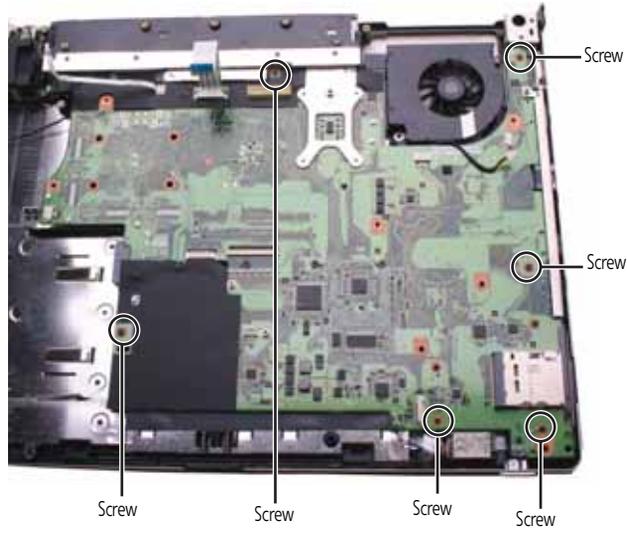


-OR-

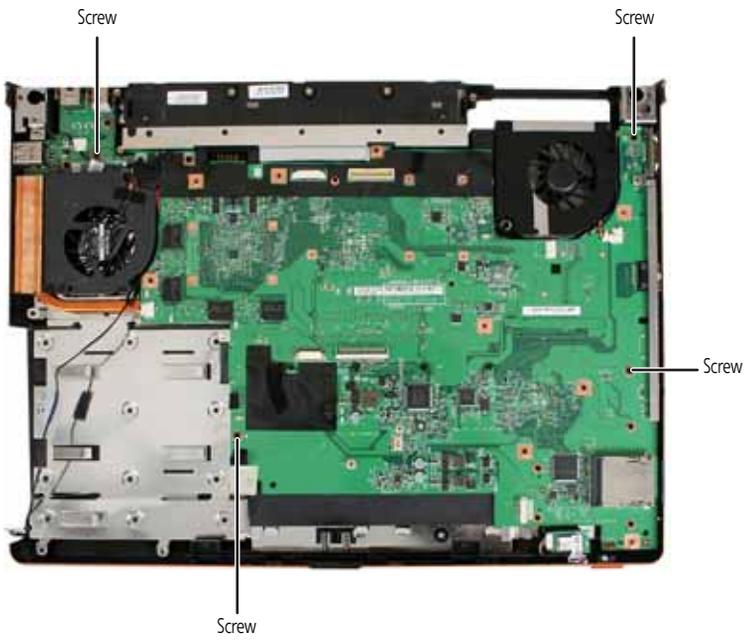

- 20** Carefully remove the system board.

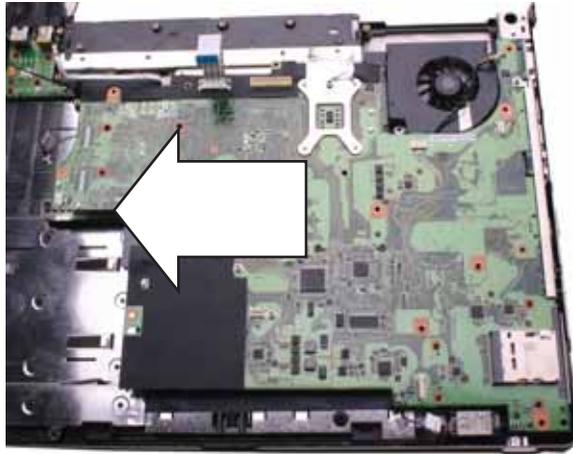


- 21** Turn the old system board over, then remove the optional second cooling assembly from the system board.

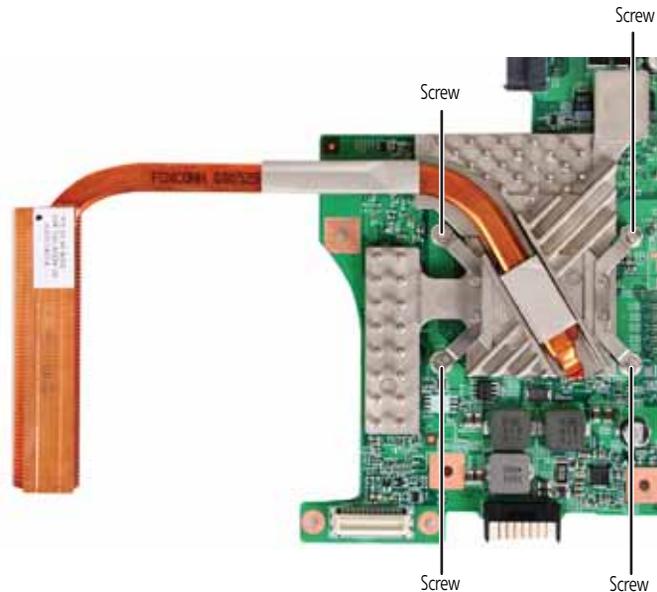

- 22** Remove any thermal grease residue from the second cooling assembly using a soft cloth and isopropyl alcohol.
- 23** Place thermal grease on the new system board's graphics processor. Use only enough to cover the processor die.
- 24** Replace the optional second cooling assembly on the new system board.
- 25** Place the new system board into the notebook. Make sure that:

- The small black switch on the system board fits within the slot on the wireless network on/off switch. If it does not, the wireless network may not work.

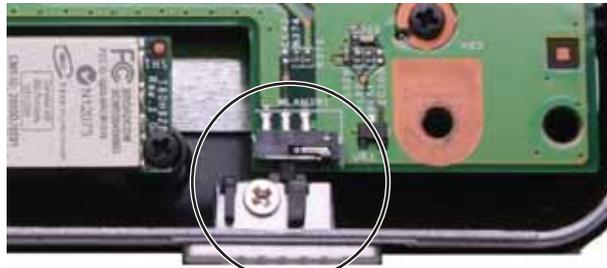

Slot

- The connector between this board and the modem jack/USB board is fully connected.




Connector

- 26 Replace the system board screws in the holes on the top of the system board removed in [Step 19](#).
- 27 Replace the modem cable into the system board retaining clips.
- 28 Replace the modem by following the instructions in [“Replacing the modem” on page 121](#).
- 29 Connect the Bluetooth module to the system board.
- 30 Connect the fan into the system board,
- 31 Replace the palm rest by following the steps in [“Replacing the palm rest” on page 104](#).
- 32 Replace the LCD assembly by following the steps in [“Replacing the LCD assembly” on page 91](#).
- 33 Replace the keyboard by following the steps in [“Replacing the keyboard” on page 79](#).
- 34 Replace the keyboard cover by following the steps in [“Replacing the keyboard cover” on page 76](#).
- 35 Replace the DVD drive by following the instructions in [“Replacing the DVD drive” on page 73](#).
- 36 Replace the hard drive by following the instructions in [“Replacing the hard drive” on page 69](#).

- 37** If the notebook has wireless networking built in, reconnect the wireless antennas by following the steps in [“Replacing the IEEE 802.11 wireless card” on page 63](#).
- 38** Replace the cooling assembly by following the instructions in [“Replacing the main cooling assembly” on page 58](#).
 -

Replacing the modem jack/USB board

Tools you need to complete this task:

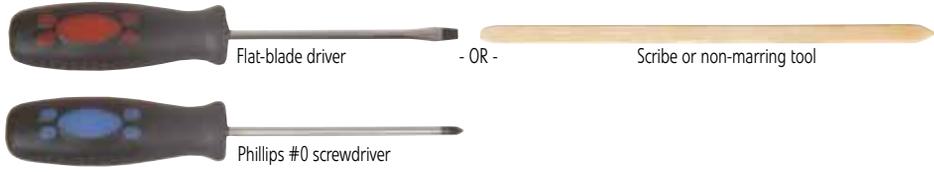



Additional materials you need to complete this task:

- X-23-7762 thermal grease

Screws removed during this task:

 <p>4 black M2×5 (main cooling assembly) (Optional)</p>	 <p>1 black M2.5×5 (DVD drive)</p>	 <p>2 black M2.5×3 (Keyboard cover)</p>
 <p>4 black M2.5×3 (Keyboard)</p>	 <p>1 long black (Keyboard)</p>	 <p>2 black M2.5×8 (Hinge bottom)</p>
 <p>2 black M2.5×8 (Hinge top)</p>	 <p>8 black M2.5×8 (Palm rest-bottom)</p>	 <p>6 black M2.5×8 (Palm rest-top)</p>
 <p>3 black M2.5×5 (Palm rest-top)</p>	 <p>1 black M2×3 (Palm rest-top)</p>	 <p>2 black M2×3 (Bluetooth module)</p>


Screws removed during this task (cont.):

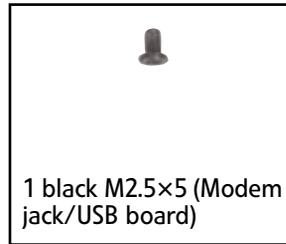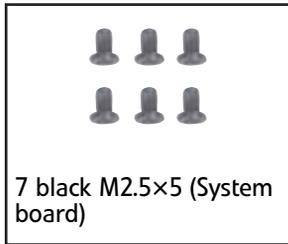


► **To replace the modem jack/USB board:**

- 1 Complete the steps in [“Preparing the notebook”](#) on page 55.
- 2 Remove the cooling assembly by following the instructions in [“Replacing the main cooling assembly”](#) on page 58.
- 3 If the notebook has wireless networking built in, unplug the wireless antennas by following the steps in [“Replacing the IEEE 802.11 wireless card”](#) on page 63.
- 4 Remove the hard drive by following the instructions in [“Replacing the hard drive”](#) on page 69.
- 5 Remove the DVD drive by following the steps in [“Replacing the DVD drive”](#) on page 73.
- 6 Remove the keyboard cover by following the steps in [“Replacing the keyboard cover”](#) on page 76.
- 7 Remove the keyboard by following the steps in [“Replacing the keyboard”](#) on page 79.
- 8 Remove the LCD assembly by following the steps in [“Replacing the LCD assembly”](#) on page 91.
- 9 Remove the palm rest by following the steps in [“Replacing the palm rest”](#) on page 104.
- 10 Remove the left speaker by following the steps in [“Replacing the speakers”](#) on page 125.
- 11 Remove the system board by following the steps in [“Replacing the system board and VGA cooling assembly”](#) on page 128.

- 12 Remove the modem jack/USB board screw.

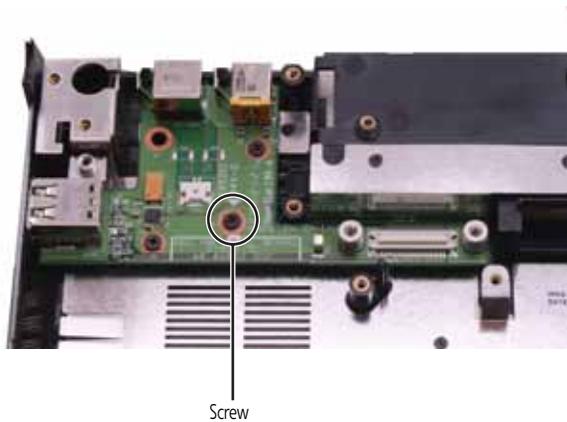

- 13 Lift the old modem jack/USB board from the notebook.

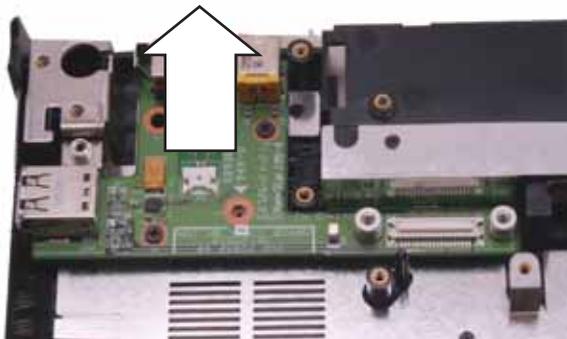


- 14 Set the new modem jack/USB board module into the notebook, then replace the screw removed in [Step 12](#).
- 15 Replace the system board by following the steps in [“Replacing the system board and VGA cooling assembly” on page 128](#).
- 16 Replace the palm rest by following the steps in [“Replacing the palm rest” on page 104](#).
- 17 Replace the speaker by following the steps in [“Replacing the speakers” on page 125](#).
- 18 Replace the LCD assembly by following the steps in [“Replacing the LCD assembly” on page 91](#).
- 19 Replace the keyboard by following the steps in [“Replacing the keyboard” on page 79](#).
- 20 Replace the keyboard cover by following the steps in [“Replacing the keyboard cover” on page 76](#).
- 21 Replace the DVD drive by following the steps in [“Replacing the DVD drive” on page 73](#).
- 22 Replace the hard drive by following the instructions in [“Replacing the hard drive” on page 69](#).
- 23 If the notebook has wireless networking built in, reconnect the wireless antennas by following the steps in [“Replacing the IEEE 802.11 wireless card” on page 63](#).
- 24 Replace the cooling assembly by following the instructions in [“Replacing the main cooling assembly” on page 58](#).

■

Replacing the fan(s)

Tools you need to complete this task:

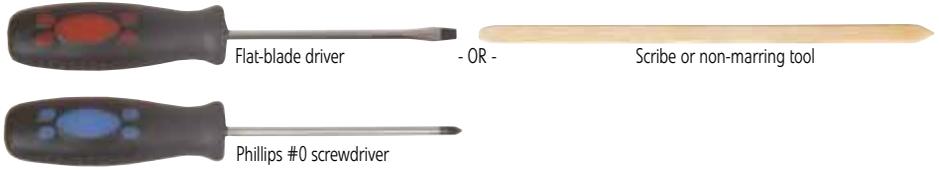



Additional materials you need to complete this task:

- X-23-7762 thermal grease

Screws removed during this task:

 <p>4 black M2×5 (main cooling assembly) (Optional)</p>	 <p>1 black M2.5×5 (DVD drive)</p>	 <p>2 black M2.5×3 (Keyboard cover)</p>
 <p>4 black M2.5×3 (Keyboard)</p>	 <p>1 long black (Keyboard)</p>	 <p>2 black M2.5×8 (Hinge bottom)</p>
 <p>2 black M2.5×8 (Hinge top)</p>	 <p>8 black M2.5×8 (Palm rest-bottom)</p>	 <p>6 black M2.5×8 (Palm rest-top)</p>
 <p>3 black M2.5×5 (Palm rest-top)</p>	 <p>1 black M2×3 (Palm rest-top)</p>	 <p>2 black M2×3 (Bluetooth module)</p>


Screws removed during this task:

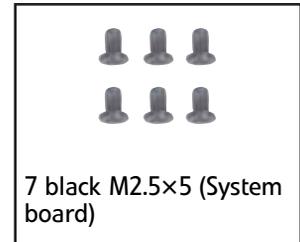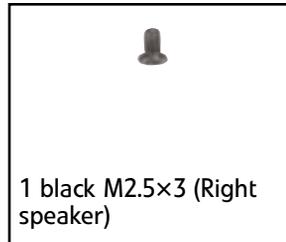


► **To replace the fan(s):**

- 1 Complete the steps in [“Preparing the notebook” on page 55](#).
- 2 Remove the cooling assembly by following the instructions in [“Replacing the main cooling assembly” on page 58](#).
- 3 If the notebook has wireless networking built in, unplug the wireless antennas by following the steps in [“Replacing the IEEE 802.11 wireless card” on page 63](#).
- 4 Remove the hard drive by following the instructions in [“Replacing the hard drive” on page 69](#).
- 5 Remove the DVD drive by following the steps in [“Replacing the DVD drive” on page 73](#).
- 6 Remove the keyboard cover by following the steps in [“Replacing the keyboard cover” on page 76](#).
- 7 Remove the keyboard by following the steps in [“Replacing the keyboard” on page 79](#).
- 8 Remove the LCD assembly by following the steps in [“Replacing the LCD assembly” on page 91](#).
- 9 Remove the palm rest by following the steps in [“Replacing the palm rest” on page 104](#).
- 10 Remove the system board by following the steps in [“Replacing the system board and VGA cooling assembly” on page 128](#).

- 11 Remove the fan screws.

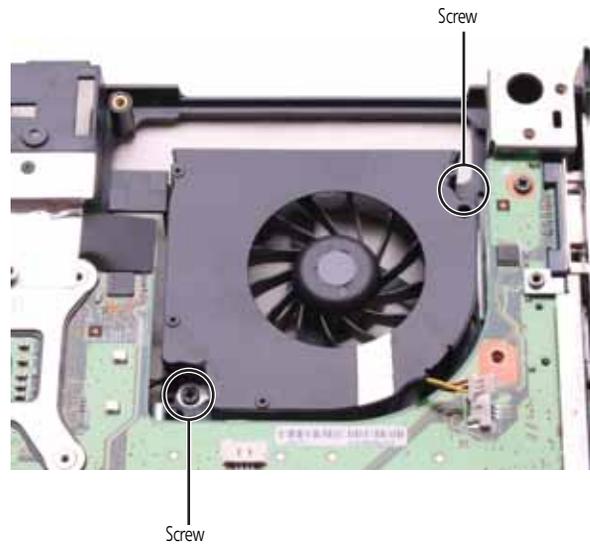

- 12 Lift the old fan from the notebook.

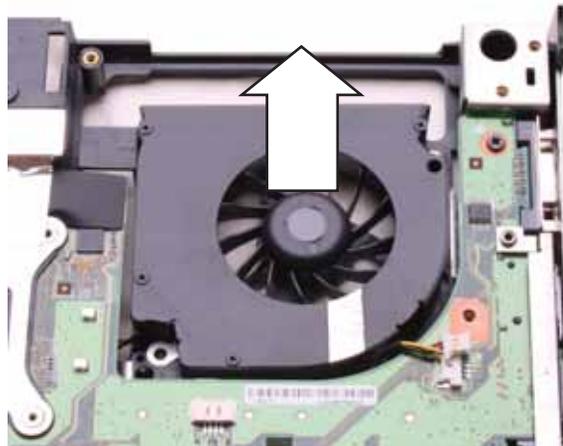

- 13 Set the new fan into the notebook, then replace the screws removed in [Step 11](#).
- 14 Replace the system board by following the steps in ["Replacing the system board and VGA cooling assembly" on page 128](#).
- 15 Replace the palm rest by following the steps in ["Replacing the palm rest" on page 104](#).
- 16 Replace the LCD assembly by following the steps in ["Replacing the LCD assembly" on page 91](#).
- 17 Replace the keyboard by following the steps in ["Replacing the keyboard" on page 79](#).
- 18 Replace the keyboard cover by following the steps in ["Replacing the keyboard cover" on page 76](#).
- 19 Replace the DVD drive by following the steps in ["Replacing the DVD drive" on page 73](#).
- 20 Replace the hard drive by following the instructions in ["Replacing the hard drive" on page 69](#).

- 21 If the notebook has wireless networking built in, reconnect the wireless antennas by following the steps in [“Replacing the IEEE 802.11 wireless card”](#) on page 63.
- 22 Replace the cooling assembly by following the instructions in [“Replacing the main cooling assembly”](#) on page 58.
 -

CHAPTER 4

Troubleshooting

- Diagnosing problems
- System test procedures
- Power-On Self-Test (POST) error message
- Index of error messages
- Phoenix BIOS beep codes
- Symptom-to-FRU error messages
- Intermittent problems
- Undetermined problems

Diagnosing problems

Use the following procedure as a guide for diagnosing notebook problems.



Important

The diagnostic tests are intended to test only Acer products. Non-Acer products, prototype cards, or modified options can give false errors and invalid system responses.

- 1 Obtain the failing symptoms in as much detail as possible.
- 2 Verify the symptoms by attempting to re-create the failure by running the diagnostic test or by repeating the same operation.
- 3 Use the following table with the verified symptom to determine which page to go to.

Symptoms (Verified)	Go To
Power failure. (The power indicator does not go on or stay on.)	"Testing the power system" on page 145
POST does not complete. No beep or error codes are indicated.	<ul style="list-style-type: none"> ▪ "Power-On Self-Test (POST) error message" on page 147 ▪ "Undetermined problems" on page 159
POST detects an error and displayed messages on screen.	"Index of error messages" on page 148
Other symptoms (LCD display problems or others).	"Power-On Self-Test (POST) error message" on page 147
Symptoms cannot be re-created (intermittent problems).	<ul style="list-style-type: none"> ▪ Use the customer-reported symptoms and go to "Power-On Self-Test (POST) error message" on page 147 ▪ "Intermittent problems" on page 159 ▪ "Undetermined problems" on page 159

System test procedures

Testing the optical drive

Use the following procedure to isolate a problem in an optical drive controller, driver, or drive.



Important

Make sure that the CD-ROM does not have any label attached to it. The label can cause damage to the drive or can cause the drive to fail.

► To test the optical drive:

- 1 Boot from the diagnostics diskette and start the diagnostics program.
- 2 Run the CD-ROM Test and see if the test completes successfully.
- 3 Follow the instructions in the message window.
If an error occurs, reconnect the connector on the system board.
If the error still remains:
- 4 Reconnect the external optical drive to a USB jack.
- 5 Replace the external optical drive.

- 6 Replace the system board.



Testing the keyboard or auxiliary input device

If the internal keyboard does not work or an unexpected character appears, make sure that the flexible cable extending from the keyboard is correctly seated in the connector on the system board. If the keyboard cable is connected correctly, run the Keyboard Test.



Important

Disconnect any external keyboards before testing the built-in keyboard.

If the tests detect a keyboard problem, do the following one at a time.

► **To correct the problem:**

- 1 Reconnect the keyboard cable to the system board.
- 2 Replace the keyboard.
- 3 Replace the system board.



Important

Do not replace a non-defective FRU.

The following auxiliary input devices are supported by this notebook:

- Numeric keypad
- External keyboard

If any of these devices do not work, reconnect the cable connector and repeat the failing operation.

Testing the memory

Memory errors can stop your programs, show error messages on the screen, or hang the system.

► **To test the memory:**

- 1 Boot from the diagnostics diskette and start the diagnostics program.
- 2 Run the Memory Test and see if the test completes successfully.
- 3 Press F2 in the test items.
- 4 Follow the instructions in the message window.



Important

Make sure that each memory card is fully installed into the connector. A loose connection can cause an error.



Testing the power system

► **To test for a power problem:**

- Turn on the notebook using each of the following power sources:
 - Remove the battery pack, connect the power adapter, then make sure that the notebook turns on using AC power.
 - Disconnect the power adapter, install a charged battery pack, then make sure that power is supplied by the battery pack.




If you suspect a power problem, complete the appropriate power supply check:

- “Check the power adapter” on page 146
- “Check the battery pack” on page 146

Check the power adapter

Unplug the power adapter cable from the notebook and measure the output voltage at the power adapter cable plug. See the following figure.

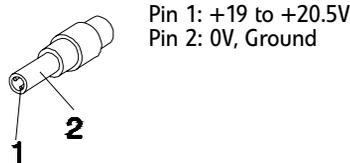

- If the voltage is not correct, replace the power adapter.
- If the voltage is within the range, do the following:
 - Replace the system board.
 - If the problem is not corrected, see “Undetermined problems” on page 159.
 - If the voltage is not correct, go to [Step 4](#).
 - If the power-on indicator does not light up, check the power adapter’s power cord for correct continuity and installation.
 - If the operational charge does not work, see “Check the battery pack” on page 146.



Important

An audible noise from the power adapter does not always indicate a defect.

Check the battery pack

► To check the battery pack using software:

- 1 Open Power Management in the Windows Control Panel.
- 2 In Power Meter, make sure that the parameters shown for Current Power Source and Total Battery Power Remaining are correct.
- 3 Repeat the steps 1 and 2, for both battery and adapter. This helps you identify first the problem is on recharging or discharging.

► To check the battery pack using hardware:

- 1 Turn off the notebook.
- 2 Remove the battery pack and measure the voltage between battery terminals 1 (+) and 6 (ground).
- 3 If the voltage is still less than 7.5 Vdc after recharging, replace the battery.



Important

To check the battery charge operation, use a discharged battery pack or a battery pack that has less than 50% of the total power remaining when installed in the notebook.

If the battery status indicator does not light up, remove the battery pack and let it return to room temperature. Re-install the battery pack.

If the charge indicator still does not light up, replace the battery pack. If the charge indicator still does not light up, replace the DC/DC charger board.

Testing the touchpad

If the touchpad doesn't work, do the following actions one at a time to correct the problem.

► **To test the touchpad:**

- 1 Reconnect the touchpad cables.
- 2 Replace the touchpad.
- 3 Replace the system board.
 -

 **Important**

Do not replace a non-defective FRU.

After you use the touchpad, the pointer may drift on the screen for a short time. This self-acting pointer movement can occur when a slight, steady pressure is applied to the touchpad pointer. This symptom is not a hardware problem. No service actions are necessary if the pointer movement stops in a short period of time.

Power-On Self-Test (POST) error message

The POST error message index lists the error message and their possible causes. The most likely cause is listed first.

 **Important**

Perform the FRU replacement or actions in the sequence shown in the FRU/Action column. If the FRU replacement does not solve the problem, put the original part back in the notebook. Do not replace a non-defective FRU.

This index can also help you determine the next possible FRU to be replaced when servicing a notebook.

If the symptom is not listed, see [“Undetermined problems” on page 159](#).

The following lists the error messages that the BIOS displays on the screen and the error symptoms classified by function.

 **Important**

Most of the error messages occur during POST. Some of them display information about a hardware device, such as the amount of memory installed. Others may indicate a problem with a device, such as the way it has been configured.

 **Important**

If the system fails after you make changes in the BIOS Setup Utility menus, reset the notebook, enter Setup, and install Setup defaults or correct the error.

Index of error messages

Error codes

Error Codes	Error Messages
006	Equipment Configuration Error Causes: 1. CPU BIOS Update Code Mismatch 2. IDE Primary Channel Master Drive Error (The causes are shown before "Equipment Configuration Error")
010	Memory Error at xxxx:xxxx:xxxxh (R:xxxxh, W:xxxxh)
070	Real Time Clock Error
071	CMOS Battery Bad
072	CMOS Checksum Error
110	System is disabled. An incorrect password was entered.
<No error code>	Battery is critically low. In this situation BIOS issues four short beeps, then shuts the system down. No message is displayed.
<No error code>	Temperature is critically high. In this situation BIOS shuts the system down. No message is displayed.

Error messages

Error Messages	FRU/Action Sequence
Failure Fixed Disk	<ul style="list-style-type: none"> Reconnect the hard disk drive connector. Run "Load Setup Defaults" using the BIOS Setup Utility, then reboot the notebook. Test or replace the hard disk drive. Test or replace the system board.
Stuck Key	See "Testing the keyboard or auxiliary input device" on page 145.
Keyboard error	See "Testing the keyboard or auxiliary input device" on page 145.
Keyboard Controller Failed	See "Testing the keyboard or auxiliary input device" on page 145.
Keyboard locked - Unlock key switch	Unlock the external keyboard.
Monitor type does not match CMOS - Run Setup	Run "Load Setup Defaults" using the BIOS Setup Utility, then reboot the notebook.
Shadow RAM Failed at offset: nnnn	<ul style="list-style-type: none"> Test or replace the BIOS ROM. Test or replace the system board.
System RAM Failed at offset: nnnn	<ul style="list-style-type: none"> Test or replace the SO-DIMM. Test or replace the system board.
Extended RAM Failed at offset: nnnn	<ul style="list-style-type: none"> Test or replace the SO-DIMM. Test or replace the system board.

Error Messages	FRU/Action Sequence
System battery is dead - Replace and run Setup	Test or replace the CMOS battery, run the BIOS Setup Utility to reconfigure system time, then reboot the system.
System CMOS checksum bad - Default configuration used	Test or replace the CMOS battery, run the BIOS Setup Utility to reconfigure system time, then reboot the system.
System timer error	<ul style="list-style-type: none"> ▪ Test or replace the CMOS battery, run the BIOS Setup Utility to reconfigure system time, then reboot the system. ▪ Test or replace the system board.
Real time clock error	<ul style="list-style-type: none"> ▪ Test or replace the CMOS battery, run the BIOS Setup Utility to reconfigure system time, then reboot the system. ▪ Test or replace the system board.
Previous boot incomplete - Default configuration used	<ul style="list-style-type: none"> ▪ Run "Load Setup Defaults" using the BIOS Setup Utility, then reboot the notebook. ▪ Test or replace the CMOS battery, run the BIOS Setup Utility to reconfigure system time, then reboot the system. ▪ Test or replace the system board.
Memory size found by POST differed from CMOS	<ul style="list-style-type: none"> ▪ Run "Load Setup Defaults" using the BIOS Setup Utility, then reboot the notebook. ▪ Test or replace the SO-DIMM. ▪ Test or replace the system board.
Diskette drive A error	<ul style="list-style-type: none"> ▪ Make sure that the drive is defined with the proper diskette type in the BIOS Setup Utility.
Incorrect Drive A type - run SETUP	Make sure that the drive is defined with the proper diskette type in the BIOS Setup Utility
System cache error - Cache disabled	Test or replace the system board.
CPU ID:	Test or replace the system board.
DMA Test Failed	<ul style="list-style-type: none"> ▪ Test or replace the SO-DIMM. ▪ Test or replace the system board.
Software NMI Failed	<ul style="list-style-type: none"> ▪ Test or replace the SO-DIMM. ▪ Test or replace the system board.
Fail-Safe Timer NMI Failed	<ul style="list-style-type: none"> ▪ Test or replace the SO-DIMM. ▪ Test or replace the system board.
Device Address Conflict	<ul style="list-style-type: none"> ▪ Run "Load Setup Defaults" using the BIOS Setup Utility, then reboot the notebook. ▪ Test or replace the CMOS battery, run the BIOS Setup Utility to reconfigure system time, then reboot the system. ▪ Test or replace the system board.
Allocation Error for device	<ul style="list-style-type: none"> ▪ Run "Load Setup Defaults" using the BIOS Setup Utility, then reboot the notebook. ▪ Test or replace the CMOS battery, run the BIOS Setup Utility to reconfigure system time, then reboot the system. ▪ Test or replace the system board.
Failing Bits: nnnn	<ul style="list-style-type: none"> ▪ Test or replace the SO-DIMM. ▪ Test or replace the BIOS ROM. ▪ Test or replace the system board.
Fixed Disk n	None

Error Messages	FRU/Action Sequence
Invalid System Configuration Data	<ul style="list-style-type: none"> ▪ Test or replace the BIOS ROM. ▪ Test or replace the system board.
I/O device IRQ conflict	<ul style="list-style-type: none"> ▪ Run “Load Setup Defaults” using the BIOS Setup Utility, then reboot the notebook. ▪ Test or replace the CMOS battery, run the BIOS Setup Utility to reconfigure system time, then reboot the system. ▪ Test or replace the system board.
Operating system not found	<ul style="list-style-type: none"> ▪ Run the BIOS Setup Utility and see if fixed disk and drive A: are properly identified. ▪ Test or replace the diskette drive ▪ Test or replace the hard disk drive ▪ Test or replace the system board

No-beep error messages

No-beep Error Messages	FRU/Action in Sequence
No beep, power-on indicator turns off and LCD is blank.	<ul style="list-style-type: none"> ▪ Test the power source (battery pack and power adapter). See “Testing the power system” on page 145. ▪ Make sure that every connector is connected tightly and correctly. ▪ Reconnect the SO-DIMM. ▪ Test or replace the LED board. ▪ Test or replace the system board.
No beep, power-on indicator turns on and LCD is blank.	<ul style="list-style-type: none"> ▪ Test the power source (battery pack and power adapter). See “Testing the power system” on page 145. ▪ Reconnect the LCD connector ▪ Check the hard disk drive. ▪ Check the LCD inverter ID. ▪ Check the LCD cable. ▪ Test or replace the LCD inverter. ▪ Test or replace the LCD. ▪ Test or replace the system board.
No beep, power-on indicator turns on and LCD is blank. But you can see POST on an external CRT.	<ul style="list-style-type: none"> ▪ Reconnect the LCD connectors. ▪ Check the LCD inverter ID. ▪ Check the LCD cable. ▪ Test or replace the LCD inverter. ▪ Test or replace the LCD. ▪ Test or replace the system board.
No beep, power-on indicator turns on and a blinking cursor shown on LCD during POST.	<ul style="list-style-type: none"> ▪ Make sure that every connector is connected tightly and correctly. ▪ Test or replace the system board.
No beep during POST but system runs correctly.	<ul style="list-style-type: none"> ▪ Test or replace the speaker. ▪ Test or replace the system board.

Phoenix BIOS beep codes

Code	Beeps	POST Routine Description
02h		Verify Real Mode
03h		Disable Non-Maskable Interrupt (NMI)
04h		Get CPU type
06h		Initialize system hardware
08h		Initialize chipset with initial POST values
09h		Set IN POST flag
0Ah		Initialize CPU registers
0Bh		Enable CPU cache
0Ch		Initialize caches to initial POST values
0Eh		Initialize I/O component
0Fh		Initialize the local bus IDE
10h		Initialize Power Management
11h		Load alternate registers with initial POST values
12h		Restore CPU control word during warm boot
13h		Initialize PCI Bus Mastering devices
14h		Initialize keyboard controller
16h	1-2-2-3	BIOS ROM checksum
17h		Initialize cache before memory autosize
18h		8254 timer initialization
1Ah		8237 DMA controller initialization
1Ch		Reset Programmable Interrupt Controller
20h	1-3-1-1	Test DRAM refresh
22h	1-3-1-3	Test 8742 Keyboard Controller
24h		Set ES segment register to 4 GB
26h		Enable A20 line
28h		Autosize DRAM
29h		Initialize POST Memory Manager
2Ah		Clear 215 KB base RAM
2Ch	1-3-4-1	RAM failure on address line xxxx

Code	Beeps	POST Routine Description
2Eh	1-3-4-3	RAM failure on data bits xxxx of low byte of memory bus
2Fh		Enable cache before system BIOS shadow
30h	1-4-1-1	RAM failure on data bits xxxx of high byte of memory bus
32h		Test CPU bus-clock frequency
33h		Initialize Phoenix Dispatch Manager
36h		Warm start shut down
38h		Shadow system BIOS ROM
3Ah		Autosize cache
3Ch		Advanced configuration of chipset registers
3Dh		Load alternate registers with CMOS values
42h		Initialize interrupt vectors
45h		POST device initialization
46h	2-1-2-3	Check ROM copyright notice
48h		Check video configuration against CMOS
49h		Initialize PCI bus and devices
4Ah		Initialize all video adapters in system
4Bh		QuietBoot start (optional)
4Ch		Shadow video BIOS ROM
4Eh		Display BIOS copyright notice
50h		Display CPU type and speed
51h		Initialize EISA board
52h		Test keyboard
54h		Set key click if enabled
58h	2-2-3-1	Test for unexpected interrupts
59h		Initialize POST display service
5Ah		Display prompt "Press F2 to enter SETUP"
5Bh		Disable CPU cache
5Ch		Test RAM between 512 and 640 KB
60h		Test extended memory
62h		Test extended memory address lines
64h		Jump to User Patch1

Code	Beeps	POST Routine Description
66h		Configure advanced cache registers
67h		Initialize Multi Processor APIC
68h		Enable external and CPU caches
69h		Setup System Management Mode (SMM) area
6Ah		Display external L2 cache size
6Bh		Load custom defaults (optional)
6Ch		Display shadow-area message
6Eh		Display possible high address for UMB recovery
70h		Display error messages
72h		Check for configuration errors
76h		Check for keyboard errors
7Ch		Set up hardware interrupt vectors
7Eh		Initialize coprocessor if present
80h		Disable onboard Super I/O ports and IRQs
81h		Late POST device initialization
82h		Detect and install external RS232 ports
83h		Configure non-MCD IDE controllers
84h		Detect and install external parallel ports
85h		Initialize PC-compatible PnP ISA devices
86h		Re-initialize onboard I/O ports
87h		Configure Motherboard Configurable Devices (optional)
88h		Initialize BIOS Area
89h		Enable Non-Maskable Interrupts (NMIs)
8Ah		Initialize Extended BIOS Data Area
8Bh		Test and initialize PS/2 mouse
8Ch		Initialize floppy controller
8Fh		Determine number of ATA drives (optional)
90h		Initialize hard-disk controllers
91h		Initialize local-bus hard-disk controllers
92h		Jump to UserPatch2
93h		Build MPTABLE for multi-processor boards

Code	Beeps	POST Routine Description
95h		Install CD ROM for boot
96h		Clear huge ES segment register
97h		Fixup Multi Processor table
98h	1-2	Search for option ROMs. One long, two short beeps on checksum failure.
99h		Check for SMART drive (optional)
9Ah		Shadow option ROMs
9Ch		Set up Power Management
9Dh		Initialize security engine (optional)
9Eh		Enable hardware interrupts
9Fh		Determine number of ATA and SCSI drives
A0h		Set time of day
A2h		Check key lock
A4h		Initialize Typematic rate
A8h		Erase F2 prompt
AAh		Scan for F2 key stroke
ACh		Enter SETUP
AEh		Clear Boot flag
B0h		Check for errors
B2h		POST done- prepare to boot operating system
B4h	1	One short beep before boot
B5h		Terminate QuietBoot (optional)
B6h		Check password (optional)
B9h		Prepare Boot
BAh		Initialize DMI parameters
BBh		Initialize PnP Option ROMs
BCh		Clear parity checkers
BDh		Display MultiBoot menu
BEh		Clear screen (optional)
BFh		Check virus and backup reminders
C0h		Try to boot with INT 19
C1h		Initialize POST Error Manager (PEM)

Code	Beeps	POST Routine Description
C2h		Initialize error logging
C3h		Initialize error display function
C4h		Initialize system error handler
C5h		PnPnd dual CMOS (optional)
C6h		Initialize notebook docking (optional)
C7h		Initialize notebook docking late
C8h		Force check (optional)
C9h		Extended checksum (optional)
D2h		Unknown interrupt

Code	Beeps	
E0h		Initialize the chipset
E1h		Initialize the bridge
E2h		Initialize the CPU
E3h		Initialize the system timer
E4h		Initialize system I/O
E5h		Check force recovery boot
E6h		Checksum BIOS ROM
E7h		Go to BIOS
E8h		Set Huge Segment
E9h		Initialize Multi Processor
EAh		Initialize OEM special code
EBh		Initialize PIC and DMA
ECh		Initialize Memory type
EDh		Initialize Memory size
EEh		Shadow Boot Block
EFh		System memory test
F0h		Initialize interrupt vectors
F1h		Initialize Run Time Clock
F2h		Initialize video
F3h		Initialize System Management Mode

Code	Beeps	
F4h	1	Output one beep before boot
F5h		Boot to Mini DOS
F6h		Clear Huge Segment
F7h		Boot to Full DOS

Symptom-to-FRU error messages

LCD

Symptom / Error	Action in Sequence
<ul style="list-style-type: none"> ▪ The LCD backlight doesn't work. ▪ The LCD is too dark. ▪ The LCD brightness cannot be adjusted. ▪ The LCD contrast cannot be adjusted. 	<ul style="list-style-type: none"> ▪ Run "Load Setup Defaults" using the BIOS Setup Utility, then reboot the notebook. ▪ Reconnect the LCD connectors. ▪ Test or replace the keyboard (if contrast and brightness function key doesn't work). ▪ Check the LCD inverter ID. ▪ Test or replace the LCD cable. ▪ Test or replace the LCD inverter. ▪ Test or replace the LCD. ▪ Test or replace the system board.
<ul style="list-style-type: none"> ▪ The LCD screen is unreadable. ▪ Missing pels in characters. ▪ The screen appears abnormal. ▪ The wrong color is displayed. 	<ul style="list-style-type: none"> ▪ Reconnect the LCD connector. ▪ Check the LCD inverter ID. ▪ Test or replace the LCD cable. ▪ Test or replace the LCD inverter. ▪ Test or replace the LCD. ▪ Test or replace the system board.
The LCD is displaying extra horizontal or vertical lines.	<ul style="list-style-type: none"> ▪ Check the LCD inverter ID. ▪ Test or replace the LCD cable. ▪ Test or replace the LCD inverter. ▪ Test or replace the LCD. ▪ Test or replace the system board.

Power

Symptom / Error	Action in Sequence
The notebook shuts down during operation.	<ul style="list-style-type: none"> ▪ Test the power source (battery pack and power adapter). See "Testing the power system" on page 145. ▪ Test or replace the battery pack. ▪ Test or replace the power adapter. ▪ Test or replace the system board.
The notebook doesn't turn on.	<ul style="list-style-type: none"> ▪ Test the power source (battery pack and power adapter). See "Testing the power system" on page 145. ▪ Test or replace the battery pack. ▪ Test or replace the power adapter. ▪ Test or replace the system board.

Symptom / Error	Action in Sequence
The notebook doesn't turn off.	<ul style="list-style-type: none"> Test the power source (battery pack and power adapter). See "Testing the power system" on page 145. Press and hold the power button for more than four seconds. Test or replace the system board.
The battery can't be charged.	<ul style="list-style-type: none"> Test the battery pack. See "Check the battery pack" on page 146. Test or replace the battery pack. Test or replace the system board.

ExpressCard

Symptom / Error	Action in Sequence
The notebook cannot detect the ExpressCard.	<ul style="list-style-type: none"> Test or replace the system board.
ExpressCard slot pin is damaged.	<ul style="list-style-type: none"> Test or replace the system board.

Memory

Symptom / Error	Action in Sequence
Memory count (size) appears different from actual size.	<ul style="list-style-type: none"> Run "Load Setup Defaults" using the BIOS Setup Utility, then reboot the notebook. Test or replace the SO-DIMM. Test or replace the system board.

Sound

Symptom / Error	Action in Sequence
No sound comes from the notebook when running Windows multimedia programs.	<ul style="list-style-type: none"> Reinstall the audio driver. Test or replace the speakers. Test or replace the system board.
The internal speakers make noise or emit no sound.	<ul style="list-style-type: none"> Test or replace the speakers. Test or replace the system board.

Power management

Symptom / Error	Action in Sequence
The notebook will not hibernate.	<ul style="list-style-type: none"> Test or replace the keyboard (if control is from the keyboard). Test or replace the hard disk drive. Test or replace the system board.
The system doesn't hibernate and emits four short beeps every minute.	<ul style="list-style-type: none"> Press Fn+O and see if the notebook enters hibernation mode. Test or replace the touchpad. Test or replace the keyboard. Check the hard disk connection to the system board. Test or replace the hard disk drive. Test or replace the system board.

Symptom / Error	Action in Sequence
The notebook doesn't enter standby mode after closing the LCD.	<ul style="list-style-type: none"> Make sure that the magnet is in the magnet holder. For more information, see "Replacing the LCD panel" on page 94. Test or replace the system board.
The system doesn't resume from hibernation mode.	<ul style="list-style-type: none"> Check the hard disk connection to the system board. Test or replace the hard disk drive. Test or replace the system board.
The system doesn't resume from standby mode after opening the LCD.	<ul style="list-style-type: none"> Make sure that the magnet is in the magnet holder. For more information, see "Replacing the LCD panel" on page 94. Test or replace the system board.
The battery fuel gauge in Windows doesn't go higher than 90%.	<ul style="list-style-type: none"> Remove the battery pack and let it cool for two hours. Refresh the battery (use only battery power until the notebook turns off, then charge the battery). Test or replace the battery pack. Test or replace the system board.
The system hangs intermittently.	<ul style="list-style-type: none"> Reconnect the hard disk drive and optical drive. Check the hard disk connection to the system board. Test or replace the system board.

Devices

Symptom / Error	Action in Sequence
System configuration does not match the installed devices.	<ul style="list-style-type: none"> Run "Load Setup Defaults" using the BIOS Setup Utility, then reboot the notebook. Reconnect the hard disk drive and optical drive.
The external display does not work correctly.	<ul style="list-style-type: none"> Press Fn+F4 repeatedly to switch between LCD, external display, and both displays. Test or replace the system board.
USB does not work correctly.	<ul style="list-style-type: none"> Test or replace the modem jack/USB board. Test or replace the system board.
Printer problems.	<ul style="list-style-type: none"> Run the printer self-test. Reinstall the printer driver. Test or replace the printer cable. Test or replace the printer. Test or replace the system board.

Keyboard and touchpad

Symptom / Error	Action in Sequence
The keyboard (one or more keys) does not work.	<ul style="list-style-type: none"> Reconnect the keyboard cable. Test or replace the keyboard. Test or replace the system board.
The touchpad does not work.	<ul style="list-style-type: none"> Reconnect the touchpad cable. Test or replace the touchpad board. Test or replace the system board.

Modem

Symptom / Error	Action in Sequence
The internal modem does not work correctly.	<ul style="list-style-type: none"> ▪ Test the modem phone port. ▪ Test or replace the modem card. ▪ Test or replace the system board.

Important

If you cannot find a symptom or an error in this list and the problem remains, see [“Undetermined problems” on page 159](#).

Intermittent problems

Intermittent system hang problems can be caused by a variety of reasons that have nothing to do with a hardware defect. These reasons include: cosmic radiation, electrostatic discharge, or software errors. FRU replacement should be considered only when a recurring problem exists.

► To analyze an intermittent problem:

- 1 Run the advanced diagnostic test for the system board in loop mode at least ten times.
 - If any error is detected, replace the FRU.
 - If no error is detected, do not replace any FRU.
- 2 Rerun the test to verify that there are no more errors.
 -

Undetermined problems

If the diagnostic test may not identify which adapter or device failed, which installed devices are incorrect, whether a short circuit is suspected, or whether the system is inoperative. Use these procedures to isolate the failing FRU (do not isolate a non-defective FRU).

Important

Verify that all attached devices are supported by the notebook.

Important

Verify that the power supply being used at the time of the failure is operating correctly. (See [“Testing the power system” on page 145](#).)

► To isolate a failing FRU:

- 1 Turn off the notebook.
- 2 Visually check FRU parts for damage. If you identify any damage, replace the FRU.
- 3 Remove or disconnect all of the following devices:

- Non-Acer devices
 - Printer, mouse, and other external devices
 - Battery pack
 - Hard disk drive(s)
 - SO-DIMM
 - Optical drive
 - Type 54 ExpressCards
- 4 Turn on the notebook.
- 5 Determine if the problem has changed.
- If the problem does not recur, reconnect the removed devices one at a time until you find the failing FRU.
 - If the problem does recur, replace the following FRUs one at a time:
 - System board
 - LCD assembly
-



Important


Do not replace a non-defective FRU.

CHAPTER 5


Connector locations

- [System board top connectors](#)
- [System board bottom connectors](#)

System board top connectors

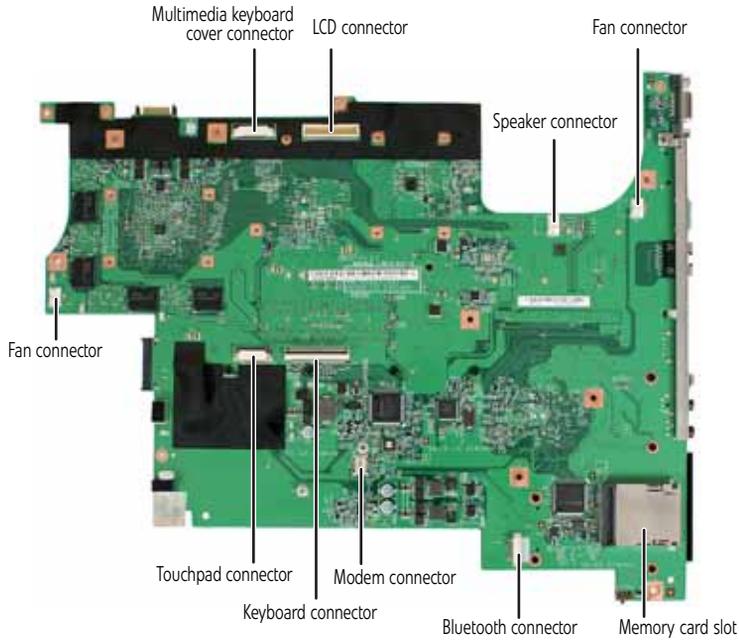

System board bottom connectors

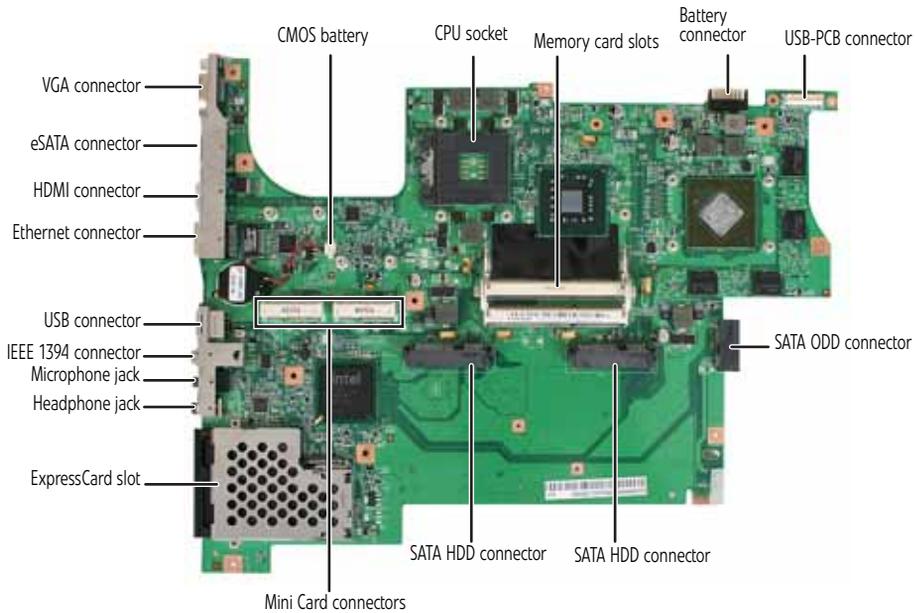

CHAPTER 6

FRU (Field-Replaceable Unit) list

- [Introduction](#)
- [Exploded diagram](#)
- [FRU list](#)

Introduction

This chapter gives you the FRU (field-replaceable-unit) listing in global configurations of MG1. Refer to this chapter whenever ordering for parts to repair or for RMA (Return Merchandise Authorization).

Please note that **WHEN ORDERING FRU PARTS**, you should check the most up-to-date information available on your regional web or channel. For whatever reasons a part number change is made, it will not be noted on the printed Service Guide. For **ACER AUTHORIZED SERVICE PROVIDERS**, your Acer office may have a **DIFFERENT** part number code from those given in the FRU list of this printed Service Guide. You **MUST** use the local FRU list provided by your regional Acer office to order FRU parts for repair and service of customer machines.




Important


To scrap or to return the defective parts, you should follow the local government ordinance or regulations on how to dispose it properly, or follow the rules set by your regional Acer office on how to return it.

Exploded diagram

Notebook chassis

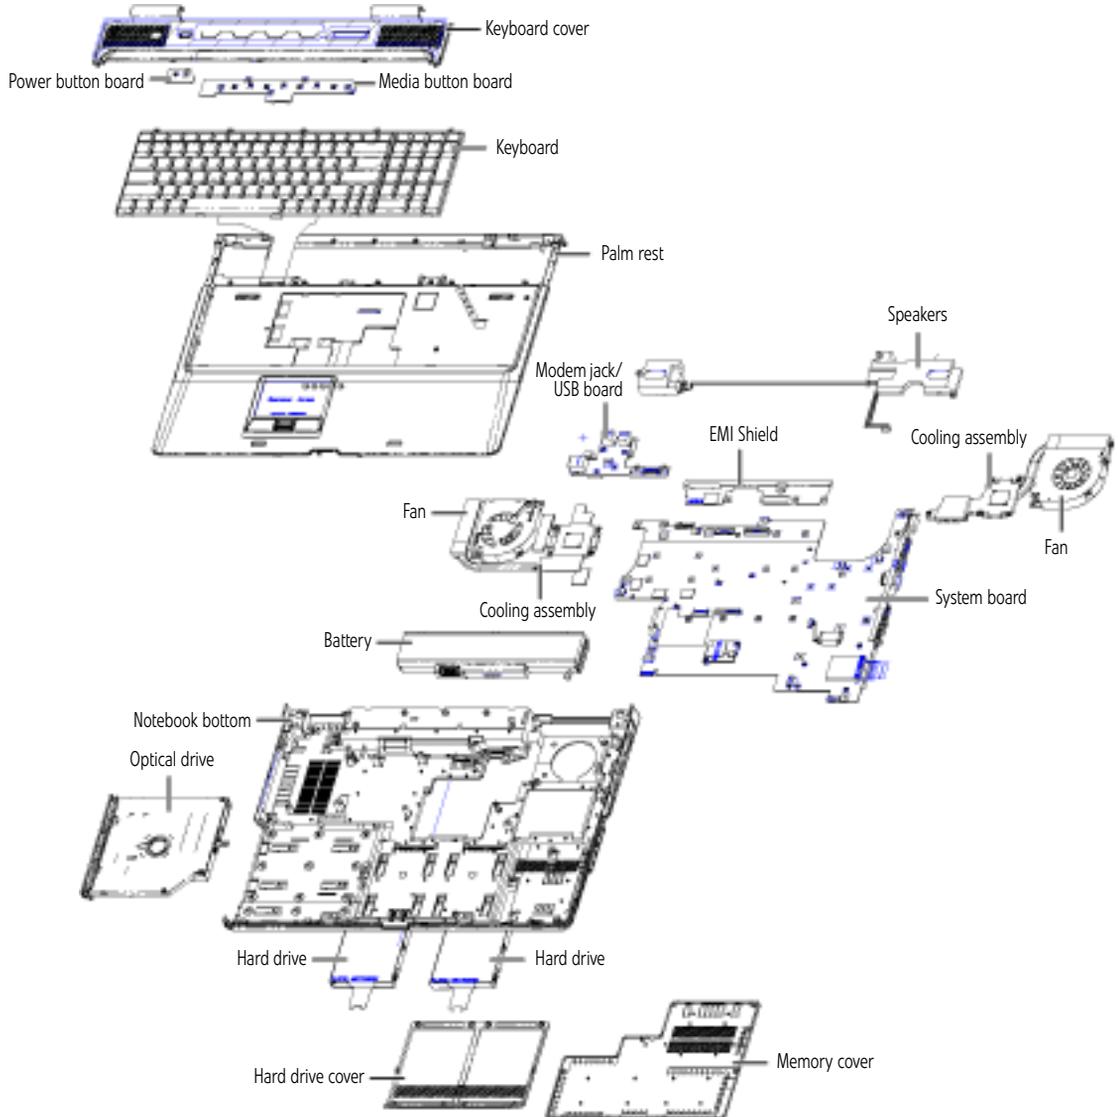

Notebook LCD panel

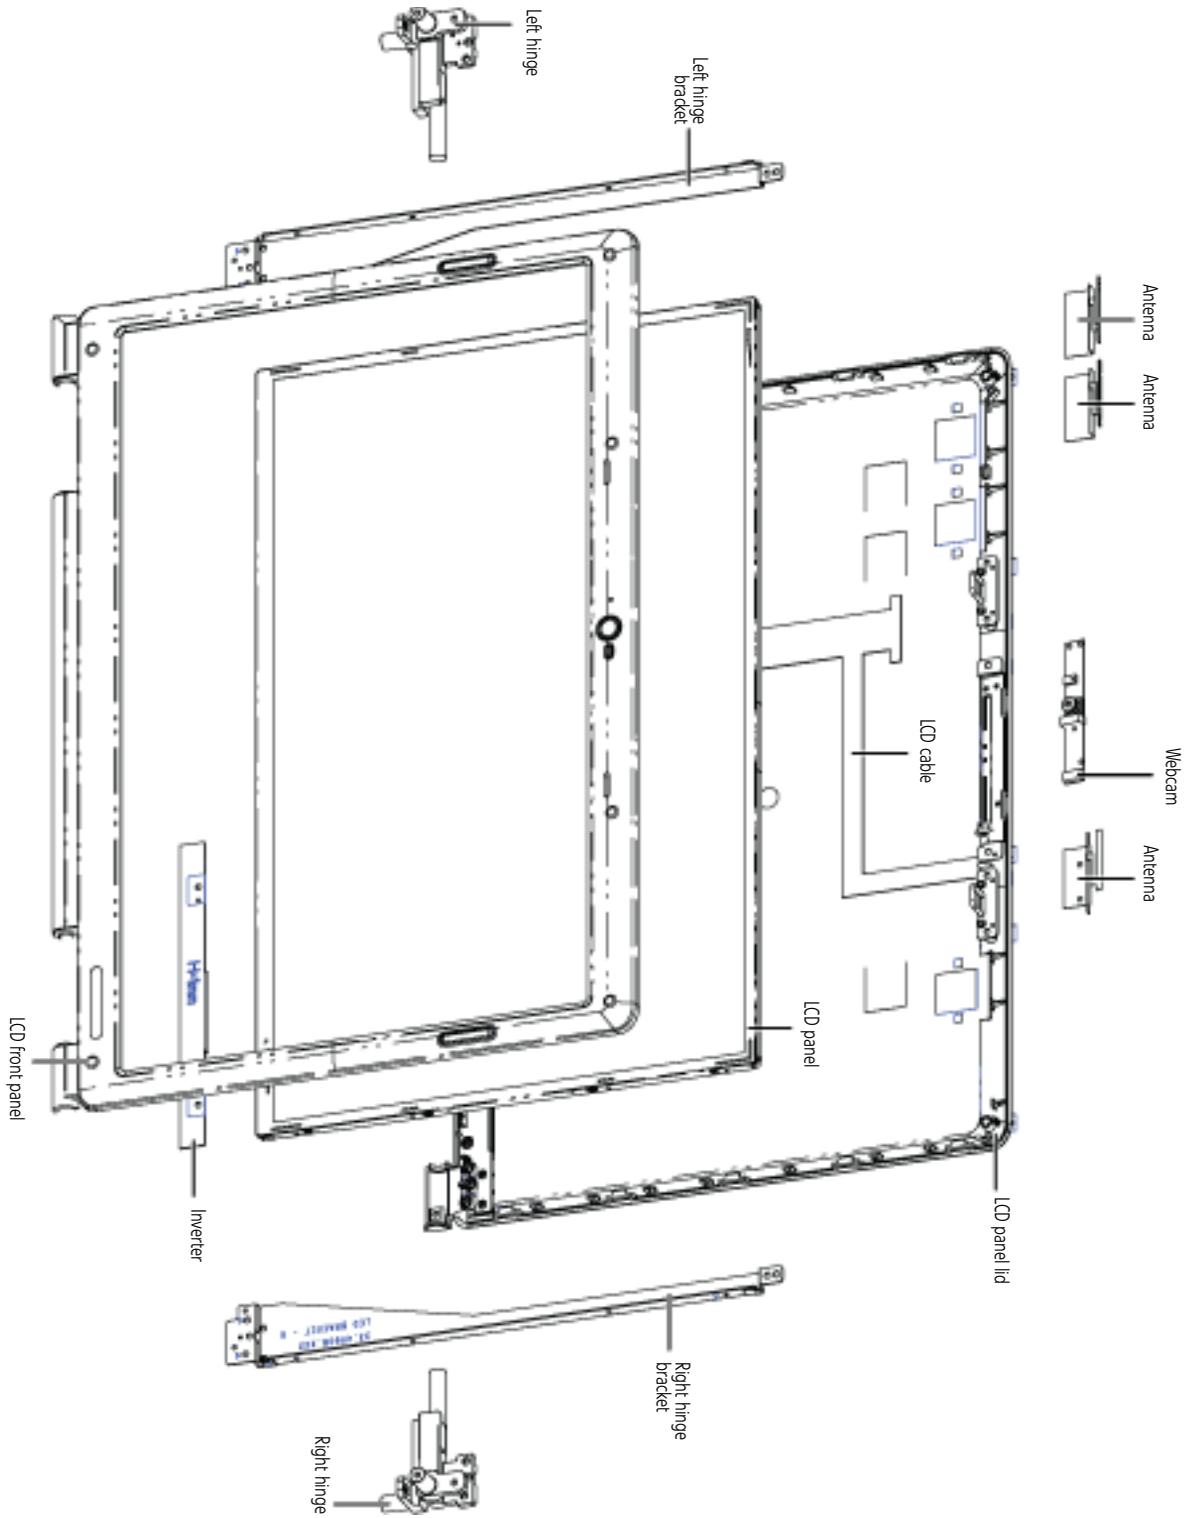

FRU list

Category	Part Name and Description	Acer Part No.
Adapters		
	ADAPTER 120W 3PIN DELTA ADP-120ZB BBK	AP.12001.003
	ADAPTER PACK 120W 3PIN W/POWER CODE	6K.W2301.001
Antennas		
	WIRELESS ANTENNA MAIN WHITE	50.W2301.008
	WIRELESS ANTENNA AUX BLACK	50.W2301.009
Batteries		
	BATTERY PACK LI+ 9CELL 2.6AH SMP	BT.00907.006
	<u><Reviewer: This battery is not in the printout></u>	
Boards		
	<u><Reviewer: This board is not in the printout></u>	
	INVERTER BOARD 17" YEC YNV-W10	19.TK901.004
	WIRELESS LAN BOARD 512AN_MMWG SHIRLEY PEAK 5100 MM#895361	KI.SPM01.003
	MODEM BOARD LITEON CONEXANT UNIZION ZION RD02-D330 A55024Z18G	54.W2301.001
	TOUCH PAD BUTTON BOARD	55.W2301.001
	MEDIA HIGH-END BOARD	55.W2301.002

Category	Part Name and Description	Acer Part No.
	SMALL BOARD	55.W2301.003
	POWER BUTTON BOARD	55.W2301.004
	CAPACITIVE BUTTON BOARD SYNAPTICS TM-01001-003	56.W2301.001
	TOUCHPAD SYNAPTICS BOARD	56.W2301.002
Cables		
	POWER CORD 2.5A 125V USA	27.01518.781
	POWER MEDIA BOARD CABLE HB IMV	50.W2301.001
	FFC 6PIN 70MM VOLUME CABLE	50.W2301.002
	MEDIA CABLE	50.W2301.003
	TOUCHPAD CABLE 12PIN 120MM	50.W2301.004
	TOUCHPAD CABLE 25PIN 140MM	50.W2301.005
	MODEM CABLE	50.W2301.006
	LCD CABLE	50.W2301.007
Cameras		
	CAMERA 1.3M CHICONY CNF614121004960L	57.W2301.001
Cases/Covers/Brackets/Assemblies		
	CPU COVER	60.W2301.001
	HDD COVER	60.W2301.002
	LOWER CASE	60.W2301.003
	MIDDLE COVER	60.W2301.004
	UPPER CASE	60.W2301.005
	TOUCHPAD BRACKET	60.W2301.006
	VOLUME PLATE	40.W2301.001
	OPTICAL BRACKET	33.W2301.001
	DVD-RW RW BEZEL	60.W2301.007
	HDD BRACKET	60.W2301.011
	LCD BRACKET RIGHT	33.W2301.002
	LCD BRACKET LEFT	33.W2301.003
	LCD HINGE PACK RIGHT	33.W2301.004

Category	Part Name and Description	Acer Part No.
	LCD HINGE PACK LEFT	33.W2301.005
CPUs/Processors		
	CPU INTEL CORE2DUAL P8400 PGA 2.26G 3M 1066 25W	KC.84001.DPP
DVD-RW Drives		
	ASSEMBLY DVD-RW SUPER MULTI 8X SATA W/BEZEL	6M.W2301.001
	ODD TSST SUPER-MULTI DRIVE 12.7MM 8X TS-L633P LF SATA W/O BEZEL	KU.00801.027
HDDs/Hard Disk Drives		
	HDD MODULE 200G 7200RPM SATA	
	HDD 200GB 7200RPM SATA SEAGATE SATA ST9200420AS FW:3.AAA 7	KH.20001.011
Fans		
	VGA FAN	23.W2301.001
	CPU FAN	23.W2301.002
Heatsinks		
	CPU HEATSINK 1	60.W2301.008
	CPU HEATSINK 2	60.W2301.008
	VGA HEATSINK	60.W2301.010
Keyboards		
	Keyboard SUNREX Godzilla_IMV Internal US ORANGE COLOR	KB.INT05.024
LCD Module		
	ASSEMBLY LCD MODULE 17.1" WUXGA W/CAMERA	6M.W2301.002

Category	Part Name and Description	Acer Part No.
LCD Panel		
	LCD 17.1" WUXGA AU B170UW01 V0	LK.17005.030
	LCD 17.1" WUXGA SAMSUNG LTN170CT05-G01	LK.17006.027
Main Boards		
	MAINBOARD GODZILLA-IMV P-7811FX W/O1394&MODEM&MODEM CABLE&CPU&DIMM(PM45,DISCRETE,VRAM-SAM512MB)	MB.W050B.007
Memory Cards		
	SODIMM 2G DDR3 SAMSUNG M471B5673DZ1-CF8	KN.2GB0B.005
	SODIMM 2G DDR3 ELPIDA EBJ21UE8BAU0-AE-E	KN.2GB09.002
Miscellaneous		
	SD CARD DUMMY CARD	42.W2301.002
	E-CARD DUMMY CARD	42.W2301.001
	HEATSINK SCREW RUBBER	47.W2301.001
	LCD SCREW RUBBER	47.W2301.002
	ODD SCREW RUBBER	47.W2301.003

Category	Part Name and Description	Acer Part No.
Screws		
	SCW HEX NYL I#R-40 O#4-40 L5.5	34.00015.081
	SCRW MACH WAFER M2*L3.5 ZN ROH	86.W2301.001
	SCRW M2.5*5 WAFER B-ZN ROHS	86.00D47.630
	SCREW M2.5*L8 NYLOK CR3+	86.00E34.738
	SCRW MAC WA M2L3 BZNYLOK CR3+	86.W2301.002
	SCRW MAC WAF M3*3 BZNYLOK CR3+	86.W2301.003
	SCRW DOR WAF M2*4 BZNYLOK CR3+	86.W2301.004
	SCRW NYLOK M2.5*L3 NI ROH	86.W2301.005
	SCRW M2.5X3 NYLOK	86.W2301.006
	M2.5L10 KUAOLENG THICK 1.3	86.W2301.007
Speakers		
	SPEAKER	23.W2301.003

APPENDIX **A**

Model definition and configuration

Information not available at time of printing

Model
RO
Country
Acer Part No.
Description
CPU
LCD
SO-DIMM 1
SO-DIMM 2
HDD 1 (GB)
ODD
Wireless LAN
Bluetooth
VoIP Phone

APPENDIX **B**

Test compatible components

- [Introduction](#)
- [Microsoft® Windows® Vista Environment Test](#)

Introduction

This notebook's compatibility is tested and verified by Acer's internal testing department. All of its system functions are tested under Windows® XP Home, Windows® XP Pro environment.

Refer to the following lists for components, adapter cards, and peripherals which have passed these tests. Regarding configuration, combination and test procedures, please refer to the MG1 series Compatibility Test Report released by the Acer Mobile System Testing Department.

Microsoft® Windows® Vista Environment Test

[<Need list from Moon Cheuk>](#)

Item	Specification
CRT Port Test	
CRT Monitor	ViewSonic 19" CRT VCDTS23283-2G Monitor ViewSonic Professional Series G220 21" Monitor Philips 109P 19" Monitor MAG 810FT II 19" Monitor
LCD Monitor	ViewSonic 19" LCD VA1912W Monitor ViewSonic 20" LCD VA2012W Monitor Samsung 22" LCD 225DW Monitor Philips 15" 150B5 Monitor ASUS 22" LCD MW221u monitor EIZO 17" LCD FlexScan L586 monitor
HDMI Port Test	
LCD TV	BenQ VH3243 32" HDMI LCD TV Panasonic TC-37MPK 37" HDMI LCD TV BenQ VL3735 LCD TV
USB Port Test	
USB Mouse	Logitech USB 2.0 Mouse Logitech Optical Mouse Microsoft Optical Mouse Microsoft TrackBall Optical Logitech Marble Mouse Logitech Performance Optical Mouse Logitech Cordless Optical Mouse
USB Keyboard	Microsoft Natural Keyboard Pro Microsoft Digital Media Keyboard Pro Logitech Elite keyboard Logitech Cordless Desktop LX300 Keyboard IBM USB Numeric Keypad 33L3225 COMPAQ USB EAB Keyboard MICROSOFT Wireless Optical Desktop 3000

Item	Specification
USB Printer	Samsung ML 1450 Laser Printer Epson Photo830 Printer HP Photosmart 7960 Printer Canon PIXMA IP2000 Printer Lexmark Z52 Printer HP DeskJet 840C Printer
USB Speaker	JS USB Digital Speaker J-6502 JS USB speaker USBJ268 Comodow USB 3D sound (Adapter) YAMAHA USB Speaker MS35D
USB Scanner	Epson EXPRESSION 1600 Scanner Canon Canonscan CS3200F Epson USB Scanner 1660
USB Hub	D-link DU-H4 USB HUB ATEN UH-204 USB 2.0 HUB
USB Game Pad/Joystick	ALPS USB Game Pad Microsoft SideWinder Plug & Play GamePad Logitech Freedom 2.4GHz cordless Logitech WingMan USB Extreme Digital 3D Joystick Microsoft USB Side Winder Game pad Saitek P2500 Rumble Force Pad Logitech WingMan Formula (warrior) Joystick Logitech Freedom cordless joystick
USB Ethernet/Wireless LAN Adapter	Afast Ethernet Adapter USB2.0 D-Link Wireless LAN adapter;802.11a/b or b only D-Link AirPlus DWL-120+ 2.4GHz Wireless USB Adapter
USB Storage	Zynet 2.5" External Enclosure SATA/ Usb2.0 Box Sony 2.5" ExtERNAL BOX Slim Kit USB 2.0 Mass Storage 2.5" HDD combo case IO DATA 250GB eSATA HDD SanDisk Cruzer USB Flash Drive- Micro 1.0GB HP DL702 USB 128MB Digital Drive Transcend USB 512MB Flash Drive Sandisk USB 2.0 512MB Flash Drive Pioneer DVD+-R/RW Writer
USB Modem	US Robotics Courier 56K Modem
USB Bridge Cable	Z-TEK USB 2.0 Data Bridge Cable
USB FDD	NEC FDD IBM USB FDD Sony USB Floppy Disk Driver
Headphone/Microphone Port Test	
Headphone/Microphone	Logitech Premium Stereo Headset Headphone+Mic Sennheiser HD202 PHILIPS headphone Logitech Labtec Verse-524 MIC Panasonic Earbud Headphone with Volume Control
Express Card Test	
Gigabit Ethernet LAN Card	AboCom ExpressCard/34 Gigabit Ethernet PLANEX Expresscard 1000 BASE-T Gigabit LAN

Item	Specification
Wireless LAN Card	BELKIN N1 Wireless
Card Reader Adapter	Hagiwara sys-com Compact Flash/Microdrive Adapter Express Card AboCom ExpressCard/34 5in1 Card Reader
IEEE1394 Card	AboCom ExpressCard/54 1394B-800Mbps AboCom ExpressCard/54 1394A-400Mbps
Bluetooth Device Test	
Bluetooth Cell Phone/Headset	Sony Ericsson Bluetooth Headset Motorola HT820 Bluetooth Stereo Headphone
Multimedia Card Test	
SD/Mini SD/Micro SD Card	SanDisk Secure Digital Card 256MB A-DATA Secure Digital Card 4GB 150X Kingston SDHC 8GB Class6 Transcend SD 512MB Transcend 150X Ultra Speed SD 4GB Transcend SD HC 4GB A-DATA 150X Turbo SD 4GB A-DATA miniSD 512MB KINGMAX mini SD Adapter+512MB Mini SD Toshiba SDHC 4GB Class4 SanDisk Micro SD 6GB TOSHIBA Micro SD 2GB
MMC/MMC Plus/MMC Pro/ RS-MMC/RS-MMC Mobile	A-DATA MultiMedia Card 256MB A-DATA MultiMedia Card plus 1GB 200X A-DATA RS-MMC 256MB Transcend MMC Plus 4GB Transcend RS-MMC 512MB Ridata Multimedia Card PRO 256MB Silicon Power RS-MMC Mobile 1GB
MS/MS PRO/MS PRO Duo	Sony Memory Stick Card 128MB Sony Memory Stick Card Pro 256MB SanDisk Memory Stick Pro Duo 256MB SanDisk Memory Stick Pro 256MB Sony Memory Stick PRO Duo Card 4GB+MS Adapter Sony Memory Stick Pro MSX -2GS 2GB SanDisk Memory Stick Pro SDMSV-512 512MB

APPENDIX C

Online support information

This section describes online technical support services available to help you repair your Gateway notebook.

If you are a distributor, dealer, ASP, or TPM, please refer your technical queries to your local Acer branch office. Acer branch offices and Regional Business Units may access our website. However some information sources will require a user id and password. These can be obtained directly from Acer CSD Taiwan.

Acer's website offers you convenient and valuable support resources whenever you need them. In the Technical Information section you can download information on all of Acer's Notebook, Desktop and Server models including:

- Service guides for all models
- User's manuals
- Training materials
- BIOS updates
- Software utilities
- Spare parts lists
- TABs (Technical Announcement Bulletin)

For these purposes, we have included an Acrobat File to facilitate the problem-free downloading of our technical material. Also contained on this website are:

- Detailed information on Acer's International Traveller's Warranty (ITW)
- Returned material authorization procedures
- An overview of all the support services we offer, accompanied by a list of telephone, fax and email contacts for all your technical queries.

We are always looking for ways to optimize and improve our services, so if you have any suggestions or comments, please do not hesitate to communicate these to us.

Index

A

- AC adapter
 - connector 18
- AFLASH Utility 48
- application key 23
- arrow keys 23
- audio
 - adjusting volume 25
 - back button 24, 32
 - controller 10
 - headphone jack 17
 - microphone jack 17
 - muting 25, 32
 - next button 25, 32
 - pause button 24, 32
 - play button 24, 32
 - resolution 10
 - stop button 24, 32
 - volume down button 25
 - volume up button 25

B

- battery
 - charge indicator 16
 - latch 19
 - locating 19
 - release latch 19
- bays
 - hard drive 19
 - memory 19
- BIOS
 - package 7
 - password control 7
 - ROM size 7
 - ROM type 7
 - supported protocols 7
 - vendor 7
 - version 7
- BIOS Utility 38, 48
 - navigating 38
 - onboard device configuration 42, 43
 - security 41
 - system security 46
- Bluetooth
 - chipset 11
 - system key 24
 - turning off 24
 - turning on 24
- brightness
 - adjusting 24, 25
 - system keys 25

- button
 - Effects 34
 - Help 34
 - Properties 34
 - settings 34
 - Snapshot 35
 - Start camera 34
- buttons
 - multimedia panel 20
 - specification 13
- C**
- cable lock 16
- cable modem 17
- cache
 - controller 7
 - size 7
- Camera Assistant 35
- Camera Assistant Toolbar 34
- Capacitive volume control 32
- Caps Lock indicator 22
- cards
 - Express Card slot 17
 - memory card slot 17
- CD
 - controlling playback 24, 32
- chipset
 - Bluetooth 11
 - modem 12
 - USB 12
 - wired Ethernet 11
 - wireless Ethernet 11
- clicking 31
- connections
 - audio 17
 - broadband Internet 17
 - cable modem 17
 - dial-up modem 18
 - digital camera 16, 17
 - digital video camera 17
 - DSL modem 17
 - eSATA 18
 - Ethernet 17
 - external audio 17
 - external diskette drive 16, 17
 - external speakers 17
 - Firewire 17
 - flash drive 16, 17
 - HDMI (TV) out 17
 - headphone 17
 - i.Link 17

- IEEE 1394 17
- keyboard 16, 17
- microphone 17
- modem (dial-up) 18
- monitor (VGA) 18
- mouse 16, 17
- network 17
- power 18
- printer 16, 17
- scanner 16, 17
- speaker 17
- specification 13
- USB 16, 17
- VGA 18
- video camera 17
- controller
 - audio 10
 - ExpressCard 10
 - keyboard 9
 - memory card reader 10
- D**
- dial-up modem 18
- digital camera
 - memory card reader 17
 - USB port 16, 17
- digital video camera
 - IEEE 1394 port 17
- directional keys 23
- disc drive indicator 22
- display 5
 - switching 24
- double-clicking 31
- dragging 31
- drives
 - DVD/CD-RW 17
 - DVD±RW 17
 - hard drive 19
 - multi-format DVD±RW 17
 - status indicators 22
- DSL modem 17
- DVD
 - controlling playback 24, 32
- DVD drive
 - drive status indicator 22
 - locating 17
- DVD player program 32
- E**
- Effects button 34
- error symptom-to-spare part index 147

eSATA
 jack 18
 Ethernet
 jack 17
 ExpressCard
 controller 10
 external CD-ROM drive check
 144
 external monitor 18, 24
 EZ Pad touchpad
 See touchpad

F

fan 17, 18
 features 2
 files
 opening 31
 fingerprint
 enrolling 26
 fingerprint reader
 control center 28
 locating 20
 password bank 29
 tutorial 26
 using 25
 Firewire port 17
 flash utility 48
 Fn key 23
 folders
 opening 31
 function keys 23

H

hard drive
 bay 19
 indicator 22
 HDMI (TV) out jack 17
 HDMI port 24
 headphone jack 17
 Help button 34
 Hybrid Sleep
 mode 24
 system key 24

I

i.Link port 17
 IEEE 1394 port 17
 indicators
 See status indicators
 Instant on Audio 32

Instant on Video 32
 intermittent problems 159
 Internet chat program 33

J

jacks
 See connections
 jumper and connector locations
 top view 162

K

Kensington cable lock
 lock slot 16
 key combinations 23
 keyboard
 buttons 23
 controller 9
 features 23
 keys 23
 locating 20
 USB port 16, 17
 keyboard or auxiliary input
 device check 145
 keys
 application 23
 arrow 23
 brightness 25
 directional 23
 Fn 23
 function 23
 Hybrid Sleep 24
 LCD brightness 25
 LCD/CRT 24
 navigation 23
 numeric keypad 23
 Sleep 24
 system 23
 system key combinations
 23
 toggle display 24
 Windows 23
 wireless Ethernet 24

L

latch
 battery 19
 LCD panel release 16
 LCD panel
 release latch 16
 switching display 24
 LCD/CRT system key 24
 lock
 Kensington cable 16

M

Media Center 32
 memory
 bay 19
 memory card reader
 controller 10
 locating 17
 supported cards 10
 memory check 145
 microphone
 built-in 21
 jack 17
 modem
 cable 17
 chipset 12
 DSL 17
 jack (dial-up) 18
 monitor
 port 18
 using 24
 mouse
 USB port 16, 17
 moving
 pointer 31
 screen objects 31
 multimedia panel 20, 32
 mute button 25, 32
 muting sound 25, 32

N

navigation keys 23
 network jack 17
 Num Lock
 status indicator 22
 system key 23
 numeric keypad
 status indicator 22
 using 23

O

opening
 files 31
 folders 31
 LCD panel 16
 notebook 16
 programs 31
 shortcut menu 31

P

password bank 29
 pointer

- identifying 30
- moving 31
- ports
 - See connections
- power
 - button 20, 24
 - connector 18
 - Hybrid Sleep mode 24
 - indicator 16
 - Sleep mode 24
 - status indicator 16
- power system check 145
 - battery pack 146
 - power adapter 146
- printer
 - USB port 16, 17
- programs
 - opening 31
- projector
 - port 18
 - using 24
- Properties button 34

R

- right-clicking 31

S

- scanner
 - USB port 16, 17
- screen objects
 - getting information 31
 - moving 31
 - selecting 31
- scroll zone 30
- security features
 - Kensington cable lock 16
- Settings button 34
- shortcut menus
 - accessing 31
- shortcuts
 - opening menu 31
- Sleep
 - mode 24
 - system key 24
- Snapshot button 35
- sound
 - adjusting 25
 - muting 25, 32
- speakers
 - built-in 20
 - jack 17
- specification

- buttons 13
- ports 13
- status indicators 13
- Start camera button 34
- starting
 - programs 31
- status indicator
 - wireless Ethernet 22
- status indicators
 - battery charge 16
 - Caps Lock 22
 - CD drive 22
 - disc drive 22
 - drive activity 22
 - DVD drive 22
 - hard drive 22
 - location 20
 - numeric keypad 22
 - Pad Lock 22
 - power 16
 - specification 13
 - toggle on or off 24
- Suspend 24
- switch
 - wireless network 16
- system
 - block diagram 5
 - check procedures 144
- system keys
 - combinations 23
 - locating 23

T

- television
 - HDMI out jack 17
- top 162
- touchpad
 - buttons 30
 - check 147
 - clicking 31
 - double-clicking 31
 - dragging screen objects 31
 - locating 20
 - moving pointer 30, 31
 - moving screen objects 31
 - opening files, folders, and programs 31
 - opening shortcut menu 31
 - right-clicking 31
 - scroll zone 30
 - selecting screen objects 31
- turning off

- Bluetooth 24
 - wireless network 16, 24
- turning on
 - Bluetooth 24
 - wireless Ethernet 24
 - wireless network 16, 24
- TV out (HDMI) jack 17

U

- undetermined problems 159
- USB
 - chipset 12
- USB port 16, 17
- utility
 - BIOS 38, 48
 - Flash Utility 48

V

- VGA port 18
- video
 - chipset 8
 - core voltage 9
 - features 9
 - HDMI out jack 17
 - memory 8
 - monitor port 18
 - projector port 18
 - VGA port 18
- volume
 - adjusting 25
 - muting 25, 32
 - system keys 25

W

- webcam 21, 33
- Webcam status indicator 21
- Windows
 - key 23
- Windows 2000 environment
 - test 176
- Windows Hotstart 32
- Windows Media Player 32
- wired Ethernet
 - chipset 11
- wireless Ethernet
 - button 24
 - chipset 11
 - status indicator 22
- wireless network
 - switch 16

MAN GODZILLA SVC GDE R1 07/08



8513195

TEMP
UPC