



---

# Apple Technician Guide



## MacBook Pro (17-inch, Early 2009)

---

MacBook Pro (17-inch, Early 2009)  
MacBook Pro (17-inch, Mid 2009)

Updated 2010-06-11

---

 Apple Inc.

© 2009 Apple Inc. All rights reserved.

Under the copyright laws, this document may not be copied, in whole or in part, without the written consent of Apple.

Every effort has been made to ensure that the information in this document is accurate. Apple is not responsible for printing or clerical errors.

Apple  
1 Infinite Loop  
Cupertino, CA 95014-2084  
USA  
+ 1 408 996 1010  
[www.apple.com](http://www.apple.com)

Apple, the Apple logo, Mac, MacBook, and Macintosh are trademarks of Apple Inc., registered in the U.S. and other countries.

Please send feedback to [smfeedback4@apple.com](mailto:smfeedback4@apple.com).

---

# MacBook Pro (17-inch, Early 2009)

## Contents

### Manual Updates 8

- Updated 11 June 2010 8
- Updated 14 May 2010 8
- Updated 15 January 2010 8
- Updated 2 December 2009 8

## Basic

### Overview 12

- Identifying Features 12
- Product Configurations 13
- Note About Images in This Manual 13
- Battery Precautions 14
- Battery Removal: Tri-Lobe Microstix #2 Screws 14

### Serial Number Location 15

- Serial Number On Bottom Case 15
- Transferring the Serial Number 16

### General Information 17

- Required Tools 17
- The Glass Panel 18
- Keycap Replacement 18

## Troubleshooting

### General Troubleshooting 20

- Update System Software 20
- Apple Service Diagnostics 20
- Test Points 20
- Troubleshooting Theory 21
- Clamshell Service Diagnostic Read Me 21
- Functional Overview 22
- Block Diagram: MacBook Pro (17-inch, Early 2009) 23
- Block Diagram: MacBook Pro (17-inch, Mid 2009) 24
- Liquid Submersion Indicators 25
- Common Reset Procedures 25
- Display Issue: Pixel Anomalies 28
- Display Hinge Behavior 29

---

## Symptom Charts 30

Startup and Power Issues	30
No Power	30
Won't Start Up	33
Intermittent Shutdown	36
No Video/Bad Video	40
Battery Isn't Recognized or Won't Charge	44
Kernel Panic/System Crashes	47
Battery Run Time Too Short	49
Won't Run on Power Adapter Alone	50
Power Adapter Issue	51
Noise / Hum / Vibration	52
Burnt Smell / Odor	54
Battery Leaking or Swollen	55
Uncategorized Symptom	55
Communications	56
Ethernet Port/Device Issue	56
AirPort/Bluetooth: Defective Wireless Devices	58
No/Poor Wireless Signal	60
Bluetooth Wireless Input Device Loses Connection	61
AirPort Card: Kernel Panic	63
Wireless Performance Issue / Slow Connection	64
Wireless Input Device Doesn't Pair	67
Uncategorized Symptom	68
Display	69
Display Anomalies	69
Defective Camera / Built-in iSight Not Operating Correctly	74
Backlight Issue / No Backlight	76
Noise / Unstable Flickering	77
Mechanical/Physical Damage	78
Cosmetic Defects	79
Uncategorized Symptom	79
Mass Storage	80
Hard Drive Read/Write Issue	80
Hard Drive Not Recognized/Not Mounting	81
Hard Drive Noisy	83
Optical Drive Won't Accept/Reject Media	84
Optical Drive Read/Write Data Error	86
Optical Drive Not Recognized/Mount	88
Optical Drive Noisy	89
Optical Drive Not Performing to Specs	91
Uncategorized Symptom	92
Input/Output Devices	93
USB Port Does Not Recognize Known Devices	93
Built-in Keyboard Does Not Work Properly	94

---

Specific Keys Don't Work	95
Built-in Trackpad Does Not Work	96
Built-in Keyboard Has Dim or No Keyboard Backlight	97
Built-in Keyboard Is Not Recognized	98
Built-in Trackpad Does Not Track Properly	100
Apple Remote Inoperable	101
Built-in Speaker Has No Audio	102
Distorted Sound from Internal Speaker	103
Express Card Will Not Insert Into Slot	105
Express Card Not Recognized By System	106
FireWire Port Not Recognizing Known Devices	107
Uncategorized Symptom	107
Mechanical Issues: Thermals and Enclosure	108
Reset/Power Button Stuck	108
System Runs Hot	109
Uncategorized Symptom	111

## **Take Apart**

### **General Information 113**

Connector Types on Logic Board	113
Icon Legend	116
Temperature Concerns	116
Screw Sizes	116

### **Bottom Case 117**

#### **Battery 122**

Removal	123
Replacement	125

#### **Hard Drive Bracket 127**

#### **Hard Drive 129**

Removal	130
Replacement	132
Installing Mac OS X	133
Installing Applications	133

#### **Memory 134**

Removal	135
Replacement	136

#### **Bluetooth Card and Holder 138**

Removal	139
Replacement	141

---

<b>Camera Cable Guide</b>	<b>142</b>
<b>LVDS Cable Guide</b>	<b>144</b>
<b>Fans</b>	<b>147</b>
<b>Optical Drive</b>	<b>149</b>
<b>Optical Drive Flex Cable</b>	<b>153</b>
<b>Hard Drive Connector Cable</b>	<b>155</b>
<b>Battery Indicator Light (BIL) Cable and Board</b>	<b>157</b>
<b>Hard Drive Bracket, Front</b>	<b>160</b>
<b>Display Assembly</b>	<b>162</b>
Removal	163
Replacement	166
Display Hinge Behavior	168
<b>Display Clutch Cover</b>	<b>169</b>
Removal	170
Replacement	171
<b>Cable Clip for AirPort Card</b>	<b>173</b>
<b>AirPort Card</b>	<b>174</b>
Removal	175
Replacement	176
<b>Antenna Board</b>	<b>179</b>
Removal	180
Replacement	180
<b>Right Speaker/Subwoofer</b>	<b>181</b>
<b>Logic Board</b>	<b>183</b>
Removal	184
Replacement	187
<b>Trackpad</b>	<b>188</b>
Removal	189
Replacement	192
<b>MagSafe Board</b>	<b>197</b>
Removal	198
Replacement	199
<b>Heatsink</b>	<b>200</b>
Removal	201

---

Replacement 203

**Left Speaker 205**

**Microphone Cable 208**

**Express Card Cage 210**

**Top Case 213**

## **Views**

### **Exploded View 216**

Main Assembly, 1 of 2: MacBook Pro (17-inch, Early 2009) 216

Main Assembly, 2 of 2: MacBook Pro (17-inch, Early 2009) 217

Display Assembly (both models) 218

Main Assembly, 1 of 2: MacBook Pro (17-inch, Mid 2009) 219

Main Assembly, 2 of 2: MacBook Pro (17-inch, Mid 2009) 220

### **External Views 221**

Front View 221

Port View 222

### **Screw Location Diagrams 223**

Bottom Case 223

Main Modules 224

Display Assembly 225

### **Feedback 226**



# Manual Updates

## Updated 11 June 2010

Troubleshooting:

- General Troubleshooting: Resetting the System Management Controller (SMC): Updated steps 3 and 4

## Updated 14 May 2010

Basics:

- General Information: Keycap Replacement: Added section about keycap replacement kit

Troubleshooting:

- Symptom Charts: Input/Output Devices: Built-In Keyboard Does Not Work Properly: Revised step 1 of Deep Dive table for keycap kit reference
- Symptom Charts: Input/Output Devices: Specific Keys Don't Work Properly: Revised step 5 of Quick Check table for keycap kit reference

## Updated 15 January 2010

Take Apart:

- Battery: Added battery label reminder

## Updated 2 December 2009

Troubleshooting:

- General Troubleshooting: Added new section "Clamshell Service Diagnostic Read Me"
- Symptom Charts: Startup and Power Issues: Revised for Clamshell Service Diagnostic (CSD)
- Symptom Charts: Communications: Revised for CSD considerations
- Symptom Charts: Display: Revised for CSD considerations

## Updated 16 November 2009

Troubleshooting:

- General Troubleshooting: Added note to heatsink row in Apple Service Diagnostics table
- Symptom Charts: Startup and Power Issues: Updated suggested fix for shutdown code "-95"

## Updated 17 August 2009

Troubleshooting:

- General Troubleshooting: Added section "Display Hinge Behavior"



#### Take Apart:

- Connector Types on Logic Board: Modified camera cable shim **Cautions**. If the camera cable shim is not replaced during reassembly, the camera cable could work loose, resulting in a short or no video. A replacement shim is now included with replacement logic boards.
- Tools: Removed flat-blade screwdriver; added tri-lobe screwdriver part number
- Display Assembly: Added camera cable shim **Cautions**
- Heatsink: Some heatsink models do not include a thermal sensor cable. Added note to step 1 of Removal, and revised step 3 of Replacement accordingly.

### Updated 17 June 2009

#### Views:

- Exploded View: Corrected “Main Assembly, 1 of 2: MacBook Pro (17-inch Early 2009)”

### Updated 09 June 2009

#### Basics:

- Product Configurations: Added link to product specifications for Mid 2009 model
- General Information: Required Tools: Updated versions of AHT and ASD diagnostic tools

#### Troubleshooting:

- Block Diagram: Added block diagram for MacBook Pro (17-inch Mid 2009)
- Burn Smell/Odor: Revised step 2 of Deep Dive table
- Built-In Keyboard Has Dim or No Backlight: Revised step 1 of Deep Dive table

#### Views:

- Exploded View: Added 2 exploded views for MacBook Pro (17-inch Mid 2009)

### Updated 03 June 2009

#### Basics:

- Battery Removal: Added mention of trackpad to note

#### Troubleshooting:

- Resetting the System Management Controller (SMC): Revised steps to reset SMC.
- Display/Display Anomalies: Added “Deep Dive: Vertical/Horizontal Lines” table
- Built-in Trackpad Does Not Work: Modified Deep Dive table for trackpad replacement
- Built-in Trackpad Does Not Track Properly: Modified Deep Dive table for trackpad replacement

#### Take Apart:

- Battery: Removal: Added “trackpad” to first note
- Trackpad: Added new section following Logic Board for trackpad replacement instructions

### Updated 10 April 2009

#### Troubleshooting:

- Added new section “Liquid Submersion Indicators”



#### Take Apart:

- Bluetooth Card and Holder: Added screw part number
- Hard Drive Connector Cable: Added screw part numbers
- Battery Indicator Light (BIL) Cable and Board: Added screw part number
- Right Speaker/Subwoofer Added screw part number; corrected screw length
- Logic Board: Added screw part numbers

#### Views:

- Screw Location Diagrams: Main Modules: Updated screw part numbers

### Updated 27 March 2009

#### Troubleshooting:

- Kernel Panic/System Crashes: Corrected Deep Dive table for missing steps 4 and 5

### Updated 06 March 2009

#### Basics:

- Overview: Added important note on battery removal tool

#### Troubleshooting:

- Block Diagram: Updated terms
- Revised SMC Reset instructions
- Updated “Display Issue: Pixel Anomalies” topic
- Intermittent Shutdown: Added new table “Troubleshooting Shutdown Causes”

#### Take Apart:

- Connector Types: Added keyboard cable image and caution; added shim to camera cable image
- Bottom Case: Reordered sequence for replacing screws 1 and 10
- Battery: Updated battery screw quantity from 5 to 3; revised step 5 warning
- AirPort Card: Reworded step 2 under “Replacement”
- Optical Drive: Added shim replacement reminder to camera cable
- Logic Board: Updated procedure to remove logic board without removing MagSafe board.
- MagSafe Board: Added port test using **unplugged** power adapter cable
- Display Assembly: Added shim replacement reminder to camera cable; added Replacement section “Aligning Display to Top Case”

#### Views:

- Main Exploded View: Changed Bluetooth card to 922-8965
- Display Exploded View: Added “without glass” modifier to Anti-Glare Display, 661-5095
- Screw Location Diagrams: Updated battery screw quantity to 3

### Apple Technician Guide introduced 13 February 2009

---

# **Apple Technician Guide**

**Basic**

---

**MacBook Pro (17-inch, Early 2009)**



# Overview



The MacBook Pro (17-inch, Early 2009) computer features both the NVIDIA GeForce 9400M integrated graphics processor and a high-performance NVIDIA 9600M GT graphics processor, Multi-Touch trackpad, and aluminum body. Refer to more features below.

## Identifying Features

The main features and service differences include:

- Aluminum unibody enclosure, machined from a single piece of aluminum
- Ultrathin 17-inch LED-backlit glossy display, 1920 by 1200 pixels
- Mini DisplayPort connector and three high-powered USB 2.0 ports
- Express Card slot, 34mm
- Battery indicator button on left side



- Product identification label is etched on bottom case near hinge
- Logic board, MagSafe board, and some other components have a uniform black color with no component silkscreening.

## Product Configurations

This table shows the MacBook Pro (17-inch, Early 2009) model configurations at introduction:

Feature	Standard (MB604)	Optional (Z0G5)
Intel Core 2 Duo processor	2.66 GHz	2.93 GHz
Memory, DDR3 1066, SO-DIMMs	4 GB (2 x 2 GB); up to 8 GB (2 x 4 GB)	4 GB (2 x 2 GB); up to 8 GB (2 x 4 GB)
Hard Drive, Serial ATA	320 GB, 5400 rpm	320 GB, 7200 rpm; or 128 GB or 256 GB solid state
Optical Drive (SATA)	8x DL Super, 9.5 mm	8x DL Super, 9.5 mm
Housing	Aluminum unibody	
Display, 17-inch glass LCD, 1920x1200, 114 dpi, LED backlight	wide-screen glossy	wide-screen glossy display; or anti-glare display without glass
I/O	<ul style="list-style-type: none"> <li>• USB: 3- USB 2.0 (high powered)</li> <li>• FireWire: 1-FW800</li> <li>• Video I/O: Mini Display Port</li> <li>• Audio I/O: Combo digital.analog in, Combo digital/analog/iPhone headset out, Microphone, Stereo speakers with subwoofer</li> <li>• Camera: Wave 4 (f2.4, 3 micron pixel (640x480))</li> <li>• Other: IR, Battery Indicator Light, 34mm Express card</li> </ul>	
Battery	95 WHr lithium polymer	
Power Adapter	85 W MagSafe	

For MacBook Pro (17-inch, Mid 2009) configurations, refer to:

<http://support.apple.com/specs/>

## Note About Images in This Manual

Because a pre-production model was used for most of the images shown in this manual, you may notice small differences in appearance between the image pictured and the computer you are servicing. However, although the appearance may differ, the steps and sequence are the same unless noted.

Screw sizes shown are approximate and indicate the total length including the screw head.




## Battery Precautions

This computer contains an internal-only battery that is serviceable by Apple-authorized service providers only. Tamper-proof screws are employed to prevent customers from attempting to remove it.

**WARNING:** Every time you remove the bottom case, disconnect the battery cable from the logic board.




**WARNING:** Because the battery is internal and connected to the logic board by a cable, it **MUST BE DISCONNECTED** before performing service procedures. If you fail to do so, live current from the battery will short circuit the components and render the logic board and/or LVDS cable unusable.

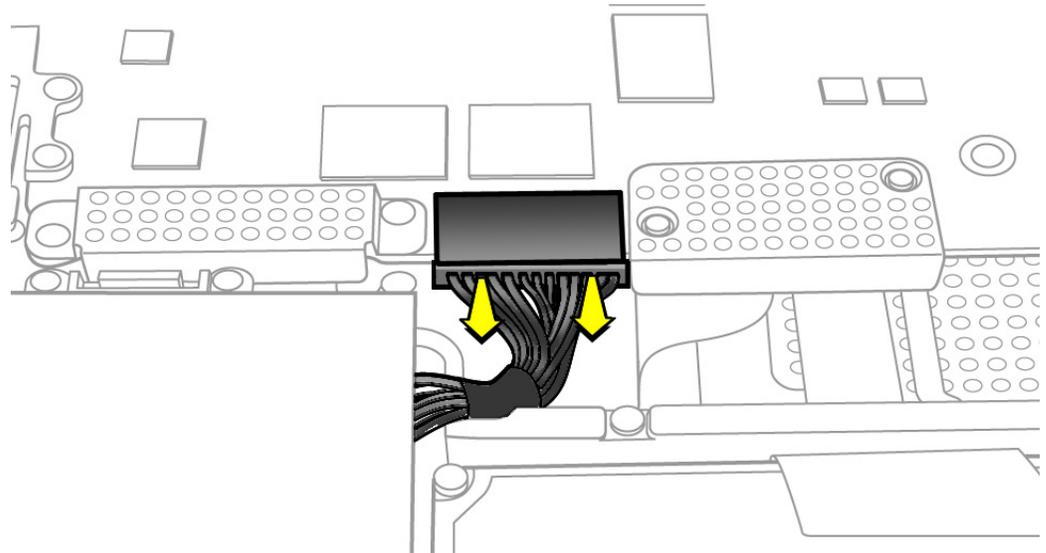

## Battery Removal: Tri-Lobe Microstix #2 Screws

**Important:** Tri-lobe Microstix #2 screws secure the battery in place. Use a tri-lobe large #0 screwdriver (Apple part number 922-8991) for the battery screws.

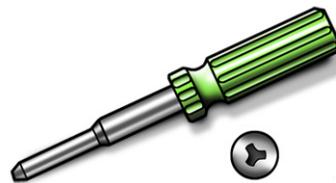

**Important:** The **only** time the battery should be removed is when replacing these:


- battery
- trackpad
- top case



# Serial Number Location

## Serial Number On Bottom Case

Turn over the computer to see the serial number etched on the bottom case near the hinge.

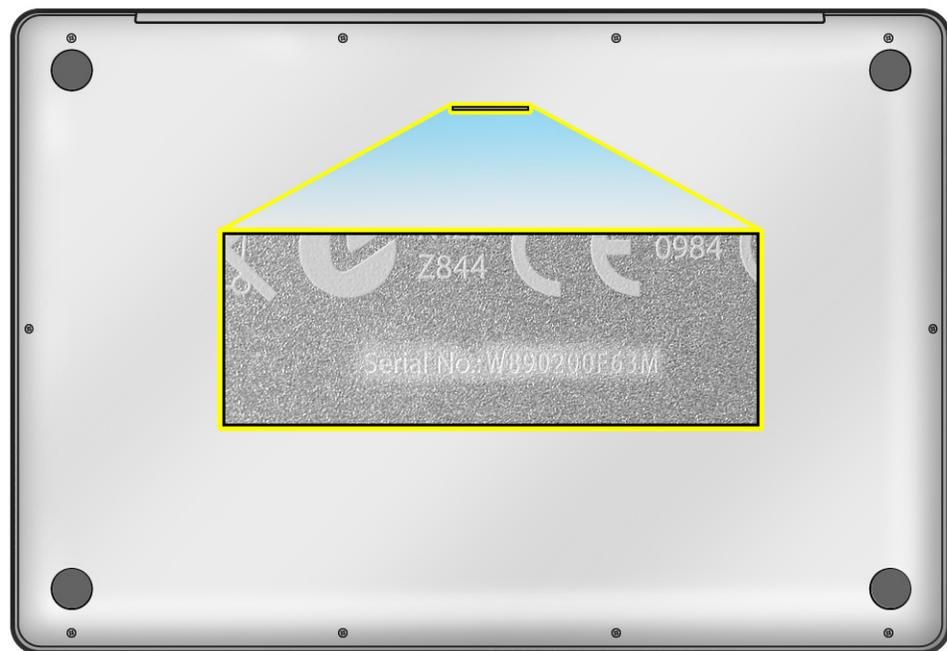




## Transferring the Serial Number

When replacing a bottom case, retain the customer's bottom case until the repair is complete. Before installing the replacement bottom case, use a fine tip permanent marker to write the original serial number clearly and legibly in uppercase box letters directly onto the inside of the new bottom case.

**CAUTION:** Take great care in deciphering the small typeface of the etched serial number on the bottom case. You might need a magnifying glass to see it clearly. It is imperative that you transfer the correct alphanumeric characters. Keep in mind that Apple serial numbers always use the numbers 1 and 0 instead of the Roman letters "l" and "O."

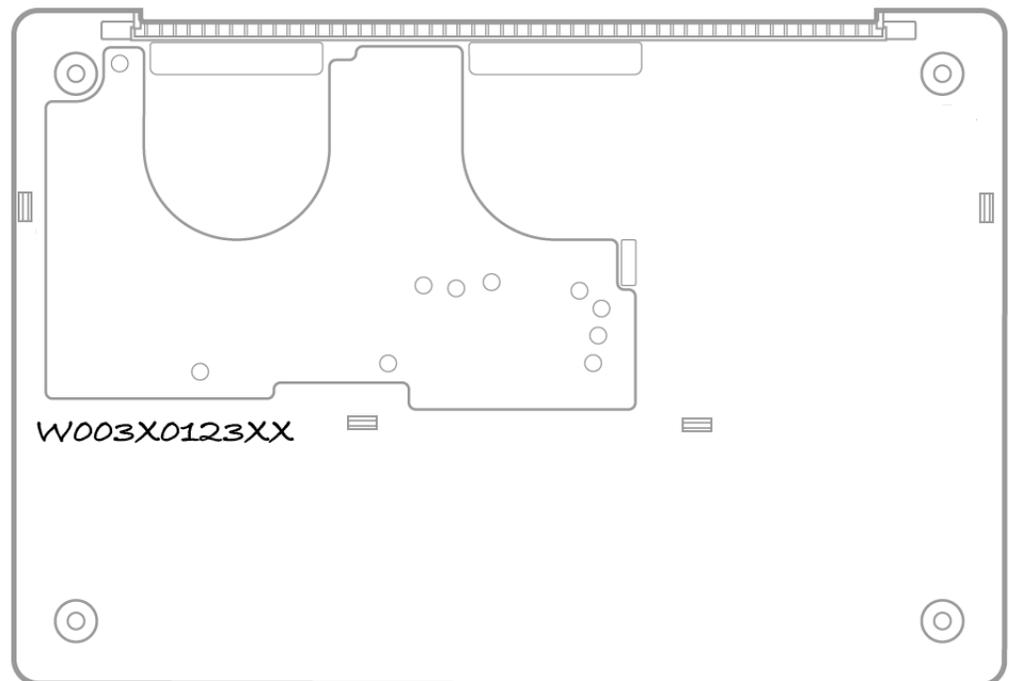



# General Information

## Required Tools

**Caution:** To prevent scratches or other cosmetic damage to the computer housing, use a soft cloth as a protective layer when removing and installing the external screws.

The following tools are required to service the computer:

- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Magnetic Phillips #0 screwdriver
- Magnetic Phillips #00 screwdriver (preferably with a long handle)
- Torx T6 screwdriver
- Large tri-lobe #0 screwdriver (Apple part number 922-8991)
- Black stick (Apple probe tool, part number 922-5065) or other nonconductive nylon or plastic flatblade tool
- EMI-safe plastic or nylon tweezers for installing flex cables (optional)
- Thermal grease (Apple thermal compound syringe, part number 922-7144)
- Alcohol wipes
- Permanent marking, felt-tip pen
- Pencil with eraser
- Foam wedge fixture for display assembly removal (Apple part number 922-8779)
- Kapton tape
- Tweezers, ESD safe, extra fine points, for flat cable replacement
- Magnifying glass, for reading serial number etched on bottom case
- Digital volt meter (troubleshooting)

Refer to Knowledge Base article “Hand Tools for Desktop and Portable Repairs--AP/CA/EU/JP/LA/US” to purchase tools:

<http://support.apple.com/kb/HT3452>

In addition, the following software programs are required for troubleshooting:

- Apple Service Diagnostic (ASD), version 3S132 or later
- Apple Hardware Test, version 3A175 or later



## The Glass Panel

**Warning:** The glass panel for this model is not a serviceable part. If the glass is broken or scratched, replace the display assembly. Attempting to remove the glass can permanently shatter the display face and damage other parts.

To clean the glass panel, use the Apple polishing cloth (922-8245) and iKlear Apple Polish or Brilliance anti-static spray cleaning solution. Alternatively, IPA (isopropyl alcohol) can be used.



## Keycap Replacement

Service packages of 78 replacement keycaps are now available in the U.S. and Canada (U.S. version keyboard only) for designated MacBook and MacBook Pro computers. The packages allow you to replace individual keycaps rather than the entire top case.

There are four different keycap packages, based on the color of the key and the type of keyboard (version D and S).

Part number	Key color	Keyboard
922-9277	Black	Version D
922-9279	Black	Version S
922-9278	White	Version D
922-9280	White	Version S

For step-by-step instructions, refer to the relevant support article: [“MacBook/MacBook Pro: Black Keycap Replacement” \(HT4002\)](#) or [“MacBook: White Keycap Replacement” \(HT4003\)](#).

For an overview of the differences among keycap procedures, refer to [“MacBook/MacBook Pro: Keycap Replacement Matrix” \(HT4001\)](#).

---

# **Apple Technician Guide**

## **Troubleshooting**

---

### **MacBook Pro (17-inch, Early 2009)**



# General Troubleshooting



## Update System Software

**Important:** Whenever possible before beginning troubleshooting, ensure the latest software and firmware updates have been applied.

## Apple Service Diagnostics

Run Apple Service Diagnostic to determine if any of the thermal sensors are malfunctioning. Replace any failing sensors. See chart below for correlation between error code and part.

Name	Location
TC0D	Logic Board
TC0P	Logic Board
TG0D	Logic Board
TG0H	Logic Board
TG0P	Logic Board
TG0T	Logic Board
TG1H	Heatsink*
Th2H	Logic Board
TN0D	Logic Board
TN0P	Logic Board
Tm0P	Logic Board
Ts0P	Trackpad flex
* If the installed heatsink has no thermal cable, ignore this code.	

## Test Points

There is no silkscreen text on final production logic boards. Test points mentioned in troubleshooting charts are solely for reference.



## Troubleshooting Theory

For general information on troubleshooting theory, go to GSX and find the Service Training course menu link. From there you can access the Troubleshooting Theory self-paced course.

### Hardware vs. Software

For information on how to isolate a hardware issue from a software issue, refer to:

[http://support.apple.com/kb/TS1388?viewlocale=en\\_US](http://support.apple.com/kb/TS1388?viewlocale=en_US)

TS1394—Mac OS X: Troubleshooting installation and software updates <<http://support.apple.com/kb/TS1394>>

HT2956—Troubleshooting Mac OS X installation from CD or DVD <<http://support.apple.com/kb/HT2956>>

For information on how to troubleshoot a software issue, refer to:

HT1199—Mac OS X: How to troubleshoot a software issue <<http://support.apple.com/kb/HT1199>>

### Clamshell Service Diagnostic Read Me

Isolating video and wireless issues in portable computers can be time consuming and confusing. The Clamshell Service Diagnostic (CSD) is a new diagnostic tool that checks Apple's latest portable computers for the presence of AirPort, Bluetooth, LCD and Ambient Light Sensor (ALS) to assist you in quickly making a failure determination.

Troubleshooting benefits of using CSD include:

- Quick way (less than 1 minute) to determine whether clamshell-related modules (AirPort, Bluetooth, LCD and ALS) are electrically connected without taking apart the system.
- Results of CSD can help pinpoint if any clamshell cables may need to be reseated to logic board.
- Diagnostic results can help isolate a video or wireless issue to either the clamshell or the logic board, to avoid unnecessary replacements of these components.

CSD checks for the presence of the computer's:

- AirPort
- Bluetooth
- LCD
- ALS

CSD does not check for the presence of the computer's:


- iSight camera
- externally connected hardware components (such as USB or FireWire devices)

CSD does not check for issues with the OS X or other software-related problems such as application or extension conflicts.



## Functional Overview


Refer to this diagram for symptoms related to MacBook Pro (17-inch, Early 2009) logic board connectors.

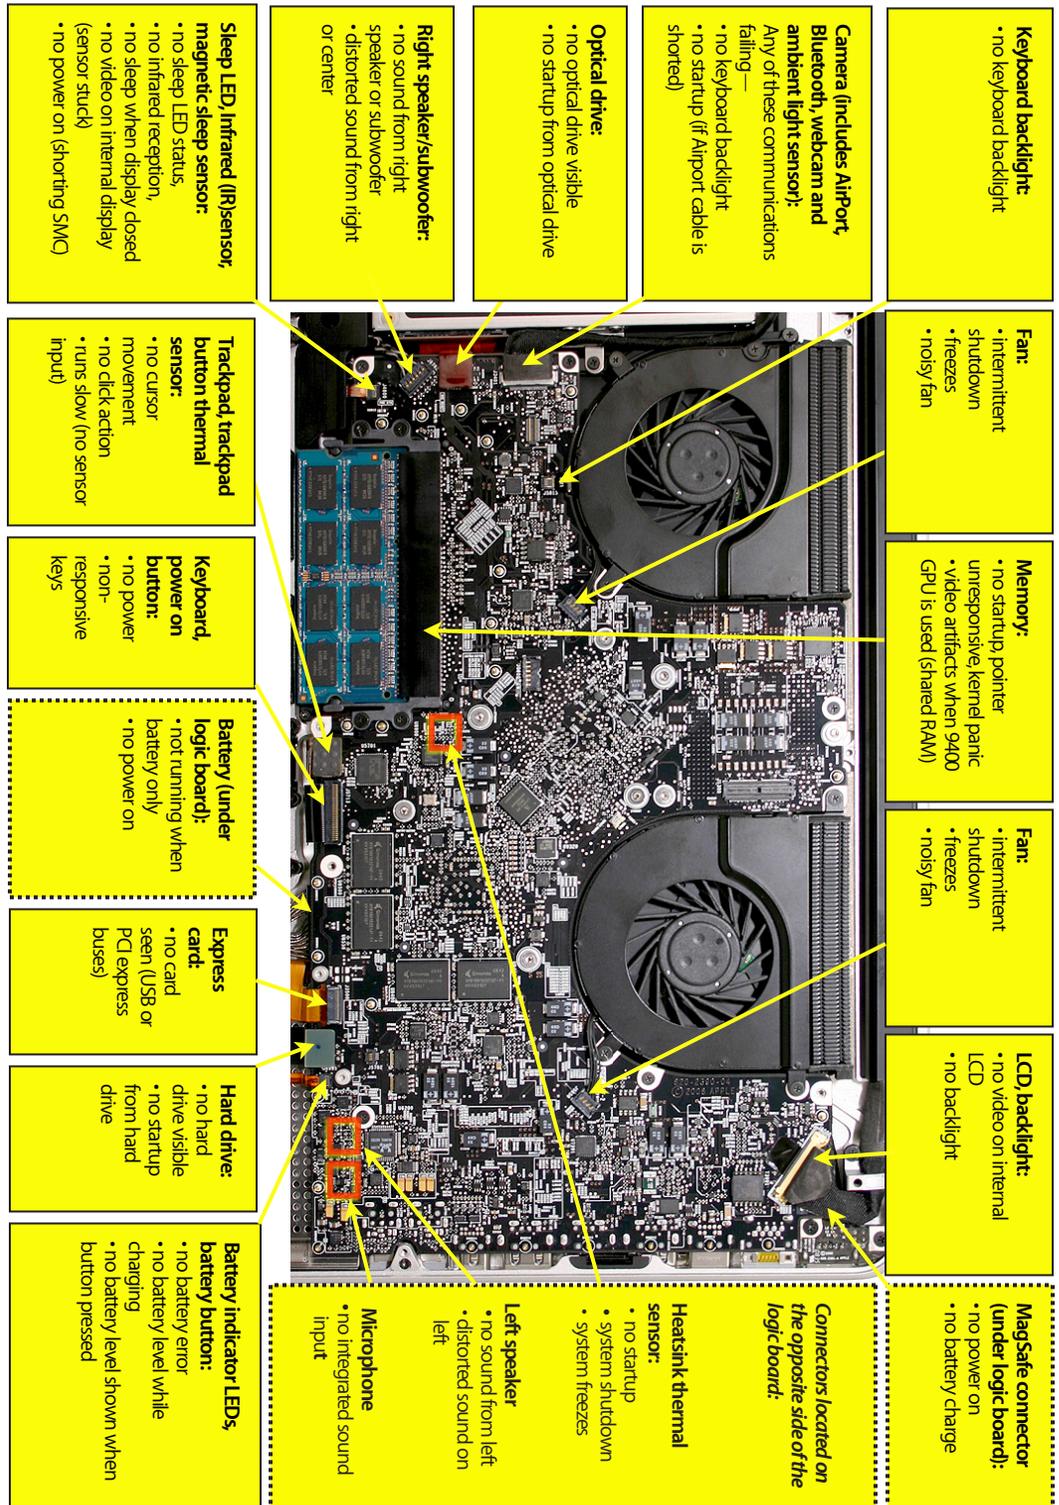



# Block Diagram: MacBook Pro (17-inch, Early 2009)


Refer to this diagram to see how modules are interrelated.

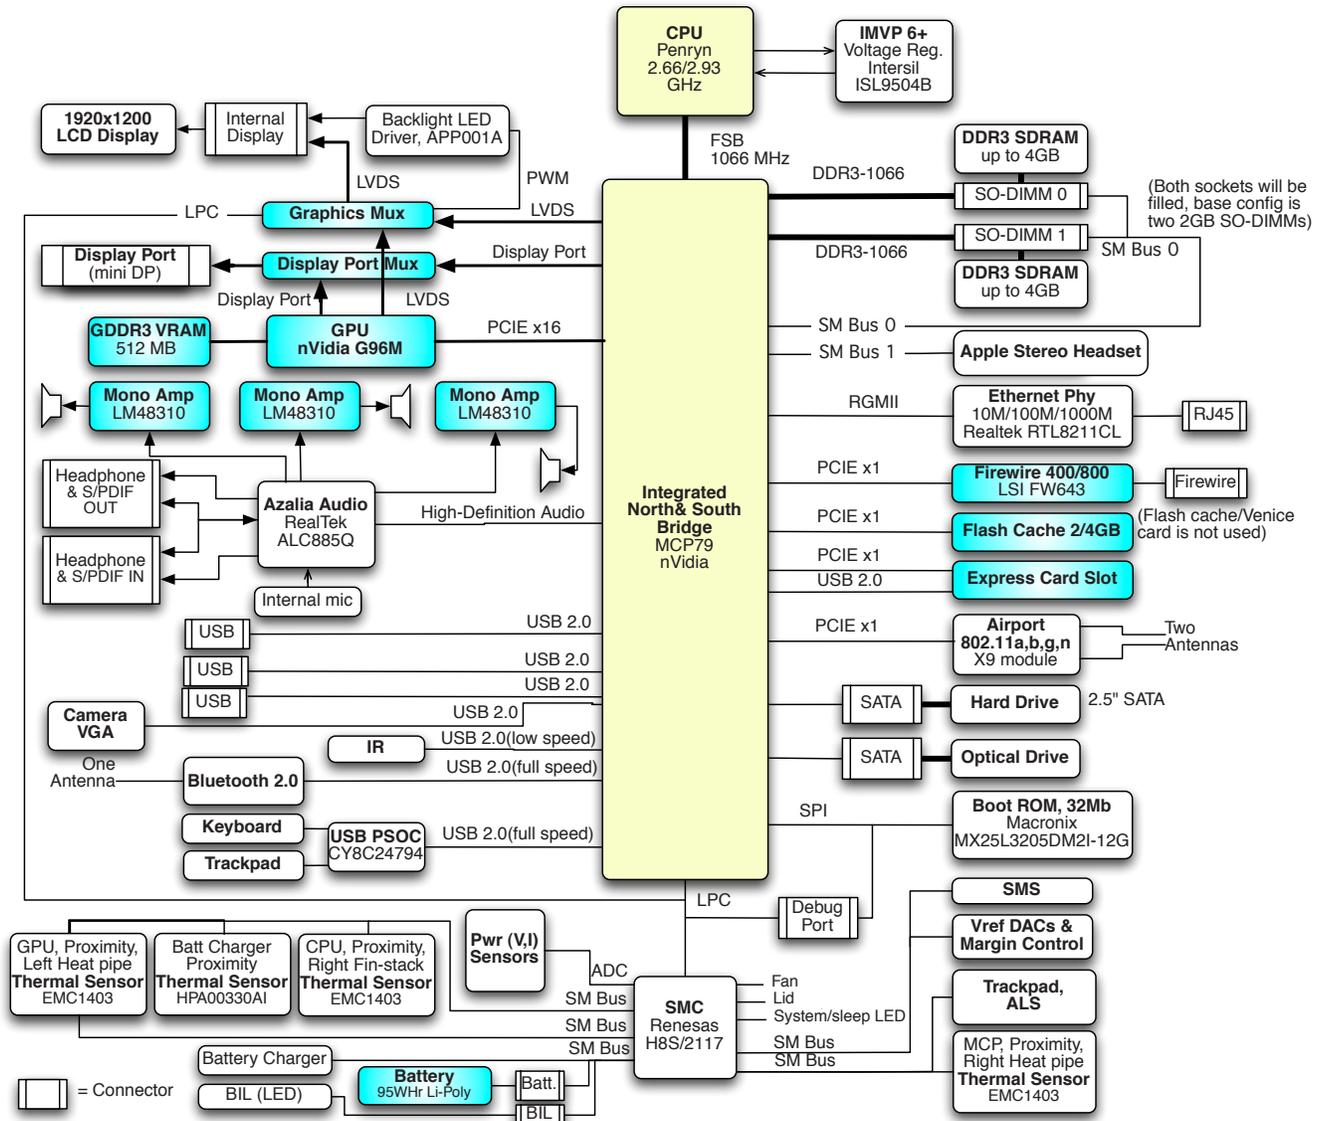



# Block Diagram: MacBook Pro (17-inch, Mid 2009)

Refer to this diagram to see how modules are interrelated.

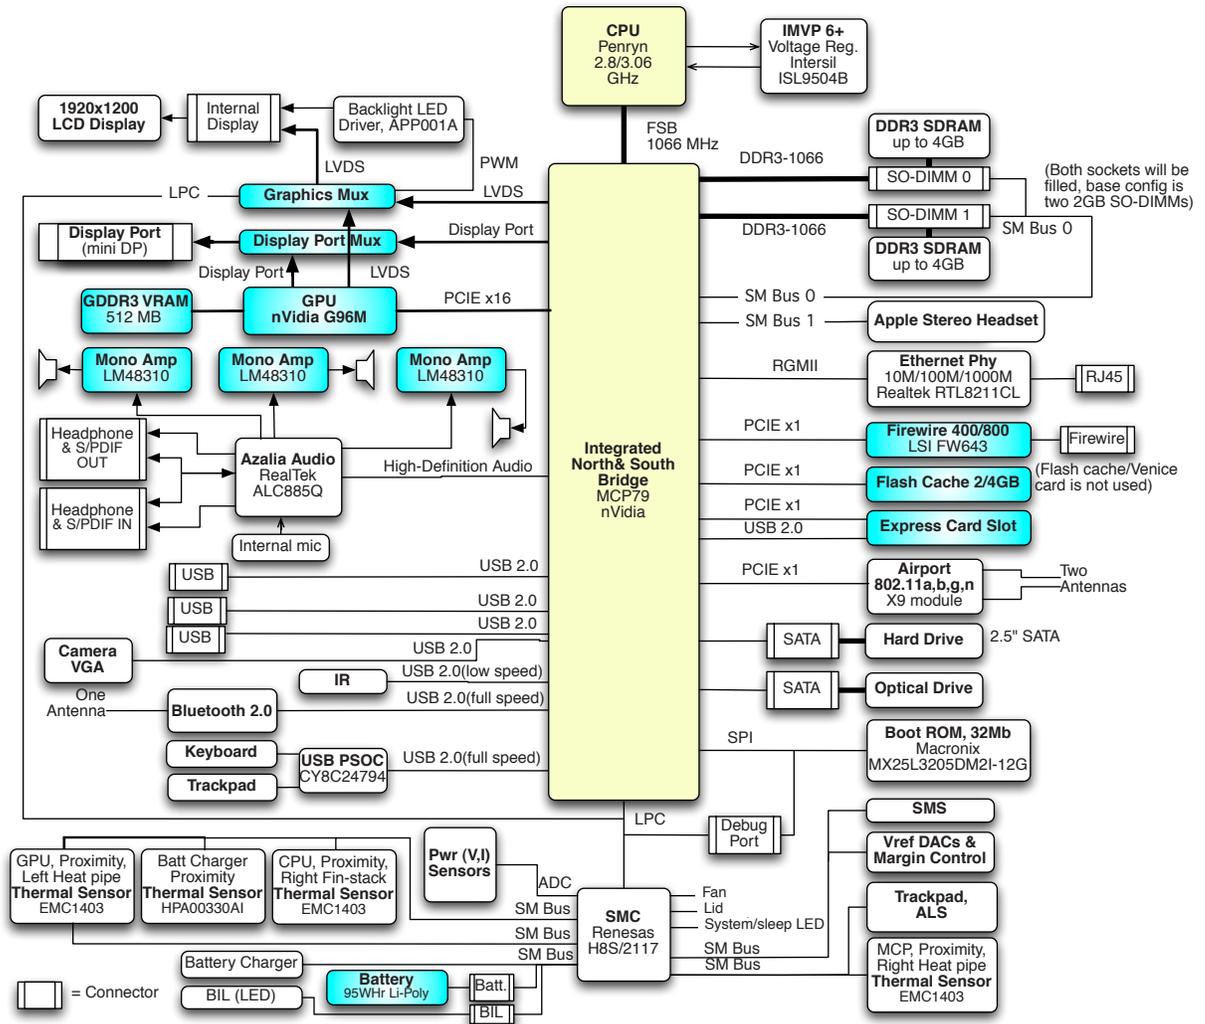



## Liquid Submersion Indicators

To help discover accidental damage to the computer, the top case includes spill sensors called liquid submersion indicators (LSI). The sensors are visible when the bottom case and most of the modules have been removed. Normally represented by small white dots, the LSIs turn red (indicated by the small, areas circled below) when they have come in contact with liquid, such as an accidental spill.

For more information, refer to the Knowledge Base article HT3425: [http://support.apple.com/kb/HT3425?viewlocale=en\\_US](http://support.apple.com/kb/HT3425?viewlocale=en_US)."



## Common Reset Procedures

When a reset procedure is required for troubleshooting, follow the applicable steps:

### Resetting the System Management Controller (SMC)

The System Management Controller is an integrated circuit (computer chip) that is on the logic board. As the name implies, it is responsible for power management of the computer. It controls backlighting, hard drive spin down, sleep and wake, some charging aspects, trackpad control, and some input/output as it relates to the computer sleeping.

Over time, the settings in the System Management Controller may become unusable, which



can result in operational anomalies with the computer. Examples include not turning on, not waking from sleep, not charging the battery, or not recognizing the AC Adapter, among others.

Don't reset the SMC if the computer is unresponsive. An SMC reset should only be a last resort in cases where a hardware failure of the power management system is suspected. Performing an SMC reset returns the hardware, including NVRAM (Non-Volatile Random Access Memory), to default settings and forces the computer to shut down.

For most situations, a restart is sufficient. If the computer has stopped responding, try each one of these steps, one by one. Test in between steps to see if it has worked. If one step works, don't worry about the next, as you're up and running! Only go on to reset the SMC if you've tried all of the steps listed here and the computer still isn't working.

1. Force Quit (Option-Command-Escape).
2. Restart (Control-Command-Power).
3. Force Shut Down (press the power button for 10 seconds).

Reset the SMC as follows only if the above steps did not resolve the situation.

To reset power management via the SMC chip:

1. If the computer is on, turn it off by choosing Shutdown from the Apple () menu.
2. Connect the power adapter to the computer and to a working power source.
3. **Important:** Use the keys on the left side of the keyboard. On the built-in keyboard, press Shift-Control-Option along with the power button once.

**Note:** When the LED on the MagSafe connector is orange, resetting the SMC will change it to green for a few seconds, indicating that SMC was correctly reset.

4. Wait 5 seconds and press the power button to restart the computer. **Note:** If bottom case is removed, you may alternately reset the SMC by disconnecting the power adapter and the main battery, and holding the power button down for five seconds.

For more information:

<http://www.apple.com/support>

HT1411 — Apple Portables: Resetting the System Management Controller (SMC) <<http://support.apple.com/kb/HT1411>>



## Resetting the Parameter RAM (PRAM)

To reset PRAM,

1. If the computer is on, turn it off.
2. Locate the following keys on the keyboard: Command, Option, P, and R. You will need to hold these keys down simultaneously in Step 4.

**Note:** If the keyboard does not have an Option key, use the Alt key instead.

3. Turn on the computer.
4. Press and hold the Command-Option-P-R keys.

**Important:** You must press this key combination before the gray screen appears.

5. Hold the keys down until the computer restarts and you hear the startup sound for the second time.
6. Release the keys.

For more information:

<http://www.apple.com/support>

HT1379—Apple Portables: Resetting the PRAM <<http://support.apple.com/kb/HT1379>>

## Starting Up in Safe Mode

A Safe Boot is a special way to start Mac OS X when troubleshooting. To start up into Safe Mode (Safe Boot),

1. Make sure the computer is shut down.
2. Press the power button.
3. Immediately after you hear the startup tone, press and hold the Shift key.

**Note:** The Shift key should be held as soon as possible after the startup tone but not before.

4. Release the Shift key when you see the screen with the gray Apple and progress indicator (looks like a spinning gear). During startup, "Safe Boot" appears on the Mac OS X startup screen. To leave Safe Mode, restart the computer normally, without holding down any keys during startup.

For more information:

<http://www.apple.com/support>

HT1564—What is Safe Boot, Safe Mode? <<http://support.apple.com/kb/HT1564>>

TS1884—Safe Boot take longer than normal startup <<http://support.apple.com/kb/TS1884>>



## Display Issue: Pixel Anomalies

When displaying a single color over the screen area, the LCD panel might show one or more pixels that are not properly lit. To determine if the display has an acceptable number of pixel anomalies, follow the steps below:

1. Set the display image to one of the following colors: all-white, all-red, all-green, all-blue, or all-black display. Knowledge Base article [112125: Service Diagnostics Matrix](#) has the LCD Tester Diagnostic Utility that will generate these patterns on the screen.
2. Using a jeweler's loupe, pocket microscope, or other magnifying device, identify and count each pixel anomaly:

Bright subpixel anomaly = subpixel that is always on

Dark subpixel anomaly = subpixel that is always off

3. The number of acceptable pixel anomalies for this computer is:

Bright	Up to 4
Dark	Up to 6
Combination	Up to 8

4. If the number of subpixel anomalies exceeds the acceptable number shown above, replace the LCD panel display assembly. Numbers outside the acceptable range would be

Bright	5 or more
Dark	7 or more
Combination	9 or more

5. If the number of subpixel anomalies is acceptable, explain to the customer that the pixel anomalies are within specifications, and no repair is necessary.

**Important:** Do not release the specifications to customers. Instead, inform them that a certain number of subpixel anomalies are considered acceptable, and these factors apply to all manufacturers using LCD technology—not just Apple products.

When speaking with customers, please use the following explanation:

Active-matrix LCD technology uses rows and columns of addressable locations (pixels) that render text and images on screen. Each pixel location has three separate subpixels (red, green, and blue) that allow the image to be rendered in full color. Each subpixel has a corresponding transistor responsible for turning the subpixel on or off.

There are typically millions of these subpixels on an LCD display. For example, the LCD panel used in the Apple Cinema HD display is made up of 2.3 million pixels and 6.9 million red, green, and blue subpixels. Occasionally, a transistor does not work perfectly, which may result in the affected subpixel being turned on (bright) or turned off (dark). With the millions of subpixels on a display, it is quite possible to have a low number of faulty transistors on an LCD. Therefore, a certain number of subpixel anomalies are considered acceptable. Rejecting all but perfect LCD panels would significantly increase the retail price for products using LCD displays. These factors apply to all manufacturers using LCD technology—not just Apple products.



## Display Hinge Behavior

The MacBook Pro models have a unique counterbalanced clutch system. The design provides a smooth, fluid feel when opening, closing, or positioning the display. The counterbalanced clutch system was designed so that when the display is vertical with respect to the ground, it will remain in place regardless of the angle of the base.

Moving the display past vertical allows the hinges to release and the display to close. This is normal behavior and no repair is necessary. Refer to <http://support.apple.com/kb/HT3304> for more information and to watch a video of this hinge behavior.





# Symptom Charts

Follow the steps in the order indicated below. If an action resolves the issue, retest the system to verify. **Note:** A compilation of Quick Check tables is available at <http://service.info.apple.com/QRS/en/quickreference.pdf>.

**Note:** There is no silkscreen text on final production logic boards. The photos shown with test points are from pre-production units and are solely for reference.

## Startup and Power Issues

### No Power

Unlikely cause: display assembly, speakers, optical drive, hard drive

### Quick Check

Symptom	Quick Check
<b>No Power / Dead Unit</b> <ul style="list-style-type: none"><li>• No power</li><li>• No image</li><li>• No startup chime</li><li>• No fan or hard drive spin</li><li>• No reset sound from optical drive</li><li>• No sleep LED activity</li><li>• No light if Caps Lock pressed</li><li>• Non-operational</li></ul>	<ol style="list-style-type: none"><li>1. Verify AC power presence with MagSafe LED indicating on or charge state.</li><li>2. Verify battery status as being partly charged, charging with AC power.</li><li>3. Reset SMC.</li><li>4. Refer to Deep Dive table for battery diagnostic testing.</li></ol>




## Deep Dive



Check	Result	Action	Code
1. Isolate peripherals as cause. Disconnect all peripherals and external devices and verify unit starts.	Yes	Suspect peripherals as cause. Reconnect each one at a time, verifying unit operation as external device is reinstalled.	
	No	Go to step 2	
2. Reset SMC, and verify unit starts. (Alternative hardware SMC reset can be forced by shorting R5001 pads on logic board or removing all system power for 1 minute.) Can system start up after SMC reset?	Yes	Corrupt SMC state preventing power on. Issue resolved with SMC reset.	
	No	Go to step 3	
3. Will system power up with battery only? Check battery level LED indicator for status of battery charge or battery use error. Inspect battery connector for burn marks or damaged pins if substituting a known-good battery to verify starting on battery.	Yes	System can start up from known-good battery -- customer battery possibly at fault or needs to be charged. Continue to verify customer battery then AC adapter use and battery charging. Go to step 4.	<b>P11</b>
	No	System will not power using known-good battery only. Go to step 5	
4. Customer battery may be run down, or not recognized. Verify customer battery in a known-good system is recognized and accepting a charge. Confirm customer battery is not consumed nor defective.	Yes	Battery is recognized, charging and health is good. Return to test unit with customer battery and AC adapter power. Go to step 6.	
	No	Replace customer battery for not charging (P10) or not recognized (P11). Customer to purchase a replacement battery if consumed.	<b>P10</b> or <b>P11</b>
5. Inspect battery cable connection at logic board and reseat if necessary. Replace cable if found damage or burned. Can the system power on from a charged battery with battery cable inspections or replacement?	Yes	Battery power restored, return to test unit with customer battery and AC adapter power. Go to step 6.	
	No	Logic board is expected to power on with battery only. Inspect and test power on key. Go to step 10.	



6. Inspect MagSafe power adapter. Verify AC adapter is correct wattage, compatible with product and works on known-good computer.	Yes	Power adapter is good, go to step 7	
	No	Release stuck pin or replace adapter due to wire damage, not working or burned pins	<b>P14</b>
7. Inspect MagSafe port on computer for physical damage, debris or metal fragments attracted to magnetic connector. Is MagSafe connector clean and free from defects?	Yes	Go to step 8	
	No	Clean port assembly. Replace MagSafe board if necessary.	<b>X03</b>
8. Verify adapter status LED turns on green then orange indicating power and battery charge in progress. A green LED can indicate a full battery, removal of battery or battery not recognized.	Yes	System starts and has power. MagSafe LED indicates power is flowing to logic board. Verify customer battery will also charge. Review battery health to ensure customer satisfaction.	<b>P11</b>
	No	AC power is down or battery is not charging. Go to step 9	
9. Verify power from adapter is present on logic board. Remove system battery, use AC power only. Reseat or test known-good MagSafe cable to achieve power for logic board.	Yes	Logic board has power adapter energy to start system. MagSafe cable reseat or replacement resolved issue. If still no system power on indications, go to step 10	<b>X03</b>
	No	AC adapter power not going to logic board power supplies. Replace logic board.	<b>M21</b>
10. Test and inspect Top Case Power Button. Stuck or open power on key or keyboard disconnect can disable the power on of system. If button does not work, locate pads R5015 on logic board just to right of IR/sleep cable. Short pads to power up logic board. If power on key is stuck, keyboard cable must be disconnected for R5015 to work. Does system power on? (Reconnect keyboard cable to confirm bad or intermittent connections.)	Yes	Power on key works fine, issue resolved.	
		Power on key works when keyboard cable is resealed.	
		Power on key appears to be stuck, had to remove keyboard cable to power on. Replace top case for stuck power on key	<b>K05</b>
	No	No logic board power on when shorting R5015 pads. Replace logic board.	<b>M01</b>

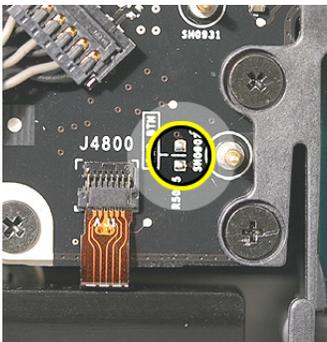



## Won't Start Up

Unlikely cause: display assembly, speakers, fan, camera, microphone

### Quick Check

Symptom	Quick Check
<b>Power but No start up</b> <ul style="list-style-type: none"> <li>No startup chime, some video activity, Apple logo, startup spin dial</li> <li>Startup chime with possible beep tones.</li> <li>Fan, hard drive spin or optical drive reset sound</li> <li>Sleep LED is on , blinking or went out</li> <li>Caps Lock LED toggles when pressed</li> </ul>	<ol style="list-style-type: none"> <li>Reset SMC.</li> <li>Verify startup process passes initial memory checks – no beep errors or flashing sleep LED indicators. Display activity is starting up.</li> <li>Clear PRAM. Verify starts up from user drive.</li> <li>Connect known-good external bootable device and press Alt key during startup then select external startup device to bring up system for diagnostics.</li> <li>Verify presence and status of user hard drive. Use Disk Utility to repair drive and file permissions.</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Reset SMC and Clear PRAM to set default startup device to internal hard disk drive (HDD).	Yes	User hard drive bootable, issue resolved default settings.	
	No	Customer system not starting up, go to step 2	
2. Is system indicating a memory error with repeated sleep LED 1 or 3 flash sequence and beep tones if sound is enabled?	Yes	Troubleshoot memory issues, go to step 3	
	No	Continue with startup sequence verification go to step 4	



3. Reseat customer memory and/or swap in known-good memory to isolate bad memory and replace defective parts.	Yes	Customer memory defective and replaced. Continue to verify startup process. Go to step 4	<b>X02</b>
	No	Should known-good memory fail in one or more slots, replace logic board.	<b>M07</b>
4. Hold the Alt (Option) key during startup and verify there is a bootable hard drive shown in Startup Manager. Choose customer hard drive. Does start up from this drive work?	Yes	System starting up from customer hard drive. Startup issue resolved	
	No	Customer hard drive not present or does not start up from this drive. Continue to find bootable device. Go to step 5	
5. Insert product OS install disc in optical drive. Install disc is bootable and should be present in Startup Manager. Can system start up from OS install disc?	Yes	Starts up from optical drive - customer hard drive not yet bootable, go to step 8	
	No	Computer has no internal bootable devices. Test external startup devices, go to step 6	
6. Boot from a known-good bootable copy of product OS on a USB drive or network server to start up and verify internal mass storage devices are available using System Profiler and Disk Utility.	Yes	System started up from external device and reports data regarding internal SATA devices. Go to step 7	
	No	No startup devices available. Replace logic board	<b>M02</b>
7. Troubleshoot optical drive and optical drive cable with cable reseat and known-good part substitutions. Is there a defective optical drive component to replace?	Yes	Cable reseat solved issue. Continue to verify hard drive issues, go to step 8	
		Defective optical drive cable found and replaced. Continue to verify hard drive issues, go to step 8	<b>X03</b>
		Defective optical drive found and replaced. Continue to verify hard drive issues, go to step 8	<b>J03</b>
	No	Replace logic board	<b>M19</b>



8. Use Disk Utility loaded from OS install disc to verify if hard drive is available on device list. Is customer hard drive listed in Disk Utility?	Yes	Customer hard drive available for inspections and repair. Go to step 10.	
	No	Hard drive not present, troubleshoot hard drive and cable. Go to step 9.	
9. Troubleshoot hard drive and hard drive SATA cable with cable reseal and known-good part substitutions. If customer hard drive, is there a defective hard drive component to replace?	Yes	Reseat of SATA cable now has customer hard drive visible in Disk Utility, go to step 10	
		Defective hard drive SATA cable found and replaced, now has customer hard drive visible in Disk Utility, go to step 10	<b>X03</b>
		Suspect customer hard drive defective, attempt OS restore, go to step 10	
	No	Known-good hard drive and known-good hard drive SATA cable used, still no hard drive present. Replace logic board	<b>M19</b>
10. Boot system with Shift key down. Does it work?	Yes	Go to software troubleshooting article	
	No	Go to step 11	
11. Use Disk Utility to repair customer hard drive and repair permissions if system OS found on hard drive. Is hard drive bootable after software repairs?	Yes	OS on customer hard drive repaired, issue resolved.	
	No	Hard drive not bootable, perhaps missing OS, go to step 12	
12. Use Disk Utility to partition customer hard drive with one GUID partition then restore Mac OS from product OS install disc. Is hard drive bootable after OS install?	Yes	Customer hard drive now starts up from new OS image, issue resolved	
	No	Replace hard drive.	<b>H02</b>



## Intermittent Shutdown

Unlikely cause: hard drive, optical drive

### Troubleshooting Shutdown Issues

Before troubleshooting shutdown issues, always do the following:

- Run the available Apple diagnostics to check for cause of previous shutdown(s). Running ASD also helps isolate any abnormal value reading from a thermal, voltage, or current sensor or from a fan speed meter.
- Collect all available information from the user on shutdown details: periodicity, power state when issue happens, running applications, running time before shutdown.

#### User-related shutdowns

A computer shutdown may be caused by user operation. Shutting down the computer (by selecting the Shut Down menu, by pressing the power button for at least 4 seconds, or by programming a timed shutdown in the Energy Saver preferences) should not be considered as a failure unless the power button or the magnetic sleep sensors are found to be defective.

Suggested steps for troubleshooting:

- Reset SMC.
- Check Energy Saver preferences settings.
- Test top case button and magnetic sleep sensor operation and secure connection to logic board.

#### Activity-related system shutdowns

These shutdowns are linked to system settings, devices drivers, applications, or operating system freezes.

- System could not finish the standard shutdown process and had to force shutdown.
- An installed watchdog detected that an application did not respond within the specified time. (This watchdog can be enabled in Mac OS X Server Energy Saver preferences.)

Suggested steps for troubleshooting:

- Check the system logs and activity monitor utility for clues on the freezing process.
- Check for available software and firmware updates for installed device drivers, applications, or operating system.
- Start the system from a known-good and up-to-date bootable drive for issue reproduction.

#### Power-related system shutdowns

These shutdowns are due to power management, poor connections or defective power sources.

- External or battery power source was removed.
- Battery went empty while computer was on.
- Battery went empty while computer was asleep.



Suggested steps for troubleshooting:

- Reset SMC.
- Check that AC cable, AC adapter and battery connections are secure to logic board.
- Verify battery and power adapter sources using the Battery and Adapter test utility.

### Hardware-related system shutdown

These shutdowns are due to temperature, voltage, current, fan speed or other hardware-related sensor values going out of range.

- One of the temperature sensors reached a specified temperature limit.
- One of the voltage sensors reached a specified voltage limit.
- One of the current sensors reached a specified current limit.

Suggested steps for troubleshooting:

- Check all sensors connections and values using Apple Service Diagnostics and other available Apple Service utilities.
- Confirm correct Apple-branded battery and power adapter are installed.
- Check for abnormal battery temperature.
- Check fan(s) operation.
- Confirm cleanliness of heatsink fins and air flows.
- Confirm heatsink is correctly seated on logic board and thermal material is present.

### Quick Check

Symptom	Quick Check
<b>Intermittent shutdown</b> <ul style="list-style-type: none"> <li>• Powers off during startup</li> <li>• Powers off with desktop use</li> </ul>	<ol style="list-style-type: none"> <li>1. Collect details from customer on shutdown occurrence and system configuration when it happens (on battery, when running for a while, frequency of shutdowns, running applications, shutdown repeatability). If shutdown can be easily reproduced, check next steps:</li> <li>2. Verify battery charge status</li> <li>3. Check AC adapter MagSafe connector and connection with system</li> <li>4. Reset SMC and PRAM</li> <li>5. Start up with shift key down for safe mode</li> <li>6. Startup from known-good bootable device</li> <li>7. Run ASD for sensors + thermal tests</li> </ol>



## Deep Dive

Check	Result	Action	Code
1. Activity related shutdowns: Reset SMC and PRAM and verify that shutdown issue still happens.	Yes	Check with known-good bootable drive: go to step 2	
	No	Shutdown cause was related to SMC or Pram programmed shutdown settings or corruption, and was resolved by reverting them to default settings.	
2. Booting from known-good bootable drive , verify that shutdown issue still happens.	Yes	Go to Power related shutdowns on step 3	
	No	Shutdown events do not happen on known-good OS. Reinstall Mac OS on customer hard drive, update OS with latest version and check if any firmware update is available.	
3. Power related shutdowns : verify that shutdown issue can ONLY be reproduced with user's battery and AC adapter.	Yes	Intermittent power issue means checking user's AC cable for intermittent connection, checking user's battery and AC adapter health,	
	No	Issue also happens with known-good battery and AC adapter. Go to step 4	
4. Reset SMC and PRAM, then verify if shutdown symptoms does not happen anymore.	Yes	Shutdown cause was related to SMC or Pram settings or corruption, and was resolved by reverting them to default settings.	
	No	Shutdown event still occurs. Go to step 5.	



5. Check system running on battery only. Use known-good charged battery. Verify if shutdown/reset/sleep issues disappear when known-good battery is used without AC adapter.	Yes	Recharge customer battery and retest. Check for customer battery health in Apple System Profiler or run Battery & Adapter Test utility, and replace battery if its health is reported bad or consumed.	<b>P09</b>
	No	Symptoms unchanged - Go to step 6	
6. Check with known-good AC adapter source only Remove battery and use known-good AC adapter. Verify if the shutdown/reset/sleep issues disappear with known-good adapter.	Yes	Faulty user's AC adapter. Replace user's AC adapter if AC cable and duckhead were confirmed good.	<b>P14</b>
	No	Symptoms unchanged - Go to Hardware-related shutdowns on step 7	
7. Hardware-related shutdowns: Run ASD or other latest available service utility and verify if a sensor failure is reported.	Yes	-If a temperature or a fan sensor failure is reported, go to step 8  -If a voltage or a current sensor failure is reported in ASD w/known good AC adapter and batteries, replace logic board.	<b>M23</b>
	No	Setup ASD to loop test suite for burn in tests and go to step 7. if no failure is found after burn in tests, return unit to customer for no failure found.	



8. Verify if a thermal sensor or fan failure is reported in ASD or other available service utility.	Yes	-If fan not running failure, check for fan cable seating and retest. If same failure after retest replace fan with known-good fan and retest. If issue does not happen with known-good fan, replace user's fan.  -If an over temp failure reported, check for cause of over temp, like obstructed vent, dust in heatsink fin, clogged fan and retest. If still failing replace part where sensor is located (logic board, battery, or trackpad) according to the sensor location table . Go to step 9	<b>X22</b>  <b>M23</b> <b>P17</b> <b>K99</b>
	No	Replace Thermal module Go to step 9	<b>X10</b>
9. Isolate if issue solved Verify if shutdown/issue does not happen anymore after part exchange.	Yes	Issue fixed	
	No	Replace logic board with corresponding symptom: -if for thermal error cause -if for other cause	<b>M18</b> <b>M08</b>

## No Video/Bad Video

Unlikely cause: hard drive, optical drive, top case, battery, power adapter

### Quick Check

Symptom	Quick Check
<b>Power, but No Video</b> <ul style="list-style-type: none"> <li>• Power</li> <li>• No video</li> <li>• fan, hard drive spin, or optical drive reset sound</li> <li>• sleep LED is on or went on</li> <li>• light if Caps Lock pressed</li> </ul>	<ol style="list-style-type: none"> <li>1. Reset SMC.</li> <li>2. Reset PRAM.</li> <li>3. If no startup chime, verify with known-good memory.</li> <li>4. Verify with external monitor.</li> <li>5. Press Alt key on startup..</li> </ol>



## Deep Dive

Check	Result	Action	Code
1. Characterize video issue Define whether the issue is a bad image with backlight OR no video issue. Verify whether some image even distorted is visible.	Yes	Bad image quality, go to step 5	
	No	No image seen or no backlight, go to Step 2	
2. Isolate Peripherals as cause Disconnect all peripherals, external devices, Express Card and display adapters if present and verify that video is displayed.	Yes	Suspect peripherals as cause. Reconnect one at a time, verifying unit operation at each stage	
	No	Go to Step 3	
3. Adjust Brightness Power-on unit , attempt to adjust brightness to maximum using brightness (F1/F2) keys and verify that video is displayed.	Yes	Video displayed - Brightness set to minimum, panel backlight was inadvertently turned off. If backlight returns to low check for stuck F1 key on keyboard.	
	No	Go to Step 4	
4. Reset SMC Reset SMC and verify that system video is displayed.	Yes	Corrupt SMC State preventing video.	
	No	Go to Step 5	
5. Reset PRAM. If no action, use external keyboard with same sequence. Verify that system video is displayed.	Yes	Invalid or Corrupt PRAM contents affecting video output	
	No	Go to step 6	



<b>6.</b> Connect External video Connect known-good VGA/ DVI adapter to known-good display, press power button and close display to force main screen startup on external video. Verify that video is correct when displayed from external display.	Yes	Video correct on external display. Research available firmware and software updates, retest.  If returning with software already updated, go to Step 7	
	No	Replace logic board with according symptom code: -no video -bad/distorted video	<b>M03</b> <b>M04</b>
<b>7.</b> Isolate LCD display detection Disconnect external monitor and reopen display and restart unit. Verify that sleep LED indicator goes off after internal LCD has been detected.	Yes	Sleep LED goes off when LCD detected. -If still no video then Go to step 8, -If video present, but with defect, go to step 9	
	No	Internal LCD not detected. Run Clamshell Service Diagnostic utility and check for LCD panel presence. If not found, reseal LVDS cable connection on logic board and retest. If sleep led does not go off after cable is reseated, go to step 10	
<b>8.</b> Check for sleep sensor condition If display assembly sleep sensor is stuck in a closed state, video will appear on internal display temporarily, until the OS sleeps the system. Disconnect IR/sleep cable and restart unit without external display. Verify that system starts up with video on internal display stays on and does not go into sleep mode.	Yes	Sleep sensor was stuck or had shorted cable. Replace IR/ sleep cable (or enclosing top case)	<b>X13</b>
	No	Symptoms unchanged - Go to Step 9	



<p><b>9.</b> Check for No Backlight Condition. Power on unit. Using a lamp or bright light source, inspect for faint image, and verify that any faint image appears.</p>	Yes	<p>Logo image visible - check and reseal LVDS cable connector on logic board. Inspect cables for damage near clutches: . if damaged, replace display assembly and go to step 11 . if cable is not damaged, run Clamshell Service Diagnostic utility and check for LCD panel presence. If not found, reseal it and retest, then go to step 11</p>	<b>L09</b>
	No	If symptom continues, go to step 10.	
<p><b>10.</b> Verify with Known good display assembly Connect known-good display assembly to system.</p>	Yes	<p>System is functioning with known-good display assembly Replace display assembly if following symptom reporting: - had no power issue - had incorrect/missing colors - had blank video - had distorted / blurred video - had vertical/horizontal lines - had noise/unstable flickering - had dim backlight - had bad spot(s)/pixels - had no backlight - could not change resolution</p>	<p><b>L01</b> <b>L02</b> <b>L03</b> <b>L04</b> <b>L05</b> <b>L06</b> <b>L07</b> <b>L08</b> <b>L09</b> <b>L10</b></p>
	No	Symptoms unchanged - replace logic board	<b>M03</b>
<p><b>11.</b> Verify with reseated backlight cable or replaced display assembly Verify that unit now has video and backlight.</p>	Yes	Issue was only due to damaged display assembly or unseated cable.	
	No	Display cable damaged the logic board. Replace logic board.	<b>M25</b>



## Battery Isn't Recognized or Won't Charge

Unlikely cause: display assembly, speakers, optical drive, hard drive, trackpad

### Quick Check

Symptom	Quick Check
<b>Battery isn't recognized or won't charge</b> <ul style="list-style-type: none"> <li>• AC adapter</li> <li>• No MagSafe LED indicator</li> <li>• No orange charge indication</li> <li>• Battery status LEDs: <ul style="list-style-type: none"> <li>- single chase</li> <li>- all flash</li> <li>- no LED</li> </ul> </li> </ul>	<ol style="list-style-type: none"> <li>1. Check battery level and test AC power.</li> <li>2. Refer to Deep Dive table for battery diagnostic testing.</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Does the MagSafe LED go green to amber when connected to the system?	Yes	Battery is recognized and charging. Go to step 6	
	No	LED is green, Battery may be full or not recognized. Go to step 2	
		LED was on momentarily then went out. Go to No Power for system (M01)	
2. When the Battery status button is pressed, did any of the lights come on?	Yes	Go to step 3	
	No	Go to step 11	
3. Does battery status indicate a fully charge battery with all LEDs on?	Yes	Customer battery charged, check health. Go to step 13.	
	No	Go to step 4	



4. Does battery status indicate the battery is not recognized with a single LED on that chases back and forth 5 times?	Yes	Go to step 8 and tag battery as a possible P11 candidate.	<b>(P11)</b>
	No	Go to step 5	
5. Does battery status indicate the battery is recognized but not charging with all LEDs blinking?	Yes	Go to step 8 and tag battery as a possible P10 candidate	<b>(P10)</b>
	No	Go to step 6	
6. Does battery status indicate battery charge and flash the next level 5 times?	Yes	Customer battery charging, check battery condition. Go to step 13	
	No	Flashing first LED only, go to step 7	
		No battery status LEDs on, go to step 11	
7. Does battery status indicate a low battery with a LED flashing rapidly indicating initial charging of battery?	Yes	Allow customer battery to charge to 1 LED on before checking battery condition. Go to step 13.	
	No	Go to step 8	
8. Test with a known-good battery. Is battery recognized and charging?	Yes	Replace customer battery (P10 not charging or P11 not recognized)	<b>P10 or P11</b>
	No	Go to step 9	
9. Inspect customer battery cable connector for corrosion or obstructions.	Yes	Clear obstructions and replace battery if corroded and recheck. (P10 not charging or P11 not recognized)	<b>P10 or P11</b>
	No	Go to step 10	
10. Reseat battery harness at logic board connector, and retest. Is battery recognized and charging?	Yes	Issue resolved by cable reseat. Check battery condition, go to step 13	
	No	Replace logic board	<b>M20</b>



11. Battery status LEDs not working - inspect button stuck or cable disconnect at logic board and reset SMC.	Yes	LED status now working. Go to step 3.	
	No	Go to step 12.	
12. Remove system battery and connect and test a known-good battery status indicator assembly. Do LEDs indicate a battery not recognized chase pattern?	Yes	Replace customer battery LED indicator assembly. Go to step 3	<b>X03</b>
	No	Replace customer logic board.	<b>M20</b>
13. Open Apple System Profiler and click on the Power Tab on the left. Is the battery over 300 cycle counts?	Yes	Battery has been consumed, and customer will need to purchase a replacement.	
	No	Go to step 14.	
14. Is battery less than a year old?	Yes	Go to step 16	
	No	Battery warranty expired, go to step 15	
15. Considering the age of the battery greater than one year old, is the health of the battery "Good" according to system profiler?	Yes	Battery is in good health and out of 1 year warranty coverage. Battery should continue to function until consumed.	
	No	Battery is consumed after warranty coverage. Customer to purchase a new battery.	
16. For batteries still covered by warranty, is the health of the battery "Good?"	Yes	Battery functioning normal. Go to step 17.	
	No	Battery has premature capacity loss. Replace customer battery.	<b>P08</b>
17. With battery charge greater than 20% does battery support system operation without AC connected?	Yes	Customer battery is good	
	No	Go to step 18	
18. Test with a known-good battery. Does known-good battery support battery only operation?	Yes	Replace customer battery for will not run system on battery alone	<b>P12</b>
	No	Replace logic board	<b>M20</b>



## Kernel Panic/System Crashes

Unlikely cause: Battery, Power Adapter

### Quick Check

Symptom	Quick Check
<b>Memory Issues/Kernel panic and freezes</b> <ul style="list-style-type: none"> <li>• Display notice of system kernel panic during start up and desktop use.</li> <li>• System freeze during use.</li> <li>• System freeze upon wake from sleep.</li> </ul>	<ol style="list-style-type: none"> <li>1. Reset SMC and clear PRAM</li> <li>2. Remove suspect external devices.</li> <li>3. Verify user memory is Apple-approved memory, and memory configuration matches memory installed.</li> <li>4. Start up with shift key down for safe mode.</li> <li>5. Startup from known-good bootable device</li> <li>6. Check panic.log info for crash cause</li> <li>7. Run AHT for sensors test</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Isolate Peripherals as cause. Disconnect all peripherals, external devices, and display adapters if present	Yes	Suspect peripherals as cause. Reconnect one at a time, verifying unit operation at each stage	
	No	Go to Step 2	
2. Reset SMC and clear PRAM then verify that unit starts without panic issues.	Yes	Issue resolved with default startup settings.	
	No	Go to step 3	
3. Boot in Safe Mode with Shift key down, and check for recent kernel panic data in panic log.  Open Panic.log file on hard drive and check for affected interface that crashed. If unit still crashes during startup, you will need to take out disk to a good system to access the file. Verify that kernel panic dependency is not with an I/O interface.	Yes	Kernel Panic is not a system I/O related device. Go to step 5	
	No	I/O device related crash, go to step 4	



<p><b>4.</b> Remove I/O device where possible to pinpoint faulty device:</p> <ul style="list-style-type: none"> <li>- Disconnect camera cable from display assembly (for AirPort, Bluetooth, camera, and ambient light sensor). Camera cable can be disconnected without affecting startup and test.</li> <li>- Bluetooth card to isolate Bluetooth.</li> <li>- optical drive cable to isolate optical drive.</li> <li>- hard drive cable to isolate hard drive.</li> </ul> <p>Memory cards can be removed, relocated, or tested with known-good memory. Because system will run on one card, this is a useful test for finding bad memory or bad memory slot.</p> <p>If issue remains after testing I/O device, replace with known-good part(s) to confirm issue resolved.</p>	Yes	<p>System starts up when I/O device removed, replace affected I/O device or module containing it.</p> <p>If AirPort card presence is crashing system, replace AirPort card. If still issue, replace display assembly (for Bluetooth, camera, or cable damage).</p> <p>If Bluetooth card presence is crashing system, replace Bluetooth. If issue remains, replace display assembly for damaged Bluetooth (camera) cable.</p> <p>If optical drive presence is crashing system, replace optical drive cable and retest. If issue remains try with known-good optical drive. If still issue, replace optical drive.</p> <p>If hard drive presence is crashing system, replace hard drive cable and retest. If issue remains, try with known-good hard drive. If still issue, replace hard drive.</p> <p>Reseat memory or replace suspect memory with known-good memory.</p>	<p><b>N13</b> <b>L14</b></p> <p><b>N15 or</b> <b>L16</b></p> <p><b>X03</b> <b>J03</b></p> <p><b>X03</b> <b>H01</b></p> <p><b>X01</b></p>
	No	Symptoms unchanged, go to step 5	
<p><b>5.</b> Start up from optical drive or known-good OS. Attempt to start up with original or product install disc, or from an external hard drive with product OS installed, and verify that system starts without kernel panic.</p>	Yes	Kernel panics cease running alternate OS. Run ASD/ DiskUtility to repair and test hard drive. If repair attempts fail, repartition hard drive and reinstall OS. Replace hard drive if restore fails.	<b>H03</b>
	No	Symptoms unchanged, go to Step 6	



6. Disconnect display assembly and test with known-good display assembly. Verify that system now starts up without kernel panic/freeze.	Yes	Replace display assembly.	L14
	No	Go to step 7	
7. Check for thermal values and fan running speed Run ASD to check for fan and sensors test, and verify that ASD does not report any overtemp, failing sensor, or fan.	Yes	No thermal fail detected - Replace logic board with matching symptom:  - If hang or freeze  - If Kernel Panic/system crashes	M05  M06
	No	If sensor test failed, reseal sensor connections on logic board and retest. If still failing, replace sensor or part where it is located (top case, display, other) : If top case sensor failed If display sensor failed If logic board sensor failed If fan test failed, replace fan. If overtemp , replace heatsink.	X99 L14 M18 X03 X10

## Battery Run Time Too Short

### Quick Check

Symptom	Quick Check
<b>Battery Run Time Too Short</b> Battery runs out of power very quickly (less than two hours)	<ol style="list-style-type: none"> <li>1. Check if the battery is covered under a repair extension program. Use the "Portable Computer Battery Screening Process for Apple Service Providers" (<a href="#">Knowledge Base CP165</a>).</li> <li>2. Verify no applications have runaway processes with the CPU. See "Runaway applications can shorten battery runtime" (<a href="#">Knowledge Base TS1473</a>).</li> <li>3. Run battery diagnostic testing..</li> </ol>



## Won't Run on Power Adapter Alone

Unlikely cause: RAM, display assembly, hard drive, optical drive, top case, speakers, camera, microphone

### Quick Check

Symptom	Quick Check
<b>Won't Run on Power Adapter Alone</b> Runs on battery but not on power adapter only.	<ol style="list-style-type: none"> <li>1. Verify proper wattage adapter is being used.</li> <li>2. Check for dirty or stuck pins on the MagSafe connectors, both on the adapter and the computer.</li> <li>3. Connect the AC adapter to known-good power source.</li> <li>4. Verify power cord or plug is properly attached to AC adapter and MagSafe cable is not damaged.</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. With battery removed, will a known-good AC adapter start up and run the system and show MagSafe LED status?	Yes	Confirm user's AC adapter as bad and replace.	<b>P14</b>
	No	Verify MagSafe board cable seating to logic board. Go to step 2	
2. Does a known-good power adapter's LED light up either green or amber?	Yes	SMC on logic board senses AC power adapter. Go to step 3	
	No	Replace the MagSafe board. Go to step 3.	
3. Does the unit run on known-good power adapter alone?	Yes	Issued resolved.	<b>X03</b>
	No	Replace logic board..	<b>M01</b>



## Power Adapter Issue

Unlikely cause: logic board, RAM, display assembly, hard drive, optical drive, top case, speakers, camera, microphone

### Quick Check

Symptom	Quick Check
<b>Power Adapter Issue</b> <ul style="list-style-type: none"> <li>No power</li> <li>No Power LED</li> <li>Non-operational</li> <li>Stuck /broken pin</li> </ul>	<ol style="list-style-type: none"> <li>Connect AC adapters MagSafe connector to the computer. The LED on the connector should be green or amber.</li> <li>Verify power cord, or plug, is firmly attached to AC adapter.</li> <li>Verify AC power source is supplying AC power.</li> <li>Check for dirty or stuck pins on the MagSafe connectors, both on the adapter and the computer. Use and cleaning of power adapter with MagSafe</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Verify that the MagSafe LED is green or amber while connecting a known-good AC adapter on customer system.	Yes	SMC on logic board senses AC power adapter and enabled power. Go to step 4.	
	No	Verify MagSafe interconnect board is connected to logic board. Go to step 2	
2. Does the unit run on known-good AC power adapter only?	Yes	Issued resolved.	<b>P99</b>
	No	Replace the MagSafe interconnect board. Go to step 3.	
3. Verify the MagSafe LED is green or amber while connecting known-good power adapter on customer system.	Yes	Bad MagSafe interconnect board. Issue resolved.	<b>X03</b>
	No	Go to step 4	



4. Does the customer's power adapter have stuck or bent pins on the MagSafe connector?	Yes	Replace power adapter.	<b>P15</b>
	No	Go to step 5	
5. Does the cable or duckhead have visible damage?	Yes	Replace cable or duckhead.	<b>P16</b>
	No	Go to step 6	
6. Check that LED on MagSafe connector is displaying both green (if battery charged) and orange (when charging).	Yes	Verify adapter with known-good unit and customer unit and troubleshoot source of error	
	No	Replace power adapter.	<b>P03</b>

## Noise / Hum / Vibration

Unlikely cause: RAM, display assembly, top case, camera, microphone, battery

### Quick Check

Symptom	Quick Check
<b>Noise / Hum / Vibration</b> Computer or AC adapter emits a noise or vibration.	<ol style="list-style-type: none"> <li>1. Verify and reproduce the source of the noise from the computer / adapter with the customer.</li> <li>2. If the AC adapter is the source of the noise disconnect and try a known-good adapter. ( a small amount of hum or vibration is normal with AC adapters ).</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Use of a known-good AC adapter eliminates the noise/ vibration.	Yes	Replace AC adapter.	<b>P04</b>
	No	Go to step 2	
2. Verify if the noise is heard through the speakers and / or headphones.	Yes	Go to step 3	
	No	Go to step 4	



3. Disconnect any peripheral devices, cards, or cables attached to the unit. Verify the noise is gone.	Yes	Check for possible ground loop.	
	No	Go to step 6	
4. Locate the source of the noise. Is the noise from an optical drive?	Yes	Check with a different media disc. Possible issue with disc label or out of balance media. If not related to media, and noise is above normal level, replace optical drive.	<b>J04</b>
	No	Go to step 5	
5. Is the noise from the hard drive?	Yes	It is normal for drives to produce noise when they spin up or the heads move. Replace drive if noise is above normal levels.	<b>H06</b>
	No	Go to step 6	
6. Is the noise coming from the fan?	Yes	The fan(s) are generally running in a slow mode, but may accelerated when intensive processing is required (calculation, 3D gaming, or screen saver animation). If still beyond expected sound level, check for interference of fan with other mechanical element of system (foam, bracket, shield) before replacing a noisy fan.	<b>X03</b>
	No	Go to step 7.	<b>P04</b>
7. Noise maybe related to interference from other electrical devices operating near the computer, or on the same AC power source. Verify if noise is gone when operating in a different location on a different AC circuit.	Yes	Perhaps operating the unit with a surge suppressor will eliminate or reduce the noise. Change location of use or limit use of other device that is inducing the noise.	
	No	Replace logic board.	<b>M99</b>



## Burnt Smell / Odor

Unlikely cause: Enclosure

### Quick Check

Symptom	Quick Check
<b>Burnt Smell / Odor</b> Computer or power adapter emits an odor or smell of smoke.	<ol style="list-style-type: none"> <li>1. Disconnect AC adapter from the computer.</li> <li>2. Attempt to identify the source of the odor. Visual clues are component damaged like capacitor chip popped or burn marks.</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Has the source of the odor been identified.	Yes	Replace the affected part.	<b>P08</b>
	No	Go to step 2	
2. Are any burn marks visible on components?	Yes	Remove display assembly and clutch cover. An improperly seated cable, a damaged cable, or a reversed AirPort Card connection can blow components near the connector on the logic board. Is AirPort Card cable correctly oriented and connected? If so, replace the damaged part. If not, reseat the AirPort cable correctly and replace the damaged logic board.	<b>P08</b>
	No	Go to step 3	



3. Is the computer operating normally?	Yes	This could be related to normal operation.	
	No	Please refer to best related troubleshooting section. If after inspecting the unit you feel there is a possible safety issue with the computer or AC adapter, please notify Apple.	

## Battery Leaking or Swollen

### Quick Check

Symptom	Quick Check
<b>Battery Leaking or Swollen</b> <ul style="list-style-type: none"> <li>• Computer wobbles</li> <li>• Trackpad button does not work</li> <li>• Deformed bottom case</li> </ul>	<ol style="list-style-type: none"> <li>1. Check if the battery is covered under a repair extension program. Reference: MacBook, MacBook Pro (15-inch) or MacBook Pro (17-inch) with swollen battery article (<a href="#">Knowledge Base TS2358</a>).</li> <li>2. Use the “Portable Computer Battery Screening Process for Apple Service Providers” (<a href="#">Knowledge Base CP165</a>) and use “Battery pack is visibly deformed” case under section 2E. Use symptom code <b>P13</b>.</li> </ol>

## Uncategorized Symptom

### Quick Check

Symptom	Quick Check
<b>Uncategorized Symptom</b> Unable to locate appropriate symptom code	Verify whether existing symptom code applies to the issue reported by the customer. If not, document reported symptom and send feedback to <a href="mailto:smfeedback@apple.com">smfeedback@apple.com</a> stating that a suitable symptom code could not be found.



# Communications

## Ethernet Port/Device Issue

Unlikely cause: power adapter, battery, speakers, optical drive, hard drive, fan, camera, microphone, top case, display assembly, AirPort card

### Quick Check

Symptom	Quick Check
<b>Ethernet Port/Device Issue</b> <ul style="list-style-type: none"> <li>No Ethernet device present</li> <li>Unable to access network resources</li> <li>Ethernet device shows no connection</li> <li>Ethernet device unable to get an IP address</li> <li>Slow network performance</li> </ul>	<ol style="list-style-type: none"> <li>Check the network cable for damage, try a known good Ethernet cable – CAT5 or better recommended for 100Mbps+ connections.</li> <li>Check Ethernet ports on Mac and wall/switch for dust, debris, damage or bent pins.</li> <li>Ensure distance from networking infrastructure is less than 300 feet / 105 meters.</li> <li>Verify port, cable and network hardware with a known good system. Isolate firewall, MAC address filtering or hardware access control devices.</li> <li>Check system logs. Isolate OS by starting up from original install media (10.5.x) or compatible known good OS.</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Visually inspect Ethernet connector to ensure all pins will make physical contact with CAT5 network cable.	Yes	Ethernet interface contacts are good. Go to step 2.	
	No	Pins are damaged or bent flat, replace logic board.	<b>M10</b>



2. Isolate OS by booting from original install media. Verify Network Link status active by using Network Utility on install DVD. If the Ethernet interface (en0) Link Status is inactive, recheck physical connect and link activity indicator on hub/switch.	Yes	Ethernet interface (en0) Link Status is active, go to step 3.	
	No	If connection is OK on known-good system, replace logic board.	<b>M10</b>
3. Verify if IP address is listed for the Ethernet interface in System Preferences: Network. Connect computer to network with known-good DHCP IP allocation, ensuring static DHCP maps or filtering is not preventing address allocation. Note: DHCP allocation may not be instantaneous depending on network. Retest.	Yes	Go to step 4.	
	No	If connection is OK on known-good system, replace logic board.	<b>M10</b>
4. Verify connection by using Network Utility to ping another connected computer on the same subnet. Ensure the target computer's IP address is valid, on the same subnet and powered on. Ensure no MAC address filtering or hardware access control devices are present. Use a simple hub/switch environment.	Yes	Go to step 5	
	No	If the symptoms do not change, replace the logic board.	<b>M10</b>
5. Verify Ethernet performance and reliability by starting up from a known-good OS install, and downloading a large file from a web site or file server.	Yes	If there is no performance or connectivity issue isolated solely to the system under test, the problem may be the network environment. No repair is necessary.	
	No	If there are connection dropouts or poor performance not seen on a known-good test system, replace the logic board.	<b>M10</b>



## AirPort/Bluetooth: Defective Wireless Devices

Unlikely cause: power adapter, battery, speakers, optical drive, hard drive, fan, camera, microphone, top case

**Caution:** When testing an AirPort card connection, wait at least 5 seconds after shutdown before touching the camera cable connection to the logic board. Waiting less than that could damage the AirPort card.

### Quick Check

Symptom	Quick Check
<p><b>AirPort or Bluetooth: Defective Wireless Devices</b></p> <ul style="list-style-type: none"> <li>• Unable to join networks or pair devices</li> <li>• Card not available or recognized</li> <li>• Intermittent device or connection dropouts</li> </ul>	<ol style="list-style-type: none"> <li>1. Open System Preferences and make sure AirPort or Bluetooth is turned on and (for AirPort) that a network is selected.</li> <li>2. Check that base station is not using unsupported connection and encryption protocols.</li> <li>3. Check for nearby interference sources such as microwave ovens or cordless phones (<a href="#">Knowledge Base HT1365</a>)</li> <li>4. Check the number of users trying to use AirPort in the area for possible network congestion.</li> <li>5. Isolate OS by booting from original install media (10.5.x). Attempt to connect to base station (AirPort) or pair with wireless keyboard (Bluetooth).</li> <li>6. Reset PRAM.</li> </ol>

### Deep Dive

Check	Result	Action	Code
<ol style="list-style-type: none"> <li>1. Open System Profiler, check to see if AirPort or Bluetooth is recognized. Ensure software and firmware updates for AirPort and Bluetooth have been applied.</li> </ol>	Yes	<p>(AirPort) Ensure MAC address filtering is not enabled on the base station.</p> <p>(Bluetooth) Ensure target devices are set to discoverable.</p>	
	No	If card is not detected or software updates do not resolve issue, go to step 2.	



2. Run Clamshell Service Diagnostic utility and check for all devices presence. If not found, reseal the camera cable connection to the logic board.	Yes	Loose logic board connection.	<b>N04</b>
	No	AirPort issue, go to step 3, Bluetooth issue go to step 7.	
3. (AirPort) Verify the antenna connections to the AirPort card are not reversed or loose. Reseat antenna and I/O cable connections.	Yes	Loose connections or crossed antenna.	<b>N04</b>
	No	If the connectors are secure, antenna connections not reversed and show no signs of damage or wear, go to step 4.	
4. (AirPort) Try a known-good AirPort antenna.	Yes	Replace AirPort antenna.	<b>N14</b>
	No	Continue to use known-good antenna, go to step 5.	
5. (AirPort) Try a known-good AirPort card.	Yes	Replace AirPort card.	<b>N12</b>
	No	Go to step 6.	
6. (AirPort) Try a known-good display assembly if available.	Yes	Replace display assembly.	<b>L16</b>
	No	Replace logic board.	<b>M11</b>
7. (Bluetooth) Enable Bluetooth and try a known-good Bluetooth card. Although Bluetooth cabling is part of camera cable, Bluetooth card is separate. Verify that System Profiler sees known-good Bluetooth card.	Yes	Replace Bluetooth card.	<b>N15</b>
	No	Go to step 8.	
8. (Bluetooth) Enable Bluetooth and try a known-good display assembly, if available, and Bluetooth card. Bluetooth cabling is part of camera cable. Verify that System Profiler sees known-good Bluetooth card.	Yes	Replace display assembly.	<b>L16</b>
	No	Replace logic board.	<b>M11</b>



## No/Poor Wireless Signal

Unlikely cause: power adapter, battery, speakers, optical drive, hard drive, fan, camera, microphone, top case

### Quick Check

Symptom	Quick Check
<b>No/Poor Wireless Signal</b> <ul style="list-style-type: none"> <li>• Unable to find networks</li> <li>• Intermittent connection dropouts</li> <li>• Slow transfer speeds</li> </ul>	<ol style="list-style-type: none"> <li>1. Check for nearby interference sources in the 2.4/5GHz range such as microwave ovens and cordless phones (<a href="#">Knowledge Base HT1365</a>).</li> <li>2. Check that computer is within base station range – move closer to base station.</li> <li>3. Base station checks: <ol style="list-style-type: none"> <li>a. Base station is not set to low-power transmission mode</li> <li>b. Base station is not using unsupported connection and encryption protocols</li> <li>c. Check for possible Wi-Fi channel overlap (nearby base stations using adjacent channel)</li> </ol> </li> <li>4. Isolate OS by booting from original install media (10.5.x). Attempt to connect to base station.</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Open System Profiler, check to see if AirPort card is recognized under Network: AirPort Card.	Yes	Use Software Update to make sure all AirPort software and firmware updates have been applied. Ensure base station is not using MAC address filtering or creating a hidden network.	
	No	If card is not detected, go to M11 - AirPort/Bluetooth - Defective wireless devices.	
2. Run Clamshell Service Diagnostic utility and check for all devices presence. If not found, reseal the camera cable connection to the logic board.	Yes	Loose logic board connection	<b>N04</b>
	No	Go to step 3.	



3. Verify the antenna connections to the AirPort card are not reversed or loose. Reseat antenna and I/O cable connections.	Yes	Loose connections or crossed antenna	<b>N04</b>
	No	If the connectors are secure, antenna connections not reversed and show no signs of damage or wear, go to step 4.	
4. Try a known-good AirPort antenna.	Yes	Replace AirPort antenna.	<b>N14</b>
	No	Continue to use known good antenna, go to step 5.	
5. Try a known-good AirPort card.	Yes	Replace AirPort card.	<b>N12</b>
	No	Continue to use known-good antenna & card; go to step 6.	
6. Try a known-good display assembly if available.	Yes	Replace display assembly.	<b>L16</b>
	No	Replace logic board.	<b>M11</b>

## Bluetooth Wireless Input Device Loses Connection

Unlikely cause: display assembly, speaker assembly, optical drive, hard drive

### Quick Check

Symptom	Quick Check
<b>Bluetooth Wireless Input Device Loses Connection</b>	Check Bluetooth input device has fully charged batteries.

### Deep Dive

Check	Result	Action	Code
1. System Profiler should list Bluetooth radio device under system hardware. Is Bluetooth device available?	Yes	Bluetooth radio present, verify Bluetooth preference settings, go to step 2.	
	No	Attempt Bluetooth repair, go to step 5.	



2. System Preferences has a Bluetooth panel. Ensure Bluetooth is on and discoverable. Are there any devices listed in pairing window?	Yes	Choose known-good device and establish a connection. Go to step 3.	
	No	Attempt Bluetooth repair, go to step 5.	
3. Ensure a known-good Bluetooth device is on, in close range and in discoverable mode. Is computer pairing with known-good device?	Yes	Pairing verified, connect with user's device, go to step 4	
	No	Attempt Bluetooth repair, go to step 5.	
4. Is computer pairing with user's Bluetooth device?	Yes	Connection established, continue testing for connection loss, go to step 8.	
	No	Check for software updates for both computer & device.	<b>K07</b>
5. Run Clamshell Service Diagnostic utility and check for all devices presence. If not found, reseal camera cable on logic board. Verify that a USB Bluetooth controller is visible in System Profiler.	Yes	Loose cable connection.	<b>N04</b>
	No	Go to step 6.	
6. Install a known-good Bluetooth card. Verify that a USB Bluetooth controller is visible in System Profiler.	Yes	Replace Bluetooth card	<b>N15</b>
	No	Go to step 7	
7. Install and test a known-good display assembly. Verify that a USB Bluetooth controller is visible in System Profiler.	Yes	Replace display assembly.	<b>L16</b>
	No	Replace logic board.	<b>M11</b>



8. Continue to test a known-good Bluetooth device to determine if there is a disconnect. Do not allow computer to sleep during this test. Is link lost during test?	Yes	Check for software update, 2.4 GHz radio interference or device low battery. If still losing link, replace Bluetooth card. If installed Bluetooth card is known-good or was already replaced, replace top case (for Bluetooth antenna).	N14  N14
	No	Known-good device passed test.	

## AirPort Card: Kernel Panic

Unlikely cause: power adapter, battery, speakers, optical drive, hard drive, fan, camera, microphone, top case

### Quick Check

Symptom	Quick Check
<b>AirPort Card: Kernel Panic</b> <ul style="list-style-type: none"> <li>Kernel panic on boot</li> <li>Kernel panic or freezing while attempting to connect to Wi-Fi networks</li> <li>Kernel panic while transferring data on Wi-Fi networks.</li> </ul>	<ol style="list-style-type: none"> <li>Isolate OS by booting from original install media (10.5.x). Attempt to connect to Wi-Fi network.</li> <li>Use Software Update to make sure all AirPort software and firmware updates have been applied.</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Use Software Update to make sure all AirPort/Bluetooth software and firmware updates have been applied. Ensure MAC address filtering is not enabled on the base station. Is kernel panic resolved?	Yes	Software issue.	
	No	Go to step 2.	



2. Run Clamshell Service Diagnostic utility and check for all devices presence. If not found, reseal the camera cable connection to the logic board. Is kernel panic resolved?	Yes	Go to step 4.	
	No	Go to step 3.	
3. Isolate AirPort card by removing the I/O connection from the AirPort card. side. Reconnect camera cable connection to logic board. Is kernel panic resolved?	Yes	Go to step 4.	
	No	Go to M06 Kernel Panic / System Crashes.	
4. Connect and test with a known-good AirPort card. Is kernel panic resolved?	Yes	Replace AirPort card.	<b>N13</b>
	No	Replace display assembly.	<b>L16</b>

## Wireless Performance Issue / Slow Connection

Unlikely cause: power adapter, battery, speakers, optical drive, hard drive, fan, camera, microphone, top case

### Quick Check

Symptom	Quick Check
---------	-------------



<p><b>Wireless Performance Issue / Slow Connection</b></p> <ul style="list-style-type: none"> <li>• Slow or stalled data transfers</li> <li>• Intermittent connection dropouts</li> </ul>	<ol style="list-style-type: none"> <li>1. Check for nearby interference sources in the 2.4/5GHz range such as microwave ovens or cordless phones (<a href="#">Knowledge Base HT1365</a>)</li> <li>2. (AirPort) Check the number of users trying to use AirPort in the area for possible network congestion. Move closer to base station to improve signal reception.</li> <li>3. (Bluetooth) Move devices closer together.</li> <li>4. Check performance with a known-good system</li> <li>5. (AirPort) Wireless base station checks:             <ol style="list-style-type: none"> <li>a. Base station is not set to low-power transmission mode.</li> <li>b. Base station is not set to a slower protocol mode (802.11b).</li> <li>c. Check for possible Wi-Fi channel overlap (nearby base stations using adjacent channel).</li> </ol> </li> <li>6. Isolate OS by booting from original install media (10.5.x). Attempt to connect to base station (AirPort) or pair with wireless keyboard (Bluetooth)</li> <li>7. Use Software Update to make sure all AirPort and Bluetooth software and firmware updates have been applied.</li> </ol>
---	---

## Deep Dive

Check	Result	Action	Code
1. Inspect the display clutch barrel for damage. AirPort radio is in display clutch barrel area.	Yes	Record damage: Proceed to possibly repair damaged parts, go to step 2	
	No	No visible damage, go to step 2	
2. Turn off Bluetooth. Retest AirPort performance. Refer to <a href="#">Knowledge Base TS1809</a> .	Yes	Possible AirPort interference from the Bluetooth card. Change AirPort base station channel. ( <a href="#">Knowledge Base TS1809</a> .)	<b>N06</b>
	No	Continue by checking connections, go to step 3	



3. Run Clamshell Service Diagnostic utility and check for all devices presence. If not found, reseal the camera cable connection to the logic board.	Yes	Loose logic board connection	<b>N04</b>
	No	AirPort issue, go to step 4, Bluetooth issue, go to step 8.	
4. (AirPort) Verify the antenna connections to the AirPort card are not reversed or loose. Reseat antenna and I/O cable connections.	Yes	Loose connection or crossed antenna	<b>N04</b>
	No	If the connectors are secure, antenna connections not reversed and show no signs of damage or wear, go to step 5	
5. (AirPort) Try a known-good AirPort antenna and verify that issue is fixed..	Yes	Replace AirPort antenna.	<b>N14</b>
	No	Continue to use known good antenna, go to step 6.	
6. (AirPort) Try a known-good AirPort card and verify that issue is fixed..	Yes	Replace AirPort card.	<b>N12</b>
	No	Continue to use known-good antenna & card, go to step 7.	
7. (AirPort) Try a known-good display assembly if available and verify that issue is fixed..	Yes	Replace display assembly.	<b>L16</b>
	No	Replace logic board.	<b>M11</b>
8. (Bluetooth) Enable Bluetooth and try a known-good Bluetooth card if available. Verify that Bluetooth is pairing with known-good device.	Yes	Replace Bluetooth card.	<b>N15</b>
	No	Go to step 9.	
9. (Bluetooth) Enable Bluetooth and try a known-good antenna assembly if available. Verify that pairing issue is fixed.	Yes	Replace top case.	<b>N14</b>
	No	Go to step 10.	
10. (Bluetooth) Enable Bluetooth and try a known-good display assembly if available. Verify that Bluetooth is pairing with known-good device.	Yes	Replace display assembly.	<b>L16</b>
	No	Replace logic board.	<b>M11</b>



## Wireless Input Device Doesn't Pair

Unlikely cause: display assembly, logic board, optical drive, hard drive

### Quick Check

Symptom	Quick Check
<b>Wireless Input Device Doesn't Pair</b> <ul style="list-style-type: none"> <li>Can't get the system to recognize the Bluetooth keyboard or mouse</li> </ul>	<ol style="list-style-type: none"> <li>Check Bluetooth System Preference is set to Discoverable.</li> <li>Check Bluetooth device has fully charged batteries.</li> <li>Check for Bluetooth software updates for both the device and Mac OS X.</li> <li>If the Bluetooth pairs with no problems, probe about potential interference issue at user's site.</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. System Profiler should list Bluetooth radio device under system hardware. Is Bluetooth device available?	Yes	Bluetooth radio present, verify Bluetooth preference settings, go to step 2.	
	No	Attempt Bluetooth repair, go to step 5.	
2. System Preferences has a Bluetooth panel. Ensure Bluetooth is on and discoverable. Are there any devices listed in pairing window?	Yes	Choose known-good device and establish a connection. Go to step 3.	
	No	Attempt Bluetooth repair, go to step 5.	
3. Ensure a known-good Bluetooth device is on, in close range and discoverable mode, Is system pairing with known-good device?	Yes	Pairing verified, connect with user's device, go to step 4.	
	No	Attempt Bluetooth repair, go to step 5.	
4. Is Bluetooth pairing with user's Bluetooth device?	Yes	Issue resolved.	
	No	Check for SW update for both System and user device.	



5. Run Clamshell Service Diagnostic utility and check for all devices presence. If not found, reseal camera cable with logic board. Is the Bluetooth radio present, on and pairing with a known-good device?	Yes	Bad logic board connection. Issue resolved.	
	No	Go to step 6.	
6. (Bluetooth) Enable Bluetooth and try a known-good Bluetooth card if available. Is pairing issue fixed?	Yes	Replace Bluetooth card.	<b>N15</b>
	No	Go to step 7.	
7. (Bluetooth) Enable Bluetooth and try a known-good antenna assembly if available. Is pairing fixed?	Yes	Replace top case.	<b>N14</b>
	No	Go to step 8.	
8. (Bluetooth) Enable Bluetooth and try a known-good display assembly if available. Is Bluetooth pairing with a known-good device?	Yes	Replace display assembly.	<b>L16</b>
	No	Replace logic board.	<b>M11</b>

## Uncategorized Symptom

### Quick Check

Symptom	Quick Check
<b>Uncategorized Symptom</b> Unable to locate appropriate symptom code	Verify whether existing symptom code applies to the issue reported by the user. If not, document reported symptom and send feedback to <a href="mailto:smfeedback@apple.com">smfeedback@apple.com</a> stating that a suitable symptom code could not be found.



# Display

## Display Anomalies

### Quick Check

Symptom	Quick Check
<b>Display Anomalies</b> <ul style="list-style-type: none"> <li>• Incorrect/missing colors</li> <li>• Distorted/blurred image</li> <li>• Pixel anomalies</li> <li>• Vertical/horizontal lines</li> <li>• Non-uniform brightness</li> <li>• Image flicker</li> <li>• Image persistence</li> </ul>	<ol style="list-style-type: none"> <li>1. Allow display to reach normal operating temperature for about 15 minutes before evaluating front-of-screen performance.</li> <li>2. Check display preferences for use of custom display profile.</li> <li>3. Check brightness setting.</li> <li>4. Check for Software Updates.</li> <li>5. Clean glass panel while checking for dust/debris.</li> <li>6. Go to Deep Dive: General</li> </ol>

### Deep Dive: General

Check	Result	Action	Code
1. Verify if user's issue is incorrect/missing colors.	Yes	Go to <a href="#">Incorrect/Missing Colors Deep Dive</a> .	
	No	Go to step 2.	
2. Verify if user's issue is distorted/blurred image.	Yes	Go to <a href="#">Distorted/Blurred Image Deep Dive</a> .	
	No	Go to step 3.	
3. Verify if user's issue is bright or dark pixel anomalies.	Yes	Go to <a href="#">Pixel Anomalies Deep Dive</a> .	
	No	Go to step 4.	
4. Verify if user's issue is vertical or horizontal lines.	Yes	Go to <a href="#">Vertical/Horizontal Lines Deep Dive</a> .	
	No	Go to step 5.	



5. Verify if user's issue is non-uniform brightness.	Yes	Go to <a href="#">Non-uniform Brightness Deep Dive</a> .	
	No	LCD functioning OK.	


### Deep Dive: Incorrect/Missing Colors

Check	Result	Action	Code
1. Verify display is listed in the System Profiler's Graphics/Displays device tree.	Yes	This ensures color profile can be matched with LCD. Go to step 2.	
	No	Go to N09.	
2. Verify System Preferences Display Profile is valid for display being tested. Color profile should be set to Color LCD, user may have created an off-color calibration setting.	Yes	If display profile is valid and the colors are still incorrect or missing go to step 3.	
	No	Set System Preferences: Displays: Color to Color LCD and retest.	
3. Verify that the glass panel is free of contaminants.	Yes	Go to step 4.	
	No	Clean glass panel using approved method. Retest.	
4. Run Clamshell Service Diagnostic utility and check for LCD panel presence. If not found, reseal and verify LVDS cable is secure to the logic board. Are colors restored?	Yes	Loose cable connection. Issue resolved.	
	No	Go to step 5.	
5. Set desktop pattern in System Preferences to 'Solid Gray Light'. Verify if incorrect/missing color issue affects entire display.	Yes	Test a known-good display, go to step 7.	
	No	Go to step 6.	
6. Set up display under test side by side with another known good display showing the same image. Verify if issue is noticeably worse on the display being tested.	Yes	Test a known-good display, go to step 7	<b>L02</b>
	No	Small variations in color uniformity are normal and do not warrant replacement or repair of the display.	





7. Substitute a known-good display assembly to test logic board video output. Is normal video restored?	Yes	Replace display assembly.	<b>L02</b>
	No	Replace logic board.	<b>M04</b>

### Deep Dive: Distorted/Blurred Image

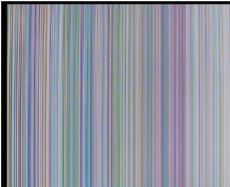

Check	Result	Action	Code
1. Sample image illustrates loss of LVDS data signals to LCD or a defective LCD panel. Inspect & reseal LVDS cable connection looking for damaged or bent pins. Is image restored with reseated cable connection?	Yes	Issue due to loose connection. Display issue resolved.	
	No	Go to step 2. If logic board connector damage, replace logic board.	<b>M24</b>
2. Substitute a known good display assembly to test logic board video output. Is normal video restored?	Yes	Replace display assembly.	<b>L04</b>
	No	Replace logic board.	<b>M04</b>



### Deep Dive: Pixel Anomalies

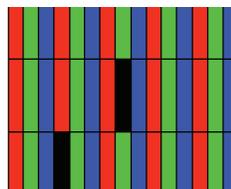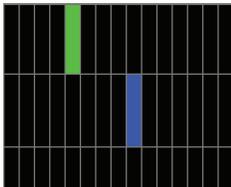

Check	Result	Action	Code
1. Determine if “defects” are dust/debris on surface of glass panel.	Yes	Clean glass panel.	
	No	Go to step 2.	
2. Determine if bright pixel defects exceed the acceptable number. See <a href="#">Display Issue: Pixel Anomalies</a> .	Yes	Replace display assembly.	<b>L08</b>
	No	LCD meets bright pixel defect specifications. Go to step 3.	
3. Determine if dark pixel defects exceed the acceptable number. See <a href="#">Display Issue: Pixel Anomalies</a> .	Yes	Replace display assembly.	<b>L08</b>
	No	LCD meets dark pixel defect specifications. Go to step 4.	
4. Determine if the combination of bright/dark pixel defects exceed the acceptable number. See <a href="#">Display Issue: Pixel Anomalies</a> .	Yes	Replace display assembly.	<b>L08</b>
	No	Explain to user that LCD is within specifications. Do not replace display assembly.	



## Deep Dive: Vertical/Horizontal Lines

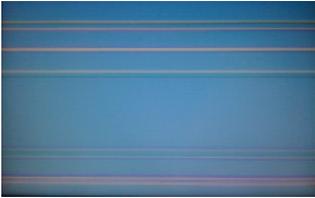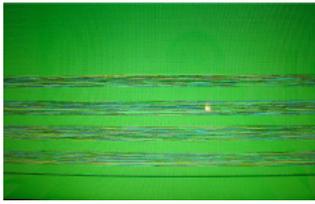

Check	Result	Action	Code
1. Horizontal lines may be related to a failing RAM module. Verify if video issue only happens AFTER the Apple logo and the spinning wheel has appeared.	Yes	Issue only happens AFTER Apple logo and spinning wheel appears. Go to step 2.	
	No	Issues happens since startup. Go to step 5.	
2. Start with shift key down (safe mode) to disable system extensions. Verify if issue still happens when booting in safe mode.	Yes	Go to step 5.	
	No	No video issue when booting in safe mode. Go to step 3.	
3. Isolate with only one memory module installed , then with the other one. Test with known-good memory. Verify that issue only happens with specific RAM module(s).	Yes	Replace affected RAM module.	<b>X02</b>
	No	Go to step 4	
4. Isolate with one known-good memory module installed in one of the memory slots. Repeat by testing in the other memory slot with known-good memory module. Verify that issue only happens with specific memory slot on logic board.	Yes	Replace logic board.	<b>M07</b>
	No	Go to step 5	
5. Run Clamshell Service Diagnostic utility and check for LCD panel presence. If not found, reseal the LVDS cable to the logic board video output. Is normal video restored?	Yes	Issue resolved by reseating loose LVDS cable..	
	No	Go to step 6	
6. Connect external compatible DisplayPort display (or DisplayPort adapter and display). Verify if correct video appears on external display.	Yes	Go to step 7.	
	No	Replace logic board	<b>M04</b>
7. Substitute a known-good display assembly module to test logic board LVDS video output. Is normal video restored?	Yes	Replace display assembly module.	<b>L05</b>
	No	Replace logic board.	<b>M04</b>



## Deep Dive: Non-uniform Brightness

Check	Result	Action	Code
1. Determine if brightness uniformity issue is visible after display has warmed up for 15 minutes.	Yes	Go to step 2.	
	No	Display backlight can take several minutes to stabilize.	
2. Check LVDS cable connection to logic board.	Yes	Reseat LVDS cable	
	No	Got to step 3	
3. Determine if variation in uniformity appears excessive when compared to another similar unit.	Yes	Replace display assembly.	<b>L07</b>
	No	Explain to user that LCD appears to meet specifications.	





## Defective Camera / Built-in iSight Not Operating Correctly

### Quick Check

Symptom	Quick Check
<b>Defective Camera</b> <ul style="list-style-type: none"> <li>• Camera not detected</li> <li>• No green LED for camera</li> <li>• Excessive blooming</li> <li>• Poor white balance</li> <li>• Poor focus</li> <li>• Green image</li> <li>• Image distortion</li> </ul>	<ol style="list-style-type: none"> <li>1. Check for Software Updates.</li> <li>2. Verify camera lens and glass panel are clear of contaminants.</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Launch System Profiler and confirm that "Built-in iSight" is listed under USB High-Speed Bus.	Yes	Camera recognized. Go to step 3	
	No	Go to step 2.	
2. Run Clamshell Service Diagnostic utility and check for all devices presence. If not found, inspect and reseat camera cable on logic board. Is iSight listed in System Profiler?	Yes	Camera recognized. Go to step 3.	
	No	Go to step 4.	
3. Launch PhotoBooth. Verify that camera's green LED is on and image appears normal.	Yes	Issue resolved..	
	No	Go to step 4.	
4. Substitute a known-good display assembly to test logic board camera connection. Is iSight camera operating properly?	Yes	Replace display assembly.	<b>X11</b>
	No	Replace logic board.	<b>M13</b>



## Blank / No Video

Unlikely cause: Power adapter, speakers, ODD/HDD, fan, microphone, top case

### Quick Check

Symptom	Quick Check
<b>Blank / No Video</b> <ul style="list-style-type: none"> <li>No video</li> <li>No backlight</li> </ul>	<ol style="list-style-type: none"> <li>Check brightness setting</li> <li>Attach known-good supported external display.</li> <li>Boot from Mac OS X install DVD that came with computer.</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Verify boot chime present when system restarted. Reset SMC and clear PRAM if necessary for proper start up. Is LCD video present?	Yes	Go to step 3.	
	No	Go to step 2.	
2. Connect known-good supported external display. Verify whether image appears on external display when system is booted.	Yes	External display detected by system. Go to step 3.	
	No	Go to No Video symptom code flow.	
3. Verify if LCD backlight is on by looking for faint glow from display when viewed in darkened room with brightness adjusted to full.	Yes	Video signal from system to external video is OK, LCD backlight is on. Go to step 5.	
	No	Go to step 4.	
4. Shine bright (low heat) flashlight into the front of LCD. Verify if an image is being displayed.	Yes	Image present but backlight is not on. Check logic board connections. Go to step 5.	
	No	Go to No Video symptom.	
5. Run Clamshell Service Diagnostic utility and check for LCD panel presence. If not found, reseal and verify that the display connections to the logic board are secure. Verify if image is restored after reseating loose connections	Yes	Issue resolved.	
	No	Continue to test with known-good display assembly. Go to step 6.	



6. Verify LCD video works with a known-good display assembly.	Yes	Replace display assembly.	L03
	No	Go to No Video symptom code flow.	

## Backlight Issue / No Backlight

Unlikely cause: Power adapter, battery, speaker, ODD/HDD, fan microphone, top case

### Quick Check

Symptom	Quick Check
<b>Backlight Issue / No Backlight</b> <ul style="list-style-type: none"> <li>• Display not illuminated</li> <li>• Flashing, unstable or non uniform background lighting</li> <li>• Poor backlight at some or all settings</li> </ul>	Check that brightness setting is above minimum.

### Deep Dive

Check	Result	Action	Code
1. Connect external display, clear PRAM to set brightness to default level and verify if Color LCD is listed in the System Profiler's Graphics/Displays device tree.	Yes	Display panel detected by system. Go to step 3.	
	No	Go to step 2.	
2. Run Clamshell Service Diagnostic utility and check for LCD panel presence. If not found, reseal the LVDS cable at the logic board. Repeat verification in System Profiler.	Yes	Display panel detected by system. Go to step 3.	
	No	Go to step 4.	
3. Darken room and verify backlight by detecting if any glow is emitted from the display	Yes	Backlight operating. Go to step 5.	
	No	Go to step 4.	



4. Swap memory with known-good memory to determine if video issue is ram related..	Yes	Reseat or replace defective memory	<b>X01</b>
	No	Go to step 5	
5. Inspect LVDS connectors and cable under magnification for pinched cables and damaged or bent pins. Do any of the connections appear to be defective?	Yes	Defective LVDS cable. Replace display assembly. Defective LVDS connector on logic board. Replace logic board.	<b>L09</b> <b>M25</b>
	No	If connections are OK and secure and the display is still blank, go to step 6.	
6. Substitute a known-good display assembly to test logic board video output. Is backlight and display text back to normal?	Yes	Replace display assembly.	<b>L09</b>
	No	Poor or no backlight LED Driver power at logic board. Replace logic board.	<b>M25</b>

## Noise / Unstable Flickering

Unlikely cause: Top case, battery

### Quick Check

Symptom	Quick Check
<b>Noise / Unstable Flickering</b> <ul style="list-style-type: none"> <li>Image flicker</li> <li>Audible noise</li> </ul>	<b>1.</b> Verify known-good source sound file not causing speaker distortion.

### Deep Dive

Check	Result	Action	Code
1. Verify if user's issue is due to video flickering coming from display.	Yes	Suspected flickering issue, go to step 2.	
	No	Audible noise issue, go to step 5.	



2. Verify display listed in the System Profiler's Graphics/Displays device tree is not disappearing intermittently (refresh System Profiler to observe).	Yes	Power and LCD panel ID are OK. Go to step 3.	
	No	Go to No Video symptom code flow.	
3. Inspect and reseal the LVDS cable and camera cable connection between display and logic board. Also test if brightness setting is a contributing factor. Has flickering stopped?	Yes	Loose cable connection. Issue resolved.	
	No	Go to step 4.	
4. Substitute a known good display assembly to test logic board video output. Has flickering stopped?	Yes	Replace display assembly.	<b>L06</b>
	No	Replace logic board.	<b>M04</b>
5. Verify source of noise is electrical, not mechanical. Audio noise should not be a concern since LCD components are all solid state devices including LED backlights.	Yes	Noises that are not audible from the normal user position are considered acceptable. Return unit to the user.	
	No	Noise from other source. Go to P04 Noise/Hum/vibration.	

## Mechanical/Physical Damage

### Quick Check

Symptom	Quick Check
<b>Mechanical/Physical Damage</b> <ul style="list-style-type: none"> <li>• Broken glass</li> <li>• Broken hinge</li> <li>• Stripped screw/head</li> <li>• Stripped screw boss</li> <li>• Dent or scratch to chassis</li> </ul>	<ol style="list-style-type: none"> <li>1. Determine damage caused by user/technician environment, accidental damage, or abuse.</li> <li>2. Inform user/technician the failures are not covered by Apple warranties. Refer to <a href="http://www.apple.com/legal/warranty">http://www.apple.com/legal/warranty</a></li> </ol>



## Cosmetic Defects

### Quick Check

Symptom	Quick Check
<b>Cosmetic Defects</b> <ul style="list-style-type: none"><li>• Cracked LCD</li><li>• Scorched or melted LCD</li><li>• LCD impact damage</li></ul>	<ol style="list-style-type: none"><li>1. Determine damage caused by user/technician environment, accidental damage, or abuse.</li><li>2. Inform user/technician the failures are not covered by Apple warranties. Refer to <a href="http://www.apple.com/legal/warranty">http://www.apple.com/legal/warranty</a></li></ol>

## Uncategorized Symptom

### Quick Check

Symptom	Quick Check
<b>Uncategorized Symptom</b> Unable to locate appropriate symptom code	Verify whether existing symptom code applies to the issue reported by the user. If not, document reported symptom and send feedback to <a href="mailto:smfeedback@apple.com">smfeedback@apple.com</a> stating that a suitable symptom code could not be found.



# Mass Storage

## Hard Drive Read/Write Issue

Unlikely cause: LCD, speakers, fan, camera, microphone

### Quick Check

Symptom	Quick Check
<b>Hard Drive Read/Write Issue</b> <b>Bad Sector/Defective Drive Formatting Issue</b> <ul style="list-style-type: none"> <li>• Cannot save documents</li> <li>• Read/Write error message</li> <li>• Hang when accessing or saving data</li> </ul>	<ol style="list-style-type: none"> <li>1. Boot from Install DVD. Verify S.M.A.R.T. status of drive using Disk Utility.</li> <li>2. Repair disk using Disk Utility.</li> <li>3. Erase disk and reinstall Mac OS using Installer.</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Start up from Restore DVD and launch Disk Utility. Is hard drive available for Disk Utility to repair?	Yes	Go to step 2.	
	No	Go to step 3.	
2. Did Disk Utility mount and repair hard drive successfully? Reseat hard drive if necessary.	Yes	Restart computer. Go to step 6.	
	No	If computer has not been verified with a known-good hard drive, go to step 3; otherwise, go to step 7.	
3. Substitute a known-good bootable hard drive, does system start up to desktop?	Yes	Reinstall user's drive, go to step 2.	
	No	Continue to use known-good bootable hard drive to determine root cause. Go to step 4.	



4. After reseating hard drive SATA and logic board connections, does known-good hard drive boot to desktop?	Yes	Reinstall user's drive, go to step 2	
	No	Suspect hard drive SATA cable, go to step 5.	
5. Replace hard drive SATA cable and retest with known-good hard drive.	Yes	Reinstall user's drive, go to step 2.	<b>X03</b>
	No	Replace logic board.	<b>M19</b>
6. Did user's hard drive start up successfully?	Yes	Issue resolved.	
	No	Repair or replace hard drive, go to step 7.	
7. Partition, erase & install Mac OS on user's hard drive. Did install complete without error and start up successfully?	Yes	Issue resolved	
	No	Hard drive appears to be defective, go to step 8.	
8. Replace user's hard drive. Does drive format correctly with a GUID partition map and install Mac OS without errors?	Yes	Issue resolved.	<b>H01</b>
	No	SATA cable verified or replaced and new hard drive installed, replace logic board.	<b>M19</b>

## Hard Drive Not Recognized/Not Mounting

Unlikely cause: LCD, speakers, fan, camera, microphone, AirPort

### Quick Check

Symptom	Quick Check
<b>Hard Drive Not Recognized/ Mount Drive No Boot</b> <ul style="list-style-type: none"> <li>Flashing question mark</li> <li>Boots to grey screen</li> <li>Boots to blue screen</li> </ul>	<ol style="list-style-type: none"> <li>Use a known-good mouse. Stuck mouse button will not allow boot.</li> <li>Boot from Install DVD. Verify S.M.A.R.T. status of drive using Disk Utility.</li> <li>Repair disk using Disk Utility.</li> <li>Erase disk and reinstall Mac OS using Installer.</li> </ol>



## Deep Dive

Check	Result	Action	Code
1. Boot from Restore DVD and launch Disk Utility. Is hard drive available for Disk Utility to repair?	Yes	Go to step 2.	
	No	Go to step 3.	
2. Did Disk Utility mount and repair hard drive successfully? Reseat hard drive if necessary.	Yes	Restart computer, go to step 6.	
	No	If computer has not been verified with a known-good hard drive, go to step 3; otherwise, go to step 7.	
3. Substitute a known-good bootable hard drive, does computer start up to desktop?	Yes	Install user drive, go to step 2.	
	No	Continue to use known-good bootable hard drive to determine root cause. Go to step 4.	
4. After reseating SATA and logic board connections, does known-good hard drive start up to desktop?	Yes	Install user drive, go to step 2.	
	No	Suspect hard drive SATA cable, go to step 5.	
5. Replace hard drive SATA cable and retest with known-good hard drive.	Yes	Install user drive, go to step 2.	<b>X03</b>
	No	Replace logic board.	<b>M19</b>
6. Did user's hard drive start up successfully?	Yes	Issue resolved.	
	No	Restore or replace user's hard drive, go to step 7.	
7. Partition, erase & install Mac OS on user's hard drive. Did install complete without error and start up successfully?	Yes	Issue resolved.	
	No	Hard drive appears to be defective. Go to step 8.	
8. Replace user's hard drive. Does drive format correctly with a GUID partition map and install Mac OS without errors?	Yes	Issue resolved.	<b>H01</b>
	No	SATA cable verified or replaced and new hard drive installed, replace logic board.	<b>M19</b>



## Hard Drive Noisy

Unlikely cause: LCD, speakers, fan, camera, microphone

### Quick Check

Symptom	Quick Check
<b>Hard Drive Noisy</b> <ul style="list-style-type: none"> <li>Noise during start up</li> <li>Noise during operation</li> <li>Noise when drive is copying or saving data</li> </ul>	<ol style="list-style-type: none"> <li>Start up from Install DVD. Verify S.M.A.R.T. status of hard drive using Disk Utility.</li> <li>Repair disk using Disk Utility.</li> <li>Check for reported noise and compare with Knowledge Base article "Apple Portables: Hard Drives and Noise" <a href="http://support.apple.com/kb/TS2354">http://support.apple.com/kb/TS2354</a></li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Boot from Restore DVD and launch Disk Utility. Is hard drive available for Disk Utility to repair?	Yes	Go to step 2.	
	No	Replace hard drive or go to H01 Drive not recognized/ mount.	
2. Repair disk using Disk Utility and verify it completed successfully	Yes	Restart computer. Go to step 3.	
	No	Go to step 4.	
3. Is hard drive still noisy?	Yes	Remove hard drive and start up from external drive to test fan noise. Go to step 6.	
	No	Issue resolved.	
4. Erase disk and reinstall Mac OS using Installer. Did process complete?	Yes	Restart computer. Go to step 3.	
	No	Replace hard drive. Go to step 5.	<b>H06</b>



5. After installing new hard drive, do you still have drive noise?	Yes	Remove hard drive and start up from external drive to test fan noise. Go to step 6.	
	No	Issue resolved.	
6. After removing hard drive, verify if the system is still noisy.	Yes	Fan noise or optical drive noise likely to be the cause. See ODD Noisy table and Fan failures/Thermal issues table.	
	No	Go to step 7.	
7. Install a known-good hard drive and verify if the noise level is similar to user's hard drive.	Yes	Hard drive noise level is similar to a known-good drive and does not require replacement.	
	No	Replace hard drive. Go to step 5.	<b>H06</b>

## Optical Drive Won't Accept/Reject Media

Unlikely cause: LCD, speakers, fan, camera, microphone

### Quick Check

Symptom	Quick Check
<b>Optical Drive Won't Accept/Reject Media</b> <ul style="list-style-type: none"> <li>• Cannot insert a disc into the drive</li> <li>• Cannot eject a disc placed into the drive</li> </ul>	<ol style="list-style-type: none"> <li>1. Use Apple System Profiler ATA section to see if the optical drive appears. If not, see Optical Drive Not Recognized.,</li> <li>2. Restart computer and hold down mouse button or keyboard eject key to cycle optical drive.</li> <li>3. Inspect optical drive slot for obstructions</li> </ol>



## Deep Dive

Check	Result	Action	Code
1. Is optical drive listed in the device tree for serial-ATA devices in System Profiler?	Yes	Optical drive has power, inspect disc acceptance. Go to step 5.	
	No	Inspect hardware. Go to step 2	
2. Verify all connections between logic board, flex cable, and optical drive are secure. Visually inspect cables and connectors for any debris, damage, or bent pins. Is optical drive now listed in System Profiler?	Yes	Optical drive has power, inspect disc acceptance. Go to step 5.	
	No	Replace any damaged cables and retest. If connections are good and with no visible cable damage, go to step 3.	<b>X03</b>
3. Disconnect user's optical drive by lifting SATA cable at logic board and connecting a known good optical drive assembly. Is optical drive now listed in System Profiler?	Yes	SATA port functional, reconnect user's optical drive & SATA cable. Go to step 4.	
	No	Replace logic board.	<b>M19</b>
4. Install and test user's optical drive with replacement SATA flex cable. Is optical drive now listed in System Profiler?	Yes	Cable change resolved issue.	<b>X03</b>
	No	Replace the optical drive. (Mechanical damage to optical drive, if found)	<b>J03</b> <b>(J06)</b>
5. Inspect optical drive slot for disc insert/eject. Is there clearance for disc use?	Yes	Go to step 6.	
	No	Replace damaged optical drive or system top case that interferes with disc use.	<b>J01</b> <b>(J05)</b> <b>X13</b>
6. Insert known-good disc and test user's optical drive for acceptance of disc. Does disc auto eject?	Yes	Replace the optical drive. (Mechanical damage to optical drive, if found)	<b>J03</b> <b>(J06)</b>
	No	Go to step 7.	
7. Does disc mount to desktop?	Yes	Go to Eject Test step 8.	
	No	Go to Optical Drive Read/Write Data Error troubleshooting page.	



8. Does disc eject properly from optical drive?	Yes	Issue resolved.	
	No	Replace optical drive or top case that interferes with disc ejection.	<b>J02 X13</b>
9. With replacement flex cable and interconnect board, is disc now recognized?	Yes	Issue resolved.	
	No	Replace optical drive. If drive has already been replaced, then replace logic board.	<b>J03</b>

## Optical Drive Read/Write Data Error

Unlikely cause: LCD, speakers, fan, camera, microphone

### Quick Check

Symptom	Quick Check
<b>Optical Drive Read/Write Data Error</b> <ul style="list-style-type: none"> <li>• Errors when writing optical media.</li> <li>• Errors when reading optical media.</li> <li>• Hang when accessing or preparing to write data.</li> </ul>	<ol style="list-style-type: none"> <li>1. Test optical media in another drive of the same type in same type of machine to rule out media issue.</li> <li>2. Check with known-good discs like the Install discs that came with the computer.</li> <li>3. For write issues, check with known-good media that performs well in another computer and optical drive of the same type.</li> <li>4. Check both CD and DVD media. If only one type of media is producing errors, there is a laser issue. (J99)</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Is media free to spin without optical drive scraping edge or surface of media?	Yes	Go to step 2.	
	No	Replace optical drive.	<b>J03</b>



2. Can optical drive read both CD and DVD known-good media?	Yes	Go to step 6	
	No	Reading CD only or DVD only indicates laser issue, replace optical drive.	<b>J03</b>
		Optical drive cannot read any media reliably, go to step 3.	
3. Reseat cable connections at logic board and optical drive. Verify that media is now recognized and reads reliably.	Yes	Reseat resolved issue.	<b>X03</b>
	No	Go to step 4.	
4. Disconnect optical drive by lifting SATA cable at logic board and connecting a known-good optical drive. Verify that media is now recognized and reads reliably.	Yes	SATA port functional, reconnect user's optical drive & SATA cable. Go to step 5.	
	No	Replace logic board.	<b>M19</b>
5. Install and test with replacement optical drive SATA flex cable. Verify that media is now recognized and reads reliably.	Yes	Cable change resolved issue.	<b>X03</b>
	No	Replace the optical drive. (Mechanical damage to optical drive, if found)	<b>J03 (J05)</b>
6. Test write data to compatible CD and DVD media. Verify burned media is recognized and reads reliably.	Yes	Issue resolved.	
	No	Replace the optical drive. (Mechanical damage to optical drive, if found)	<b>J03 (J06)</b>



## Optical Drive Not Recognized/Mount

Unlikely cause: LCD, speakers, fan, camera, microphone

### Quick Check

Symptom	Quick Check
<b>Optical Drive Not Recognized/Mount</b> <ul style="list-style-type: none"> <li>Discs inject and eject, but do not appear in Finder</li> </ul>	<ol style="list-style-type: none"> <li>Use Apple System Profiler ATA section to see if the optical drive appears.</li> <li>Serial-ATA section of Apple System Profiler will show any media inserted.</li> <li>Check Finder Preferences: General and make sure "CD's, DVD's and iPods" is checked under "Show these items on the Desktop."</li> <li>Check both CD and DVD media. If only one type of media is recognized, there might be a laser related issue. (J99)</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Is optical drive listed in the device tree for SATA devices in System Profiler?	Yes	Issue resolved.	
	No	Go to step 2.	
2. Verify all connections between logic board, flex cable, optical drive are secure. Visually inspect cables and connectors for any debris, damage, or bent pins. Is optical drive now listed in System Profiler?	Yes	Issue resolved.	
	No	Replace any damaged cables and retest. If connections are good and with no visible cable damage, go to step 3.	<b>X03</b>
3. Disconnect optical drive by lifting SATA cable at logic board and connecting a known-good drive. Is optical drive now listed in System Profiler?	Yes	SATA port functional, reconnect user's optical drive & SATA cable. Go to step 4.	
	No	Replace logic board.	<b>M19</b>
4. Install and test with replacement optical drive SATA flex cable. Is optical drive now listed in System Profiler?	Yes	Cable change resolved issue	<b>X03</b>
	No	Replace the optical drive. (Mechanical damage to optical drive, if found)	<b>J03 (J05)</b>



## Optical Drive Noisy

Unlikely cause: LCD, speakers, fan, camera, microphone

### Quick Check

Symptom	Quick Check
<b>Optical Drive Noisy</b> <ul style="list-style-type: none"> <li>Noise during boot</li> <li>Noise during operation</li> <li>Noise when drive is copying or writing data</li> </ul>	<ol style="list-style-type: none"> <li>Test optical media in another drive of the same type in same type of computer to rule out media issue.</li> <li>Check with known-good discs. Install discs that came with the computer.</li> <li>Check to see if noise occurs without media in the drive. If so, check for hard drive (H06) and fan (M18) caused noise.</li> </ol>

### Deep Dive

Check	Result	Action	Code
<b>1.</b> Is optical drive constantly seeking or cycling eject mechanism without an optical disc installed? Optical drive should perform only one reset sequence and rest idle, ready for media.	Yes	Continue and verify with media, go to step 2.	
	No	Replace optical drive if continuous activity occurs with no disc installed.	<b>J04</b>
<b>2.</b> Insert known good data CD. Is media free to spin without optical drive scraping edge or surface of media? Verify disc does not exceed maximum thickness specification.	Yes	Continue and verify with media, go to step 3.	
	No	Internal mechanical interference is affecting rotational spin of media, replace optical drive.	<b>J04</b>
<b>3.</b> Initial disc handling noise is normal. Disc spinning and head seek indicate disc is mounting to desktop. Seek noise should settle down once mounted. Is noise above normal and related to seek activity?	Yes	Replace optical drive.	<b>J04</b>
	No	Go to step 4.	



4. Disc spin should cease 30 seconds after mounting data CD on OS desktop. Is the noise related to disc spin?	Yes	Go to step 5.	
	No	Go to step 6.	
5. Remove the optical drive and check for the correct seating of the brackets on the optical drive and in the top case. Reinstall drive in unit and retest. Verify if drive is still noisy.	Yes	Go to step 6.	
	No	Issue resolved. Optical drive was not properly mounted in enclosure. (Possible physical damage to optical drive.)	<b>(J05)</b>
6. Eject known good data CD. Disc handling noise should be one pop of disc from motor hub and a motor gear sound driving disc out of optical drive. Is noise above normal and related to disc eject activity or multiple eject attempts?	Yes	Replace optical drive.	<b>J02</b>
	No	Go to step 7.	
7. Disc spin should cease 30 seconds after mounting data CD on desktop. Media may be mounting on a defective internal spindle hub. Is the noise related to disc spin?	Yes	Replace optical drive.	<b>J04</b>
	No	Noise does not appear to be related to optical drive.	



## Optical Drive Not Performing to Specs

Unlikely cause: LCD, speakers, fan, camera, microphone

### Quick Check

Symptom	Quick Check
<p><b>Optical Drive Not Performing to Specs</b></p> <p>Read or write speeds slower than expected.</p>	<ol style="list-style-type: none"> <li>1. Test optical media in another drive of the same type in same type of computer to rule out media issue.</li> <li>2. Check with known-good discs—Install discs that came with the computer.</li> <li>3. For disc write issues, check with known-good media that performs well in another computer and drive of the same type.</li> <li>4. Check both CD and DVD media. If only one type of media is producing errors, there might be a laser related issue. (J99)</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Can optical drive read both CD and DVD known-good media?	Yes	Go to step 5	
	No	Reading CD only or DVD only indicates laser issue, replace optical drive.	<b>J03</b>
		Optical drive cannot read any media reliably. Go to step 2.	
2. Reseat cable connections at logic board and optical drive. Verify that media is now recognized and reads reliably.	Yes	Reseat resolved issue.	<b>X03</b>
	No	Go to step 3.	
3. Disconnect optical drive by lifting SATA cable at logic board and connecting a known-good drive. Verify that media is now recognized and reads reliably.	Yes	SATA port functional, reconnect user's optical drive & SATA cable. Go to step 4.	
	No	Replace logic board.	<b>M19</b>



4. Install and test with replacement optical drive SATA flex cable. Verify that media is now recognized and reads reliably.	Yes	Cable change resolved issue.	<b>X03</b>
	No	Replace optical drive. (Mechanical damage to optical drive, if found)	<b>J03 (J05)</b>
5. Test write data to compatible CD and DVD media. Verify burned media is recognized and reads reliably.	Yes	Issue resolved.	
	No	Replace optical drive. (Mechanical damage to optical drive, if found)	<b>J03 (J06)</b>

## Uncategorized Symptom

### Quick Check

Symptom	Quick Check
<b>Uncategorized Symptom</b> Unable to locate appropriate symptom code	Verify whether existing symptom code applies to the issue reported by the user. If not, document reported symptom and send feedback to <a href="mailto:smfeedback@apple.com">smfeedback@apple.com</a> stating that a suitable symptom code could not be found.



# Input/Output Devices

## USB Port Does Not Recognize Known Devices

Unlikely cause: LCD, hard drive, optical drive

### Quick Check

Symptom	Quick Check
<b>USB Port Does Not Recognize Known Devices</b> USB-wired keyboard/mouse or USB flash drive not recognized	<ol style="list-style-type: none"> <li>1. Check the for latest software update.</li> <li>2. Use Apple System Profiler to verify the computer recognizes the USB bus.</li> <li>3. Test port with known good Apple keyboard or mouse.</li> <li>4. Verify any USB hubs have sufficient power.</li> </ol>

### Deep Dive

Check	Result	Action	Code
<b>1.</b> Reset SMC and clear PRAM. Was USB device recognized?	Yes	Issue resolved.	
	No	Go to step 2.	
<b>2.</b> Is USB device receiving power from USB port? Note: first device to need >500ma will get 1000ma, all others are limited to <500ma.	Yes	Go to step 3.	
	No	Replace logic board.	<b>M15</b>
<b>3.</b> Is the latest Mac-compatible USB software driver for this USB device installed?	Yes	Replace logic board.	<b>M15</b>
	No	Obtain Mac-compatible USB driver.	



## Built-in Keyboard Does Not Work Properly

Unlikely cause: LCD, hard drive, optical drive

### Quick Check

Symptom	Quick Check
<b>Built-in Keyboard Does Not Work Properly</b> <ul style="list-style-type: none"> <li>Keystrokes not recognized</li> <li>Locks up</li> <li>Displayed characters don't match</li> </ul>	<ol style="list-style-type: none"> <li>In System Preferences: International: Input Menu, enable Keyboard Viewer. Select Show Keyboard Viewer from the Input Menu in the menu bar. Test the keyboard.</li> <li>Confirm correct keyboard layout is selected.</li> <li>Update to the latest system software.</li> <li>Press Caps Lock, if the Caps Lock light goes on to show at least a partial connection to the main logic board.</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. If specific keys are not working, confirm if they are physically broken.	Yes	Refer to <a href="#">“MacBook/MacBook Pro: Black Keycap Replacement” (HT4002)</a> or <a href="#">“MacBook: White Keycap Replacement” (HT4003)</a> . If a keycap kit is available for this model, order kit and replace affected key(s).  Go to step 4.  If a keycap kit is not available for this model, replace complete top case.  Go to step 4.	<b>K01</b>
	No	Go to step 2.	
2. Reseat keyboard flex cable to logic board and verify that all keys are functional.	Yes	Issue resolved.	<b>X99</b>
	No	Go to step 3.	



3. Disconnect and verify that keyboard flex cable is in good condition (no delamination or torn cable end, no missing or cracked tracks).	Yes	Go to step 4.	
	No	Replace top case. Go to step 5.	<b>K01</b>
4. Reseat cable and check that flex cable end is fully inserted and aligned with connector on logic board, and that connector lock is closed. Verify that keyboard now functions properly. Reseat cable and verify with ASD that all keys are functional.	Yes	Issue resolved.	<b>K01</b>
	No	Replace top case. Go to step 5.	
5. Verify that all keys are functional using ASD.	Yes	Issue resolved.	<b>K01</b>
	No	Replace logic board.	<b>M15</b>

## Specific Keys Don't Work

Unlikely cause: power adapter, battery, speakers, LCD, ODD/HDD, fan, microphone

### Quick Check

Symptom	Quick Check
<b>Specific Keys Don't Work</b> <ul style="list-style-type: none"> <li>• Keycap broken</li> <li>• Key switch broken</li> <li>• Sticky key</li> <li>• Key pressed not recognized</li> </ul>	<ol style="list-style-type: none"> <li>1. Determine if damage caused by user/technician environment, accidental damage, or abuse.</li> <li>2. Inform user/technician the failures are not covered by Apple warranties. Refer to <a href="http://www.apple.com/legal/warranty">http://www.apple.com/legal/warranty</a></li> <li>3. Inspect keycap to remove debris trapped under it.</li> <li>4. If the keycap is loose, check if clasp is still intact and reattach it.</li> <li>5. Refer to "<a href="#">MacBook/MacBook Pro: Black Keycap Replacement</a>" (HT4002) or "<a href="#">MacBook: White Keycap Replacement</a>" (HT4003). If a keycap kit is available for this model, order kit and replace affected key(s). If a kit is not available, replace complete top case (code <b>K01</b>).</li> </ol>



## Built-in Trackpad Does Not Work

### Quick Check

Symptom	Quick Check
<b>Built-in Trackpad Does Not Work</b> <ul style="list-style-type: none"> <li>Cursor does not move.</li> <li>Select button of trackpad inoperable</li> <li>Multiple touch features inoperable</li> </ul>	<ol style="list-style-type: none"> <li>Check for environmental factors such as humidity, hand lotion or jewelry. Check if user is touching the trackpad simultaneously with both hands.</li> <li>Clean the trackpad surface (with the computer powered off) using a clean, dry, lint-free cloth.</li> <li>Make sure all software and firmware updates have been applied.</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Can you see the trackpad continuously listed on USB in Apple System Profiler?	Yes	Go to step 5.	
	No	Go to step 2.	
2. Does trackpad look damaged? Verify trackpad alignment is proper and click-depth set screw is at factory setting.	Yes	Replace trackpad according to symptom found. - No mouse/trackpad response - Trackpad cursor not tracking properly - Trackpad button issues Go to step 6.	K02 K12 K13
	No	Go to step 3.	
3. Reseat the trackpad flex cable to the logic board. Does trackpad work now?	Yes	Loose cable. Issue resolved.	
	No	Go to step 4.	
4. Is the trackpad connector on the logic board damaged?	Yes	Replace logic board.	M24
	No	Go to step 5.	
5. In System Preferences: Universal Access, turn off special Keyboard and Mouse & Trackpad settings. Set for normal use, enable and test multiple touch features. Does trackpad work now?	Yes	Settings issue resolved.	
	No	Go to step 6	



6. Does the select button click? Verify trackpad alignment is proper and click-depth set screw is at factory setting.	Yes	All trackpad issues resolved.	
	No	Go to step 7	
7. Does a known-good trackpad work?	Yes	Replace trackpad according to symptom found. - No mouse/trackpad response - Trackpad cursor not tracking properly - Trackpad button issues	K02 K12 K13
	No	Replace logic board.	M16

## Built-in Keyboard Has Dim or No Keyboard Backlight


Unlikely cause: LCD, hard drive, optical drive

### Quick Check

Symptom	Quick Check
<b>Built-in Keyboard Has Dim or No Backlight</b> <ul style="list-style-type: none"> <li>In darkened room, keyboard backlight does not come on or is dim.</li> </ul>	<ol style="list-style-type: none"> <li>Make sure this computer model has a keyboard backlight option by checking the configuration label in the battery bay.</li> <li>Make sure that keyboard backlight is turned on and brightness turned up.</li> <li>Block the ambient light sensor to simulate darkened room.</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Make sure the “illuminate keyboard in low light condition” option is checked in Keyboard System Preferences; then cover the ambient light sensor located on left of camera. Did the display dim?	Yes	Ambient light sensor is working. Go to step 4.	
	No	Go to step 2.	

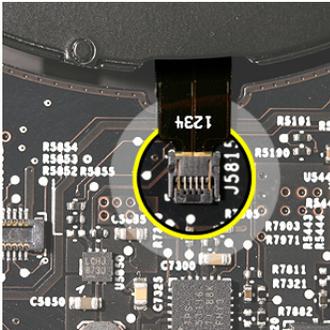

2. Cover the ambient light sensor again. Did the keyboard backlight work?	Yes	Issue resolved.	
	No	Go to step 3.	
3. In the Apple System Profiler, can you see the AirPort and Bluetooth cards?	Yes	The light sensor connection to logic board is likely good. Replace display assembly.	<b>L14</b>
	No	Go to step 4.	
4. Reseat the keyboard backlight connection to the logic board. Does the keyboard backlight work now?	Yes	Issue resolved.	
	No	Go to step 5	
5. Measure the voltage between pin 4 and pin 2 of the keyboard backlight connector J5815. Is there voltage present with the running system in a dark room?	Yes	Replace top case.	<b>K10</b>
	No	Replace logic board.	<b>M99</b>

## Built-in Keyboard Is Not Recognized

Unlikely cause: LCD, hard drive, optical drive

### Quick Check

Symptom	Quick Check
<b>Built-in Keyboard Is Not Recognized</b> <ul style="list-style-type: none"> <li>Keystrokes not recognized</li> </ul>	<ol style="list-style-type: none"> <li>Reset SMC.</li> <li>Press Caps Lock. If the Caps Lock light comes on that indicates at least a partial connection to the logic board.</li> <li>In System Preferences: International: Input Menu, enable Keyboard Viewer. Select Show Keyboard Viewer from the Input Menu in the menu bar. Test the keyboard.</li> </ol>



## Deep Dive

Check	Result	Action	Code
1. In Apple System Profiler do you see “Apple Internal Keyboard/Trackpad” listed under USB hardware devices?	Yes	Go to step 3.	
	No	Go to step 2.	
2. Reset SMC and verify if keyboard/trackpad is now seen in Apple System Profiler.	Yes	Go to step 3.	
	No	Replace logic board.	<b>M15</b>
3. Disconnect and verify that keyboard flex cable is in good condition (no delamination or torn cable end, no missing or cracked tracks).	Yes	Go to step 4.	
	No	Replace top case. Go to step 5.	<b>K11</b>
4. Reseat cable and check that flex cable end is fully inserted and aligned with connector on logic board, and that connector lock is closed. Verify that keyboard now functions properly.	Yes	Issue resolved.	
	No	Replace top case. Go to step 5.	<b>K11</b>
5. Verify that all keys are functional using ASD.	Yes	Issue resolved.	
	No	Replace logic board.	<b>M15</b>



## Built-in Trackpad Does Not Track Properly

Unlikely cause: LCD, hard drive, optical drive

### Quick Check

Symptom	Quick Check
<b>Built-in Trackpad Does Not Track Properly</b> <ul style="list-style-type: none"> <li>Cursor movement is random, uneven, or jumpy.</li> <li>Cursor hangs or stalls along path.</li> </ul>	<ol style="list-style-type: none"> <li>Check for environmental factors such as humidity, hand lotion or jewelry. Check if user is touching the trackpad simultaneously with both hands.</li> <li>Clean the trackpad surface (with the computer off) using a clean, dry, lint free cloth.</li> <li>Make sure all software and firmware updates have been applied.</li> <li>If the issue occurs when system is running from the power adapter, use a grounded power cord with the power adapter.</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Can you see the trackpad continuously listed under USB in Apple System Profiler?	Yes	Trackpad communicating to system. Go to step 5.	
	No	Go to step 2	
2. Does the trackpad look damaged?	Yes	Replace trackpad. Go to step 6.	<b>K02</b>
	No	Go to step 3.	
3. Reseat the trackpad flex cable on the logic board. Does the trackpad work now?	Yes	Loose cable. Issue resolved.	
	No	Go to step 4.	
4. Is the trackpad connector on the logic board damaged?	Yes	Replace logic board.	<b>M24</b>
	No	Go to step 5.	
5. In System Preferences: Universal Access, turn off special Keyboard and Mouse & Trackpad settings. Does trackpad work now?	Yes	Settings issue resolved.	
	No	Go to step 6.	



6. Does a known-good trackpad work?	Yes	Replace trackpad according to symptom found. - No mouse/trackpad response - Trackpad cursor not tracking properly - Trackpad button issues.	K02 K12 K13
	No	Replace logic board.	M16

## Apple Remote Inoperable

Unlikely cause: LCD, hard drive, optical drive

### Quick Check

Symptom	Quick Check
<b>Apple Remote Inoperable</b> <ul style="list-style-type: none"> <li>Remote is not recognized.</li> </ul>	<ol style="list-style-type: none"> <li>The computer is on and awake.</li> <li>Check with known-good remote on user's computer and the user's remote on known-good computer</li> <li>Remote is used within 30 feet of the computer and unobstructed line-of-sight to the IR window.</li> <li>Clean the IR window.</li> <li>Open System Preferences: Security pane. Verify that "Disable remote control infrared receiver" is not checked.</li> <li>In Security pane, if "Unpair" button is active, press it and pair the Apple Remote. See "Pairing your Apple Remote with your computer" (<a href="#">Knowledge Base HT1619</a>).</li> </ol>



## Deep Dive

Check	Result	Action	Code
1. Open Photo Booth or iChat's Video Preview window. Point Apple Remote at built-in iSight camera, press any button on remote, and verify that (as seen through the camera) a faint blinking light is on the remote.	Yes	Apple Remote works. Go to step 2.	
	No	Replace the remote's battery. Go to step 2.	
2. Verify that you can pair the Apple Remote with a known-good system?	Yes	Go to step 3.	
	No	Replace the Apple Remote. Go to step 3.	<b>X04</b>
3. Verify that Apple Remote now works.	Yes	Issue resolved.	
	No	Check and reseal IR/sleep LED board cable connection at logic board. Go to step 4.	
4. Does the Apple Remote now work?	Yes	Issue resolved.	
	No	Replace the hard drive front bracket (includes IR/sleep cable). Go to step 5.	
5. Does the Apple Remote now work?	Yes	Issue resolved.	<b>K99</b>
	No	Replace logic board.	<b>M15</b>

## Built-in Speaker Has No Audio

Unlikely cause: LCD, hard drive, optical drive

### Quick Check

Symptom	Quick Check
<b>Built-in Speaker Has No Audio</b> Can't hear any audio from within the machine.	<ol style="list-style-type: none"> <li>1. Make sure all software updates have been applied.</li> <li>2. Check in System Preferences: Sound: Output that sound output is set to "Internal Speakers"</li> <li>3. Use the F12 volume key to set the sound to maximum.</li> <li>4. Reset PRAM.</li> </ol>



## Deep Dive

Check	Result	Action	Code
1. Check System Preferences: Sound: Output and verify that no external speakers, "Digital Out," or headphones are being reported connected when there is none present.	Yes	Audio-out port is not damaged. Go to step 3.	
	No	Go to step 2	
2. With known-good headphone or speakers, plug in the audio output jack for several cycles. Verify that you get audio through external headphones/speakers when connected.	Yes	Go to step 4	
	No	Reseat the speaker connectors to logic board. Go to step 3.	
3. Verify that you now get audio through internal speakers .	Yes	Issue resolved.	
	No	Replace logic board.	<b>M09</b>
4. Disconnect known-good headphones or speakers. Verify that you now get audio through internal speakers.	Yes	Issue resolved.	
	No	Replace affected speaker(s).	<b>X08</b>

## Distorted Sound from Internal Speaker

Unlikely cause: LCD, hard drive, optical drive

### Quick Check

Symptom	Quick Check
<b>Distorted Sound from Internal Speaker</b> <ul style="list-style-type: none"> <li>Distorted audio</li> </ul>	<ol style="list-style-type: none"> <li>Reset PRAM.</li> <li>Adjust sound output and level in System Preferences: Sound: Output, and use the Balance to locate a left, right, or woofer speaker distortion source.</li> <li>Compare the same sound and same settings against another unit to make sure the sound is actually distorting.</li> </ol>



## Deep Dive

Check	Result	Action	Code
1. Comparing internal speakers with headphones, is the distortion on both headphones and speakers?	Yes	Audio source or gain issue. Reset PRAM, adjust sound level in System Preferences: Sound: Output, and retest with known-good audio source and external speakers. Go to step 5.	
	No	Internal speaker issue. Go to step 2.	
2. Use the Sound Output system preference to test the left and right speakers. If lower bass notes are distorted, right speaker/subwoofer may be defective. Are all speakers free of distortion, sounding clear and loud?.	Yes	Issue resolved.	
	No	Adjust volume to test full range of volume settings. Go to step 3.	
3. Is affected speaker cable properly inserted and free from damage?	Yes	Go to step 4.	
	No	Reseat speaker cable or replace damaged speaker. Go to step 5.	<b>X09</b>
4. Is affected speaker membrane free from dust or debris, and speaker membrane is not deformed/damaged?	Yes	Go to step 5.	
	No	Clean any dust or debris. Go to step 5. If membrane is damaged, replace the bad speaker(s).	<b>X09</b>
5. Verify that speaker enclosure is not damaged, correctly installed in system, and does not create unneeded vibration when sound is played.	Yes	Speaker housing and installation is good. Go to step 6.	
	No	Properly install or replace affected speaker. Go to step 6.	
6. Verify that internal speakers no longer produce distorted sound.	Yes	Issue resolved.	<b>X09</b>
	No	Replace logic board.	<b>M09</b>



## Express Card Will Not Insert Into Slot

Unlikely cause: LCD, MLB, hard drive

### Quick Check

Symptom	Quick Check
<p><b>ExpressCard will not insert into ExpressCard Slot</b></p> <p>ExpressCard does not fully seat into the slot</p> <p>Slot door does not open completely</p>	<ol style="list-style-type: none"> <li>1. The card must be a 34mm wide card with the top side oriented up and not be warped or damaged.</li> <li>2. Clear any obstruction in the slot.</li> </ol>

### Deep Dive

Check	Result	Action	Code
1. Is the slot cover opening properly?	Yes	.Go to step 3	
	No	Re-seat the ExpressCard Cage and inspect the slot cover. Go to step 2.	
2. Does the slot cover open properly after the adjustments?	Yes	Issue resolved.	
	No	Replace top case.	<b>X13</b>
3. Can the ExpressCard slide completely into the slot?	Yes	Issue resolved.	
	No	Re-seat the ExpressCard Cage with the card already installed in the card cage.. Go to step 4.	
4. Ejecting the ExpressCard and re-inserting it, does it completely slide into the slot?	Yes	Issue resolved.	<b>X13</b>
	No	Replace the ExpressCard Cage.	<b>M17</b>



## Express Card Not Recognized By System

Unlikely cause: LCD, MLB, HDD/ODD

### Quick Check

Symptom	Quick Check
<p><b>ExpressCard is not recognized by the system.</b></p> <p>Card does not show up on the desktop or in System Profiler</p>	<ol style="list-style-type: none"> <li>1. Check correct drivers are installed for the ExpressCard.</li> <li>2. Verify with known good USB and PCI Express based ExpressCards that the slot is good.</li> </ol>

### Deep Dive

Check	Result	Action	CSC
1. Does the ExpressCard cable connection to the main logic board look secure?	Yes	Go to step 3	
	No	Re-seat the ExpressCard Cage cable connection. Go to step 2.	
2. Is the card recognized?	Yes	Bad connection. Issue resolved.	<b>X04</b>
	No	Go to step 3	
3. Does the ExpressCard cage look damaged (connector or cage)?	Yes	Replace the ExpressCard cage. Go to step 5	
	No	Remove the ExpressCard cage, install an ExpressCard (one fits completely inside), then re-installed the card cage. Go to step 4.	
4. Is the card recognized?	Yes	Card cage mounting issue. Issue resolved.	<b>X99</b>
	No	Replace the ExpressCard cage. Go to step 5	<b>X13</b>
5. Is the card recognized?	Yes	Bad ExpressCard cage. Issue resolved.	<b>X13</b>
	No	Replace the logic board.	<b>M17</b>



## FireWire Port Not Recognizing Known Devices

Unlikely cause: LCD,HDD/ODD

### Quick Check

Symptom	Quick Check
<b>FireWire Port is not recognizing known devices</b>  Attached FireWire device like digital camera or mass storage drive not recognized by the system	<ol style="list-style-type: none"> <li>1. Check for latest software update.</li> <li>2. Use Apple System Profiler to verify the computer recognizes the FireWire bus.</li> <li>3. Test port by connecting to another computer using FireWire Target Disk Mode.</li> <li>4. Verify the FireWire cable is good.</li> <li>5. Verify a self powered FireWire device is getting power</li> </ol>

### Deep Dive

Check	Result	Action	Code
After resetting SMC, was the FireWire Port recognized?	Yes	Issue resolved.	
	No	FireWire port is bad. Replace main logic board.	<b>M12</b>

## Uncategorized Symptom

### Quick Check

Symptom	Quick Check
<b>Uncategorized Symptom</b>  Unable to locate appropriate symptom code	Verify whether existing symptom code applies to the issue reported by the customer. If not, document reported symptom and send feedback to <a href="mailto:smfeedback@apple">smfeedback@apple</a> stating that a suitable symptom code could not be found.




# Mechanical Issues: Thermals and Enclosure

## Reset/Power Button Stuck

Unlikely cause: LCD, hard drive, optical drive

### Quick Check

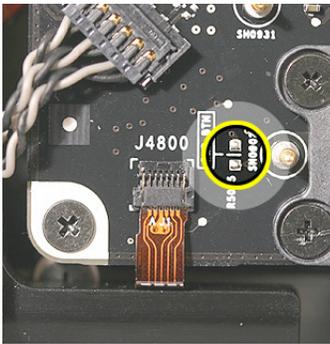

Symptom	Quick Check
<b>Reset/Power Button Stuck</b> <ul style="list-style-type: none"> <li>System will not power on</li> <li>System sounds bootROM unlock tone during startup</li> <li>System automatically starts up repeatedly</li> </ul>	<ol style="list-style-type: none"> <li>Diagnose stuck button with SMC keyboard reset sequence</li> <li>Inspect keyboard connection to logic board.</li> <li>Try logic board power-on pads to determine open or closed power-on key. Closed circuit will not allow on-board switch to work.</li> <li>If stuck down or closed, remove keyboard cable from logic board and try on board switch again to determine if top case is defective.</li> <li>If logic board will not power on with keyboard cable removed, troubleshoot no power/no boot.</li> </ol>

### Deep Dive

Check	Result	Action	Code
<ol style="list-style-type: none"> <li>Reset SMC using keyboard 3 keys and power-on key. MagSafe LED can verify SMC reset. Momentary stop of battery charging will indicate SMC reset, orange LED will go green momentarily then return to orange.</li> </ol>	Yes	Keyboard reset works while holding 3 keys and toggling power-on key, multiple press and release of power-on key works to show power-on key not stuck or fixed.	
	No	SMC keyboard reset not working, suggests power-on key is open circuit or stuck down. Go to step 2.	



2. Remove battery and AC power for 30 seconds to perform a manual SMC reset. Apply AC power. Does power-on key work when pressed?	Yes	SMC restored from power removal sequence. Power-on key now working properly.	
	No	Power-on key stuck or open. Go to step 3.	
3. Inspect keyboard flex cable for loose or damaged connections. Align and reseat to flex cable to ensure proper connections. Does power-on key now work correctly?	Yes	Cable reseat restored power-on key operation.	
	No	Power-on key still stuck or open. Go to step 4.	
4. Use conductive tool to assert power on by touching power-on switch pads on logic board.	Yes	System powers on suggests top case power on key circuit is open. Replace top case.	<b>X14</b>
	No	Power-on key circuit may be closed suggesting a stuck power-on key. Go to step 5.	
5. Disconnect the internal keyboard flex cable and assert power-on switch pads on logic board. Removing top case power-on key from circuit should free on-board switch to work properly.	Yes	On board power-on switch pads now starts the system. Replace top case due to stuck power-on key.	<b>X14</b>
	No	Go to M01: No power/ not booting	

## System Runs Hot

Unlikely cause: LCD, hard drive, optical drive

### Quick Check

Symptom	Quick Check
<b>System Runs Hot</b> <ul style="list-style-type: none"> <li>System feels very warm</li> <li>Fan(s) not working</li> <li>Fan(s) are full on</li> </ul>	<ol style="list-style-type: none"> <li>Verify the computer operating on a flat, hard surface and the vents are not blocked.</li> <li>Verify the computer is not running hotter than expected for normal operation. If possible, compare to a similarly configured computer.</li> <li>Reset SMC.</li> <li>Inspect fan performance</li> <li>Run thermal sensor test.</li> </ol>



## Deep Dive

Check	Result	Action	Code
1. Is the system running as expected (compared to similar system)?	Yes	Use “Apple Portables: Operating Temperature” ( <a href="#">Knowledge Base HT1778</a> ) to inform user it is operating normally.	
	No	Go to step 2.	
2. Are there runaway applications? See “Runaway applications can shorten battery run time” ( <a href="#">Knowledge Base TS1473</a> ).	Yes	Check with the vendor for compatibility and software update.	
	No	Go to step 3.	
3. Fans are typically on at minimum speed. Perform SMC reset or remove all power for 15 minutes. Is the fan(s) running properly?	Yes	Go to step 5.	
	No	Fan(s) not running or always running at full speed. Go to step 4.	
4. Reseat fan connection to logic board or test a known-good fan. Replace a fan that is not spinning or replace logic board that is not spinning a known-good fan. Is fan(s) working properly?	Yes	Reseating or replacing bad fan resolved issue. Replace logic board if it does not work with known-good fan.	<b>X99 or M18</b>
	No	Go to step 5.	
5. Is the heatsink installed properly with no damage to heat fins?	Yes	Go to step 7.	
	No	Replace missing screws or damaged heatsink. Go to step 6.	
6. Is the system running as expected?	Yes	Heatsink installed incorrectly. Issue resolved.	<b>X10</b>
	No	Go to step 7.	
7. Heatsink thermal grease possibly missing or improperly installed during previous repair?	Yes	Replace heatsink or install thermal grease.	<b>X10</b>
	No	Go to step 8.	



8. Inspect and reseal connections to thermal sensors throughout the system, run test for sensor monitoring.	Yes	Thermal module or other sensor reseal resolved issue.	<b>X99</b>
	No	Replace logic board if sensor error. Go to step 9.	
9. After logic board replacement, is the computer running as expected?	Yes	Bad logic board. Issue resolved.	<b>M23</b>
	No	Use minimum configuration troubleshooting to isolate the issue.	

## Uncategorized Symptom

### Quick Check

Symptom	Quick Check
<b>Uncategorized Symptom</b> Unable to locate appropriate symptom code	Verify whether existing symptom code applies to the issue reported by the user. If not, document reported symptom and send feedback to <a href="mailto:smfeedback@apple.com">smfeedback@apple.com</a> stating that a suitable symptom code could not be found.

---

 **Apple Technician Guide**

**Take Apart**

---

**MacBook Pro (17-inch, Early 2009)**



# General Information

## Vertical Insertion (JST)


- Use black stick under cable to remove.
- Keep connector level to board when disconnecting and reconnecting.
- Press evenly when reconnecting or connector can be tipped up and not fully seated.

Examples:

- fan cables
- heatsink sensor, if provided
- right speaker
- left speaker and microphone on underside of board

## Connector Types on Logic Board

On the logic board are six types of connectors, each requiring special handling. Make sure you read these tips before disconnecting and installing the connectors.

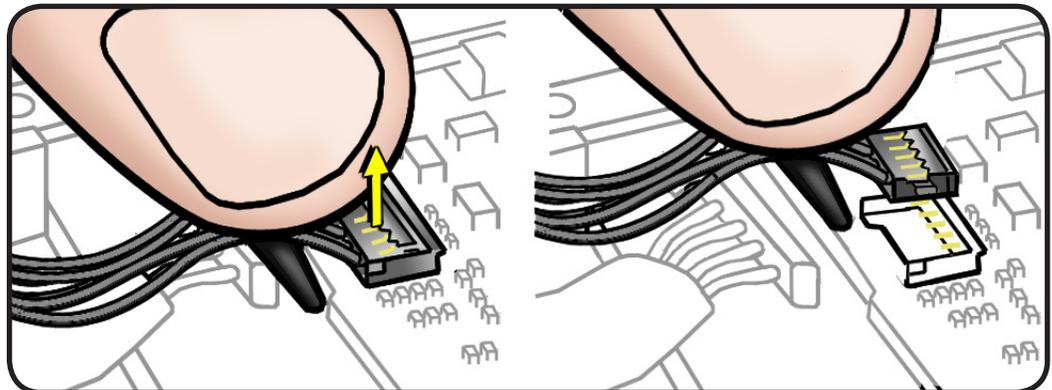


## Locking Lever

- Flip up lever 90 degrees for removal.
- Slide connector into receptacle on same horizontal plane as board.
- Lock down lever after inserting cable.

Examples:


- IR/SIL flex cable
- keyboard backlight flex cable
- Express Card cable

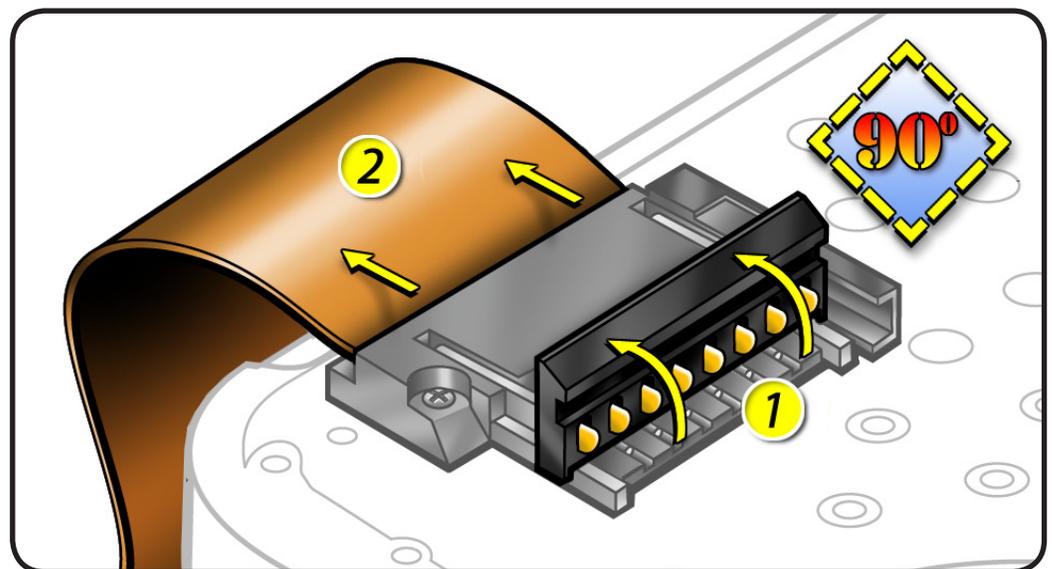



- BIL cable
- keyboard flex cable

**Caution:** Use black stick to push the keyboard flex cable **all the way** into connector to prevent “no power” symptoms.

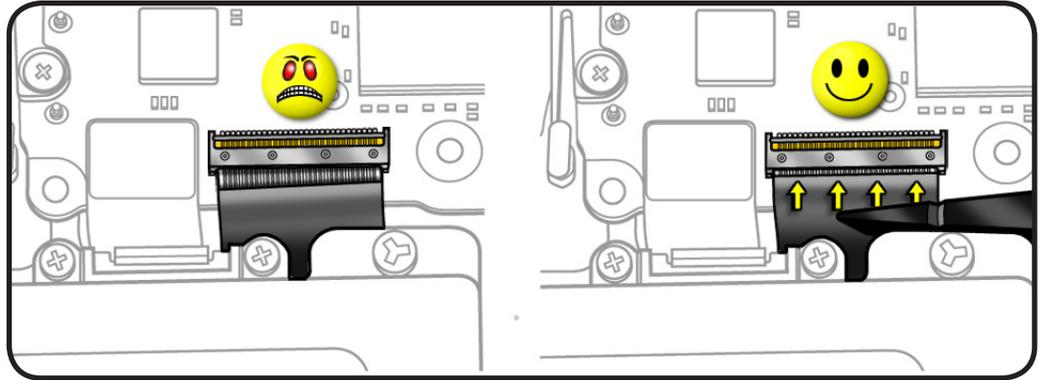


### Horizontal Install

- Pull connector, not cable, to remove.
- Slide connector into receptacle on same horizontal plane as board.

Examples:

- MagSafe cable on underside of board
- battery power cable on underside of board


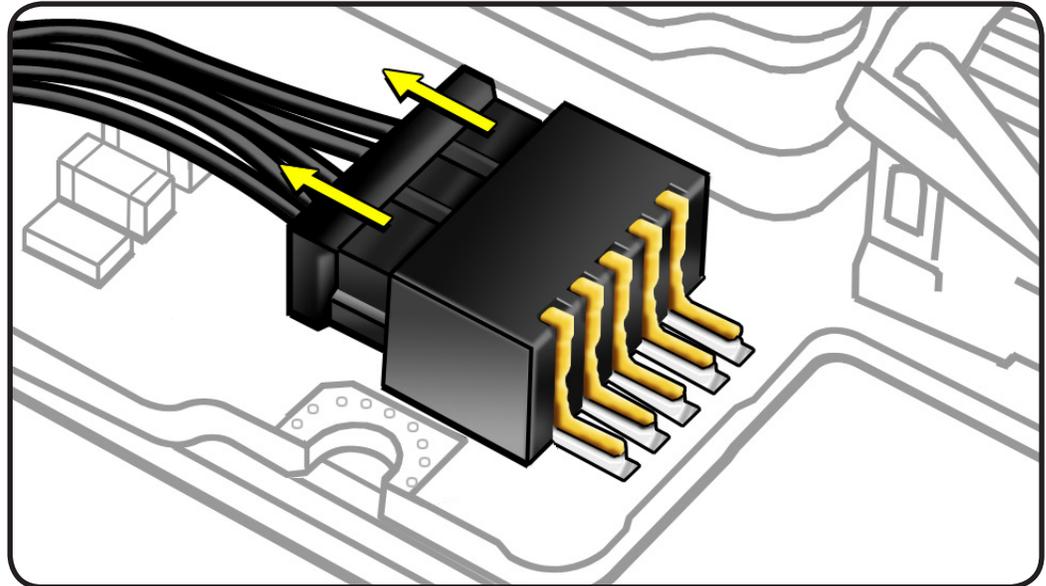


### Thin, Multi-Pin Horizontal Insert

- Use fingernails or tweezers to remove evenly.
- Slide connector into receptacle on same horizontal plane as board.

Examples shown:


- LVDS cable with lock bar
- camera cable

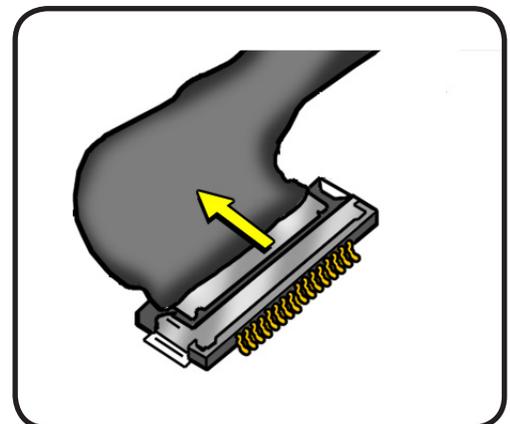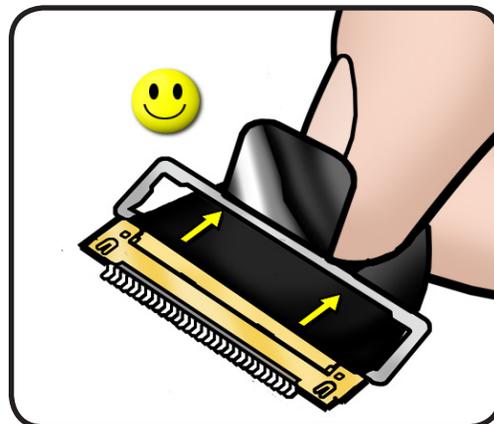




**Replacement Caution:**

When connecting cables, make sure they are fully connected. For the camera cable, place shim behind connector so it helps secure the cable.

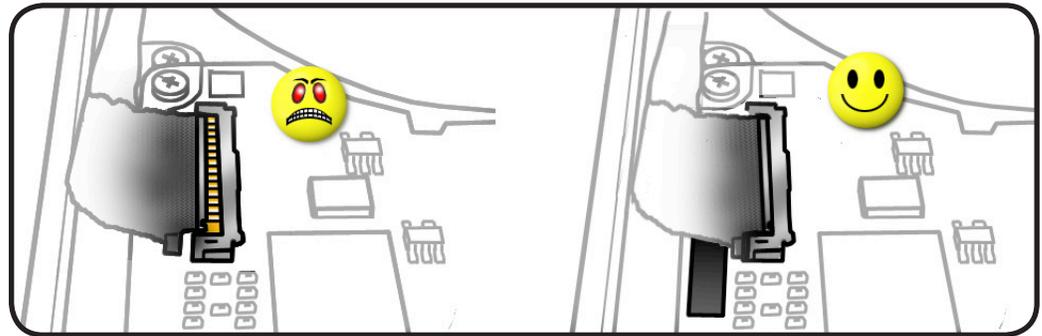

**Replacement Caution:** To

prevent no video or a short to the logic board, be sure to place EMI gasket on camera cable—positioned precisely where shown—**after** cable is fully connected to logic board and shim is in place.

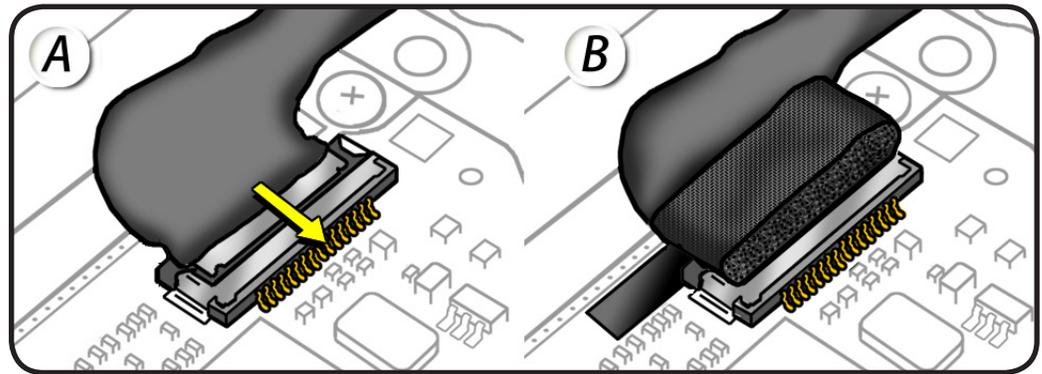


**Caution:** When disconnecting camera cable, remove gasket and shim **before** disconnecting cable.

**Caution:** Avoid touching shim adhesive; body oils degrade adhesive.

**Low-Profile Solid Platform Flex**

- Use black stick and gentle rocking motion to release tension to remove cable.
- Keep connector level to board and press evenly on platform to install.

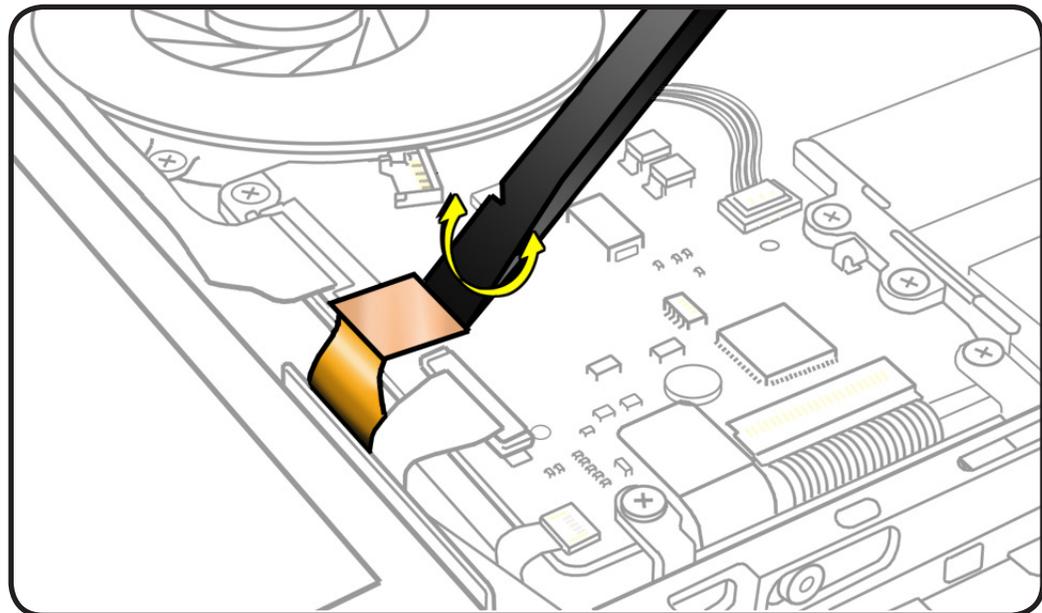

Examples:

- optical drive flex cable
- trackpad flex cable
- hard drive connector



## Icon Legend

The following icons are used in this chapter:

Icon	Meaning
	Warning or Caution
	Check mark; make sure you do this
	Do not touch

## Temperature Concerns

The normal operating temperature of this computer is well within national and international safety standards. Nevertheless, customers may be concerned about the generated heat. To prevent an unneeded repair, you can compare a customer's computer to a running model, if available, at your repair site. For more information on temperature concerns and customer perception, refer to Knowledge Base article 30612 "Apple Portables: Operating Temperature."

<http://docs.info.apple.com/article.html?artnum=30612>

## Replacement Steps

When there are no replacement steps listed, replace parts in the exact reverse order of the Removal procedure.

## Screw Sizes

All screw sizes shown are approximate and represent the total length of the screw.




# Bottom Case

## First Steps



Warning:


- Shut down computer.
- Wait 10 minutes
- Unplug all cables.
- Put on ESD strap.

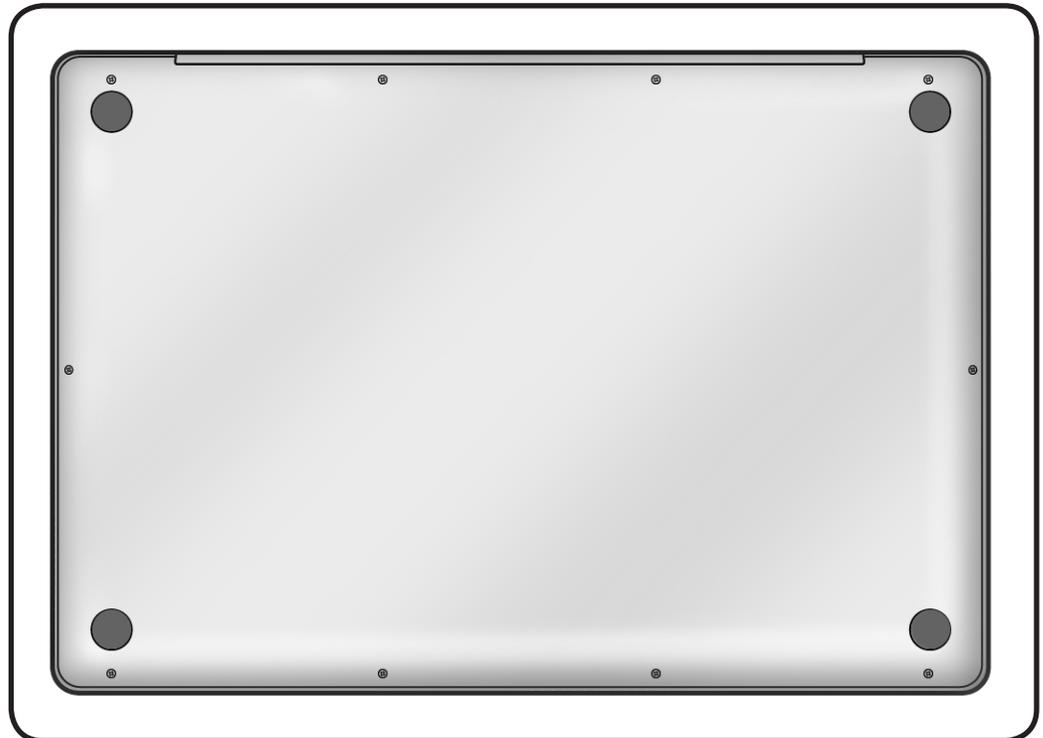

## Tools

Clean, soft, lint-free cloth


- ESD wrist strap and mat
- Magnetized Phillips #00 screwdriver
- Black stick
- Magnifying glass

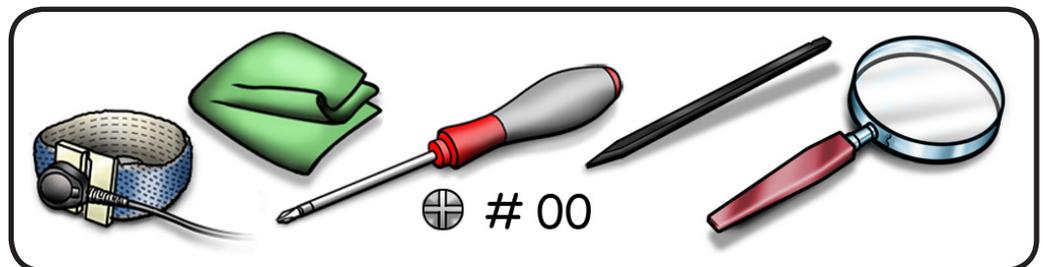




## Removal

**Caution:** To prevent scratches, use a protective cloth when working with metal tools.

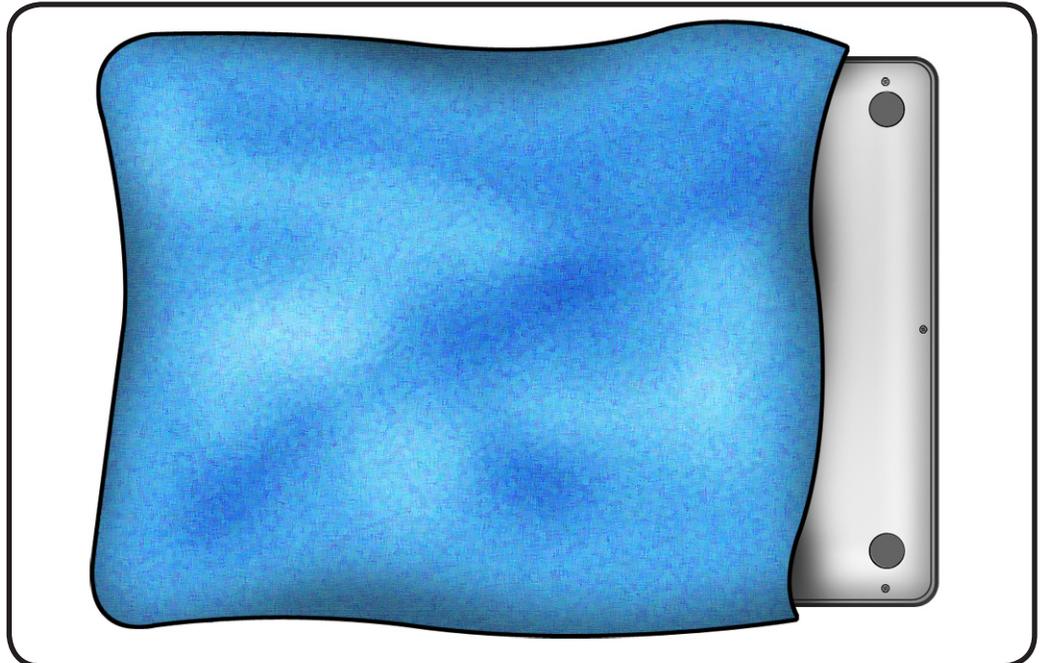

**1 Important:** The screws at the sides and front of the computer must be removed and installed at an angle.

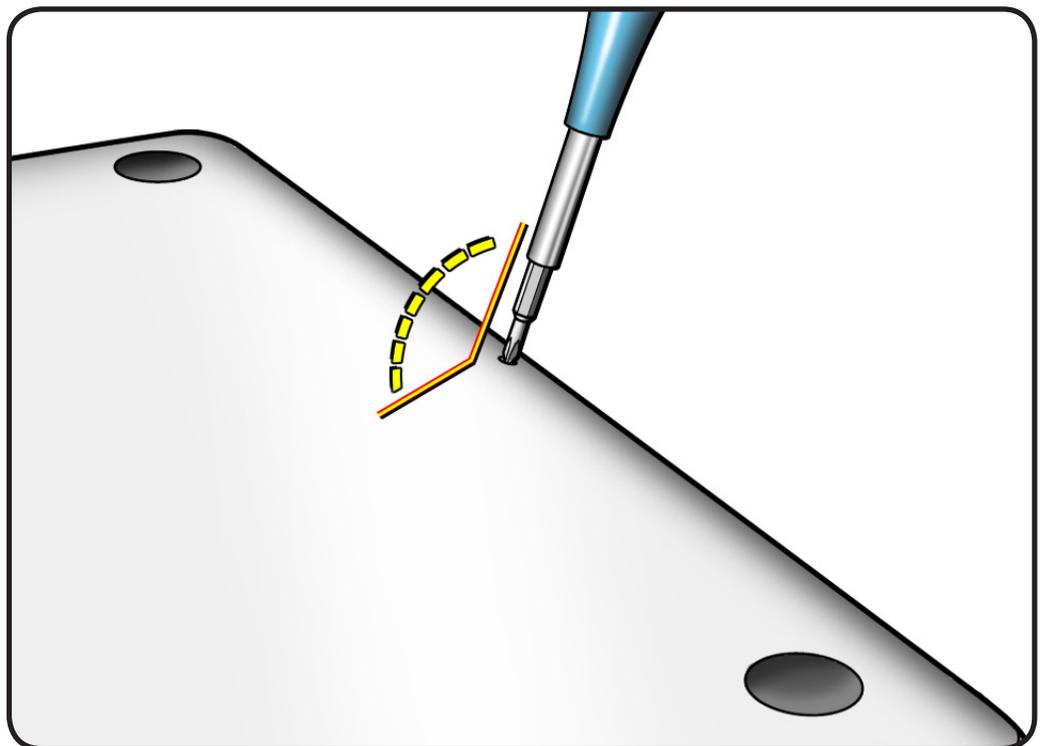




**2** Remove 10 screws:

- 3 (13.5 mm) 922-8985
- 7 (3 mm) 922-8986

**Replacement Note:** Install screws in the order shown.

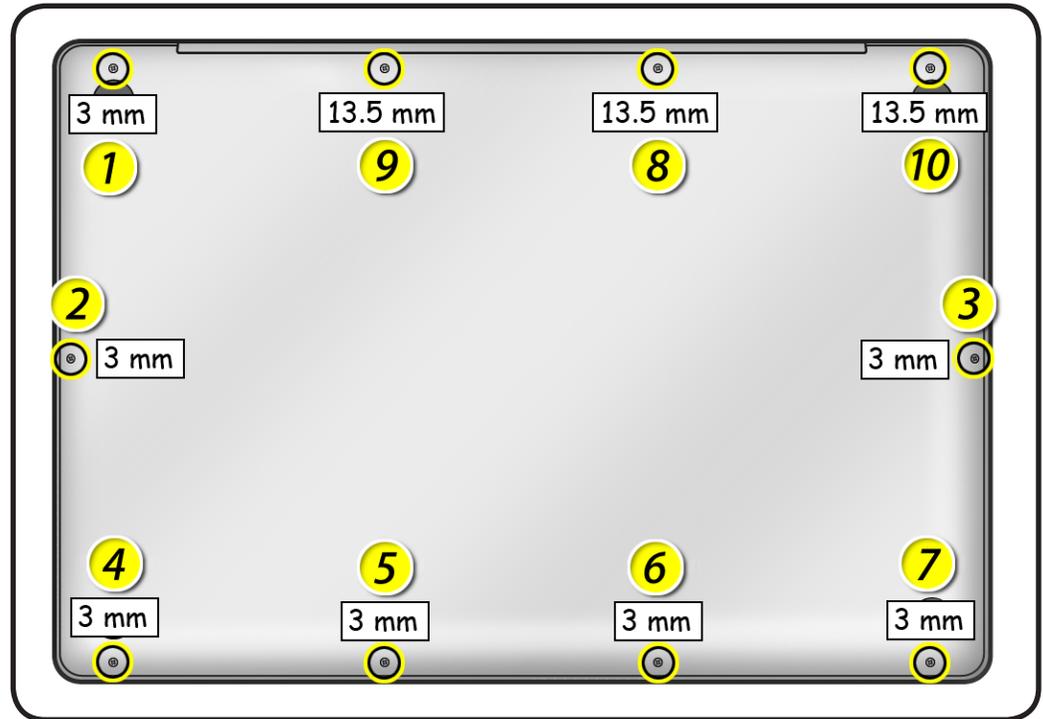


**3** Use black stick to loosen and remove bottom case.






- 4 Warning:** If performing any other repairs, be sure to disconnect the battery cable by its pull-tab.

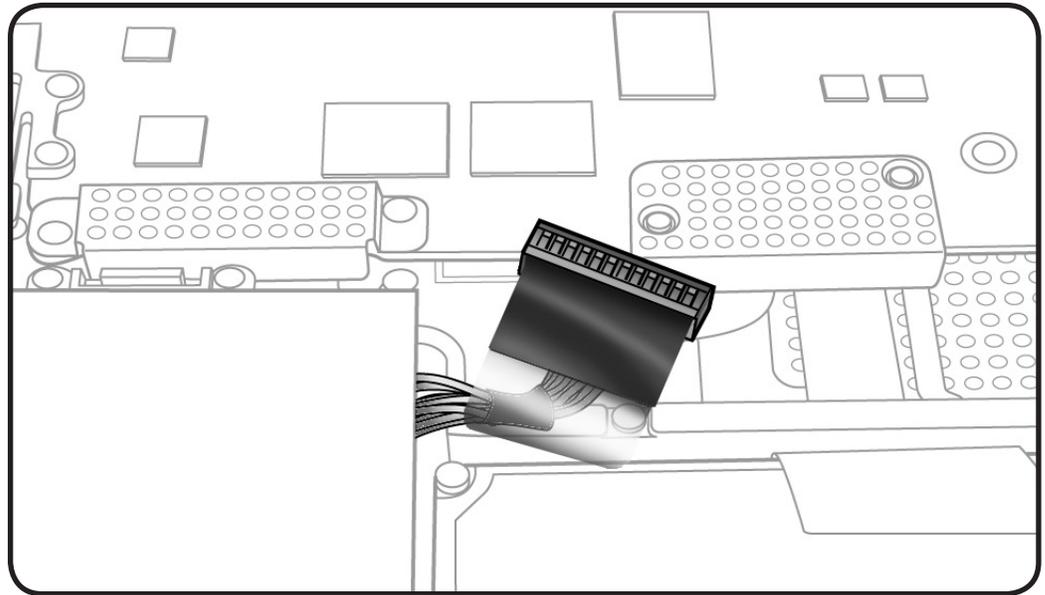


## Replacement

- 1** When replacing a bottom case, retain the customer's bottom case until the repair is complete. Before installing the replacement bottom case, write the serial number on the inside of the new bottom case. You might need a magnifying glass to read it. Refer to [Transferring the Serial Number](#).

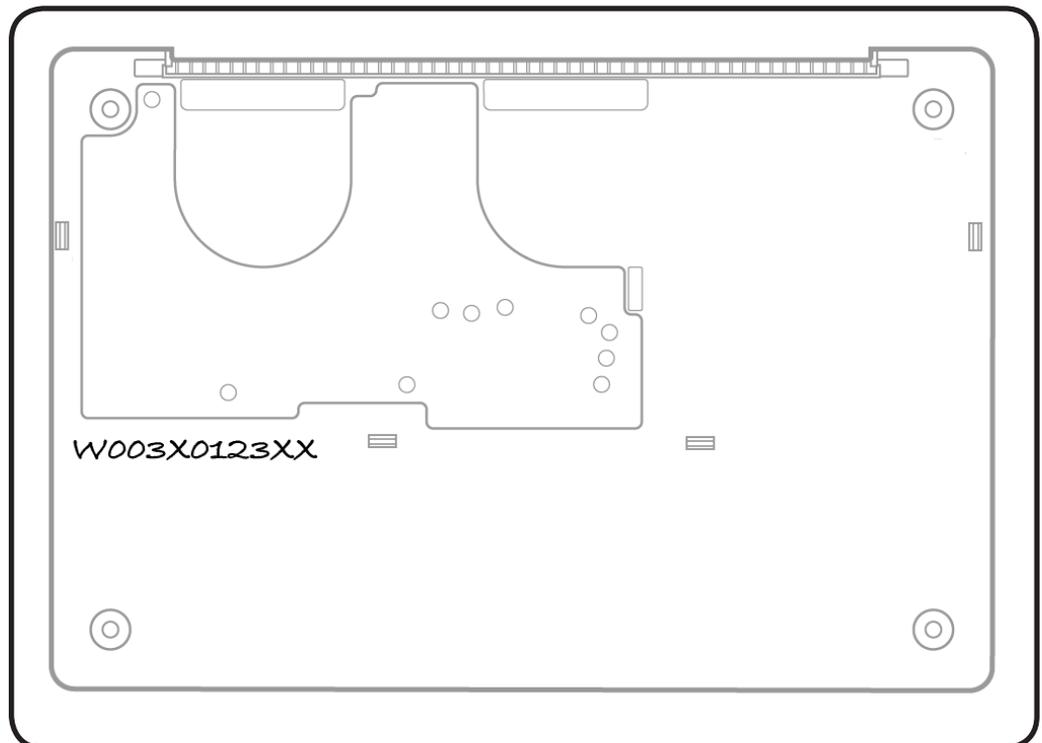



- 2** Install bottom case so that 4 clips snap onto top case.

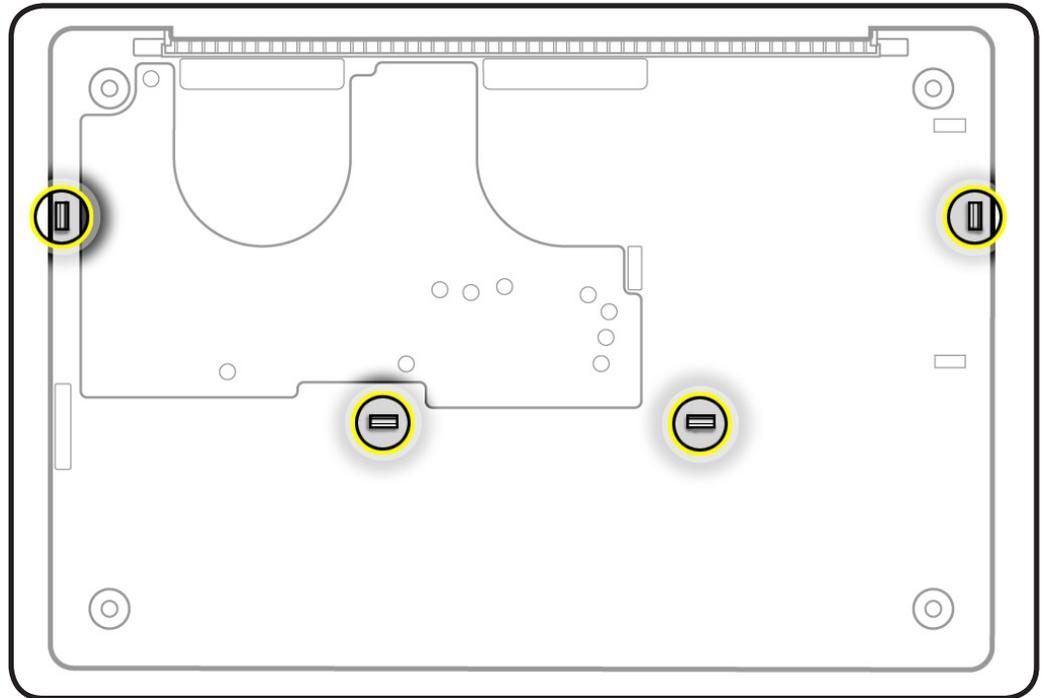



# Battery


## First Steps

Remove:

- [Bottom case](#)




Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

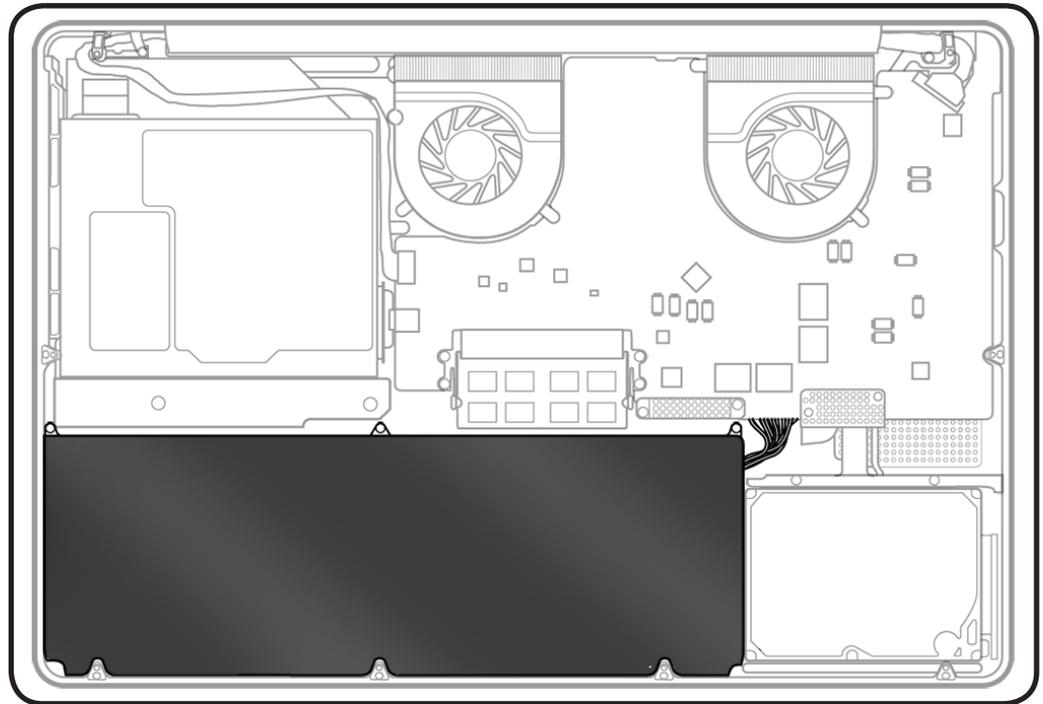

## Tools

- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Black stick
- Large tri-lobe #0 screwdriver (922-8991)

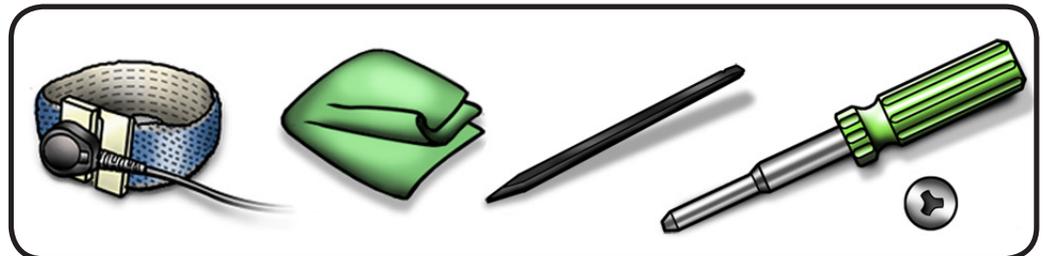





## Removal


**Important:** Battery removal is only required when replacing the battery or the top case. Other internal repairs require disconnecting the battery cable but not removing the battery.



- 1 Use pull-tab to disconnect battery cable.

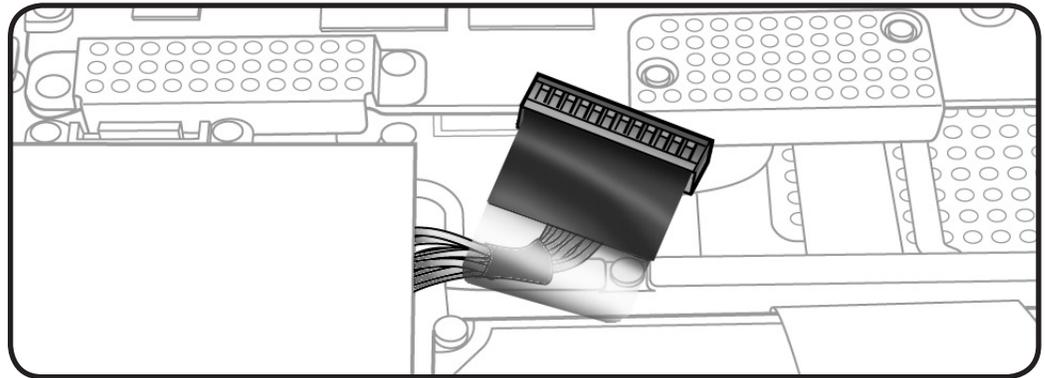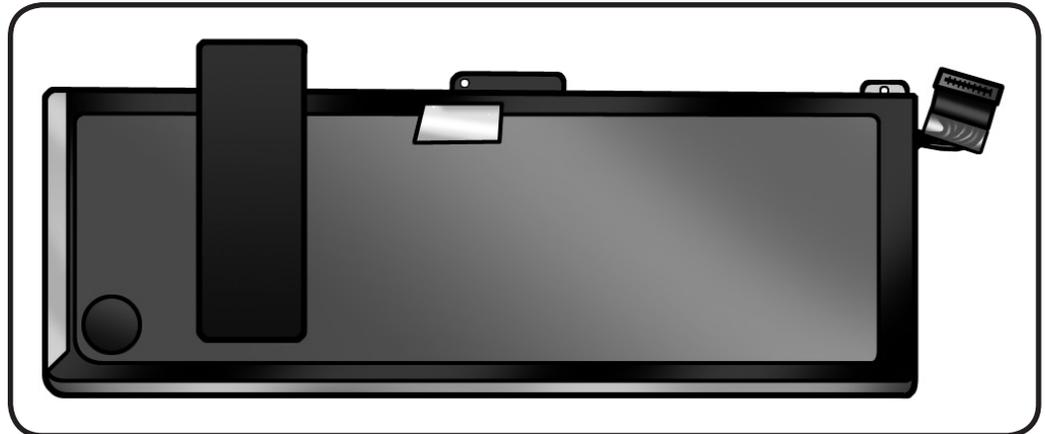


- 2 Remove 3 (5-mm) tri-lobe 922-8987 screws.

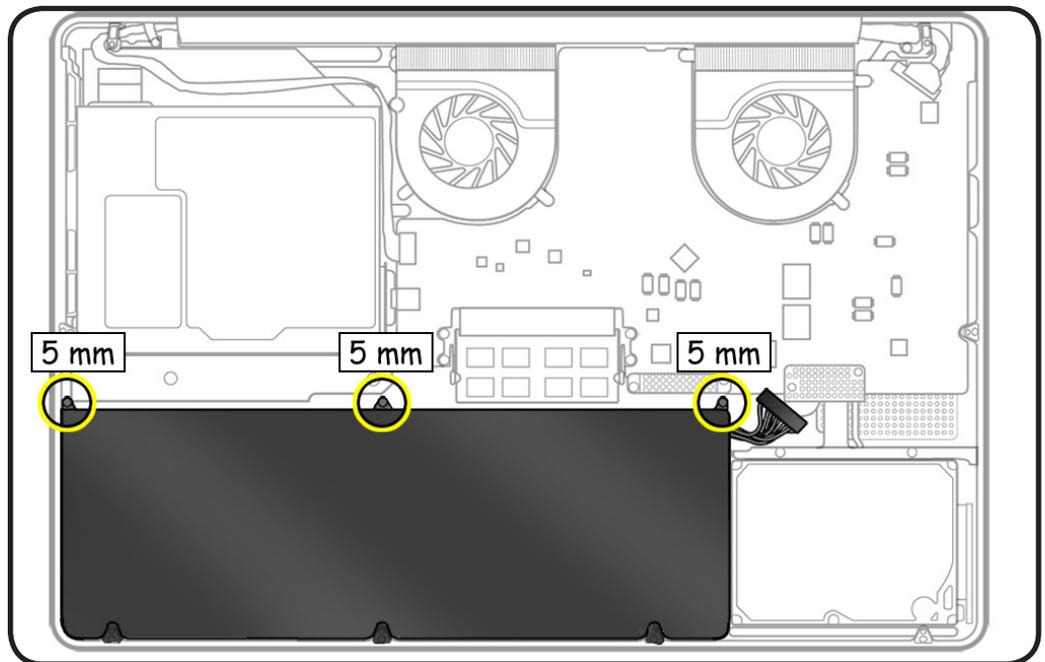




- 3 Peel up battery label from speaker only.

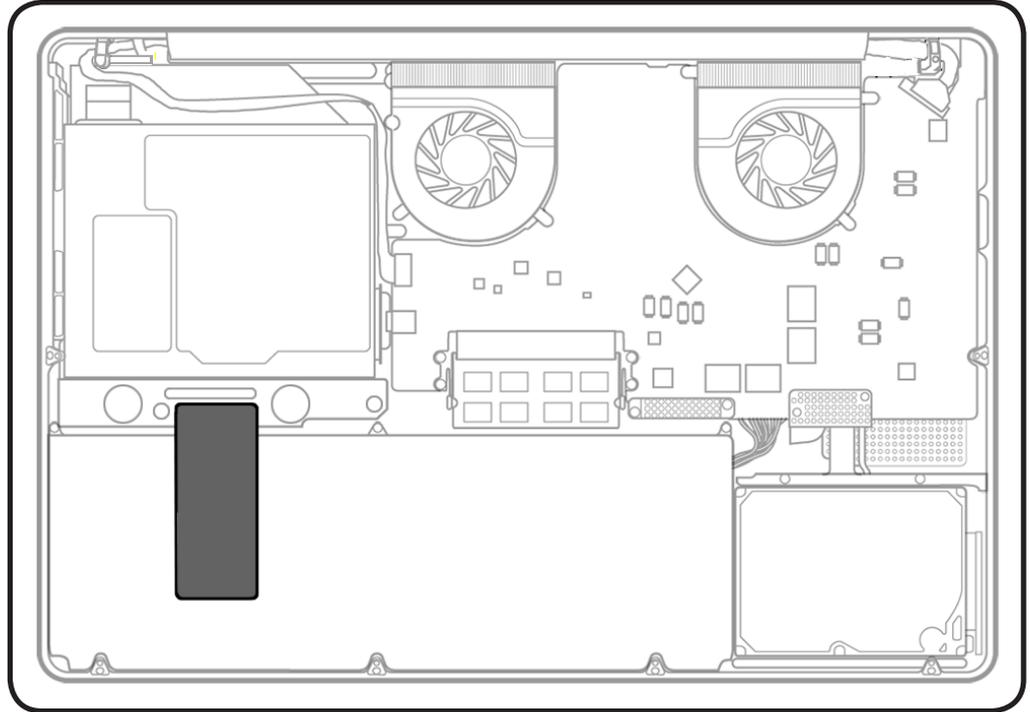

- 4 Without pulling cable, tilt out battery.

**Warning:** Underside of battery is soft.

- Do not puncture or press on battery.
- Hold battery by edges only.
- If setting battery aside, make sure surface is clean—free of dust, dirt, screws, etc.

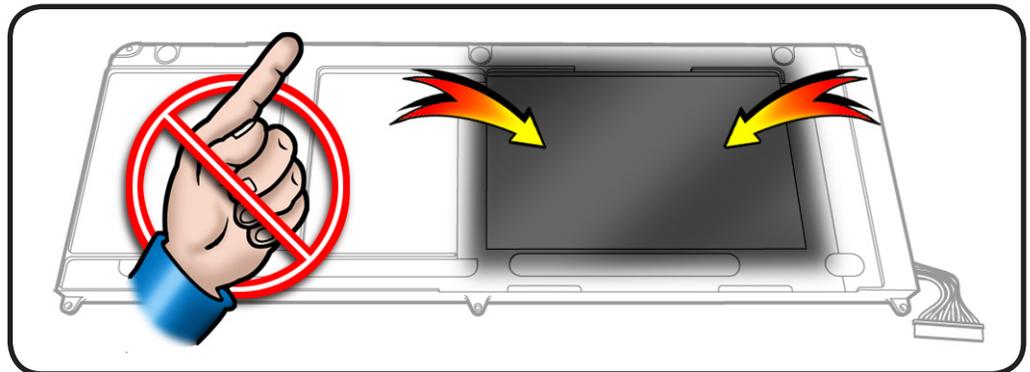

**Warning:** If mylar covering battery is punctured, do not re-use battery.






## Replacement


**1** Slide front edge of battery under 3 tabs.

**2** Install screws.

**Note:** If installing new battery, attach the new battery label (refer to battery label inbox instructions).

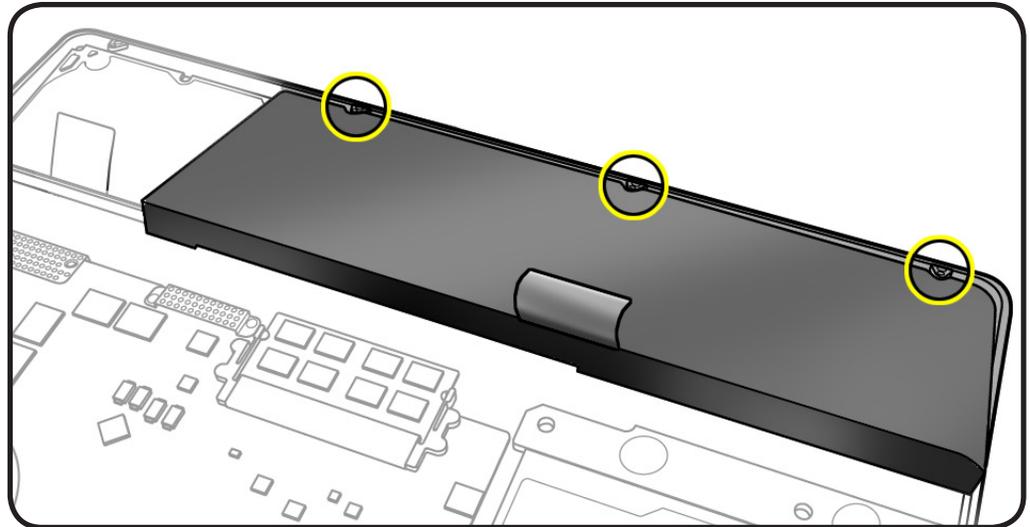


**3** If performing other repairs, be sure to leave battery cable disconnected.

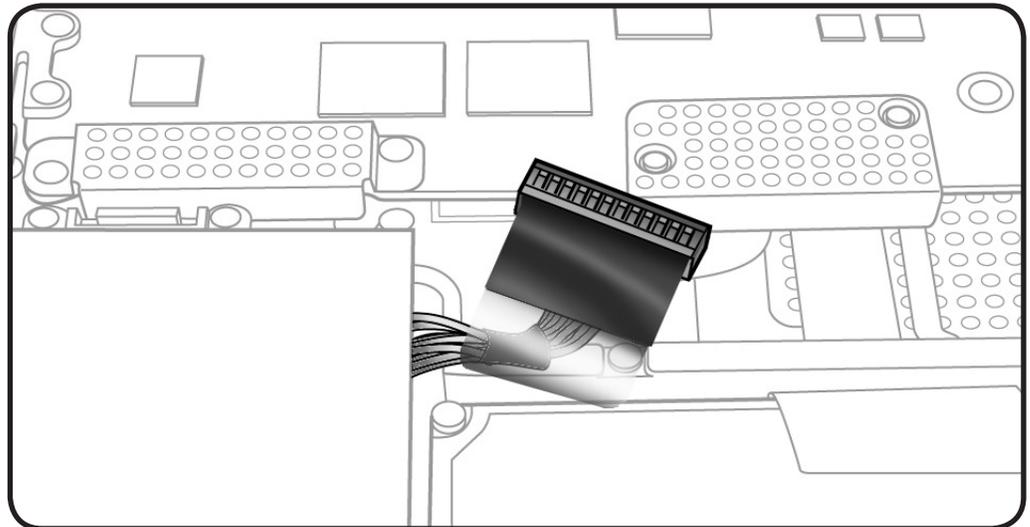




- 4** Connect battery cable using black stick or pull-tab, apply new battery label, and reassemble computer.

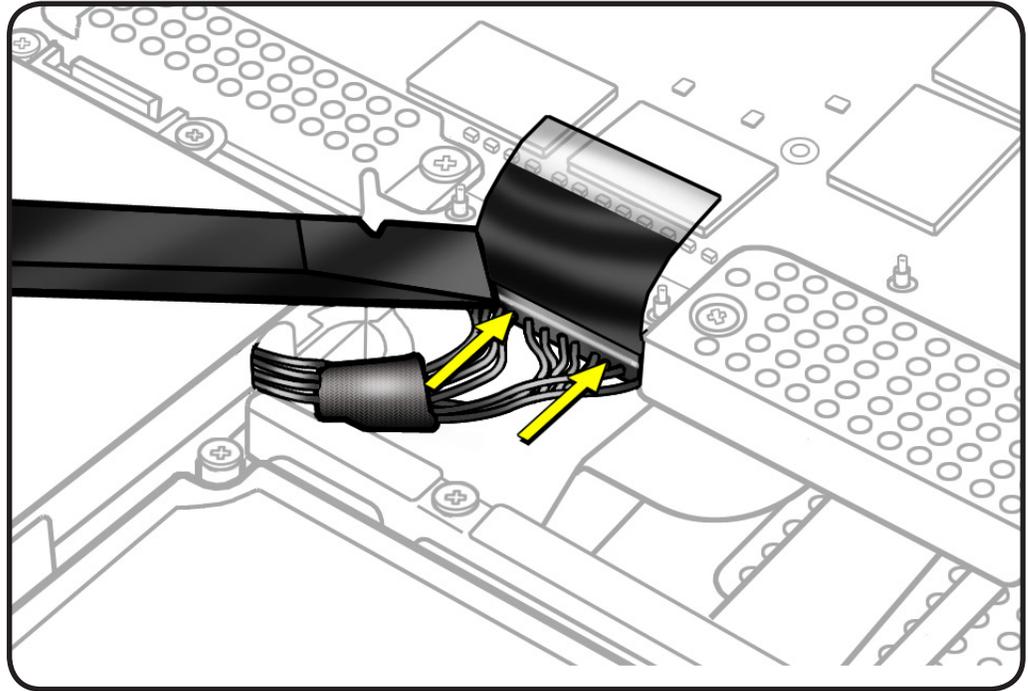

- 5** Press battery indicator light to check charge level.

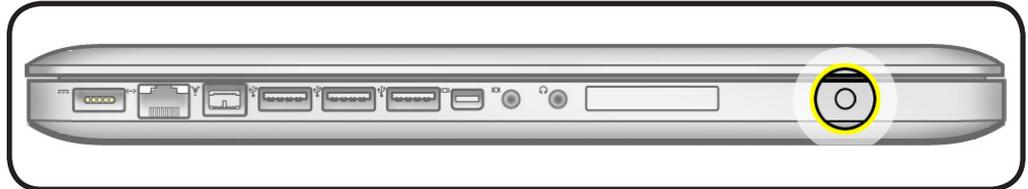



# Hard Drive Bracket


## First Steps

Remove:


- [Bottom case](#)



Caution: Make sure data is backed up before removing the hard drive.

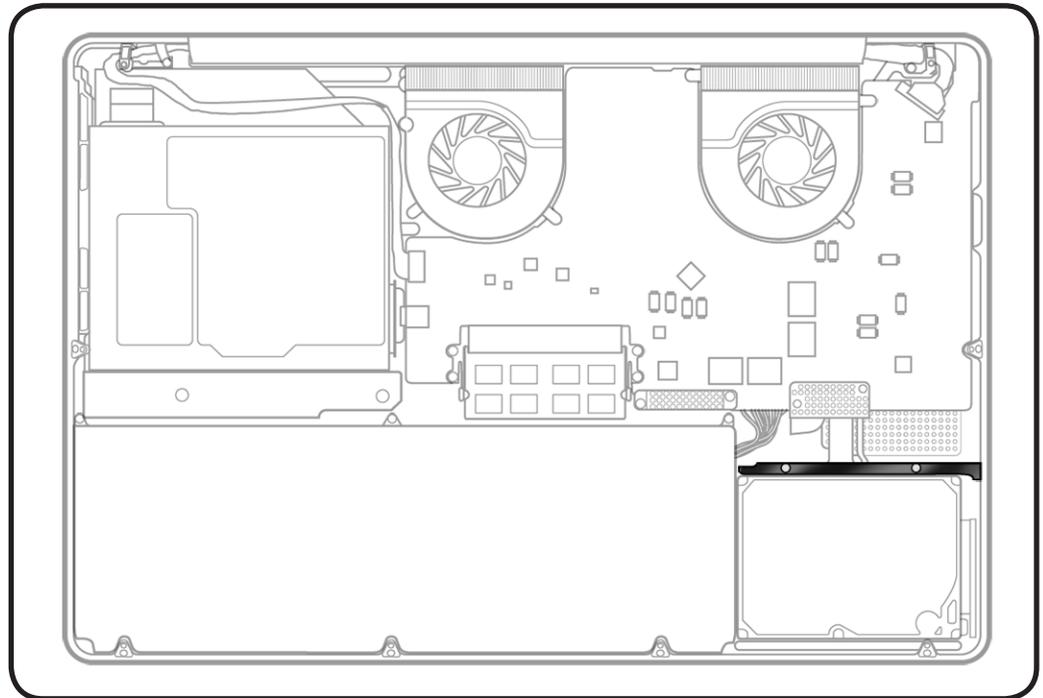

Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

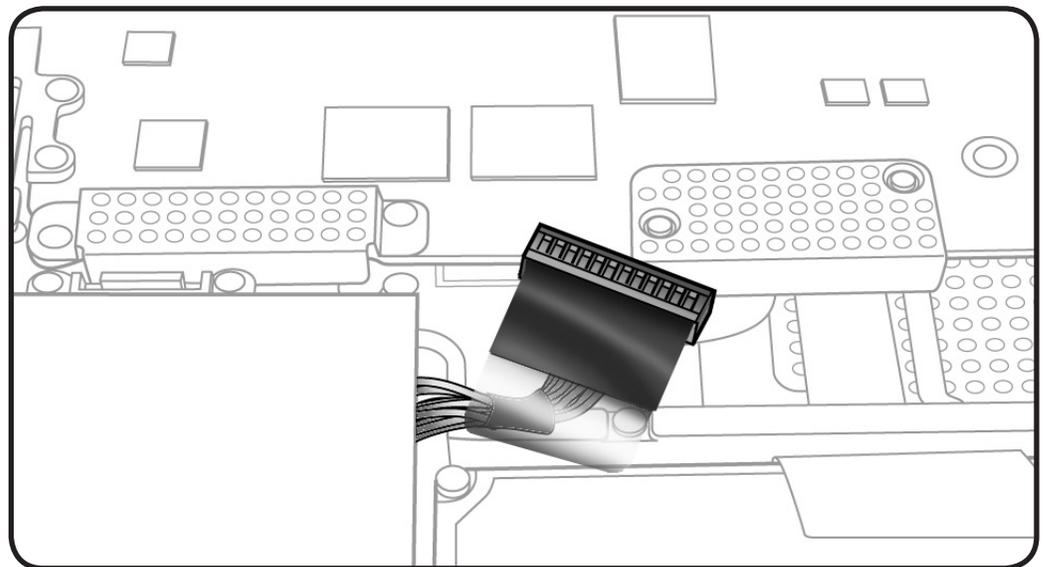



## Tools


Clean, soft, lint-free cloth

- ESD wrist strap and mat
- Magnetized Phillips #00 screwdriver




## Removal

- 1 Loosen 2 (5.5 mm) 922-xxxx captive screws.

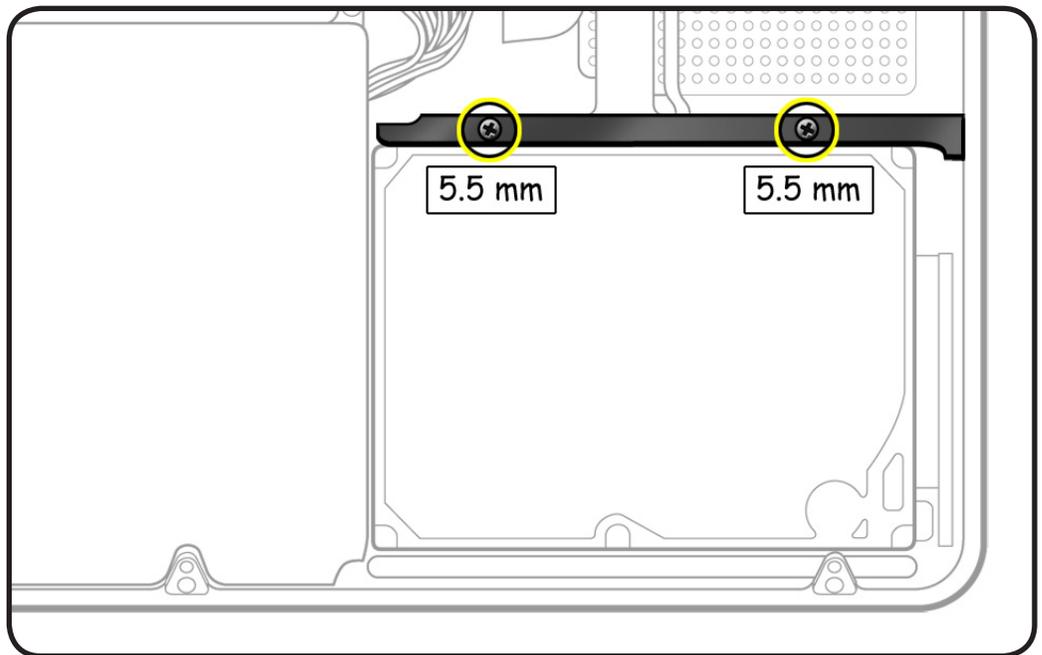

- 2 Lift out bracket.

**Replacement Note:** Make sure 2 rubber grommets are included in bracket before installing it.

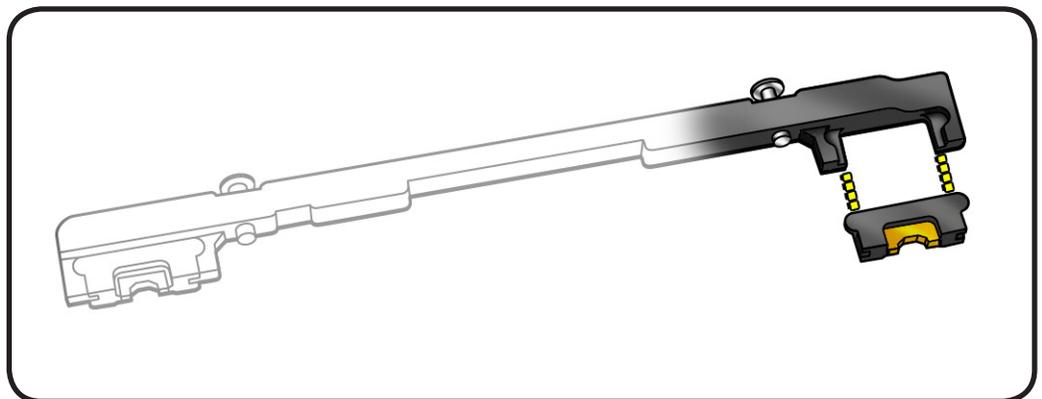



# Hard Drive


## First Steps

Remove:


- [Bottom case](#)
- [Hard drive bracket](#)



Caution: Make sure data is backed up before removing the hard drive.

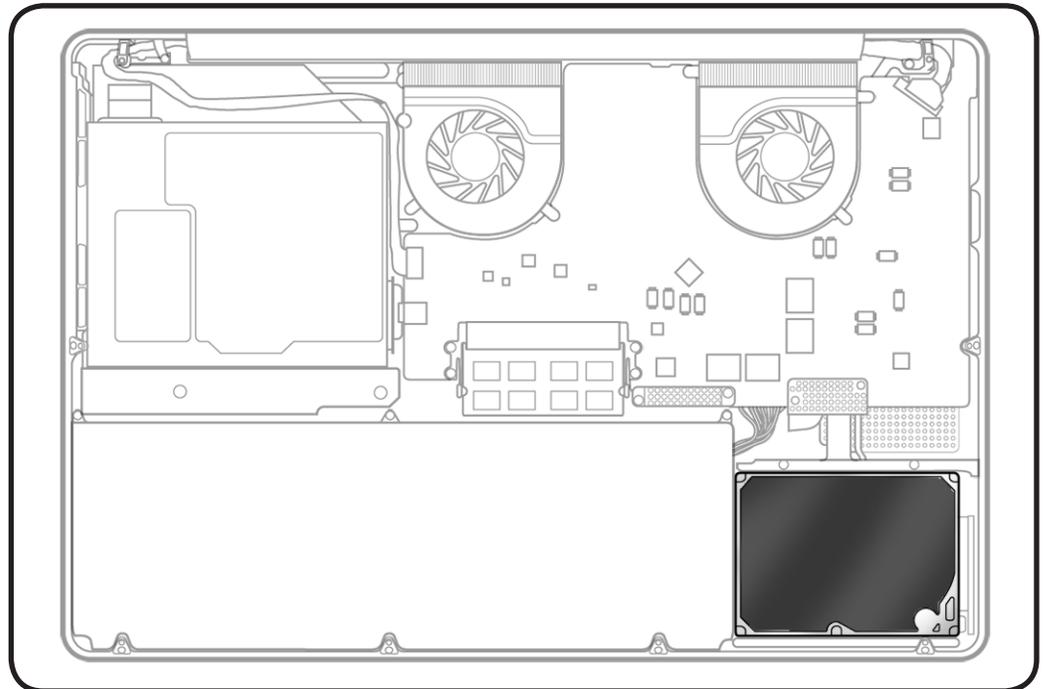


Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

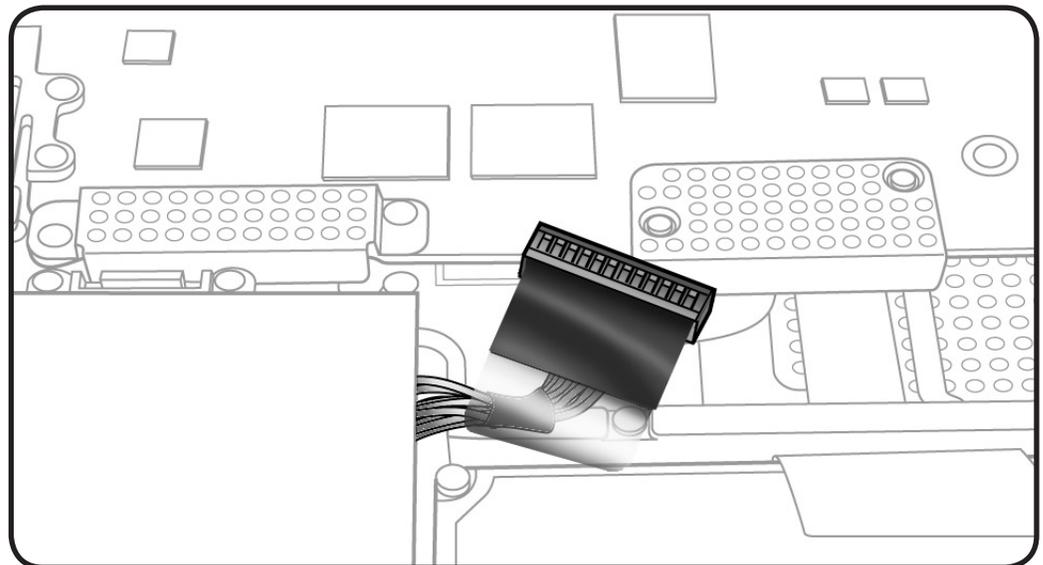




## Tools

- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Magnetized Phillips #00 screwdriver
- Torx T6 screwdriver

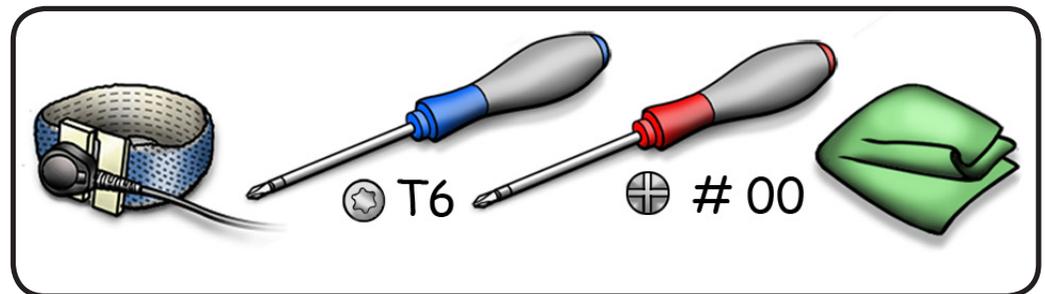


## Removal

- 1 Make sure hard drive bracket is removed.
- 2 Use pull tab to tilt hard drive out.

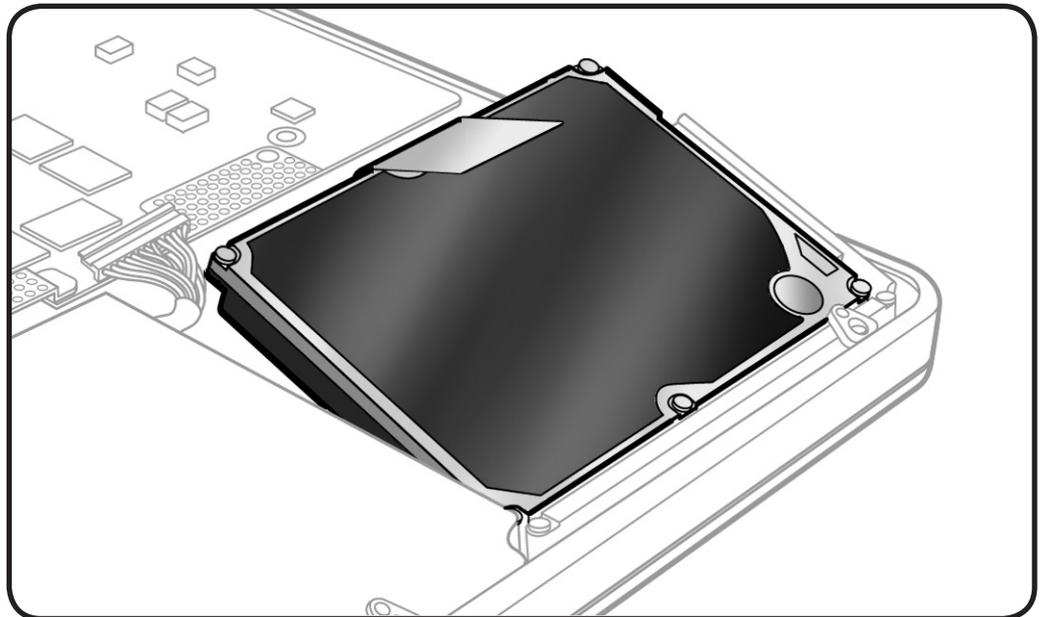




- 3 Hold hard drive by the sides only.
- 4 Disconnect hard drive connector.

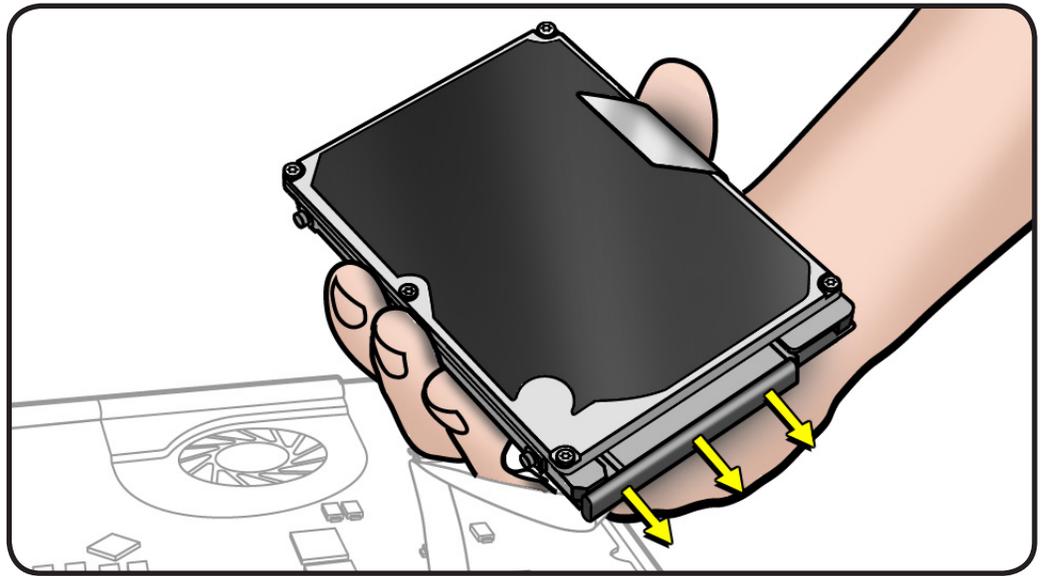


- 5 Follow safe handling:
  - Do not press drive



- Do not touch connector

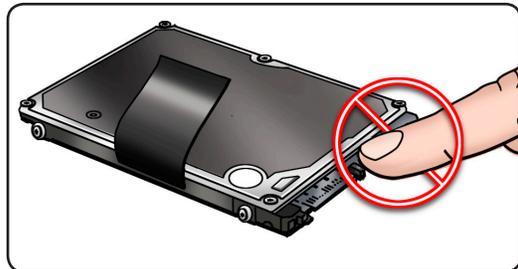


- Do not touch circuitry

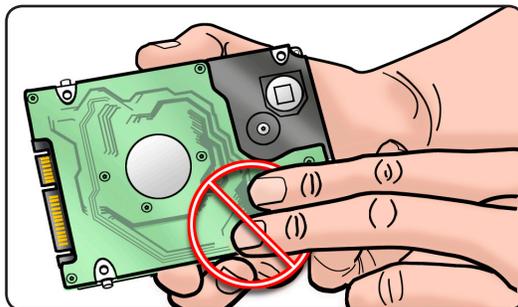




## Replacement

- 1 Make sure rubber grommets are included in top case before installing the hard drive.

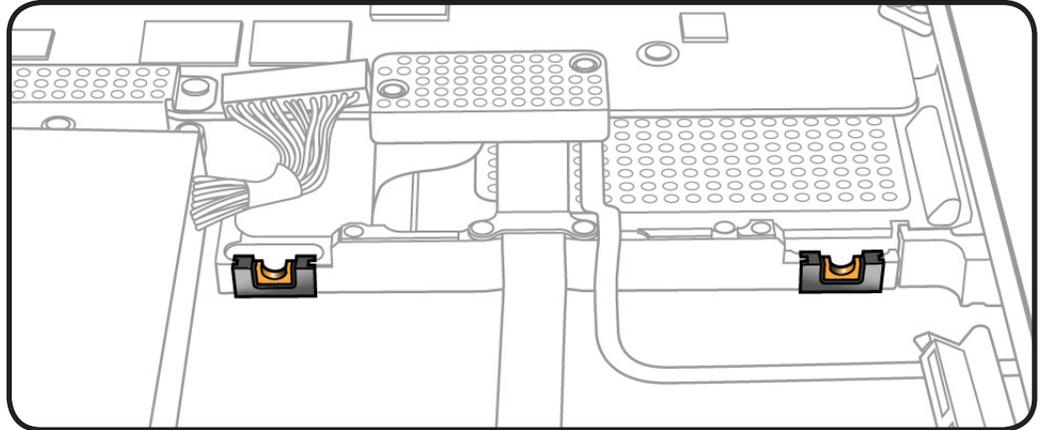


- 2 Make sure 4 Torx T6 (922-xxxx) mounting screws are installed on drive.

If replacement drive does not have mounting screws, transfer them from the old drive.

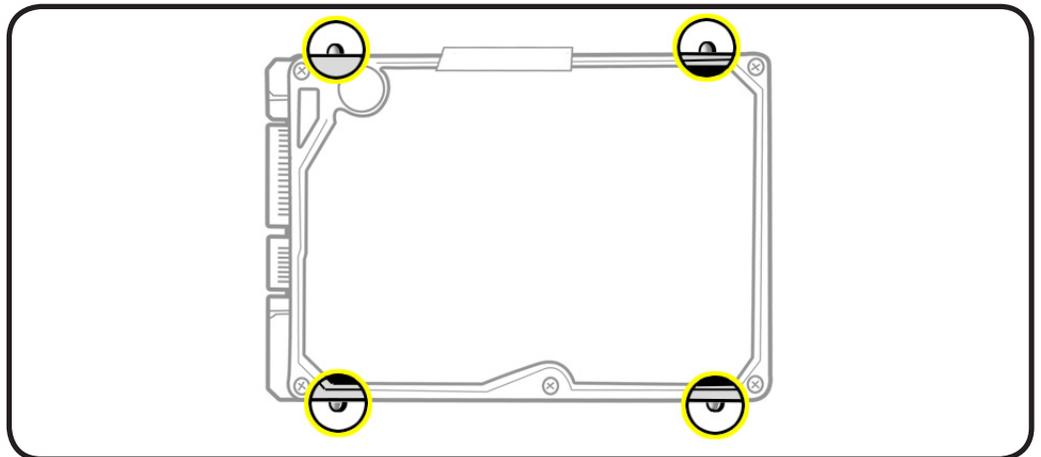

- 3 Attach connector, and tilt hard drive into front of top case.

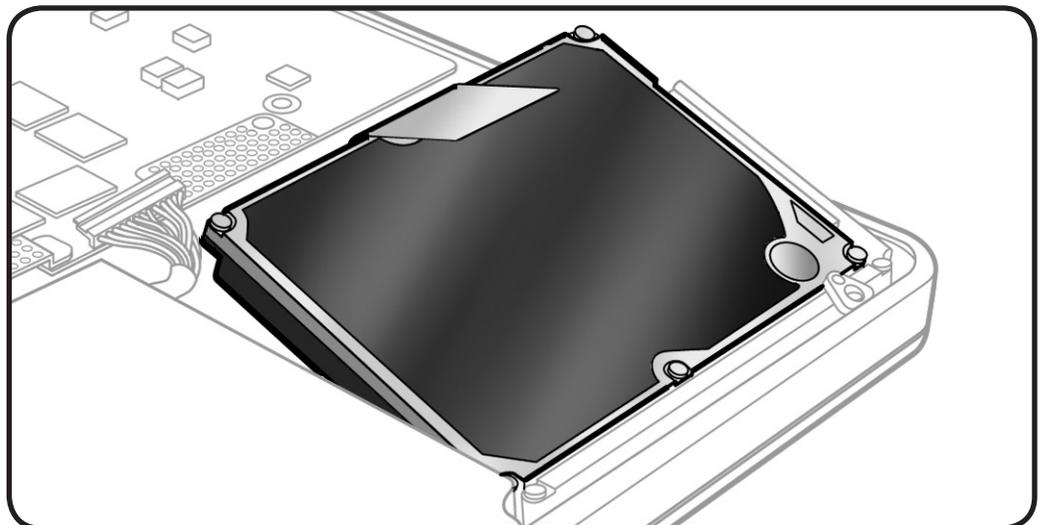



## Reinstalling Software that Came with the Computer

Use the software install discs that came with the computer to reinstall Mac OS X and any applications that came with the computer. Choose either “Archive and Install,” which saves the existing files and settings, or “Erase and Install,” which erases all the data.

**Important:** Apple recommends backing up data on the hard disk before restoring software. Because the “Erase and Install” option erases the hard disk, you should back up essential files before installing Mac OS X and other applications. Apple is not responsible for any lost data.

### Installing Mac OS X

To install Mac OS X, follow these steps:

1. Back up essential files.
2. Make sure power adapter is connected and plugged in.
3. Insert the Mac OS X Install DVD that came with the computer.
4. Double-click Install Mac OS X.
5. Follow the onscreen instructions.

**Note:** To restore Mac OS X on the computer to the original factory settings, click Options in the “Select a Destination” pane of the Installer, and then select “Erase and Install.” If you choose “Erase and Install,” you will see a message reminding you to use the Applications Install DVD to reinstall the bundled applications that came with the computer.

6. When the installation is complete, click Restart.
7. Follow the prompts in the Setup Assistant to set up the user account.

### Installing Applications

If you reinstall Mac OS X on the computer and select the “Erase and Install” option, you must reinstall the applications that came with the computer, such as the iLife applications.

To install applications that came with the computer, follow these steps:

1. Make sure power adapter is connected and plugged in.
2. Insert the Applications Install DVD that came with the computer.
3. Double-click Install Bundled Software.
4. Follow the onscreen instructions.
5. When the installation is complete, click Close.




# Memory


## First Steps

Remove:

- [Bottom case](#)

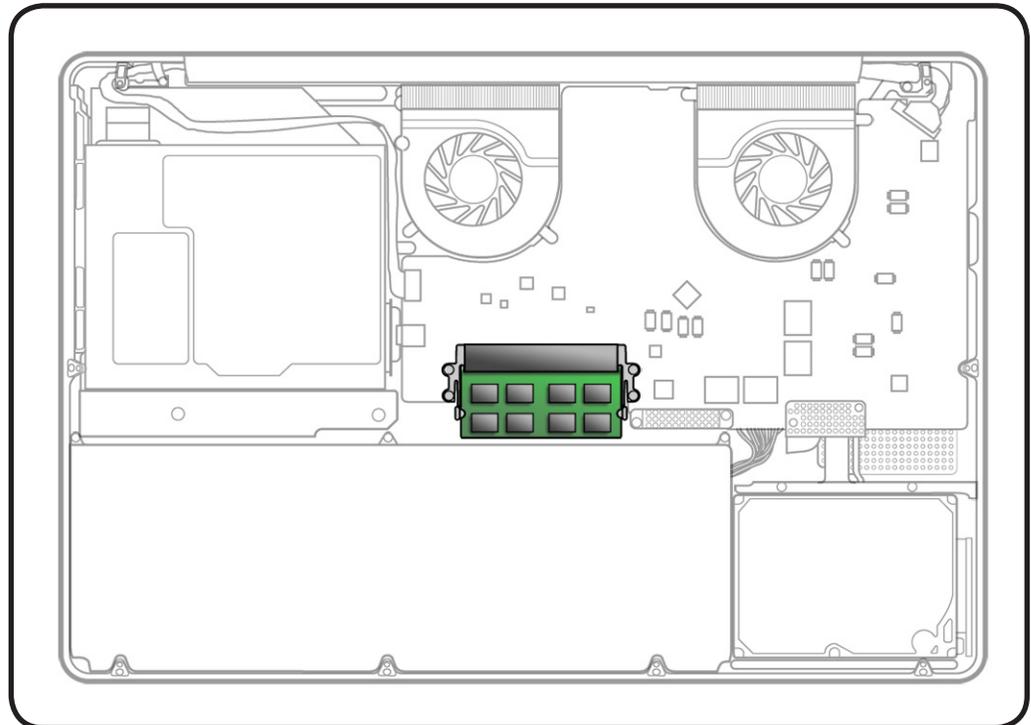


Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

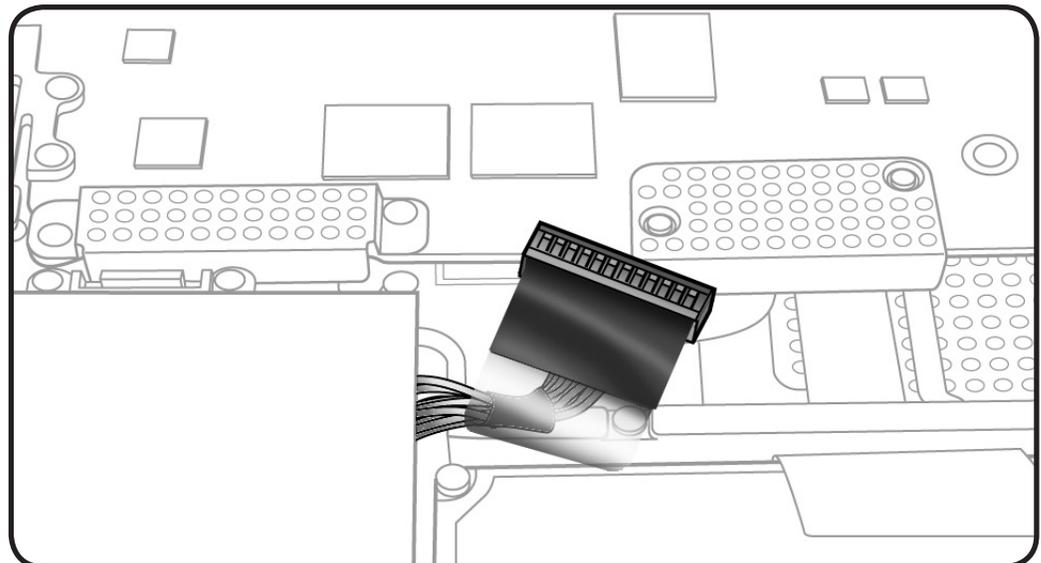



## Tools

- Clean, soft, lint-free cloth
- ESD wrist strap and mat

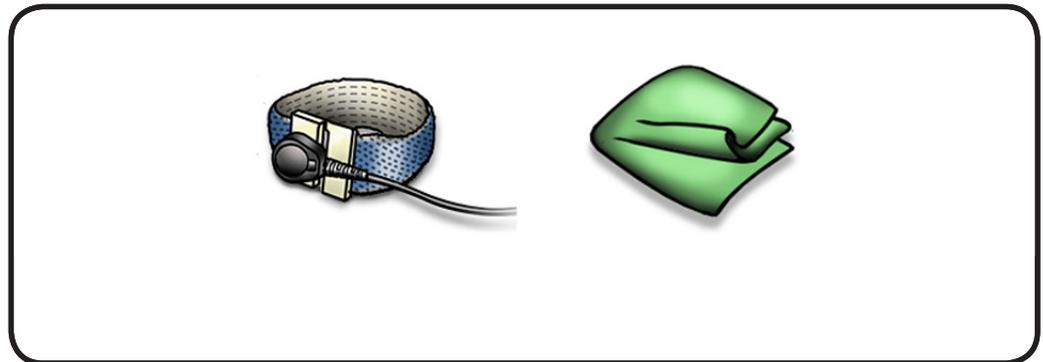

## Removal


Memory cards must be:

- 1.25 inch (3.18 cm) or smaller
- 2 GB or 4 GB
- 200-pin
- PC3-8500 DDR3, 1066 MHz RAM

This computer comes with a minimum of 2 GB of 1066 MHz Double Data Rate 3 (DDR3) Synchronous Dynamic Random-Access Memory (SDRAM) installed. It has two slots that can accept SDRAM Small Outline Dual Inline Memory Modules (SO-DIMMs). The slots are stacked on the logic board under the bottom case. For best performance, memory should be installed as pairs with an identical memory card in each slot. The maximum amount of memory for this computer is 8 GB, with a 4 GB DIMM installed in each slot.

- 1 Press out 2 ejection levers until the card tilts up completely,


The card tilts up at an angle. Before removing the card, make sure you see the half-circle notches. If not, press the ejection levers again.

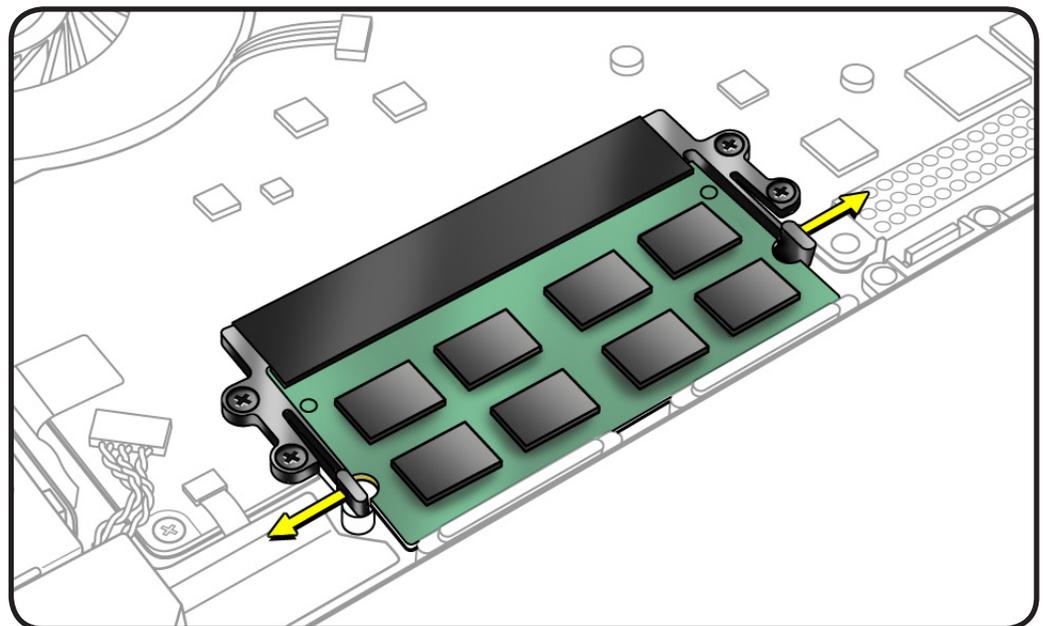




- 2 Pull out the card.
- 3 Hold the card by the edges.
- 4 Do not touch the gold connectors.

**Note:** New memory cards might have a harmless white residue on the gold connectors.

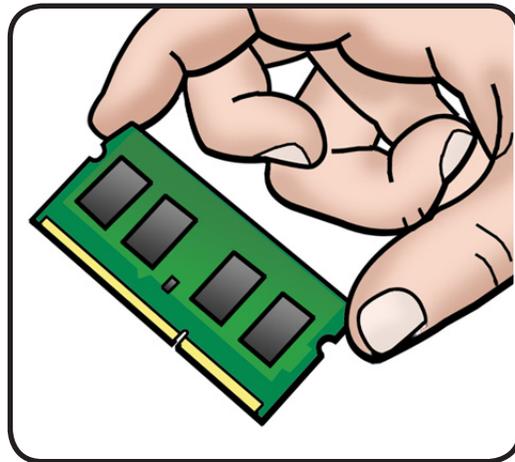


## Replacement

- 1 Install cards at an angle. If installing just one card, install it in lower slot.

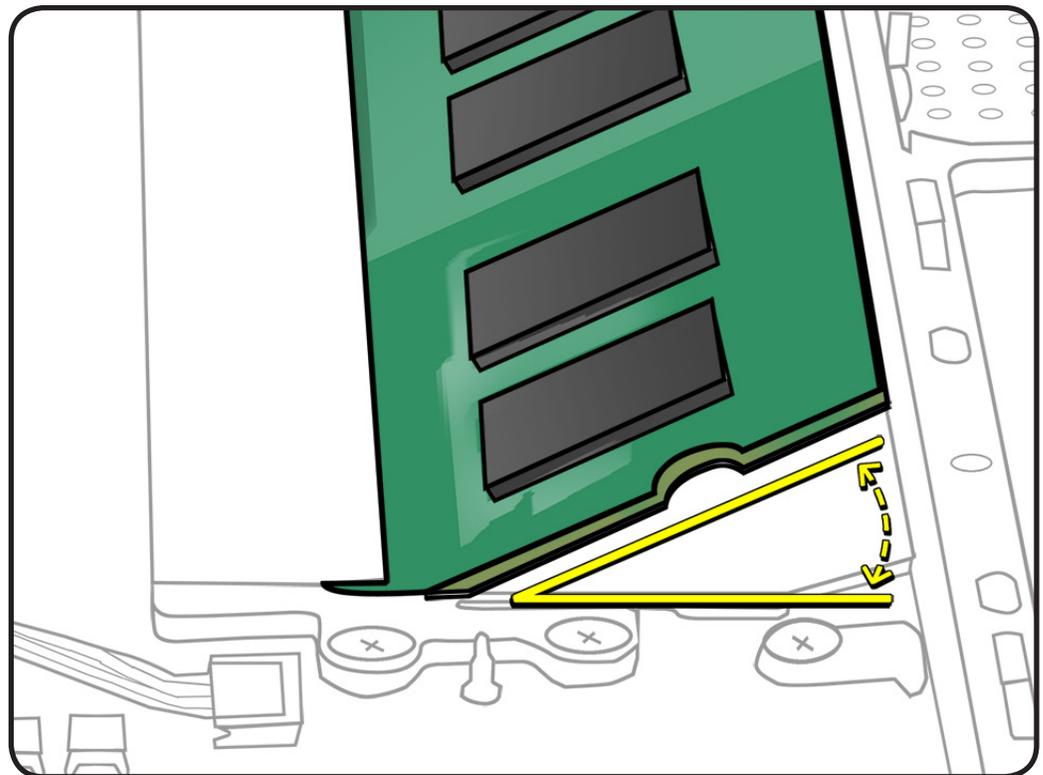



- 2 Press card down.
- 3 If you installed additional memory, check that computer recognizes it.

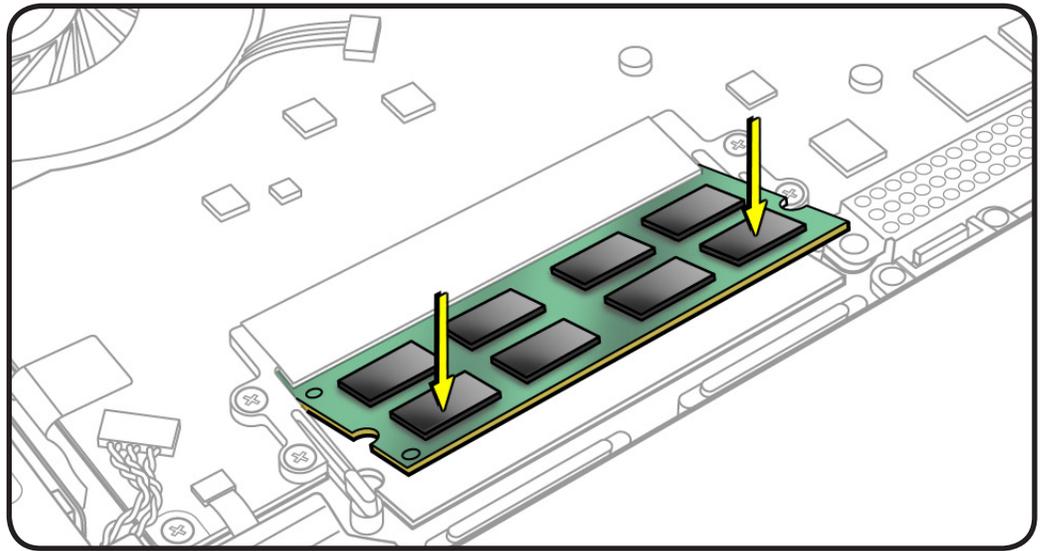




# Bluetooth Card and Holder


## First Steps

Remove:

- [Bottom case](#)

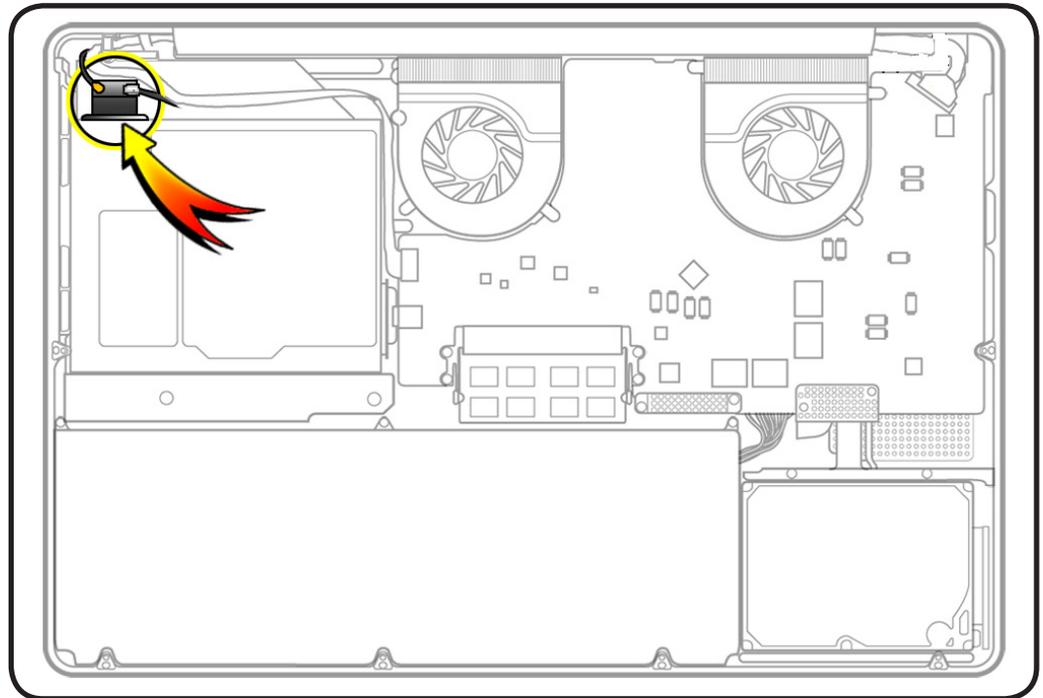

Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

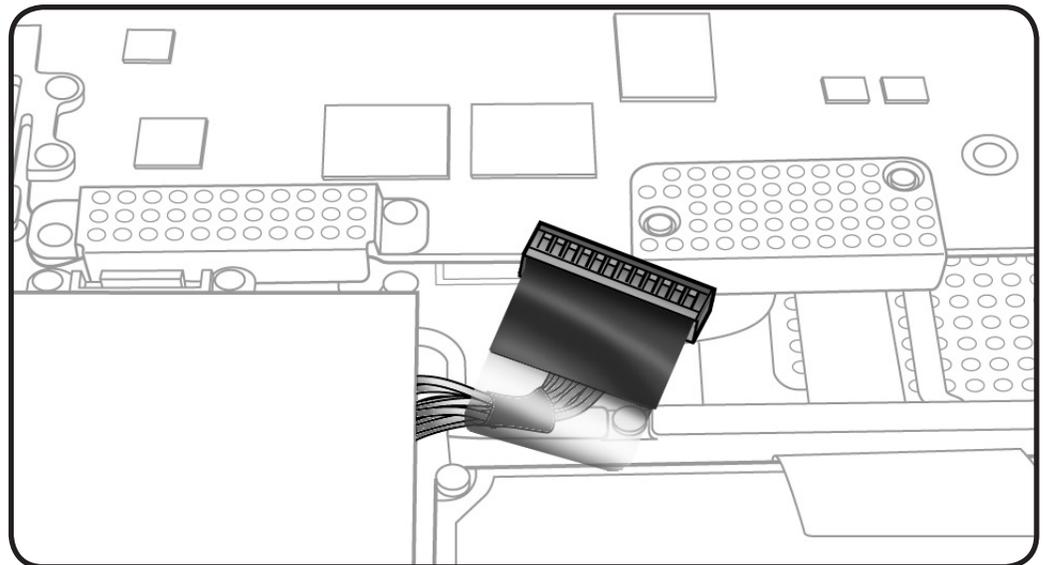




## Tools

Clean, soft, lint-free cloth

- ESD wrist strap and mat
- Magnetized Phillips #00 screwdriver
- Black stick

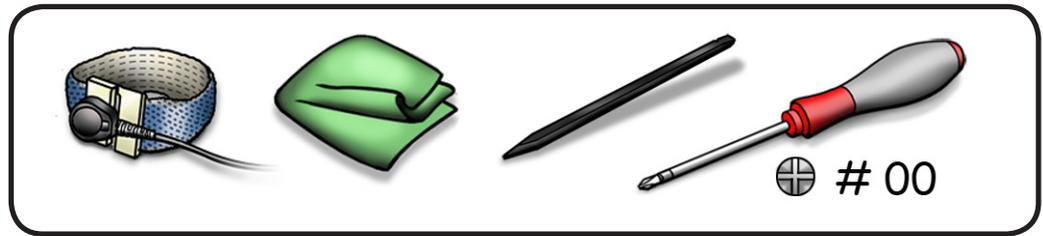


## Removal

**1** Remove 2 (2.2-mm) 922-8329 screws.


**2** Peel up mylar cover, and disconnect 2 cables:

- Bluetooth antenna
- Camera

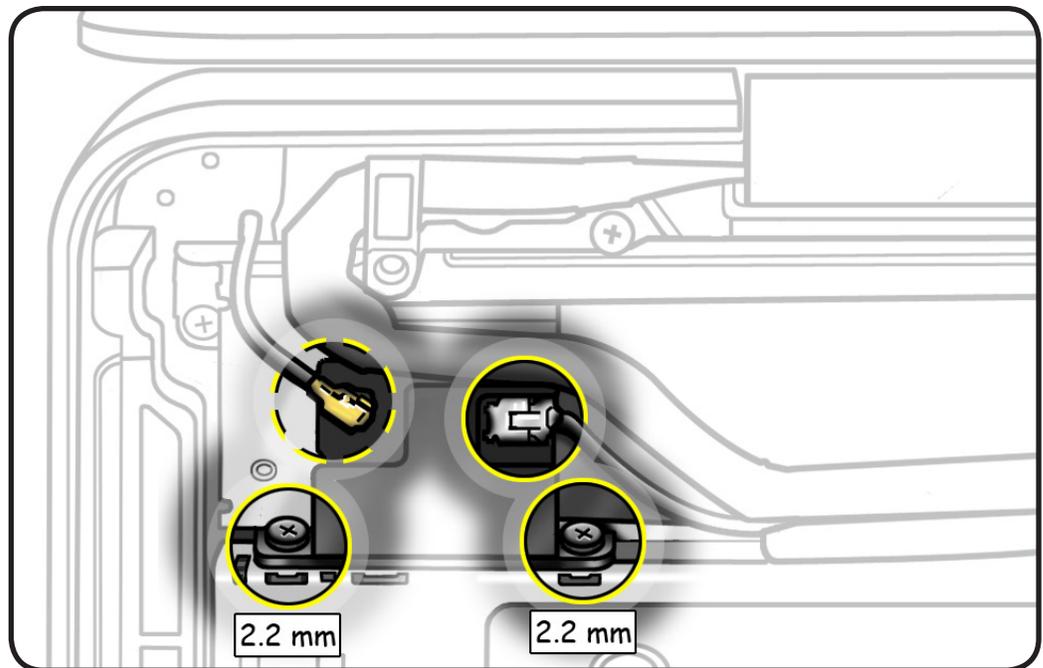




- 3** Use black stick to pry out Bluetooth holder.

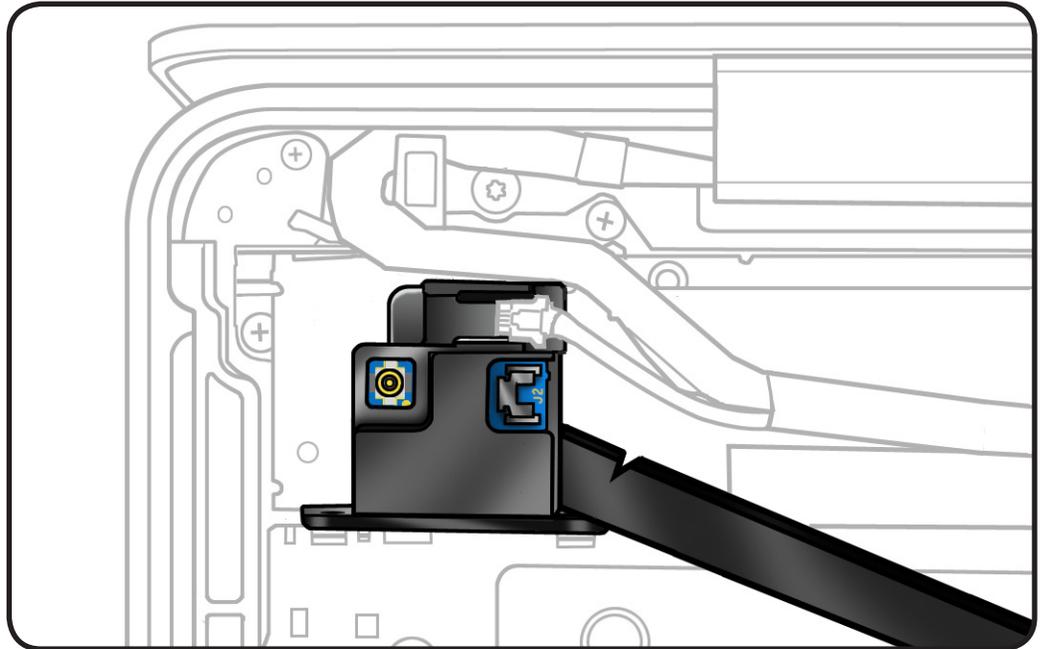


- 4** Remove Bluetooth card and holder.

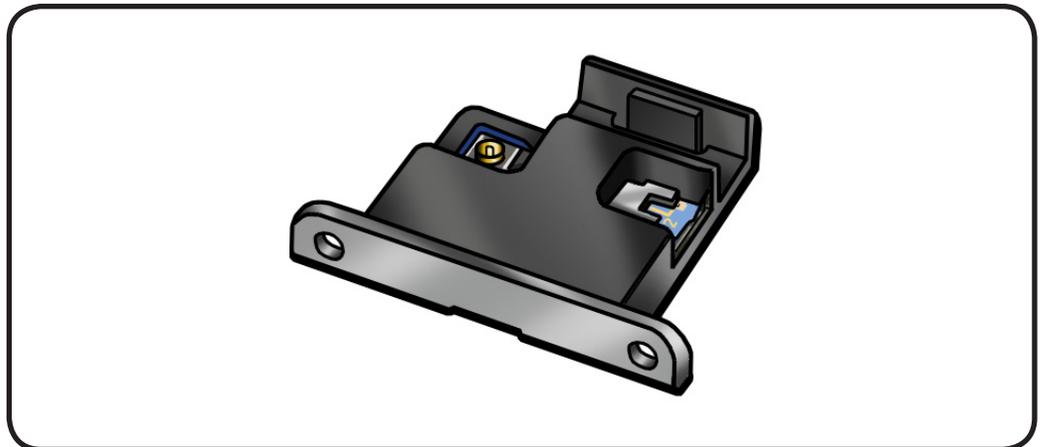

- 5** Turn over holder, and remove 2.3-mm screw (part of 076-1348 kit) from metal bracket.


- 6** Lift out card from holder.

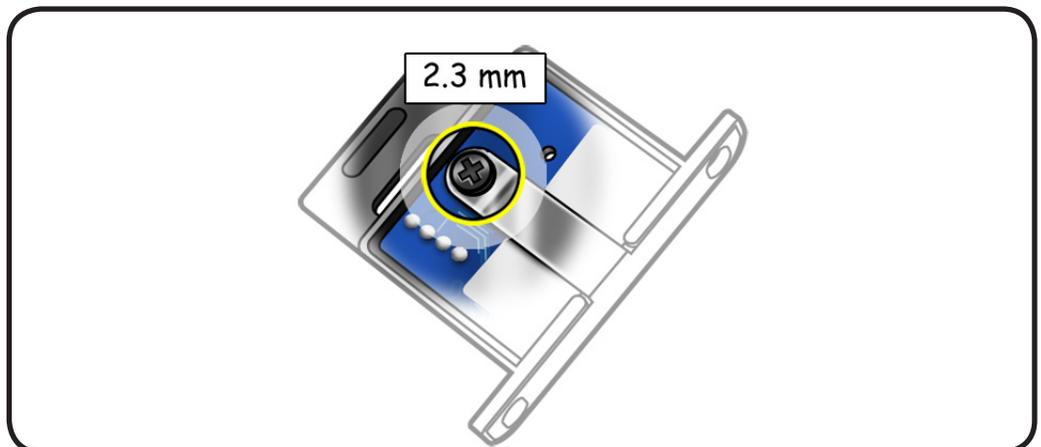




## Replacement

- 1 Remove any adhesive residue left on optical drive from Bluetooth holder.
- 2 Assemble Bluetooth card and bracket in holder.

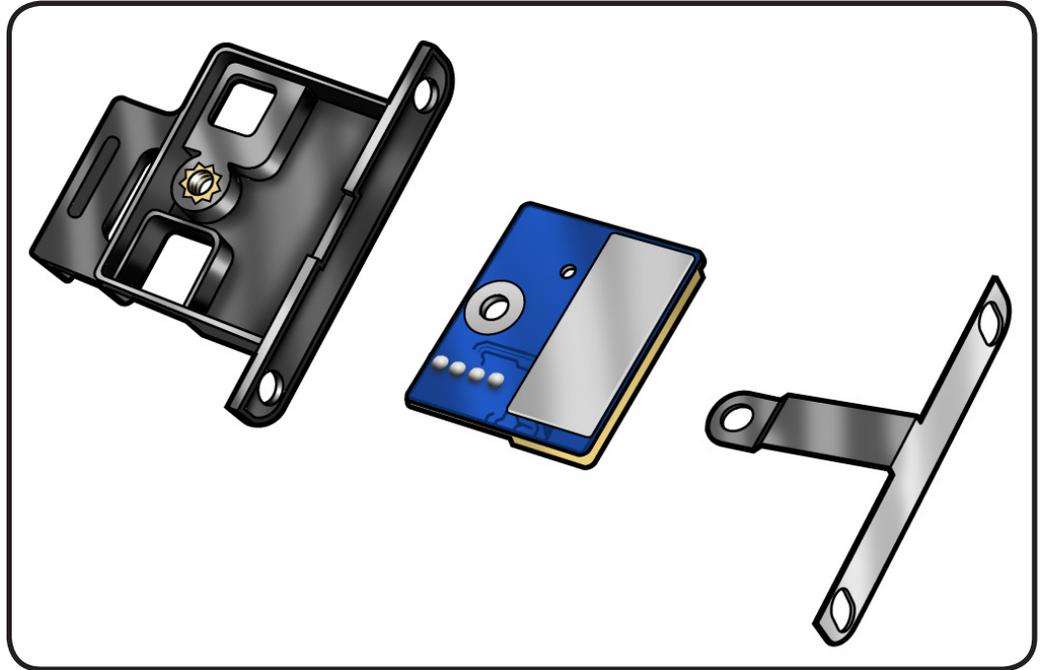

- 3 Install Bluetooth holder on optical drive so that
  - screw holes align
  - holder aligns with cushion on optical drive

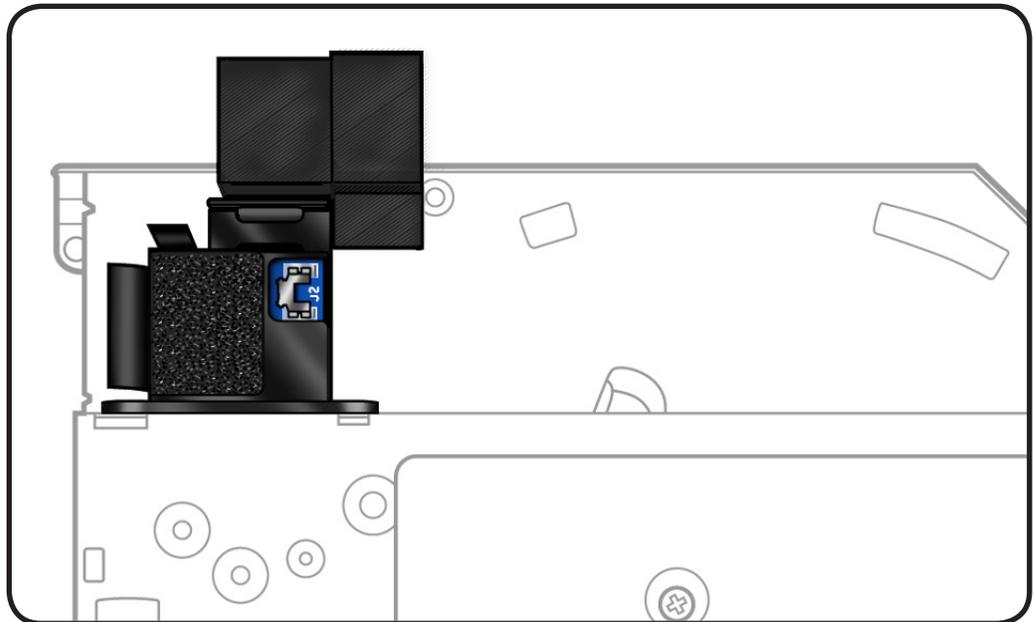




# Camera Cable Guide


## First Steps

Remove:

- [Bottom case](#)

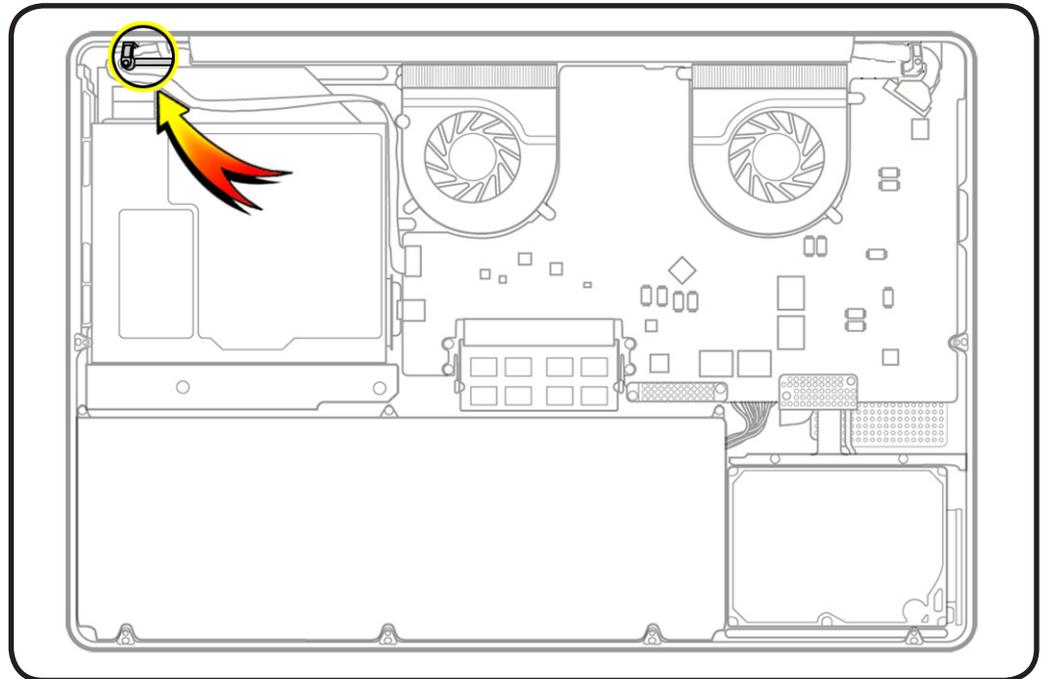

Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

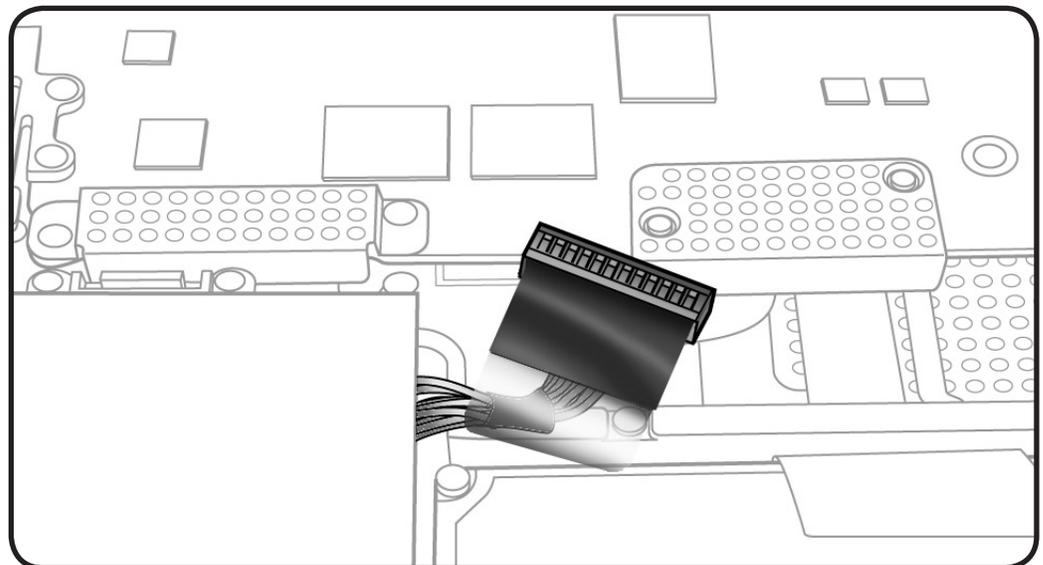



## Tools

Clean, soft, lint-free cloth


- ESD wrist strap and mat
- Magnetized Phillips #00 screwdriver
- Black stick




## Removal

- 1 Remove 2 (8-mm) 922-8645 screws.

**Replacement Note:** Be sure to anchor the ground tab when reinstalling the screw closest to the display clutch cover.

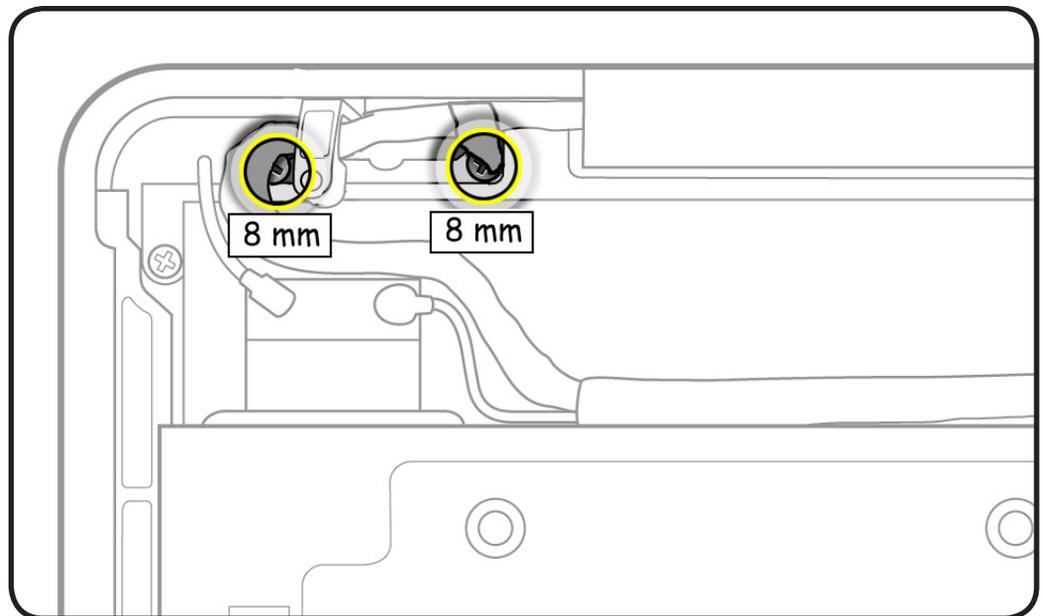

- 2 Remove the camera cable guide.

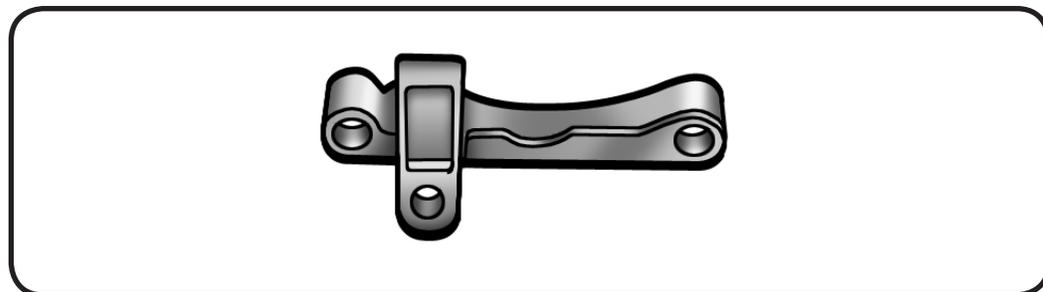




# LVDS Cable Guide


## First Steps

Remove:

- [Bottom case](#)

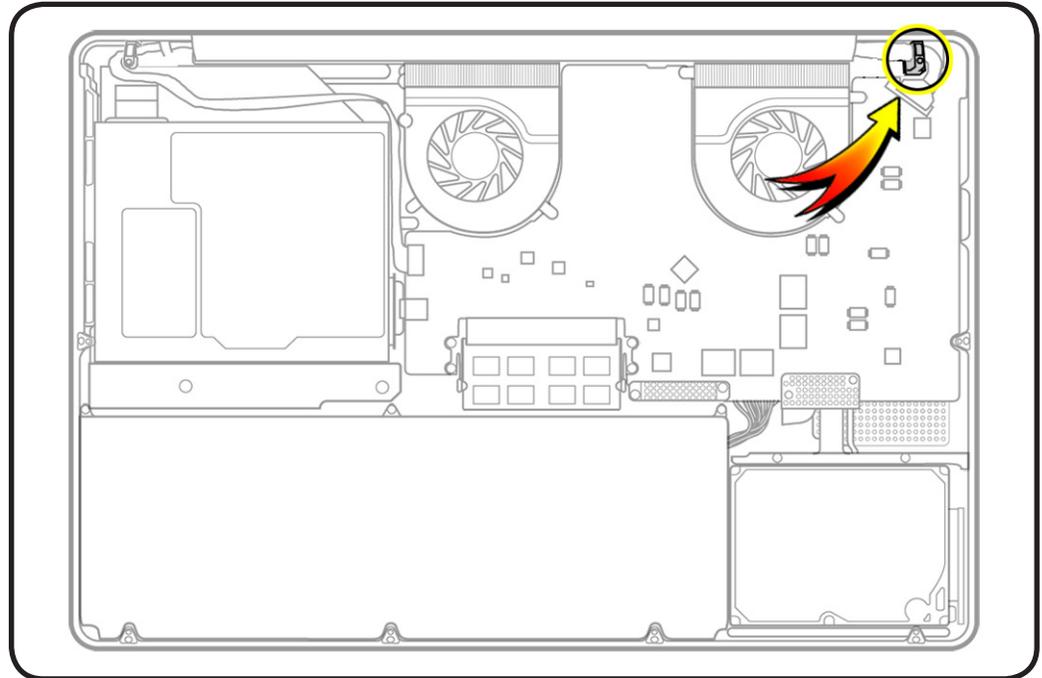

Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

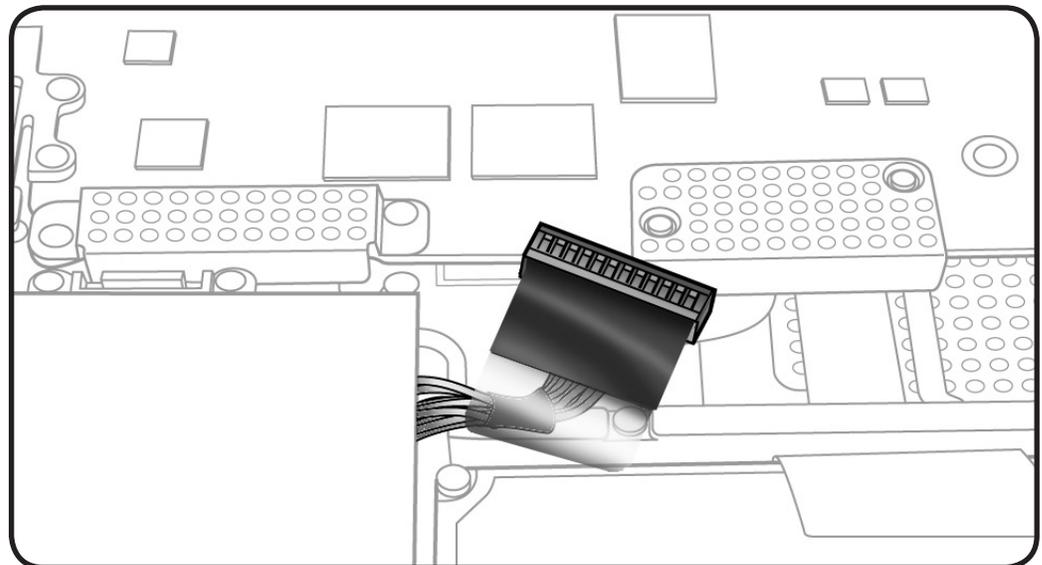




## Tools


Clean, soft, lint-free cloth

- ESD wrist strap and mat
- Magnetized Phillips #00 screwdriver
- Black stick

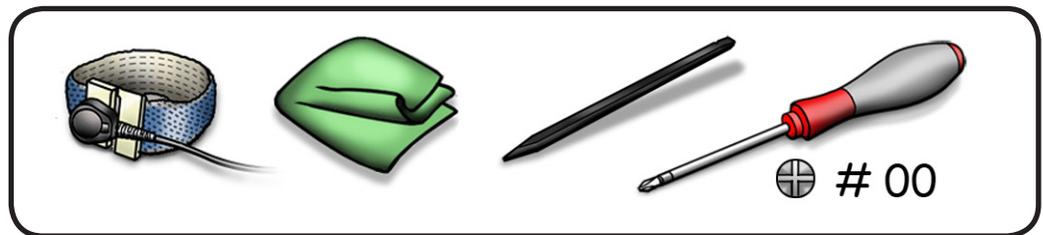



## Removal

- 1 Locate LVDS cable.

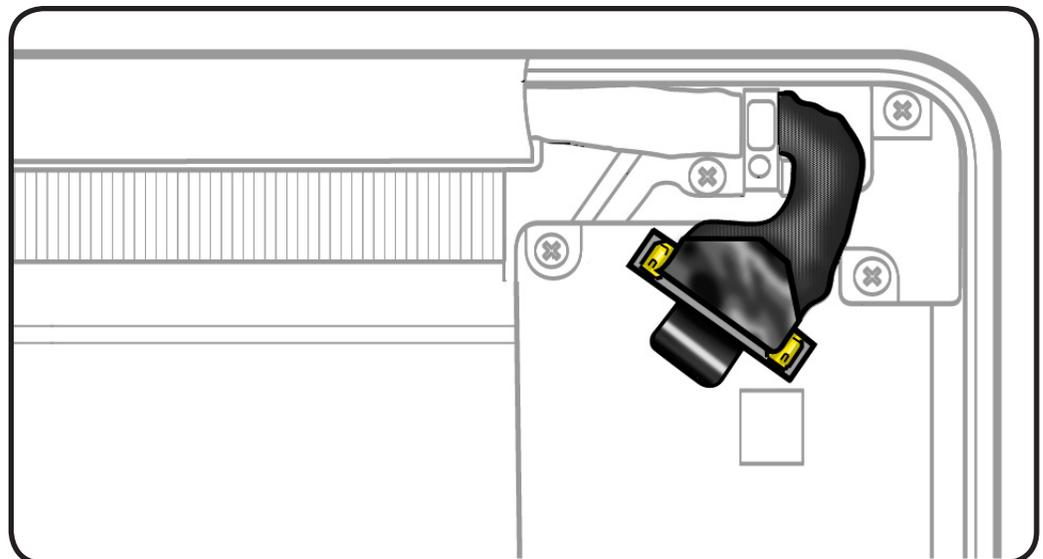

- 2 To disconnect LVDS cable, grasp black tab and gently swing LVDS lock bar up and back to unlock the cable.


- 3 Slide cable out of connector by pulling the cable. Do not pull the black tab or lock bar.

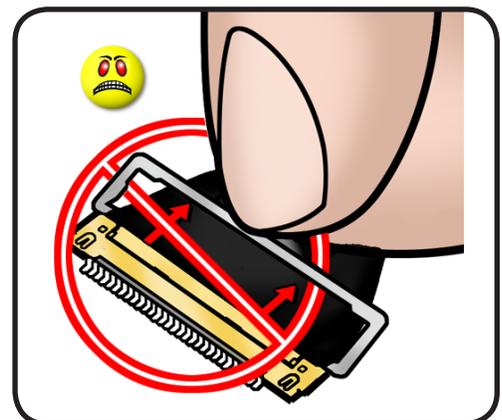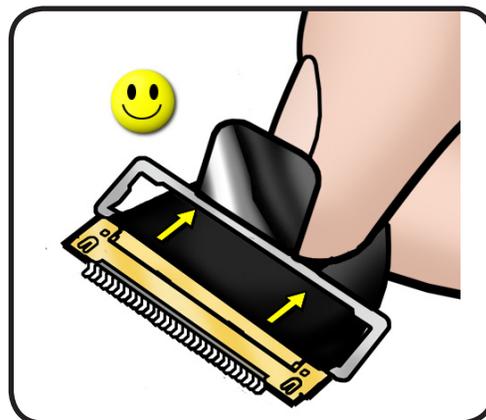




- 4** Remove 2 (8-mm) 922-8645 screws.

**Replacement Note:** Be sure to anchor the ground tab when reinstalling the screw closest to the display clutch cover.

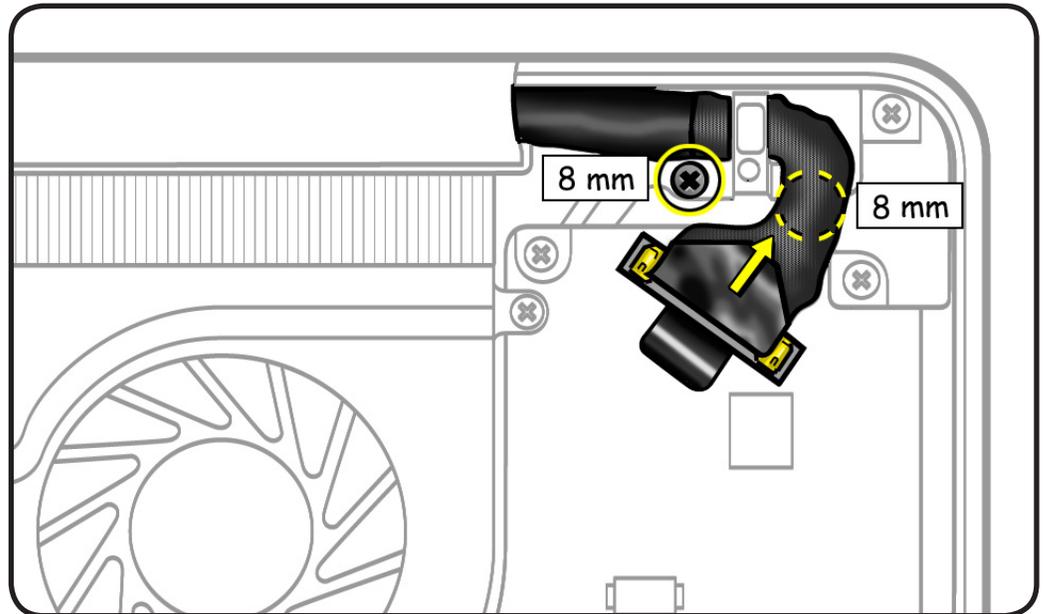

- 5** Remove the LVDS cable guide.

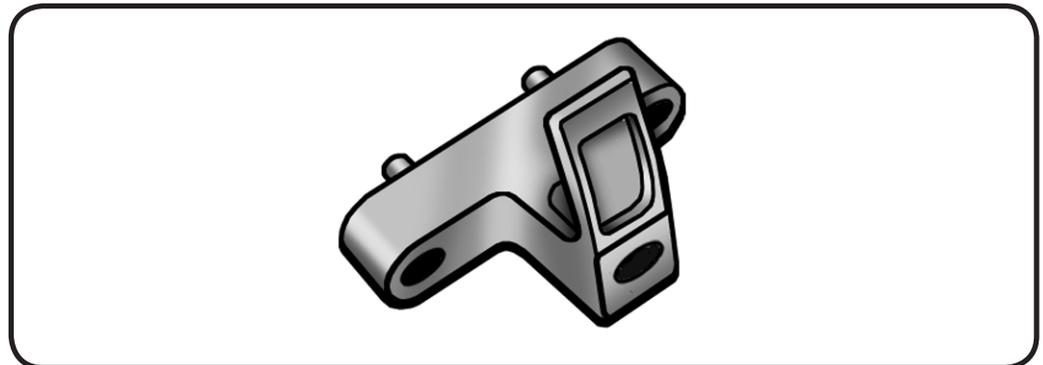




# Fans


## First Steps

Remove:

- [Bottom case](#)

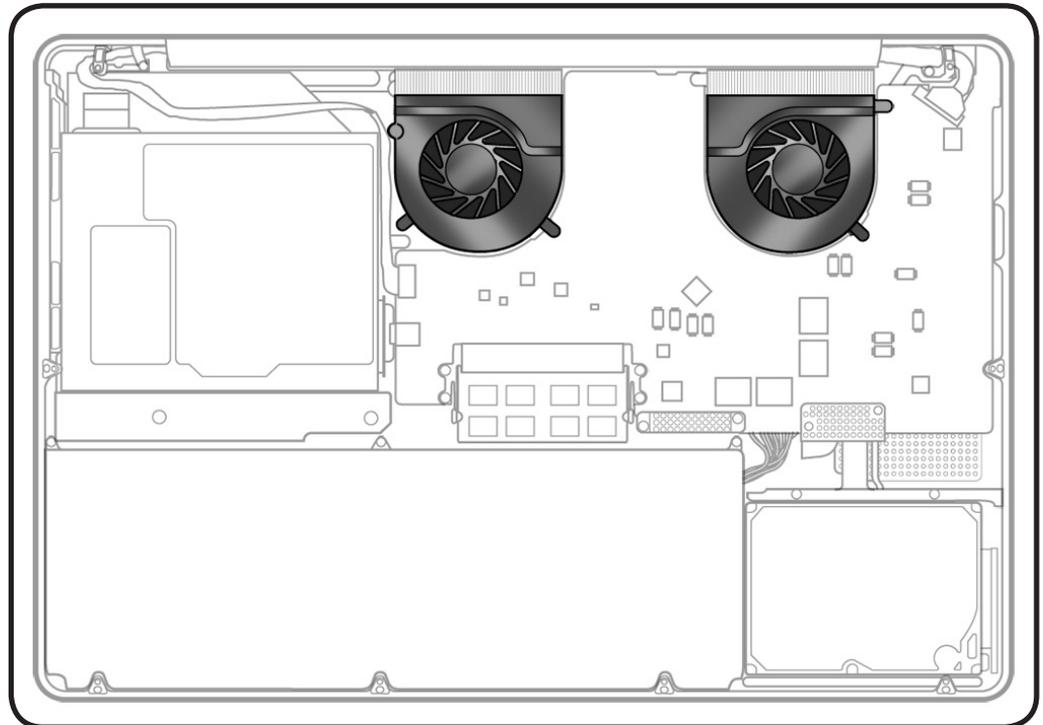

Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

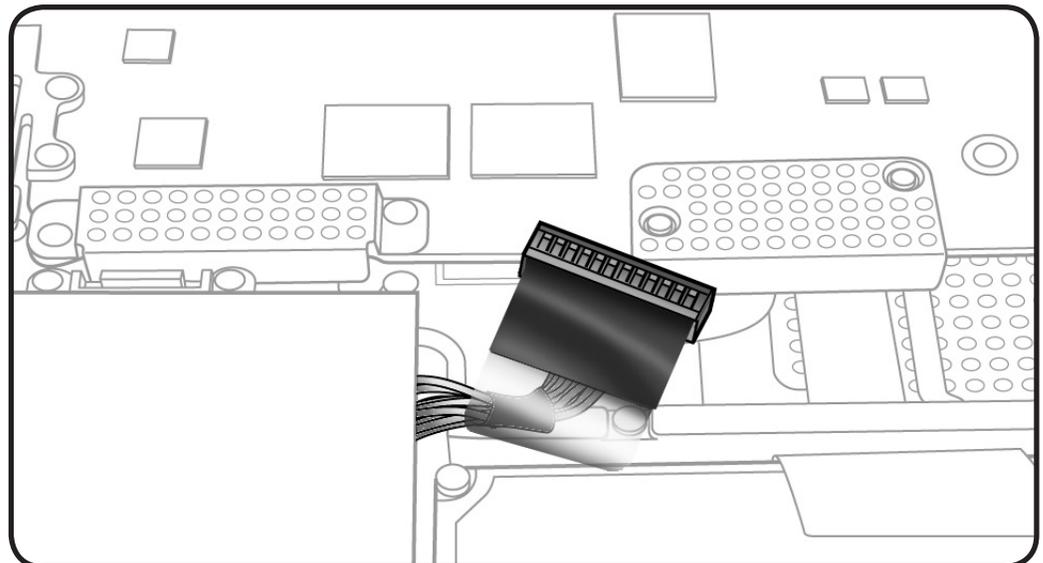




## Tools

Clean, soft, lint-free cloth

- ESD wrist strap and mat
- Magnetized Phillips #00 screwdriver
- Black stick

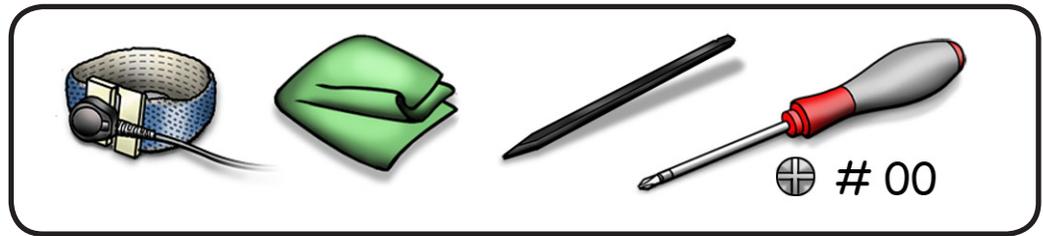



## Removal

- 1 Disconnect each fan cable.
- 2 Remove 6 (3.1-mm) 922-8754 screws.
- 3 Remove fan(s) from top case.

### Replacement Note:

To identify the fans for ordering parts,

- Right Fan is closest to optical drive
- Left Fan is closest to MagSafe power connector

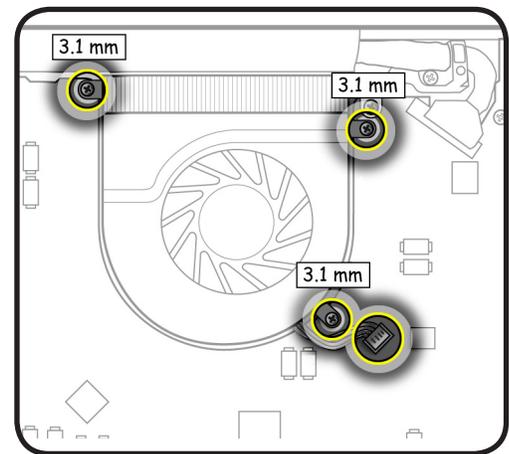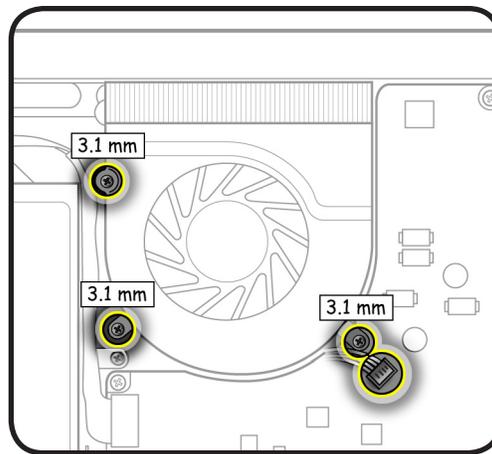



# Optical Drive


## First Steps

Remove:


- [Bottom case](#)



**Caution:** The optical drive is very fragile. Handle by the sides only.

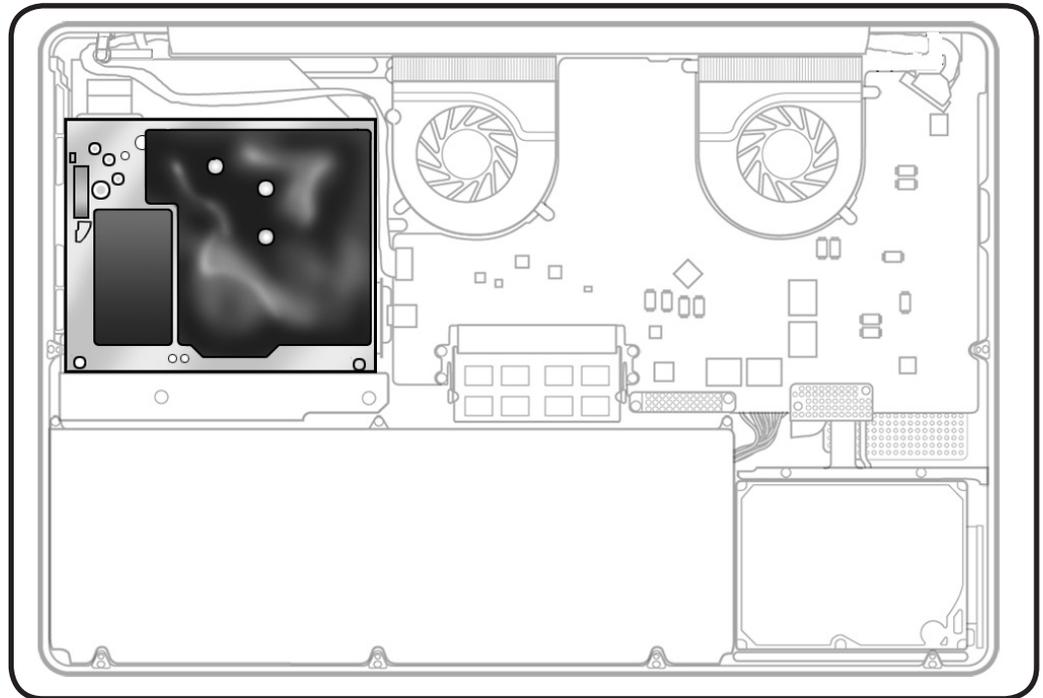

Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

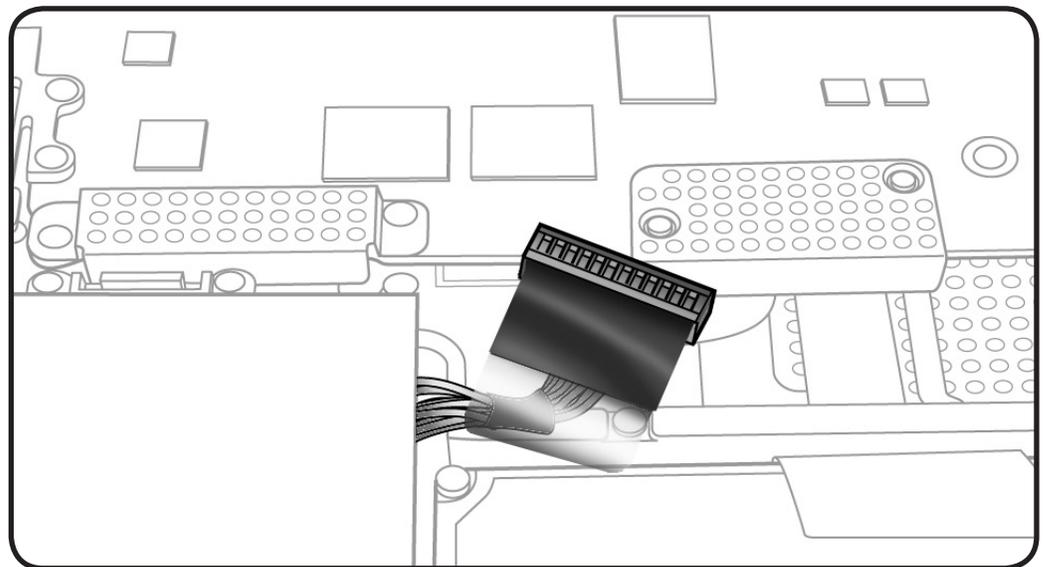




## Tools

Clean, soft, lint-free cloth

- ESD wrist strap and mat
- Magnetized Phillips #00 screwdriver
- Torx T6 screwdriver

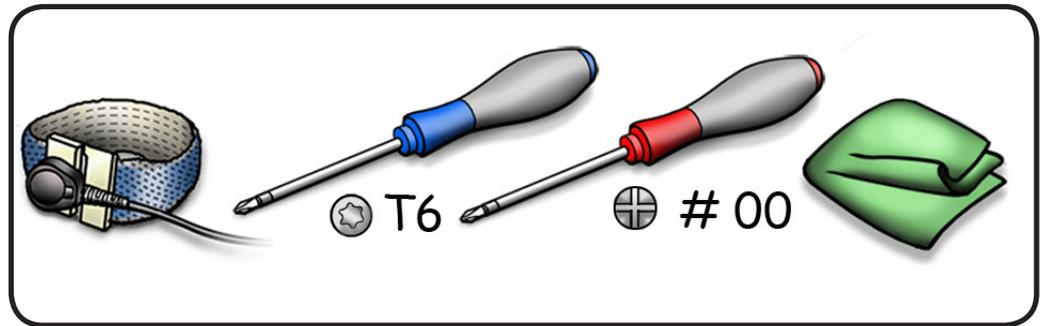

## Removal

- 1 With a black stick, carefully pry optical cable straight up and off logic board.




### Important

#### Replacement Note:

Install flex cable vertically onto logic board connector. If not, logic board pins could bend, causing an undetected disc symptom.


- 2 Remove 4 screws:
  - 1 Torx T6 (3.1-mm) 922-xxxx at top case boss
  - 3 Phillips #00 (3.5-mm) 922-8719 at optical drive
- 3 Disconnect remaining cables:
  - Bluetooth antenna
  - Camera cable (2)

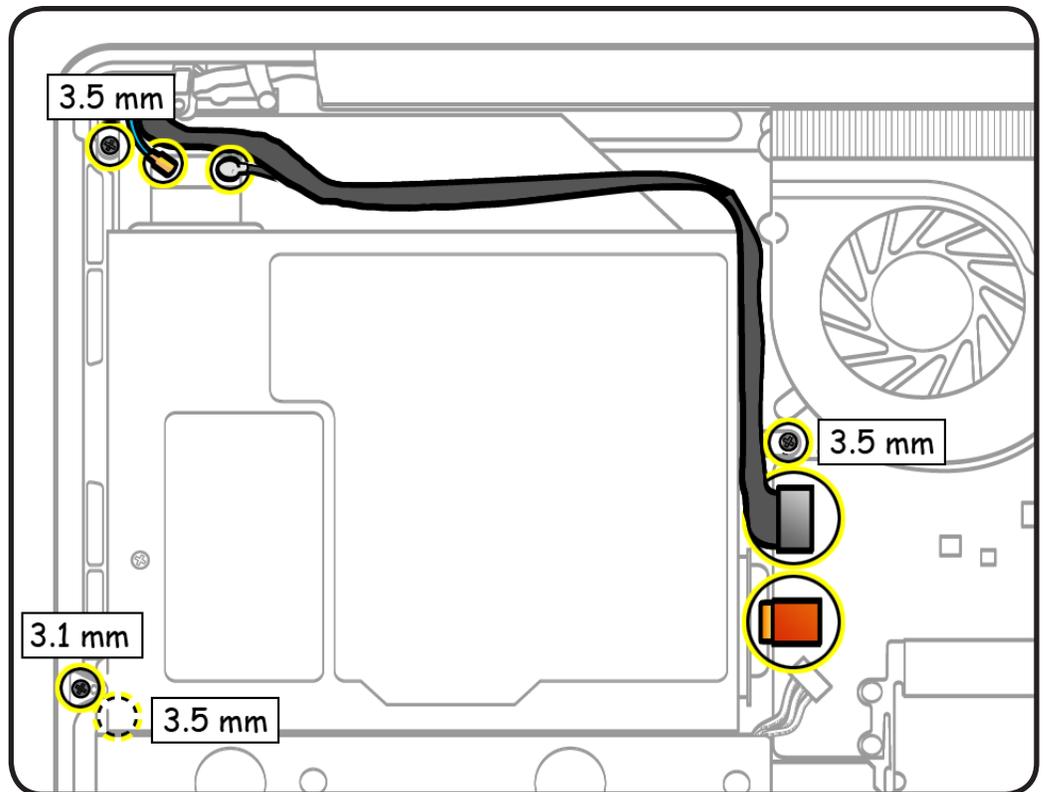




### Replacement

**Caution:** When connecting the camera cable, make sure it is fully connected; then place the shim behind the cable to secure it.

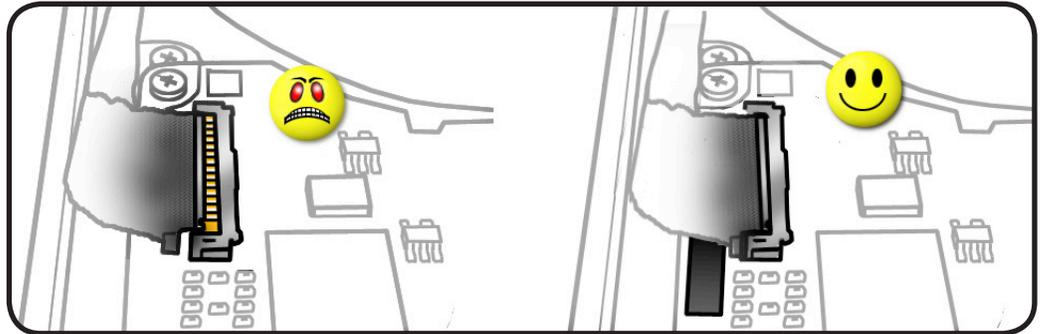


### Replacement

**Caution:** To avoid a short to the logic board, be sure to place EMI gasket on camera cable—positioned precisely where shown—**after** cable is fully connected to logic board and shim is in place.

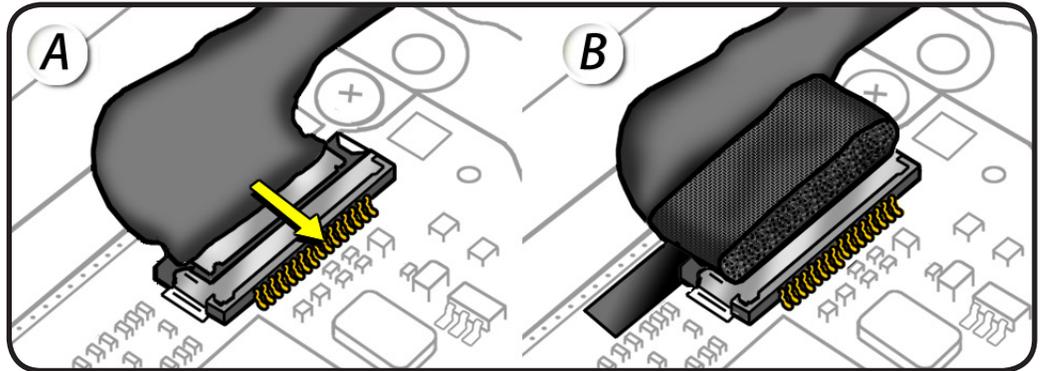


## 4 Tilt up optical drive.

**Replacement Note:** If reusing optical drive, do not remove Bluetooth. Otherwise, refer to [Bluetooth](#) to transfer it to new optical drive.

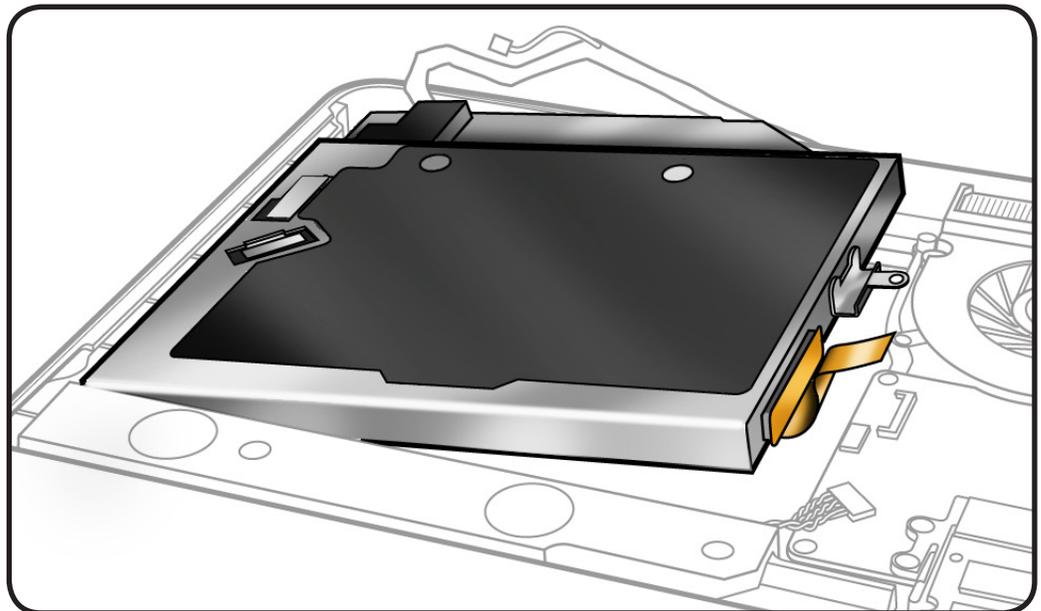



**5 Caution:** The optical drive is very fragile. Handle by the sides only!

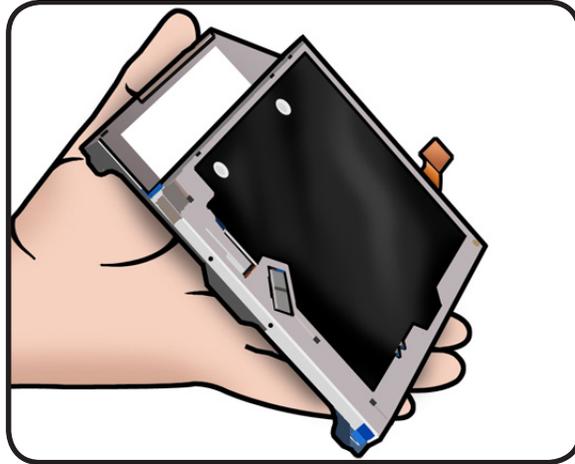



# Optical Drive Flex Cable


## First Steps

Remove:


- [Bottom case](#)
- [Optical drive](#)



**Caution:** The optical drive is very fragile. Handle by the sides only.

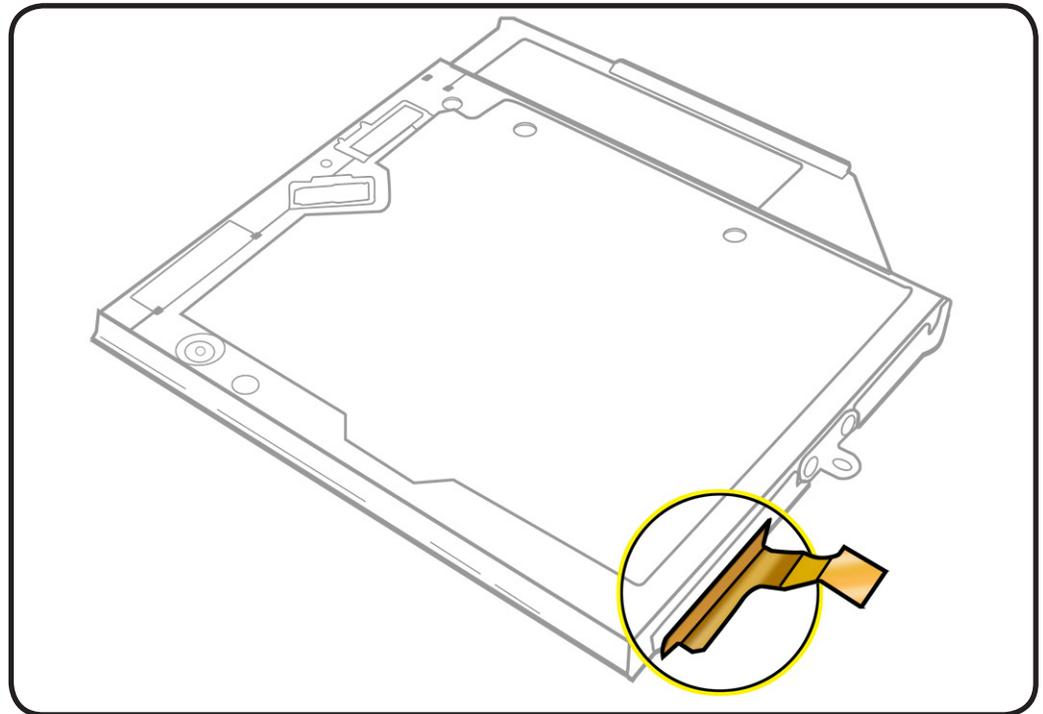


Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

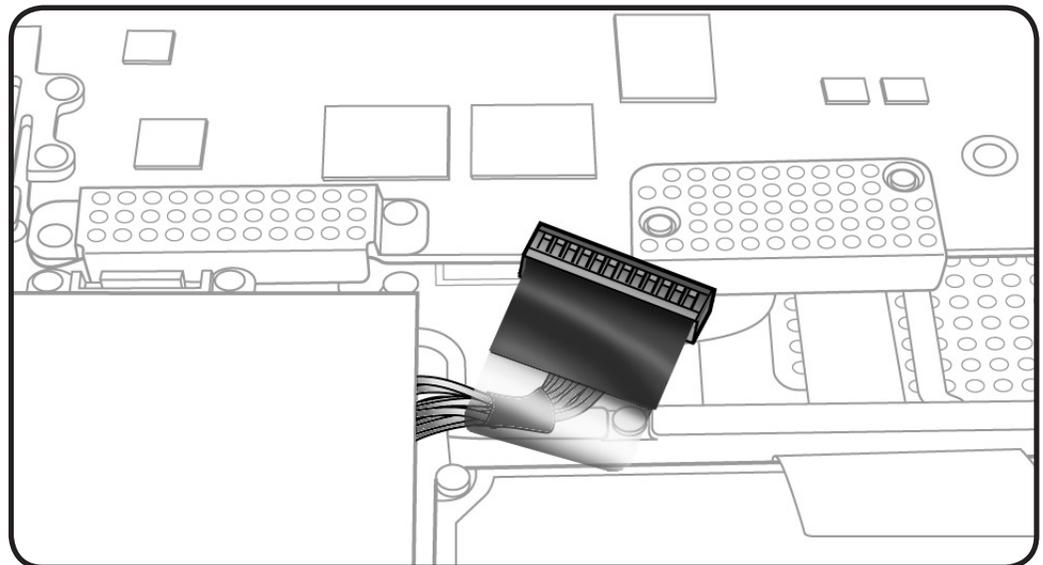




## Tools

- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Black stick

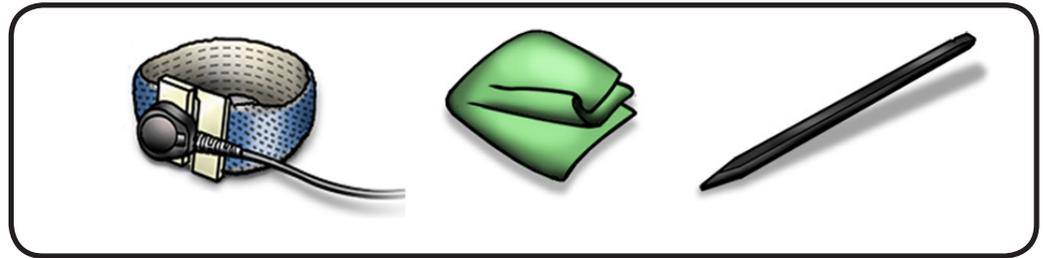

## Removal

- 1 Handle optical drive by sides only.
- 2 With a black stick or fingernail, carefully wiggle flex cable off optical drive.

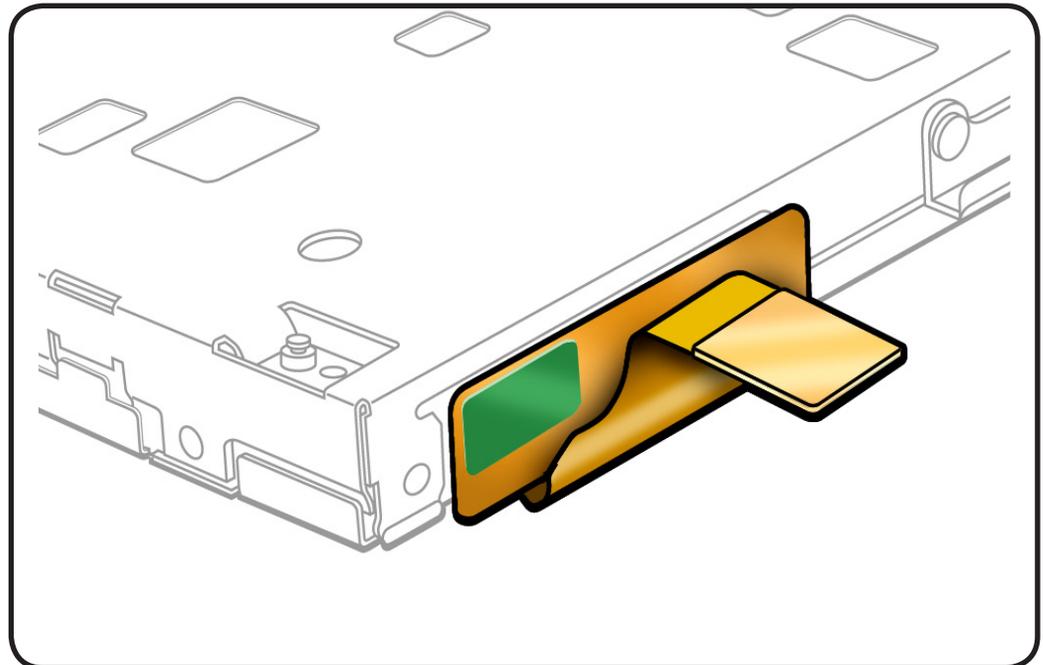



# Hard Drive Connector Cable


## First Steps

Remove:


- [Bottom case](#)
- [Hard drive bracket](#)
- [Hard drive](#)



Caution: Make sure data is backed up before removing the hard drive.

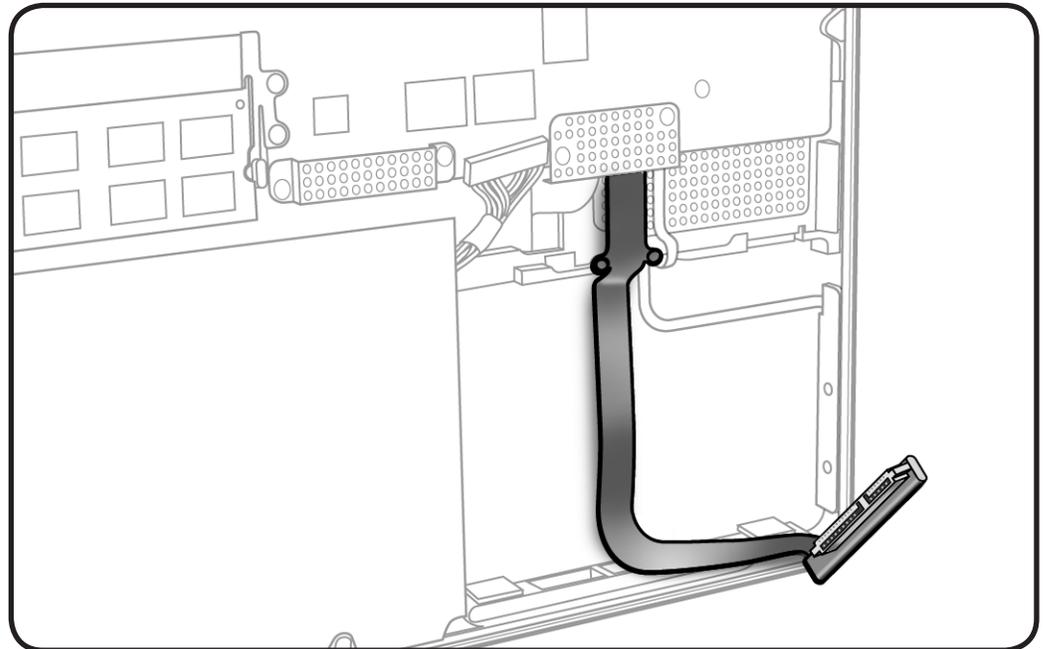


Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

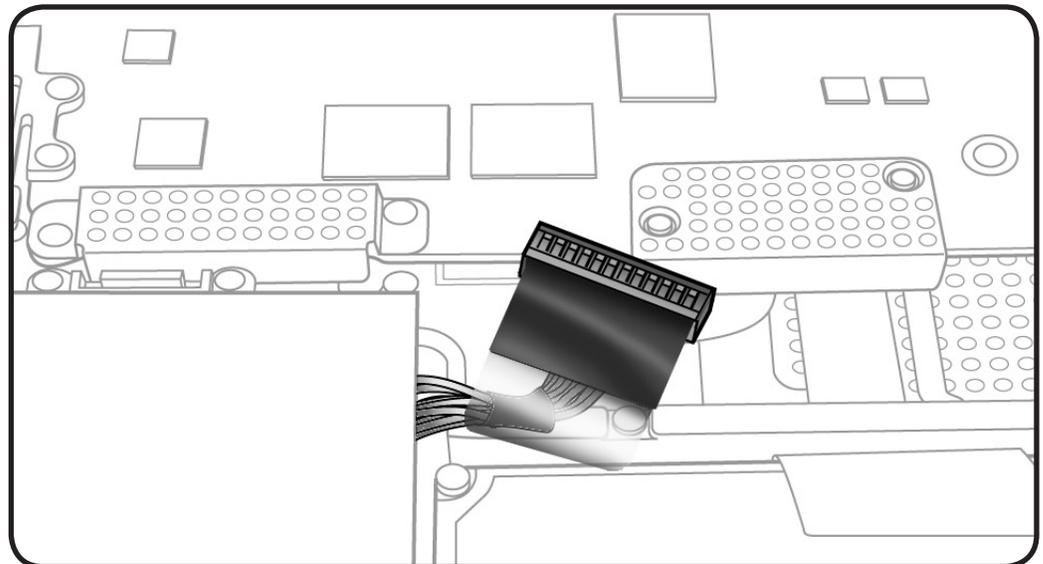



## Tools


- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Magnetized Phillips #00 screwdriver
- Black stick

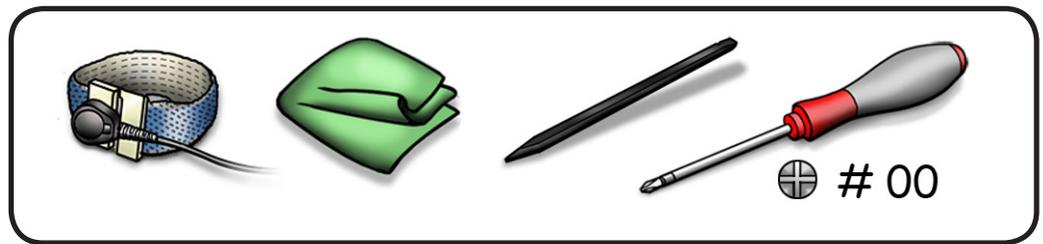


## Removal

- 1 Remove 4 screws:
  - 2 (1.8-mm) 922-8983 at shield
  - 2 (2.2-mm) 922-8329 at cable

- 2 Remove shield.

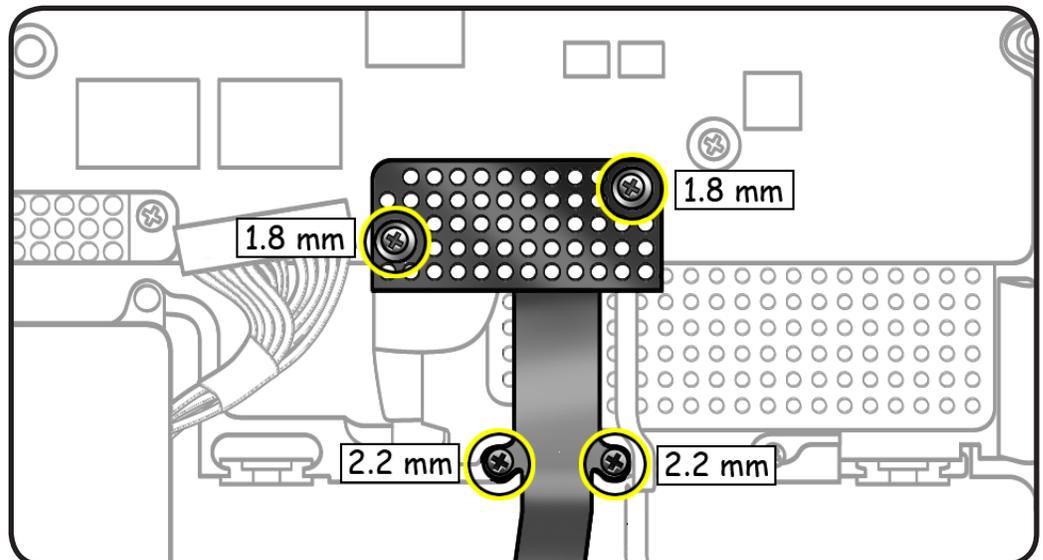

- 3 Use black stick to disconnect cable and carefully pry cable up from adhesive.

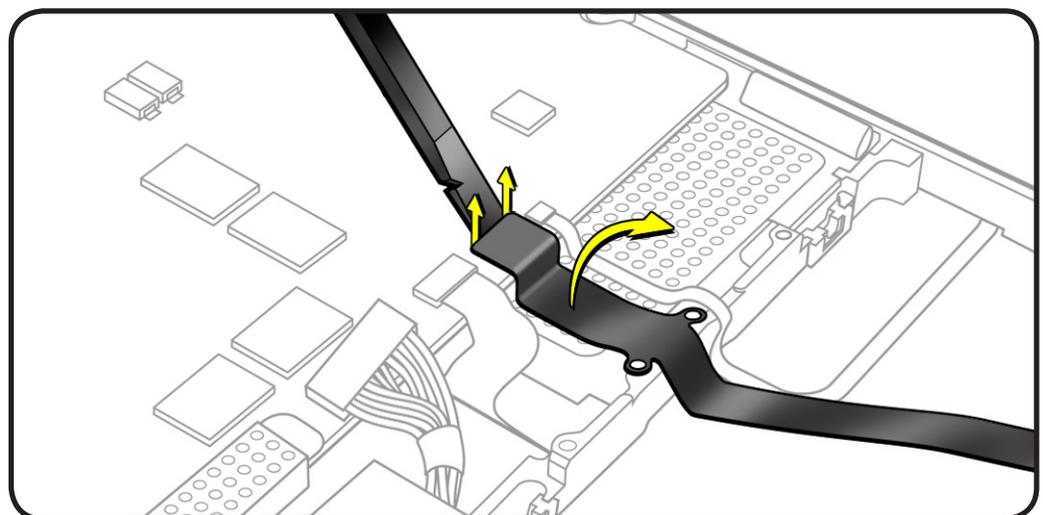



# Battery Indicator Light (BIL) Cable and Board


## First Steps

Remove:


- [Bottom case](#)
- [Hard drive bracket](#)
- [Hard drive](#)



Caution: Make sure data is backed up before removing the hard drive.

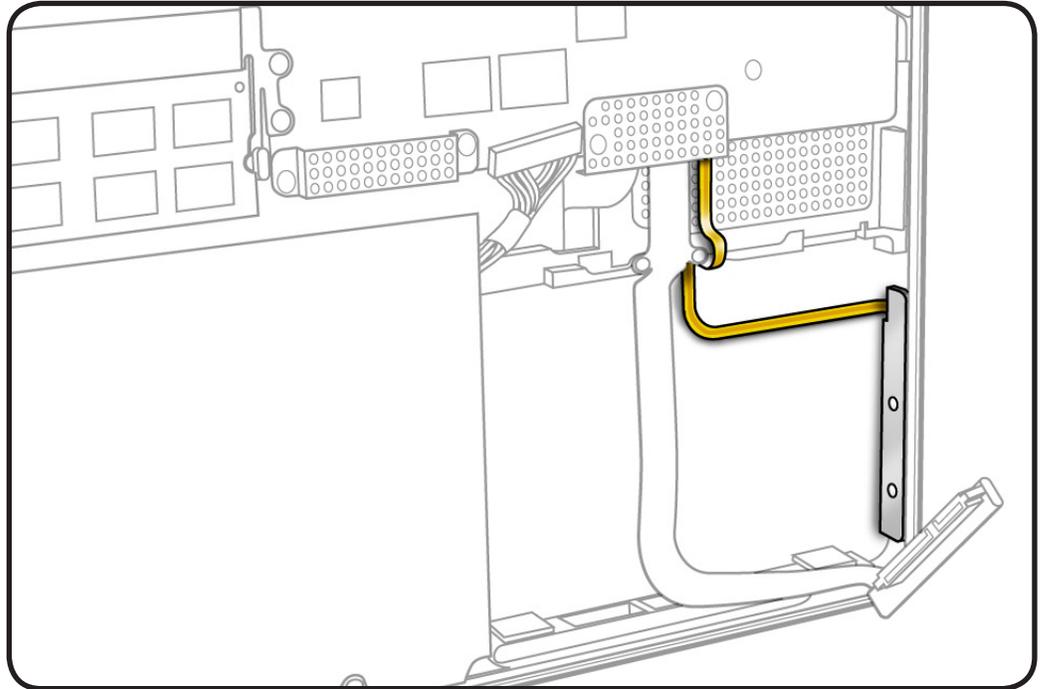


Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

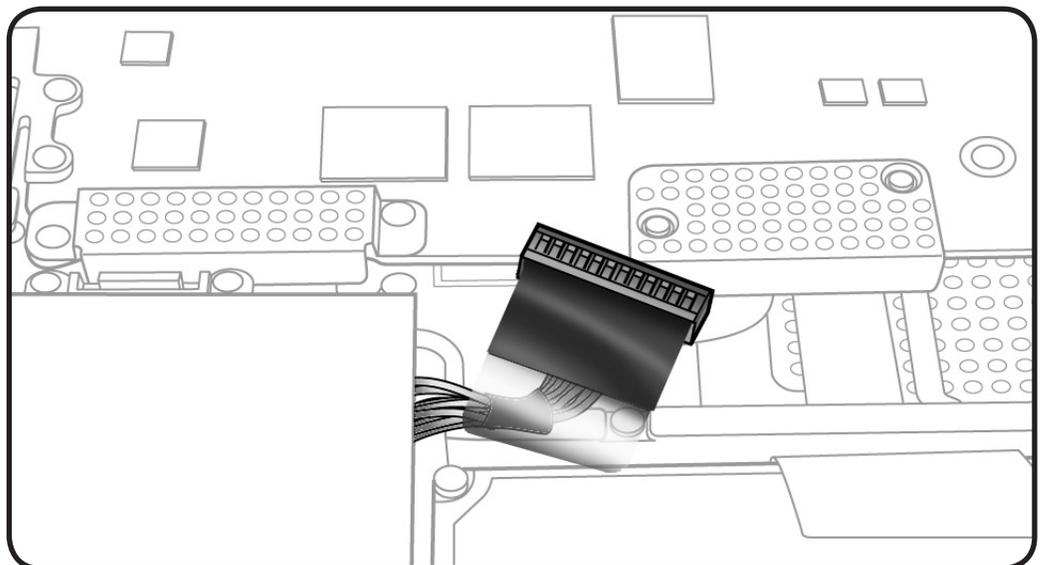



## Tools


- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Magnetized Phillips #00 screwdriver
- Black stick
- Piece of tape

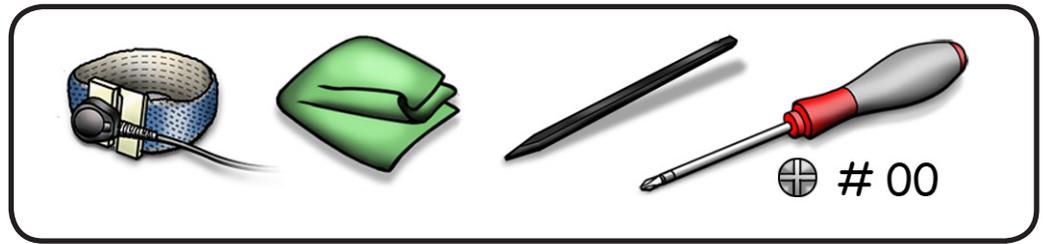

## Removal


- 1 Remove 2 (1.8-mm) 922-8983 screws from the shield.

- 2 Remove shield.

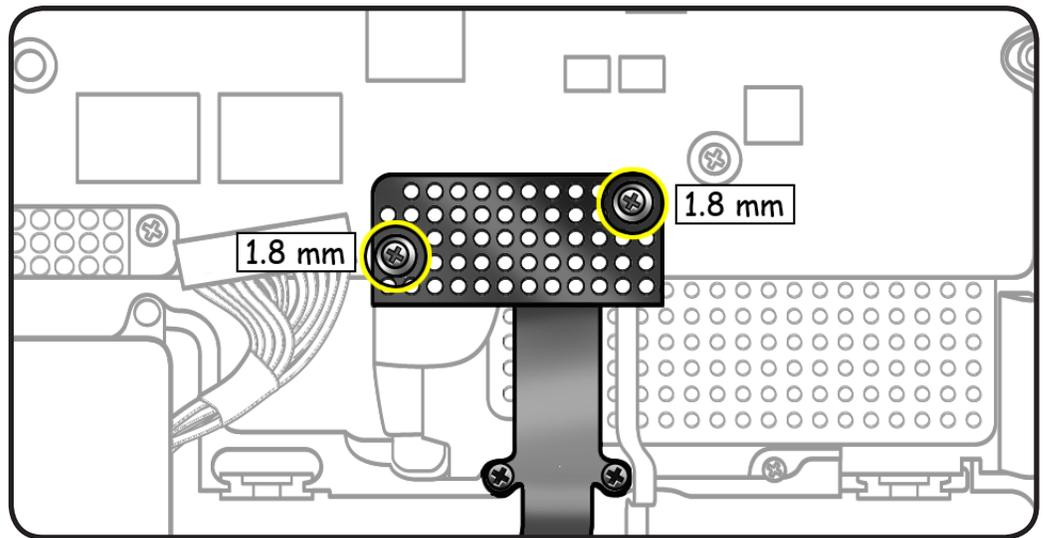

- 3 Place tape over BIL button on outside of top case.


- 4 Remove 2 (2-mm) 922-xxxx screws from BIL board.

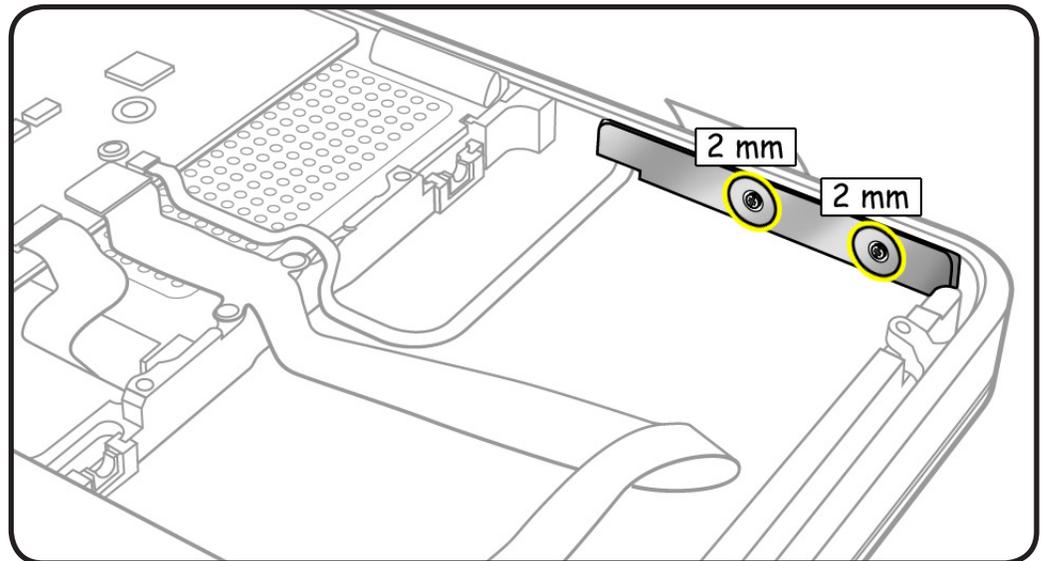



- 5 Flip over board.
- 6 Lift lever to disconnect cable from BIL board and from logic board.


**Note:** The tape will prevent the BIL button from falling out of top case.

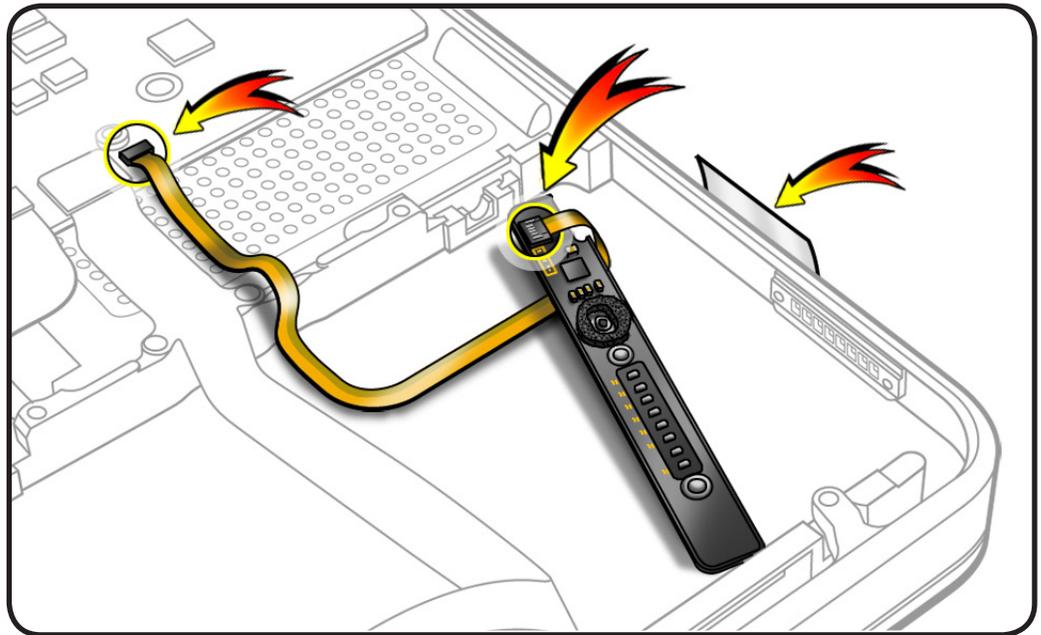

**Replacement Note:**

Before replacing the BIL board, check that:

- the long rubber gasket is assembled on top of the LED row
- the BIL button is installed in the top case

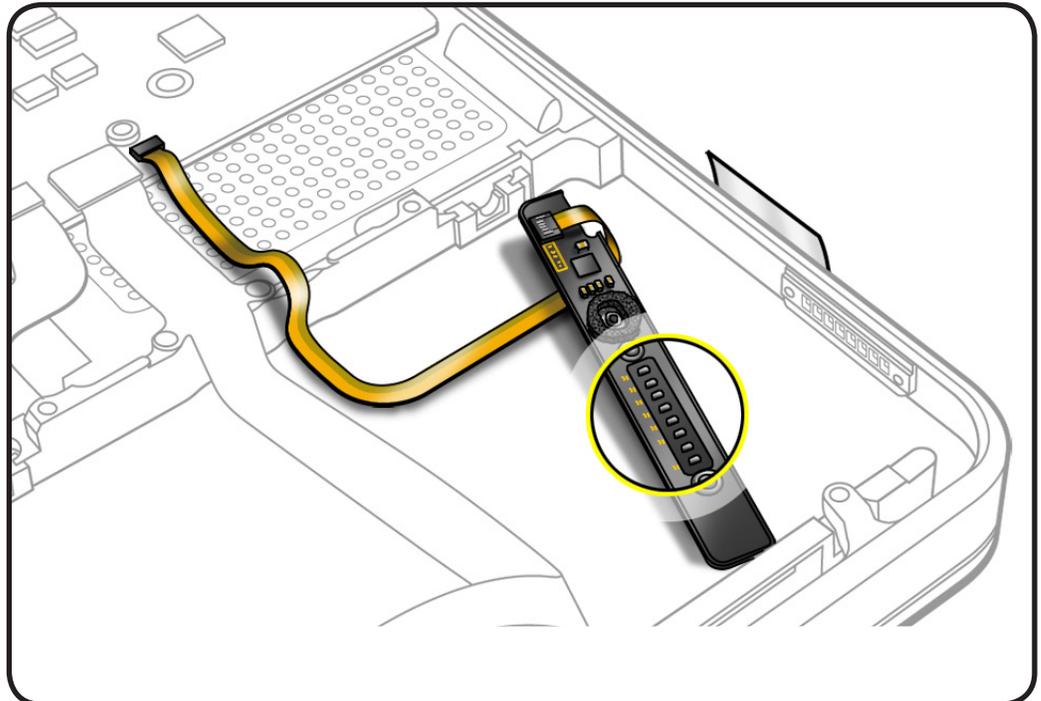



# Hard Drive Bracket, Front


## First Steps

Remove:


- [Bottom case](#)
- [Hard drive bracket](#)
- [Hard drive](#)



Caution: Make sure data is backed up before removing the hard drive.

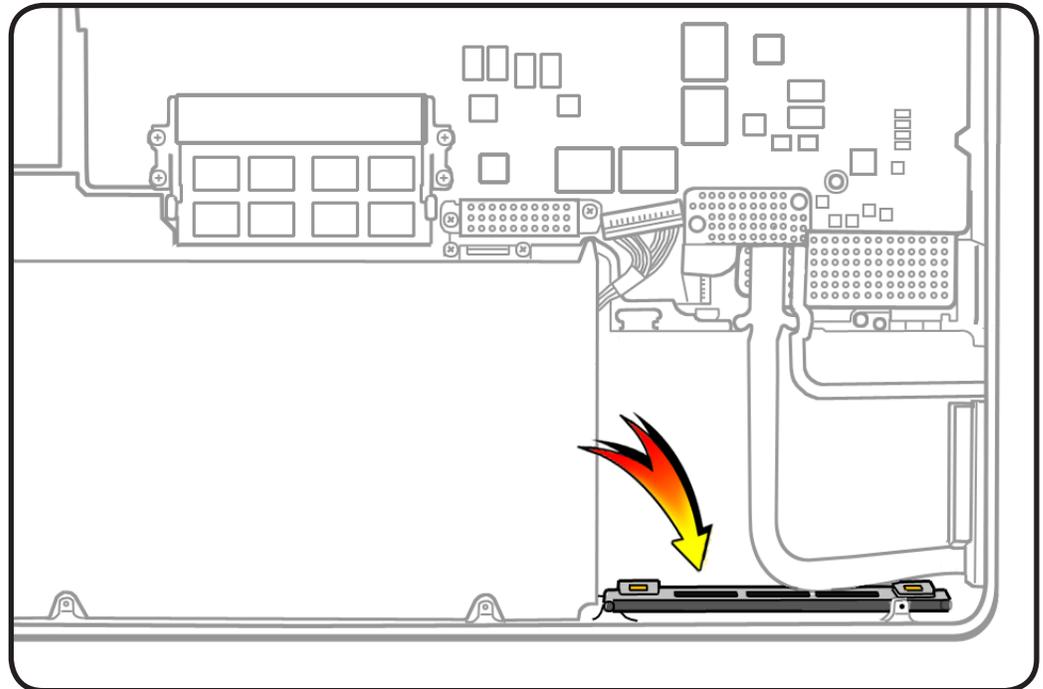


Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

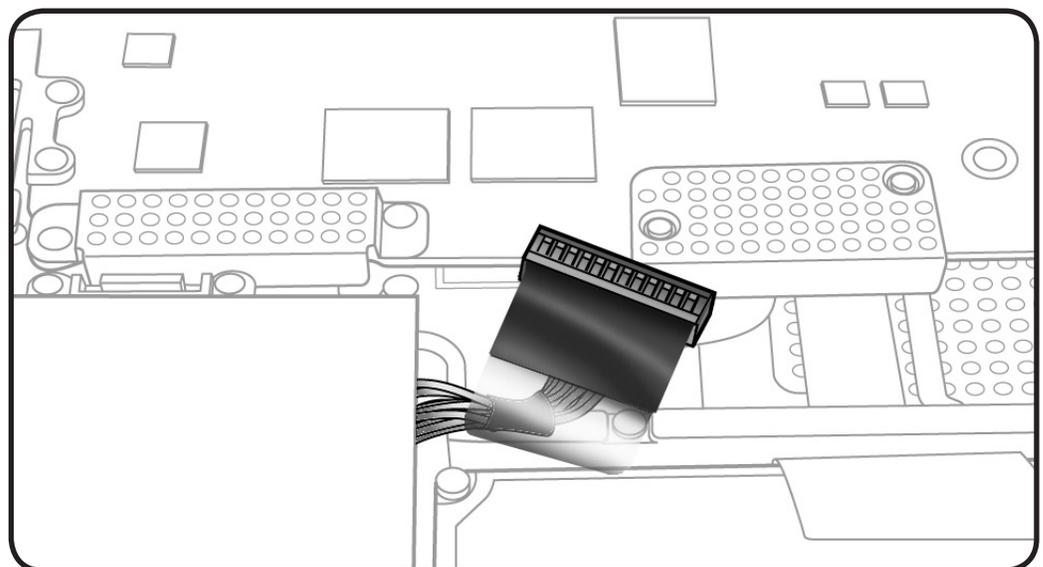




## Tools

- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Magnetized Phillips #00 screwdriver
- Black stick

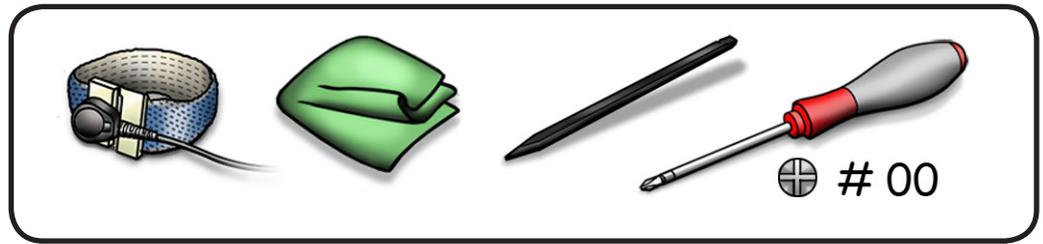


## Removal

- 1 Remove 2 (10-mm) 922-8648 screws.

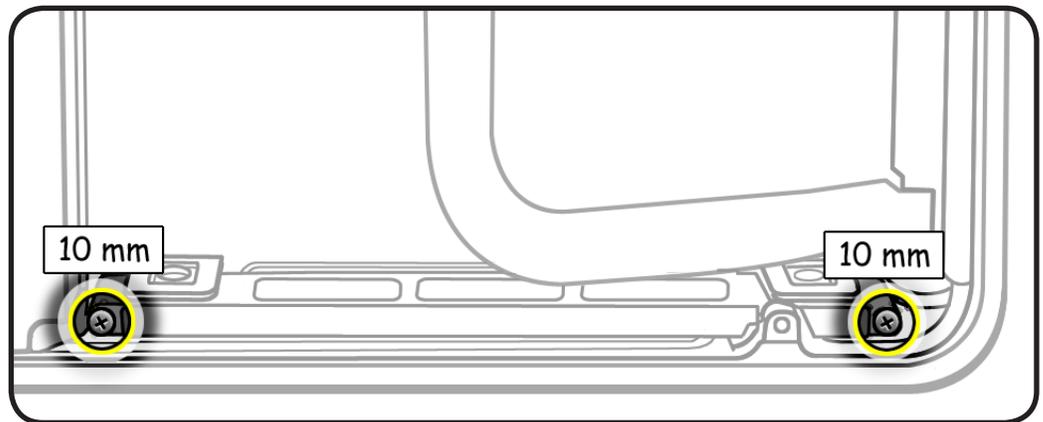

- 2 Tilt out bracket.

**Replacement Note:**  
Make sure 2 rubber gaskets are installed before installing screws.

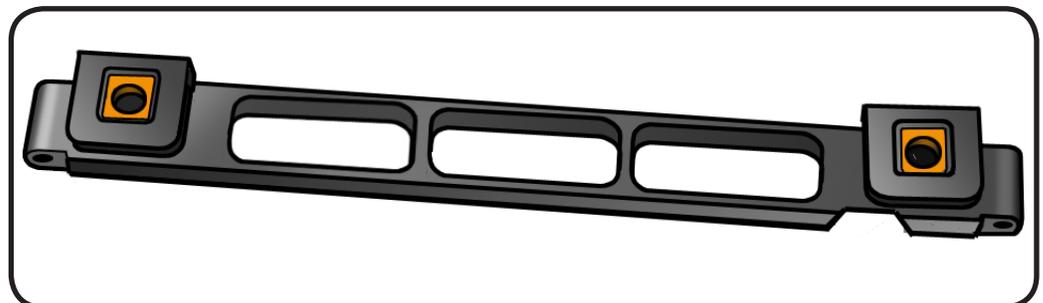




# Display Assembly


## First Steps

Remove:

- [Bottom case](#)
- [Camera cable guide](#)
- [LVDS cable guide](#)

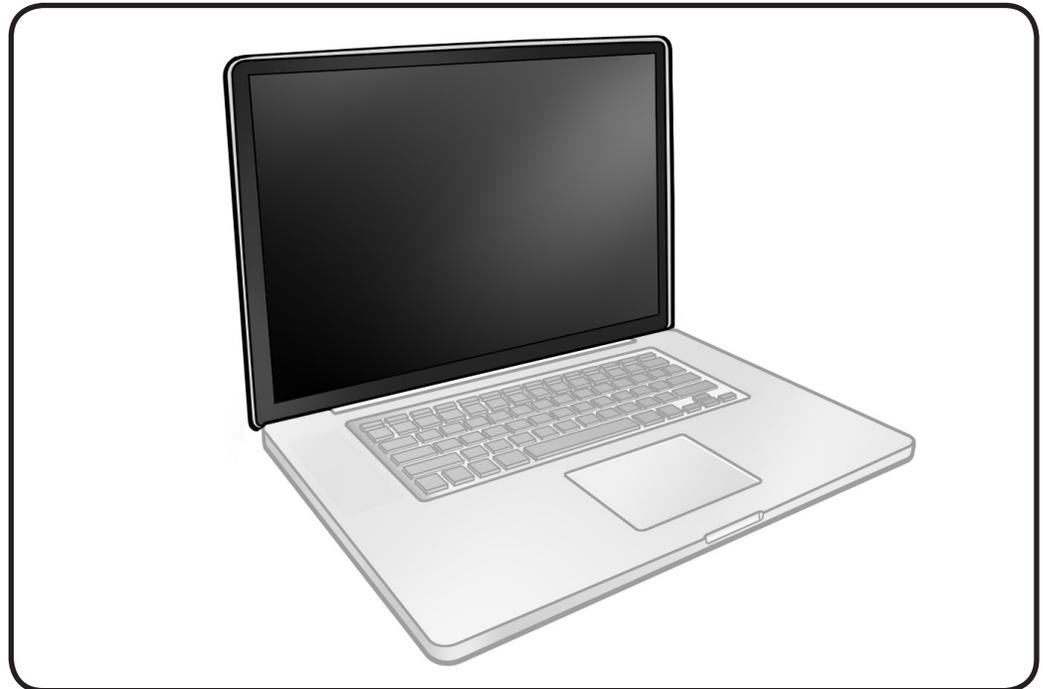


Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

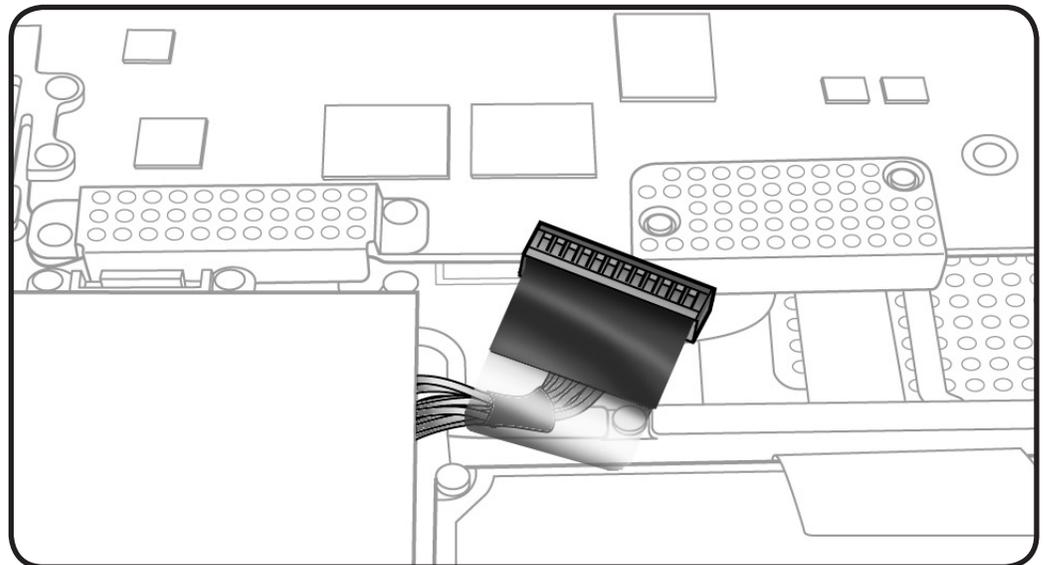



## Tools

- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Magnetized Phillips #00 screwdriver
- Torx T6 screwdriver
- Foam wedge fixture

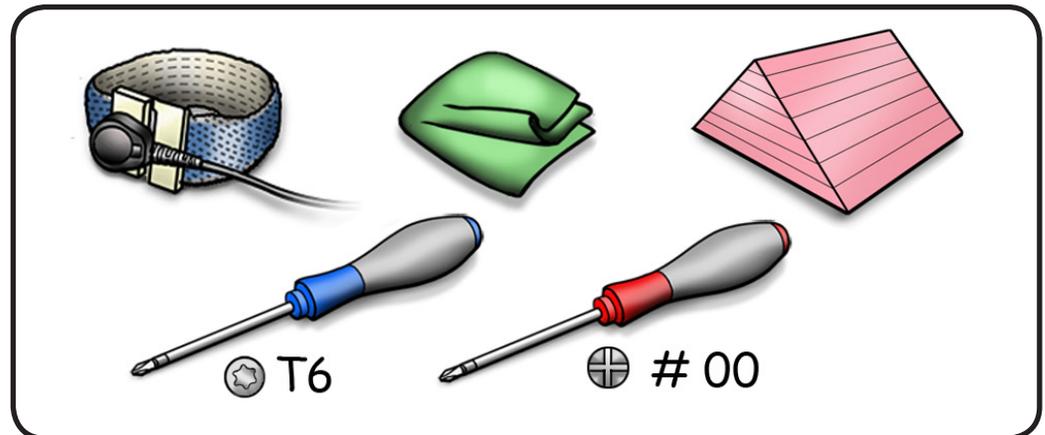


## Removal

**Caution:** When disconnecting camera cable, remove gasket and shim **before** disconnecting cable.


**Caution:** Avoid touching shim adhesive; body oils degrade adhesive.

- 1 Locate camera cable and Bluetooth connectors.

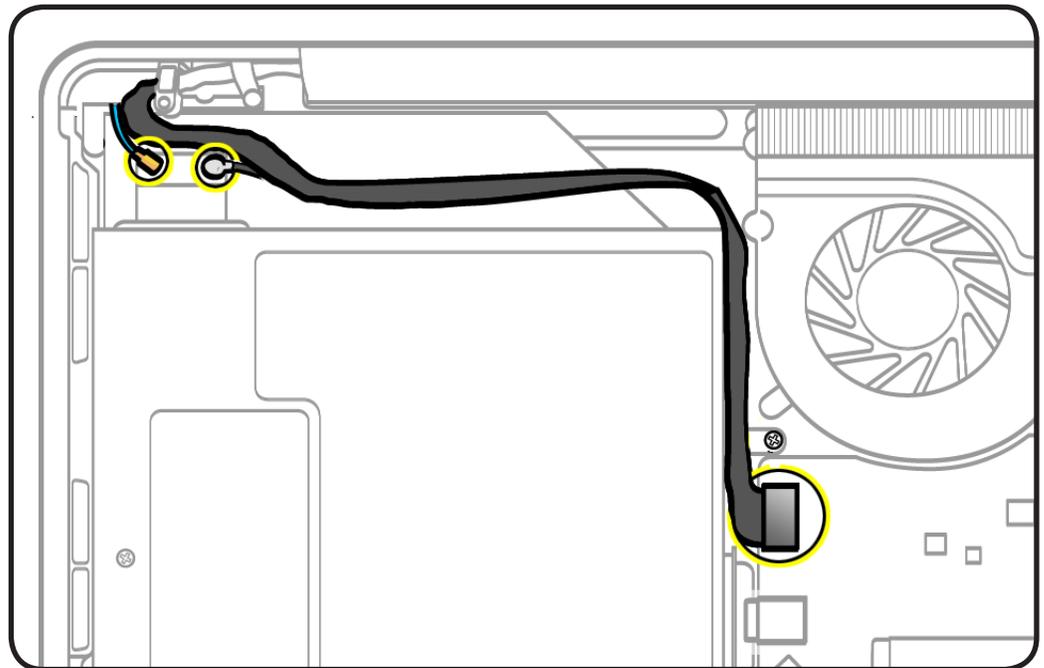


- 2 Peel EMI gasket off camera cable connector (A).

- 3 Disconnect camera cable from logic board (B). Pull cable on same horizontal plane as the logic board.

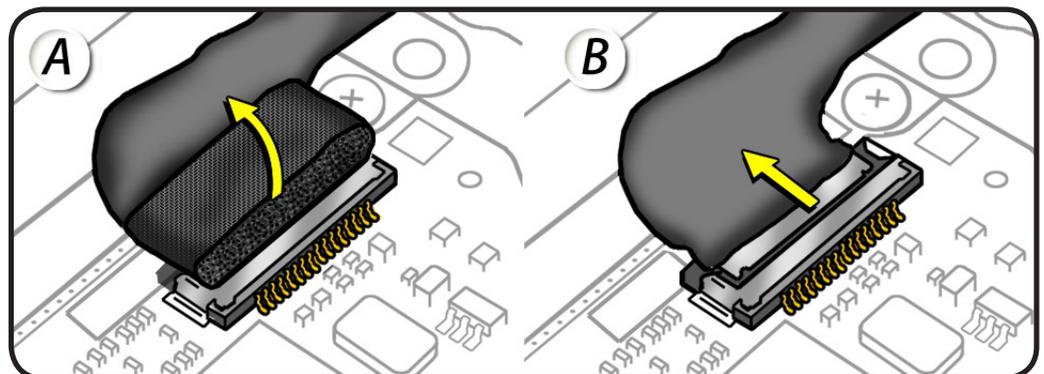





**Caution:** Do not pull on the black tab or the LVDS lock bar. Pulling on the tab to remove the LVDS cable will likely result in the metal LVDS lock bar being torn off the cable body. This bar is only to be used to disengage the lock from the LVDS connector. A broken lock bar results in a display assembly replacement.

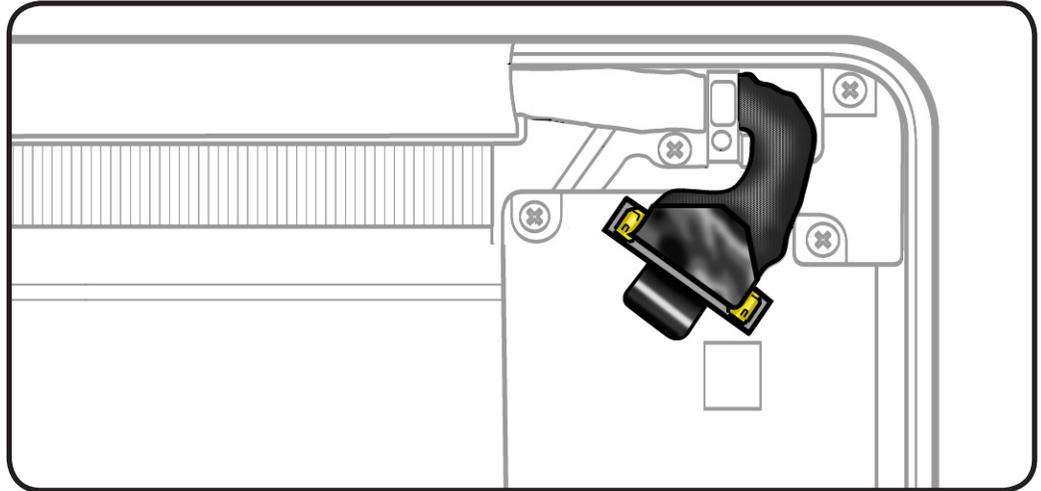


**4** Peel EMI gasket off the LVDS cable, toward the fan.

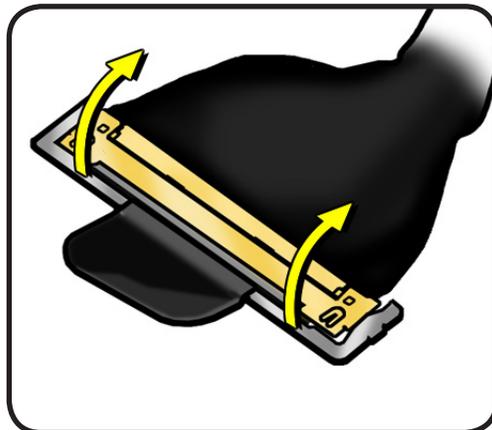

**5** To disconnect LVDS cable grasp black tab and gently swing LVDS lock bar up and back to unlock the cable.

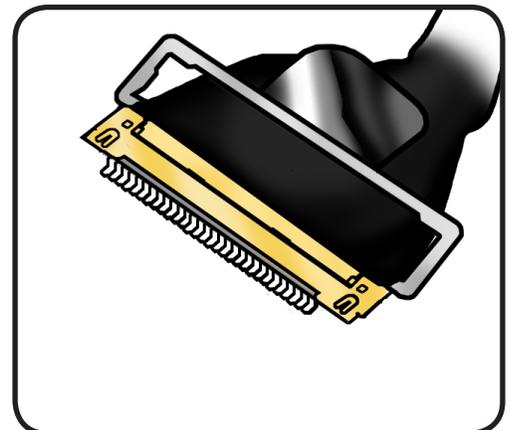


**6** Slide cable out of connector by pulling the cable. Do not pull the black tab or lock bar.

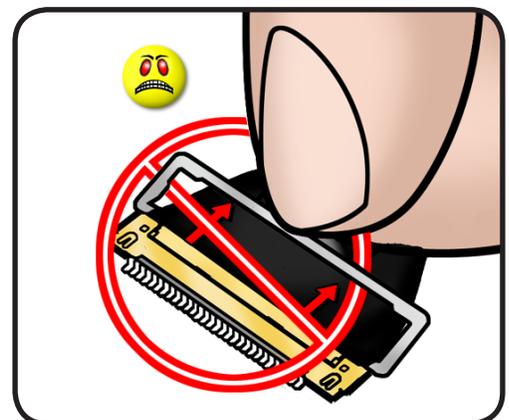



- 7 Open the display to 90 degrees, and place the computer on the foam wedge service fixture.
- 8 Remove 6 (6.5-mm) Torx 922-8925 screws:
- 9 Separate display assembly from top case.

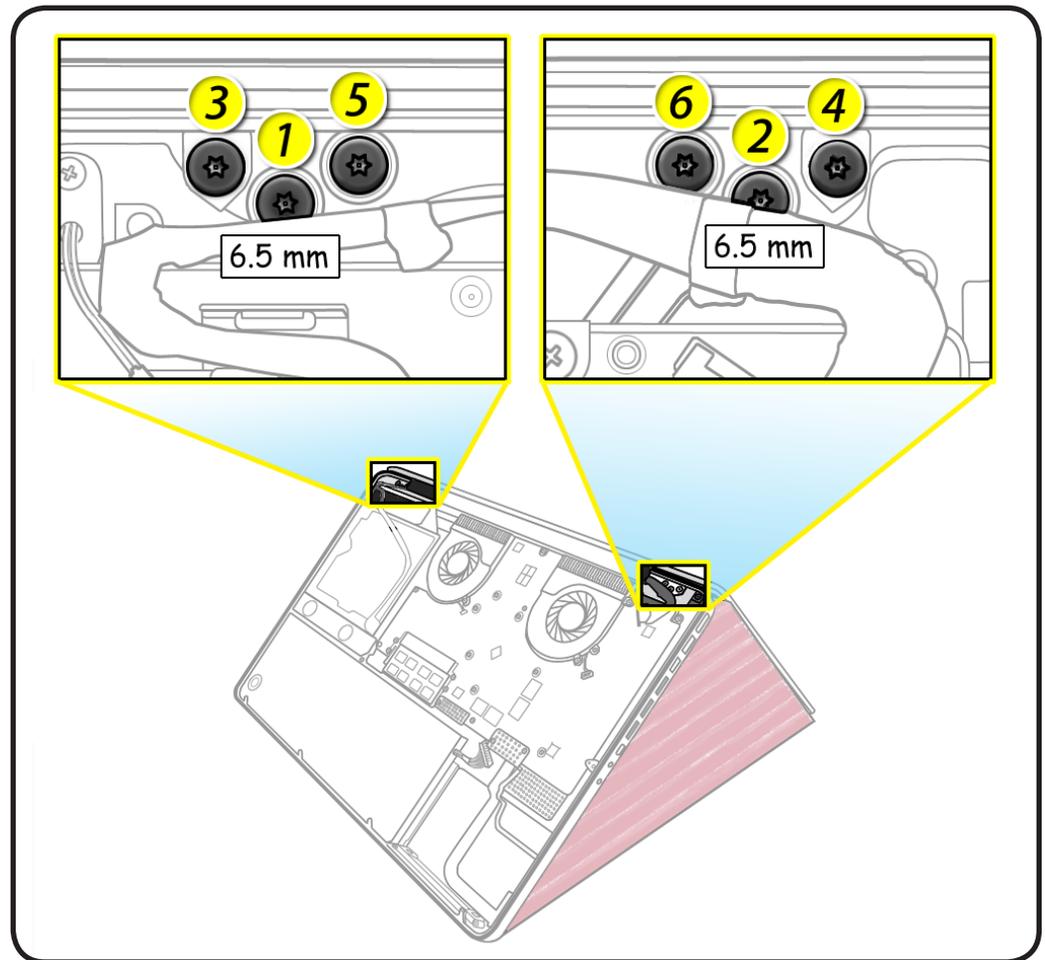




## Replacement

**Important:** Before returning a display assembly, be sure to


- remove [clutch cover](#)
- remove [AirPort Card](#) and transfer it to the new display assembly
- reinstall [clutch cover](#)
- remove and transfer the protective film from the replacement display to the defective display

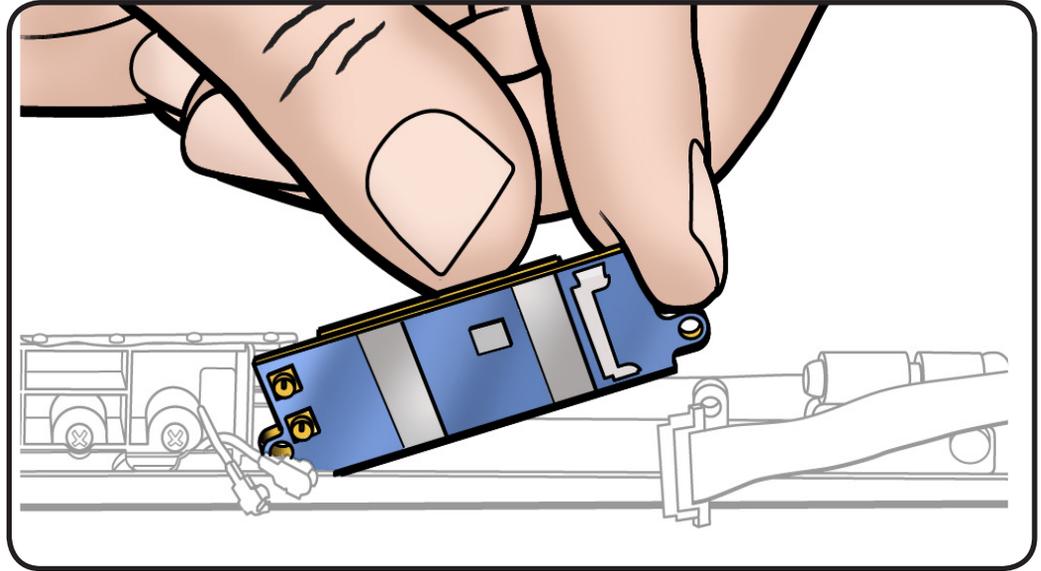

**Important:** Before installing a new display assembly, be sure to install the [AirPort Card](#). With the computer assembled, test the AirPort card for normal operation.


## Aligning Display to Top Case

- 1 Place the display on the foam wedge service fixture.
- 2 Install only the center screws:
- 3 Move computer from wedge, and carefully close display.

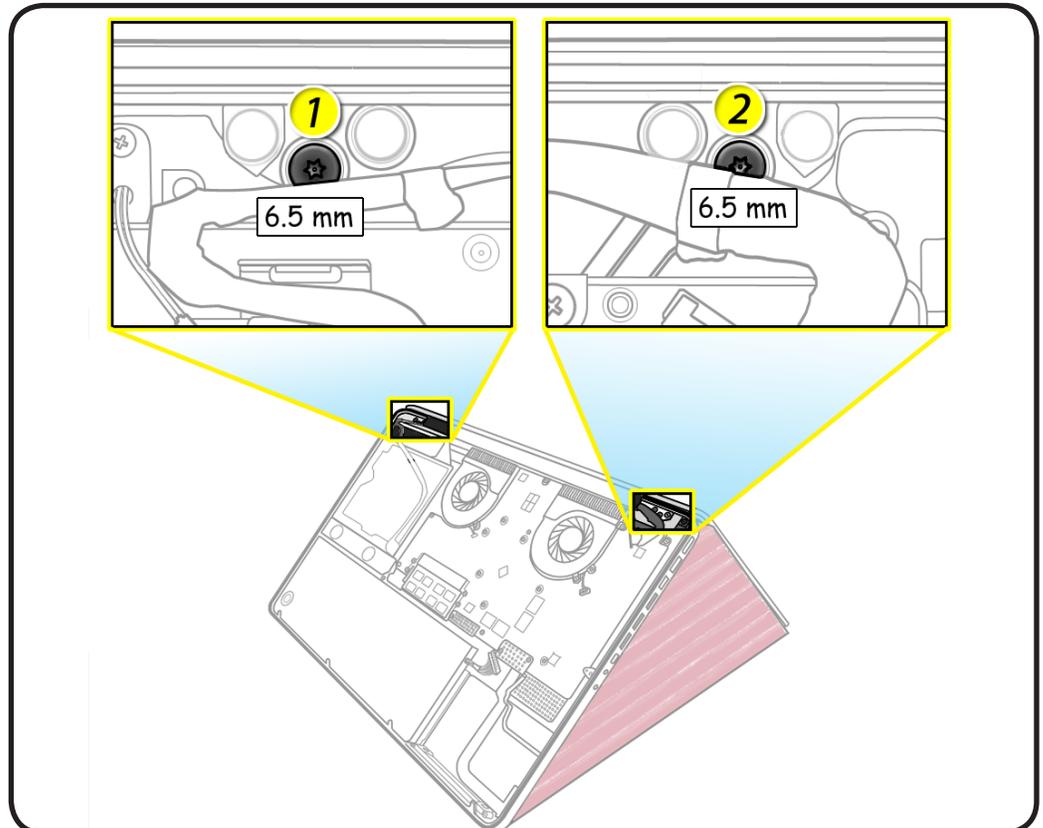



- 4 With computer closed and flat on table, check alignment where the display meets the top case.
- 5 If necessary, slightly loosen the two center screws, adjust alignment, and resecure screws.
- 6 With the proper alignment verified, install the remaining screws (3-6) in the order shown while the computer is still closed.

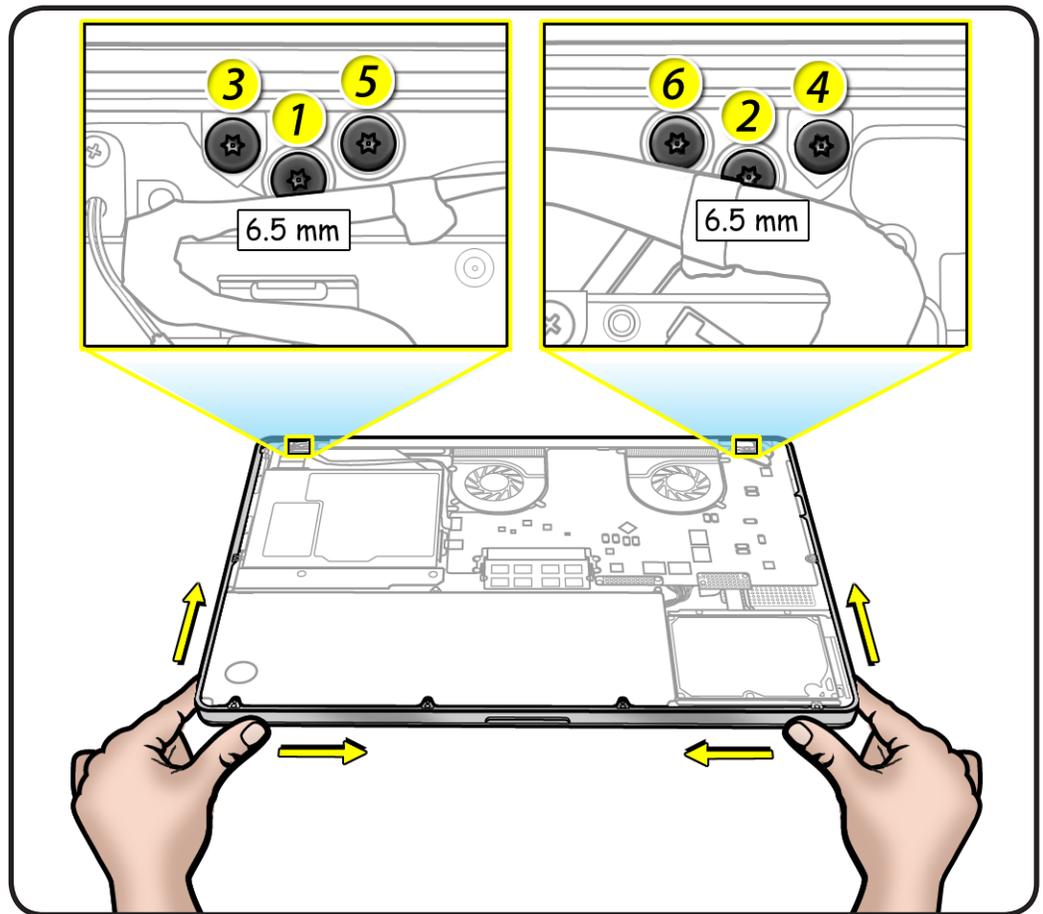


**Replacement Caution:**

When connecting the LVDS and camera cables, make sure they are fully connected. For the camera cable, place shim behind connector so it helps secure the cable.



**Replacement Caution:** To prevent no video or a short to the logic board, be sure to place EMI gasket on camera cable—positioned precisely where shown—**after** cable is fully connected to logic board and shim is in place.

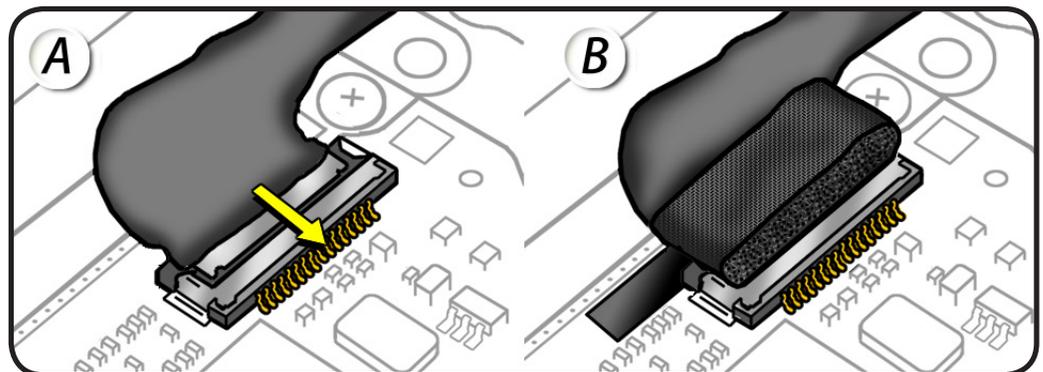




## Display Hinge Behavior

The MacBook Pro models have a unique counterbalanced clutch system and was designed so that when the display is vertical with respect to the ground, it will remain in place regardless of the angle of the base.

Moving the display past vertical allows the hinges to release and the display to close. This is normal behavior and no repair is necessary. Refer to <http://support.apple.com/kb/HT3304> for more information and to watch a video of the hinge behavior.

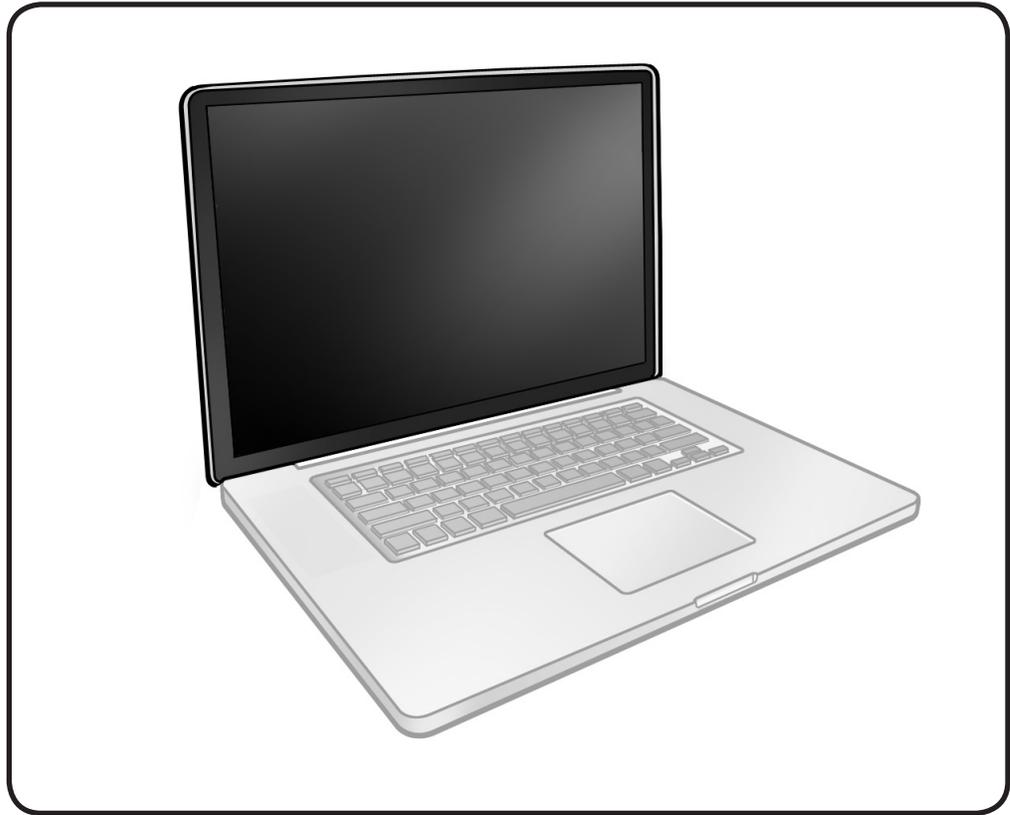




# Display Clutch Cover


## First Steps

Remove:

- [Bottom case](#)
- [Camera cable guide](#)
- [LVDS cable guide](#)
- [Display assembly](#)

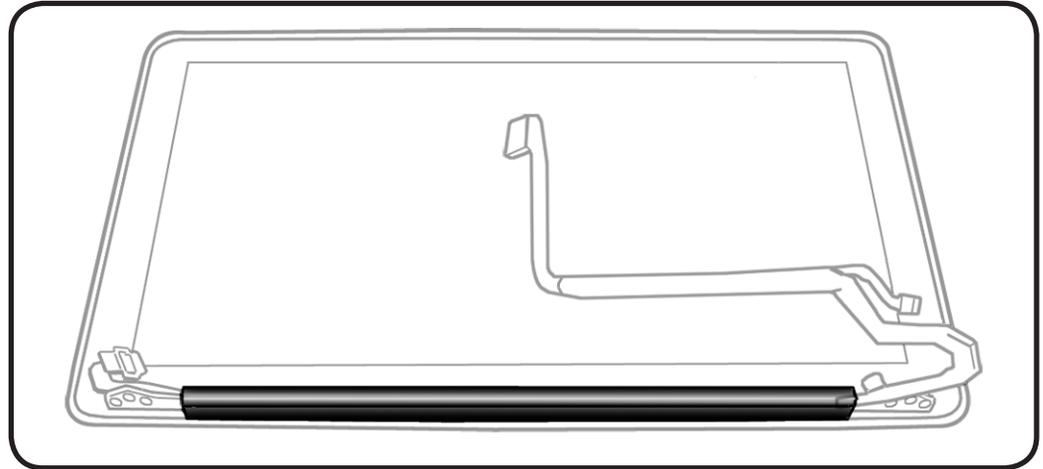


Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

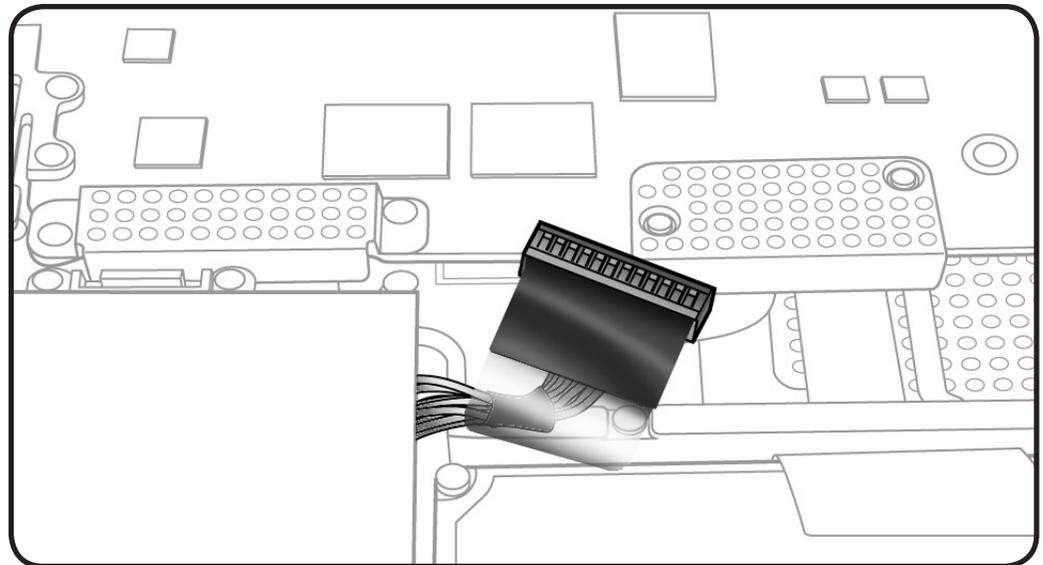

## Tools


- Clean, soft, lint-free cloth
- ESD wrist strap and mat

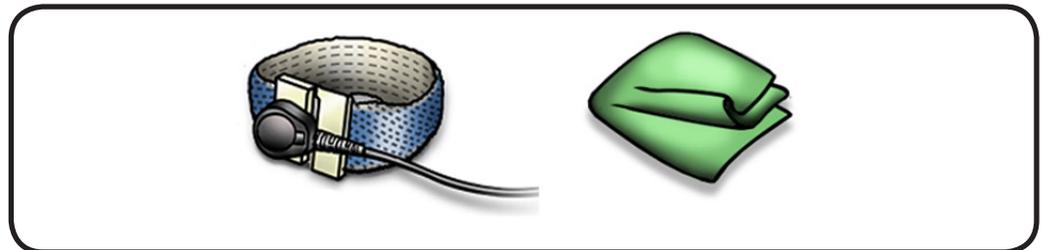




## Removal


- 1 Cover display face with clean, soft cloth.

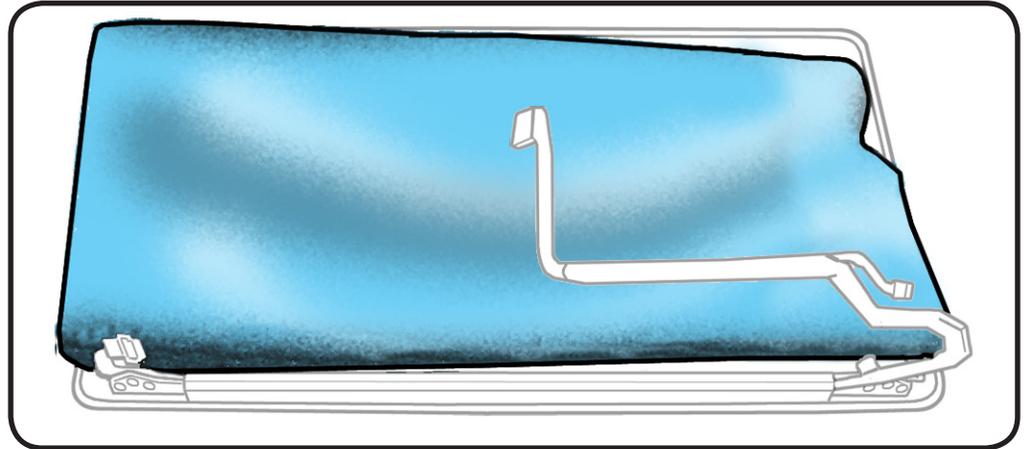

- 2 Holding left hinge, slide clutch cover 1/4 inch (6.35 mm) away from the LVDS cable.

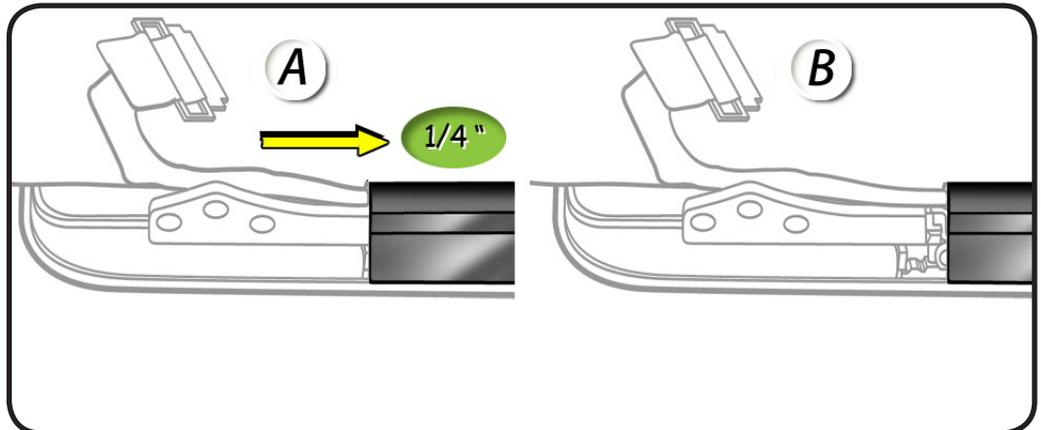


- 3 Press down on clutch cover to loosen 4 hooks inside.

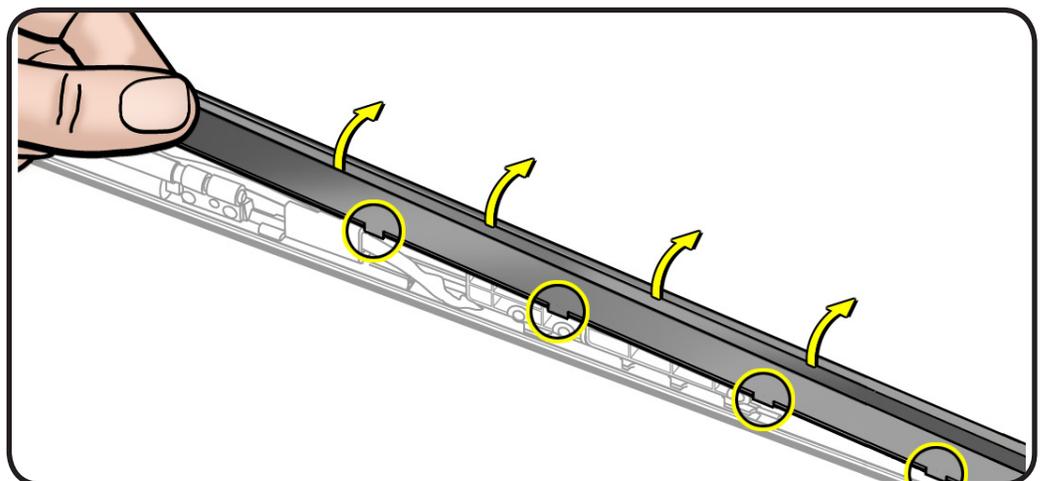



**4** Tilt up end of clutch cover as you roll it toward display face.

**5** Remove clutch cover.

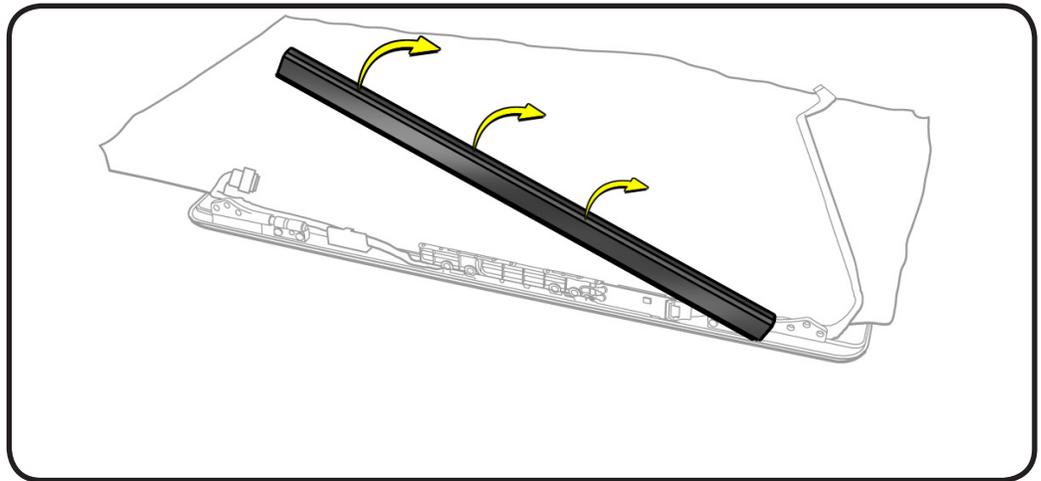


## Replacement

**1** Note shape of clutch cover:


- flat at bottom
- curved at top

**2** Make sure flat edge is at bottom of display.

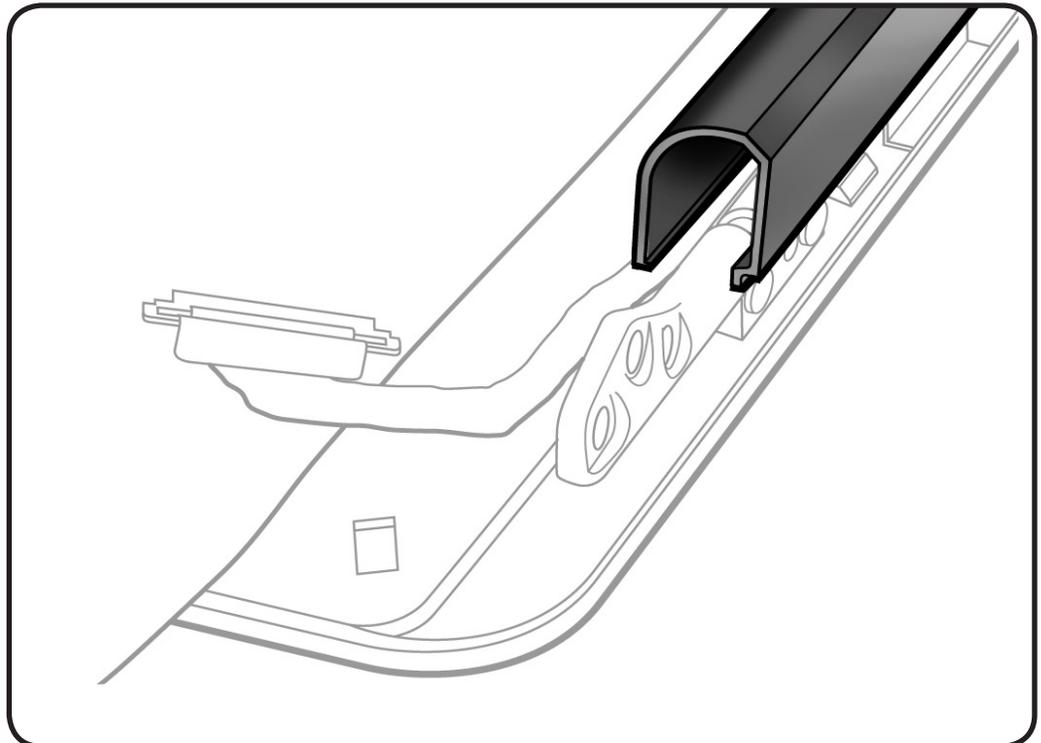





- 3** Position clutch cover onto end with longer cable.
- 4** Lower clutch cover onto display assembly.
- 5** Listen for snapping sound as hooks engage.
- 6** Check for good fit.  
Avoid:
  - gaps
  - bulges
  - pinched cables

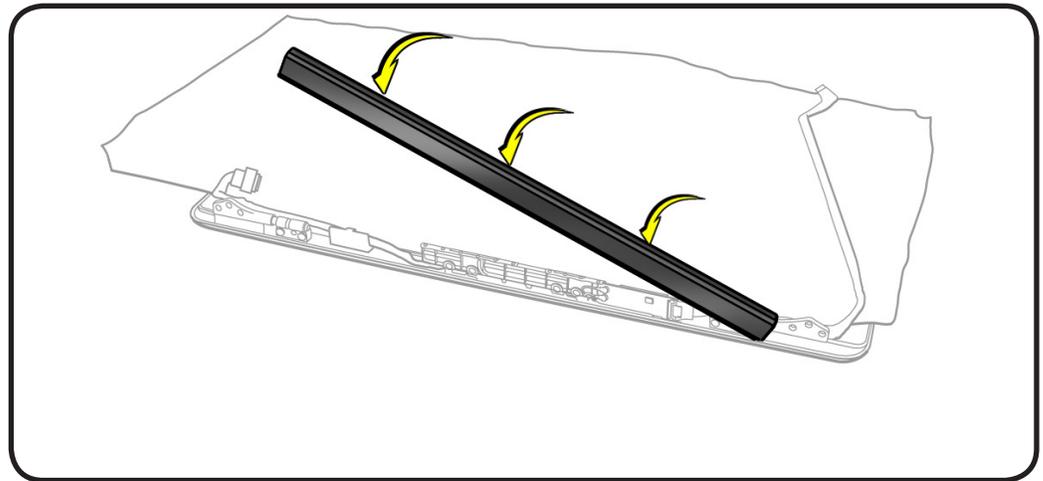



# Cable Clip for AirPort Card

Refer to [AirPort Card](#)

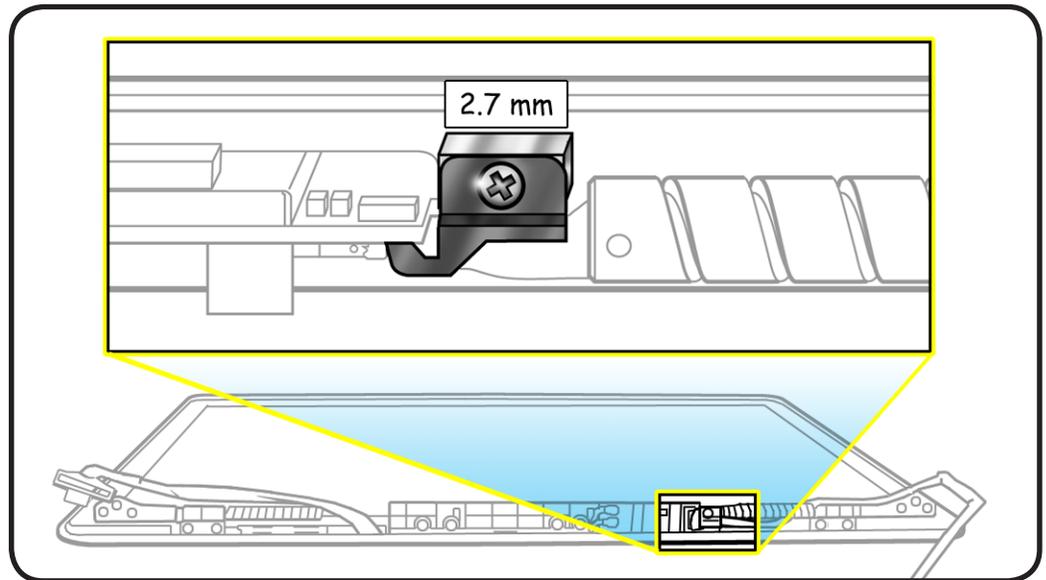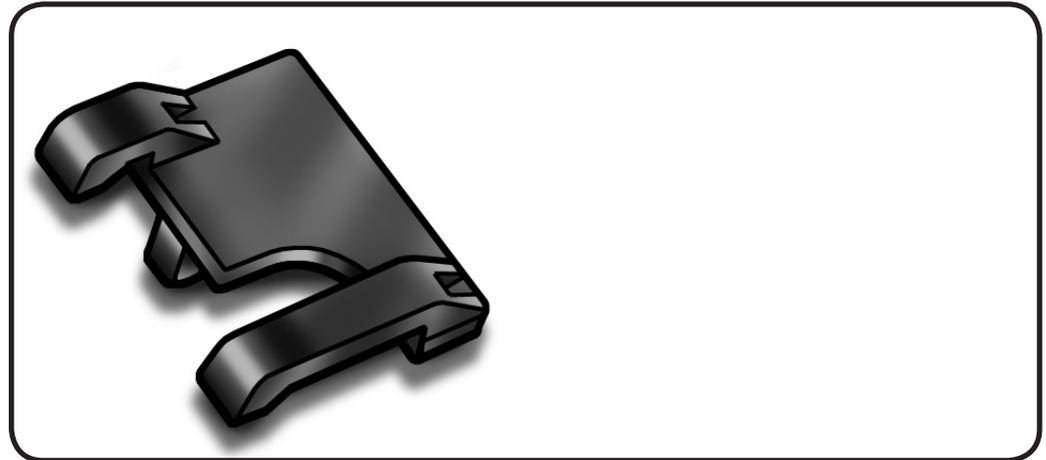




# AirPort Card


## First Steps

Remove:

- [Bottom case](#)
- [Camera cable guide](#)
- [LVDS cable guide](#)
- [Display assembly](#)
- [Display clutch cover](#)

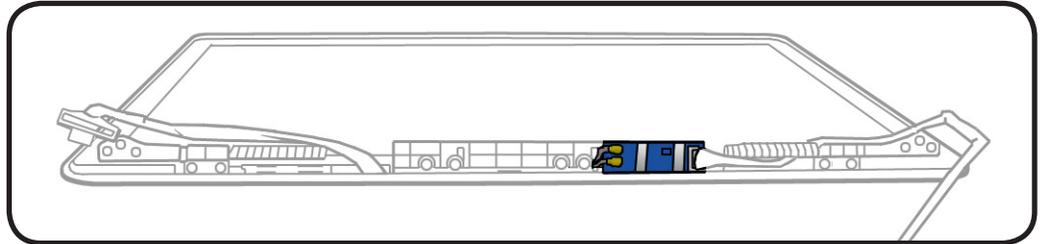


Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

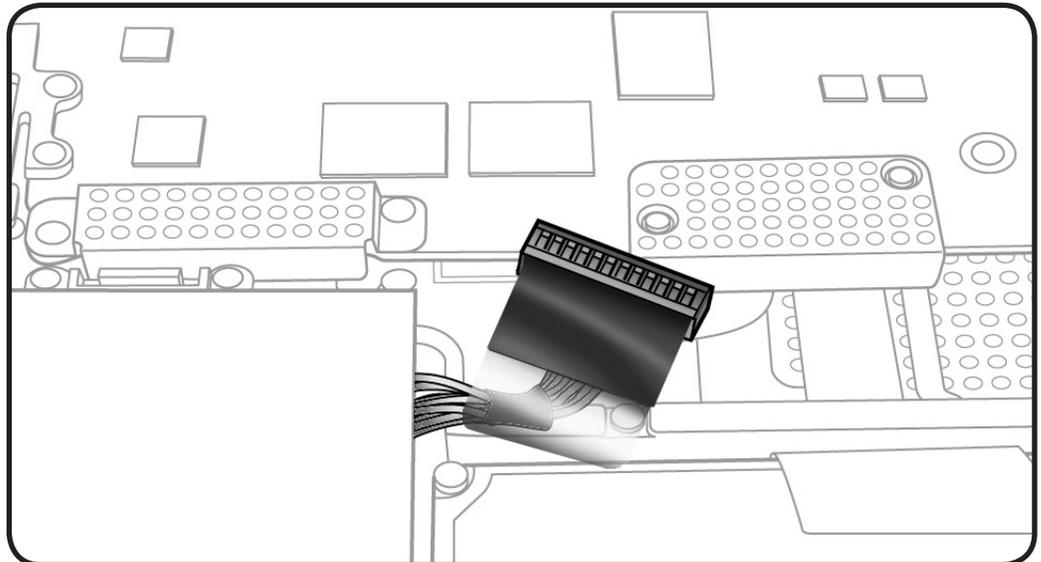

## Tools


- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Black stick
- Phillips #00 screwdriver

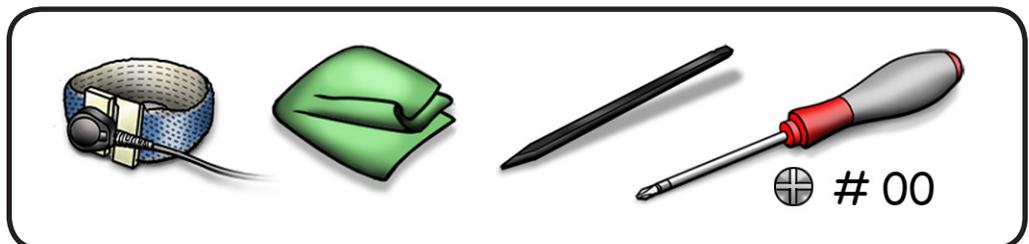




## Removal

- 1 Cover display with clean, soft cloth.
- 2 Remove 2.7-mm screw (922-8657) from cable clip.

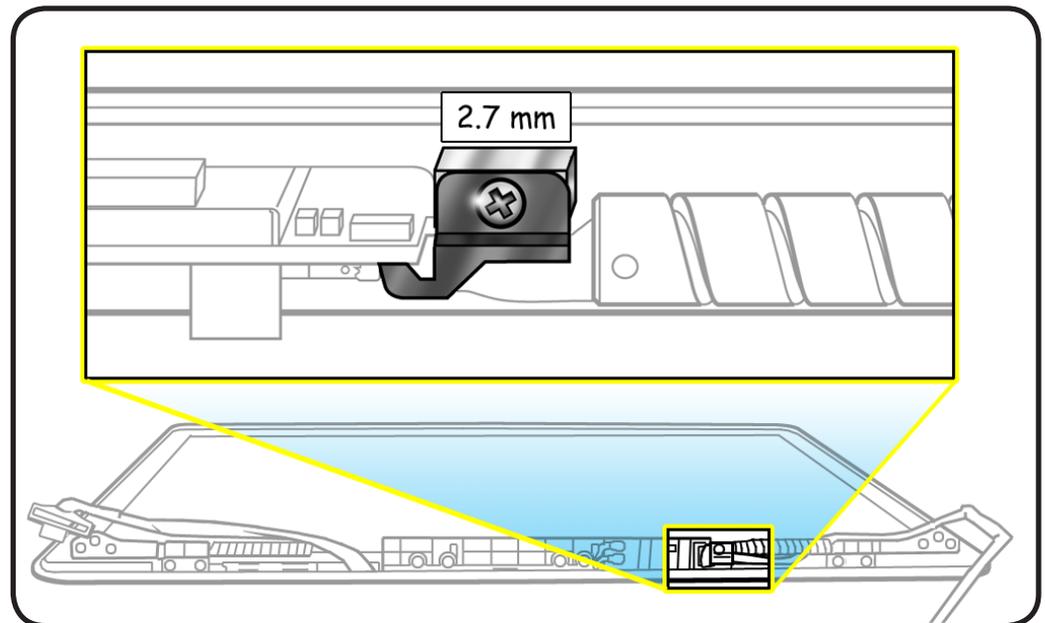


- 3 Disconnect AirPort cable and remove cable clip.

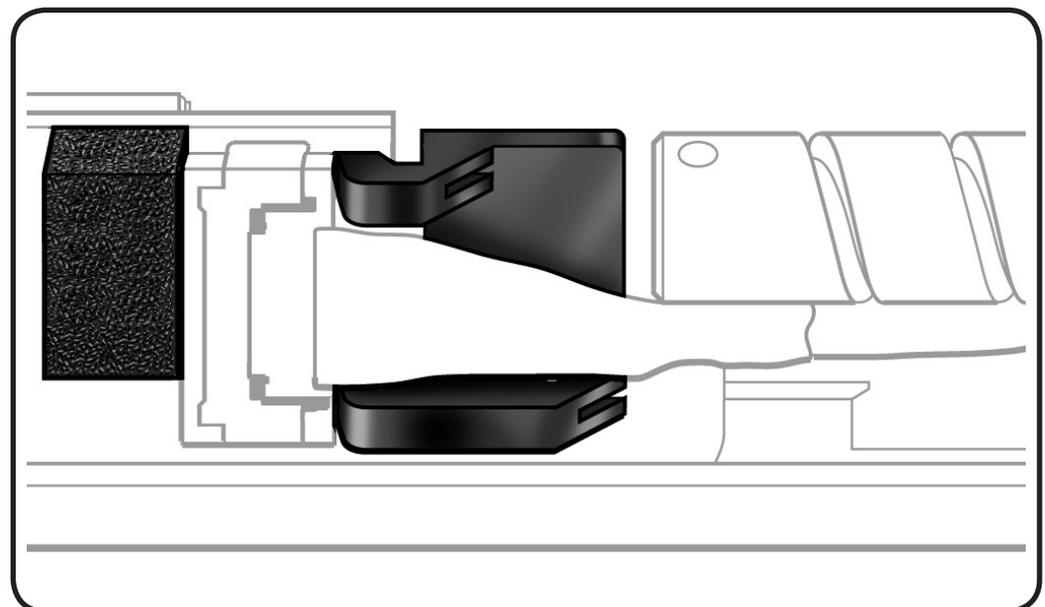



- 4 Disconnect 2 AirPort antenna cables using a black stick.

**Replacement Note:**  
Shorter antenna is at bottom.

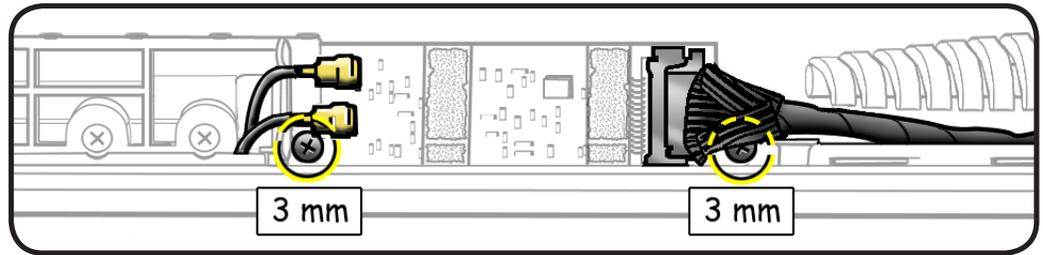


- 5 Remove 2 (3-mm) screws (076-1343).


- 6 Lift out AirPort Card.

## Replacement

- 1 Make sure thermal pad is centered on AirPort Card rather than stuck to display assembly tab.

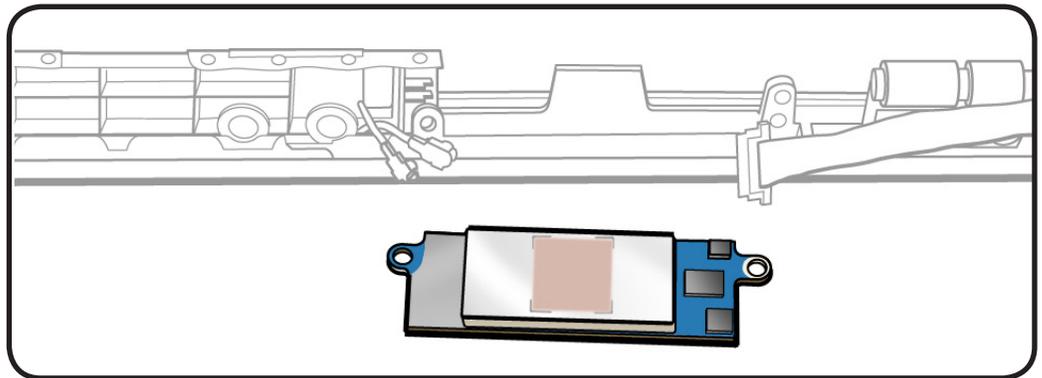


- 2 **Important:** Check the AirPort cable. At the end of the cable, on the metal part, there are two grounding fingers (two U-shaped marks). Orient the grounding fingers so they are facing the AirPort card and are in contact with the AirPort card connector. The grounding fingers should **NOT** be facing you. Inserting the cable incorrectly will cause logic board failure!

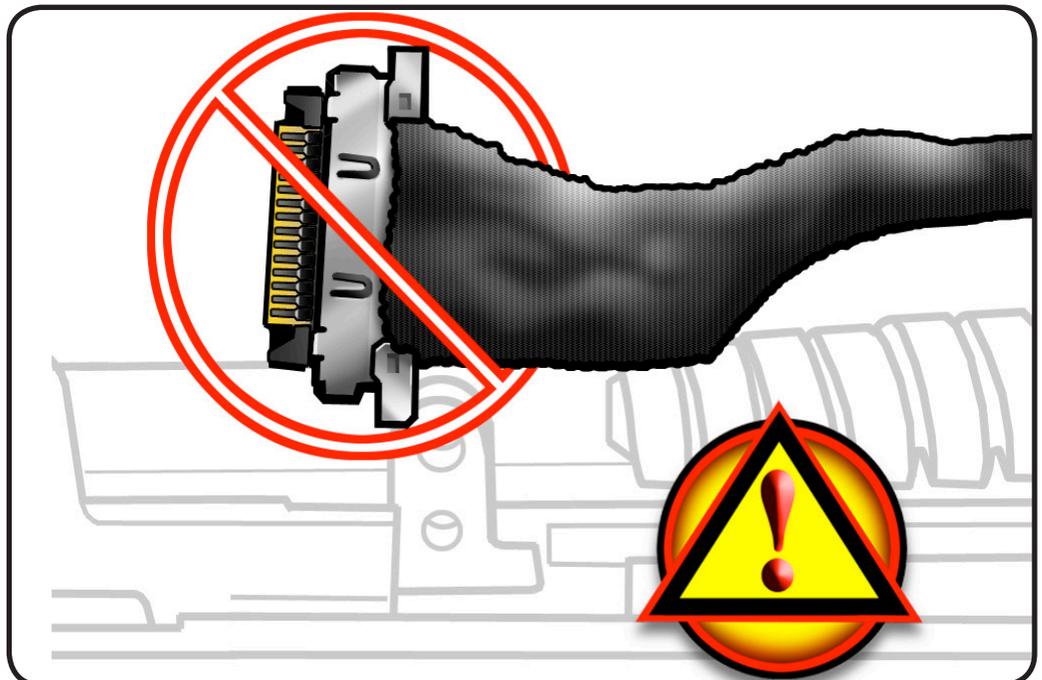




**3** Place the cable in the clip before connecting it to the AirPort card.

**4** Connect AirPort cable and clip.

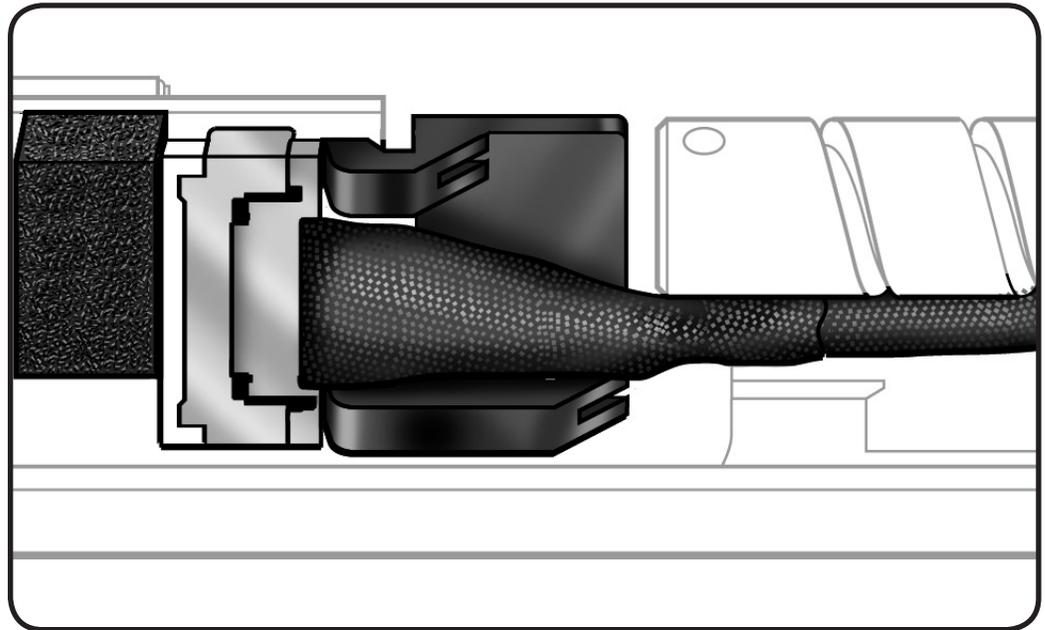

**5** Make sure AirPort Card includes 4 foam pads.

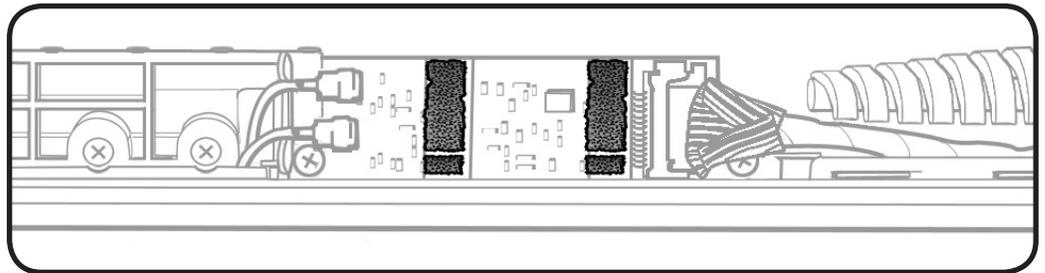




6 Replace clutch cover.

7 Reassemble computer.



**Caution:** When testing an AirPort card connection, wait at least 5 seconds after shutdown before connecting the camera cable connection to the logic board. Waiting less than that could damage the AirPort card.

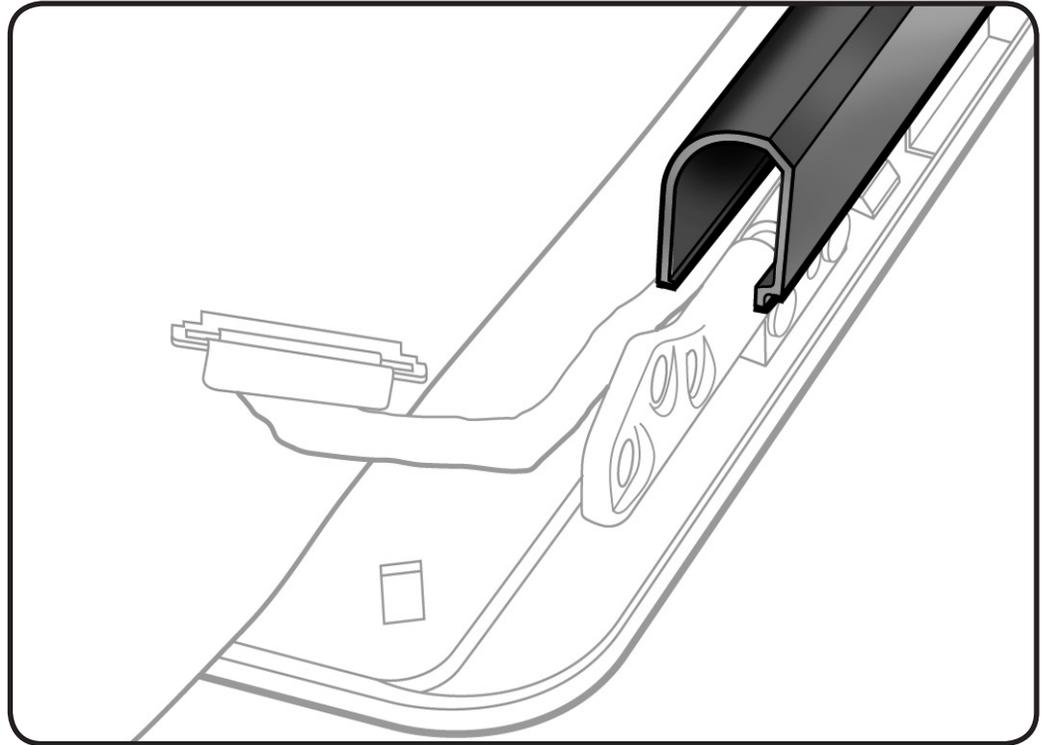




# Antenna Board


## First Steps

Remove:

- [Bottom case](#)
- [Camera cable guide](#)
- [LVDS cable guide](#)
- [Display assembly](#)
- [Display clutch cover](#)

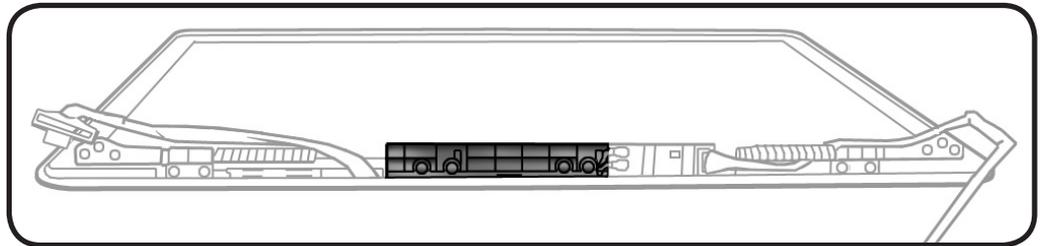

Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

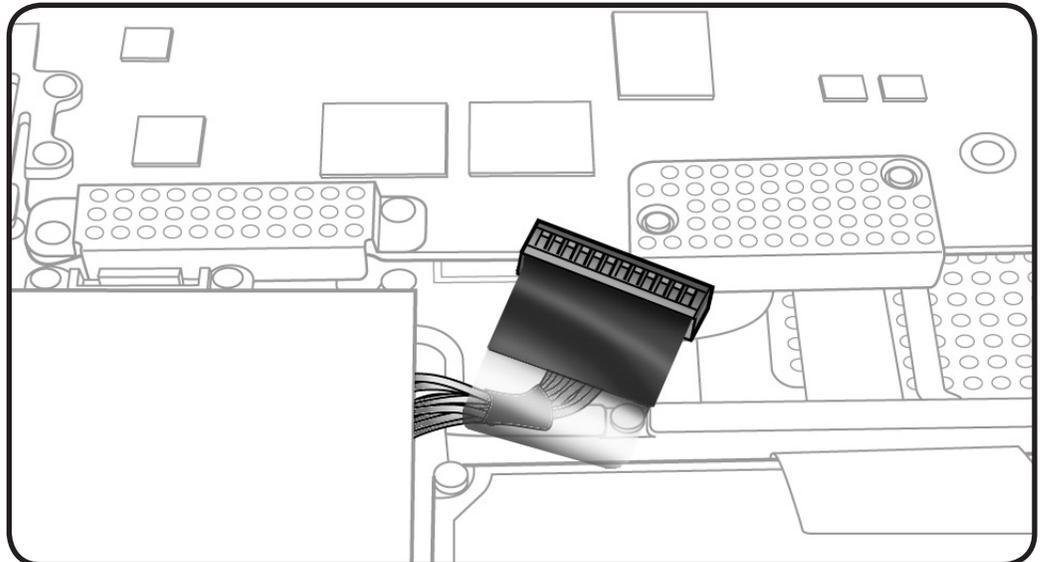

## Tools


- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Black stick
- Phillips #00 screwdriver






## Removal

- 1 Remove 4 (3.45-mm) screws (922-xxxx).
- 2 Lift out antenna board.

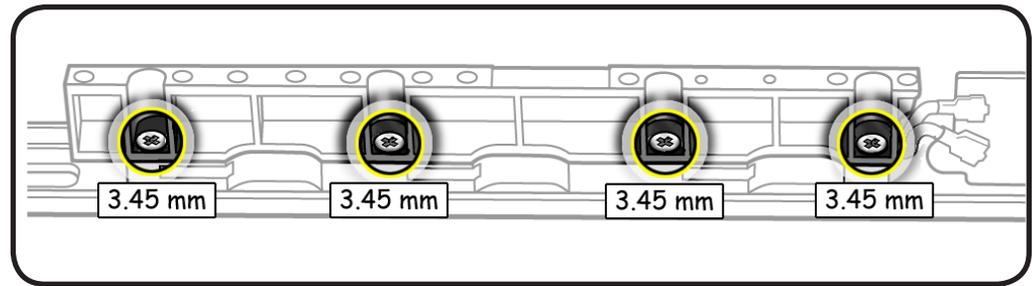

## Replacement

- 1 Make sure the AirPort antenna cable is routed in its channel.
- 2 Set the antenna board in the display assembly and install the screws.
- 3 Connect the 2 ends of the antenna cable to the AirPort card:
  - longer cable (top)
  - shorter cable (bottom)

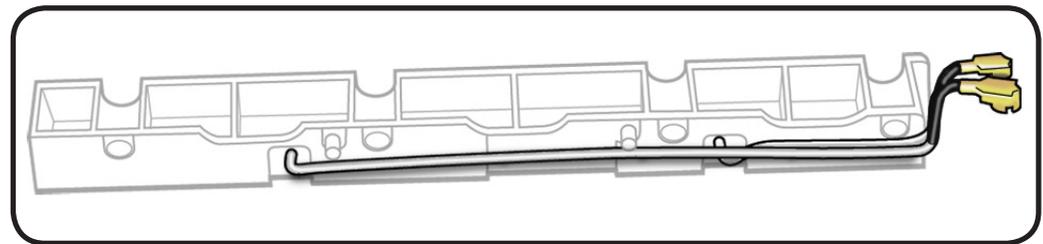




# Right Speaker/Subwoofer


## First Steps

Remove:

- [Bottom case](#)
- [Optical drive](#)

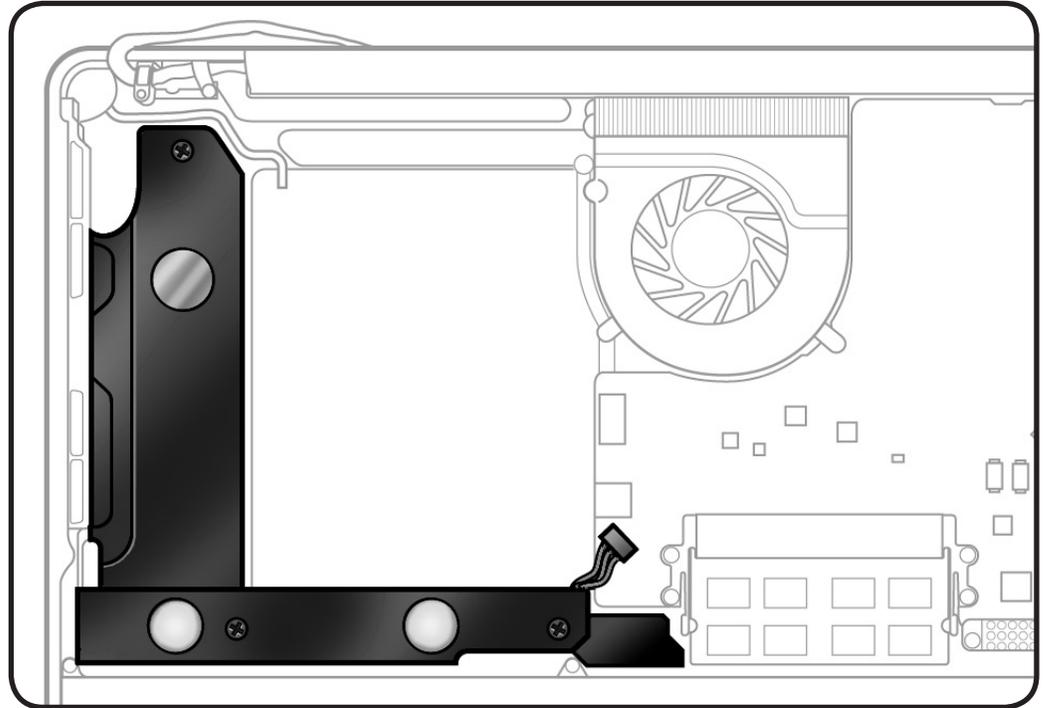

Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

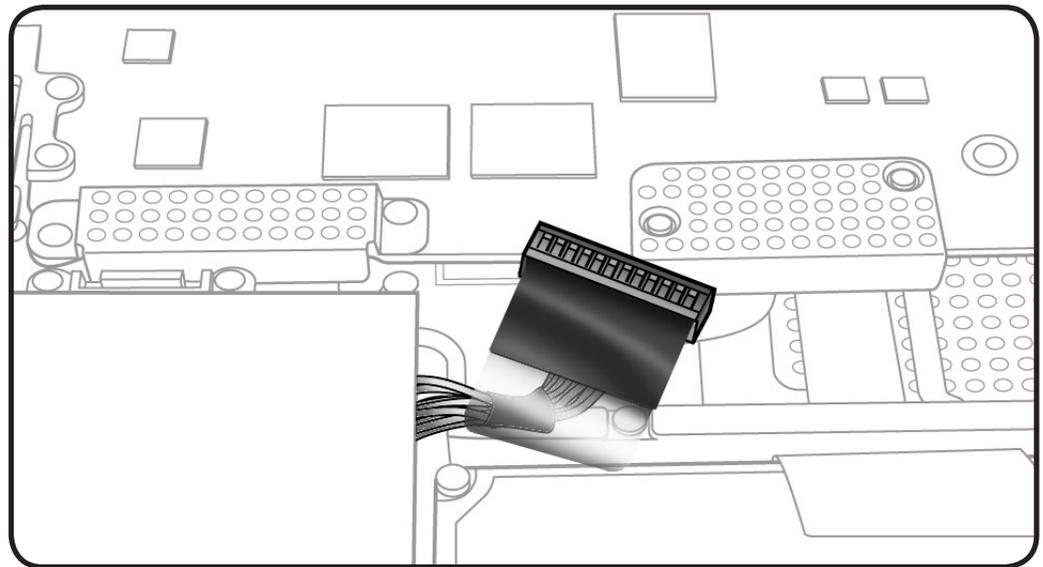




## Tools

- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Black stick
- Phillips #00 screwdriver



## Removal

- 1 Remove 3 screws:
  - 1 (2.6-mm) 922-8662
  - 2 (12.4-mm) 922-8982
- 2 Disconnect speaker cable from logic board.

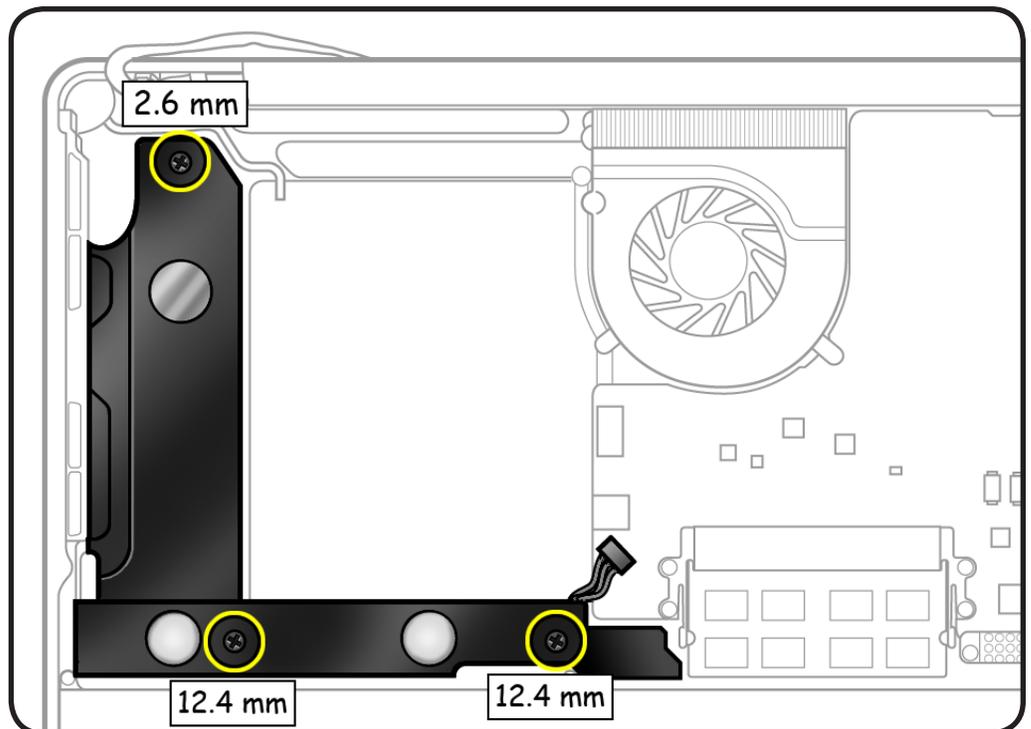




# Logic Board


## First Steps

Remove:

- [Bottom case](#)
- [Memory](#)
- [Fans](#)

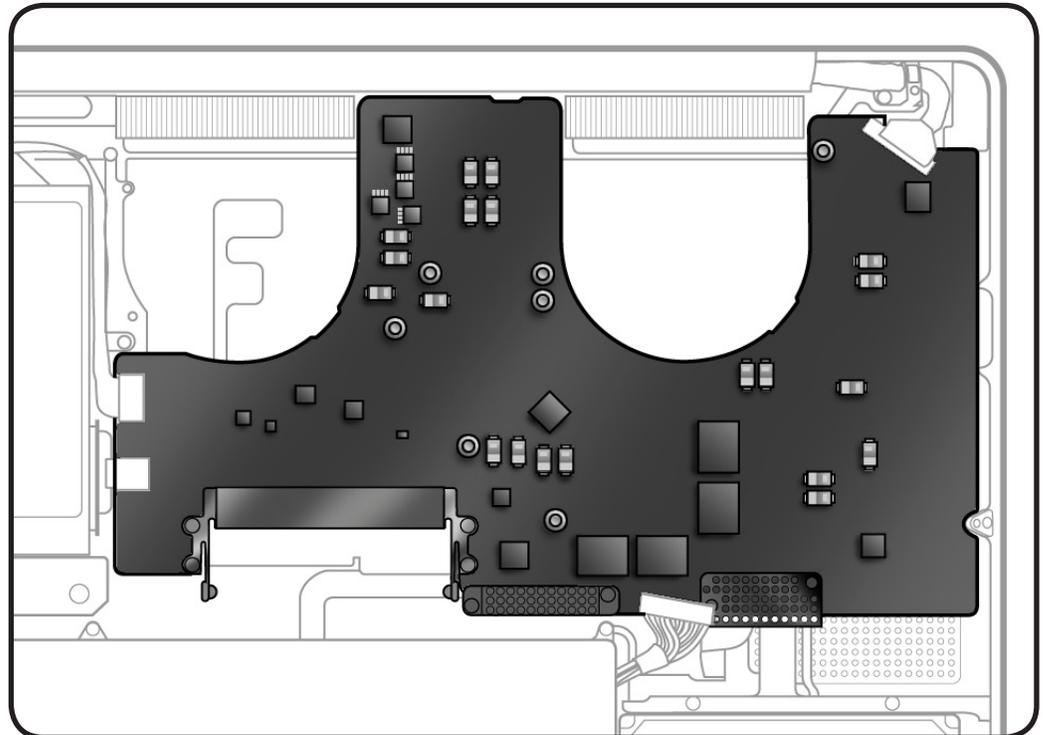

Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

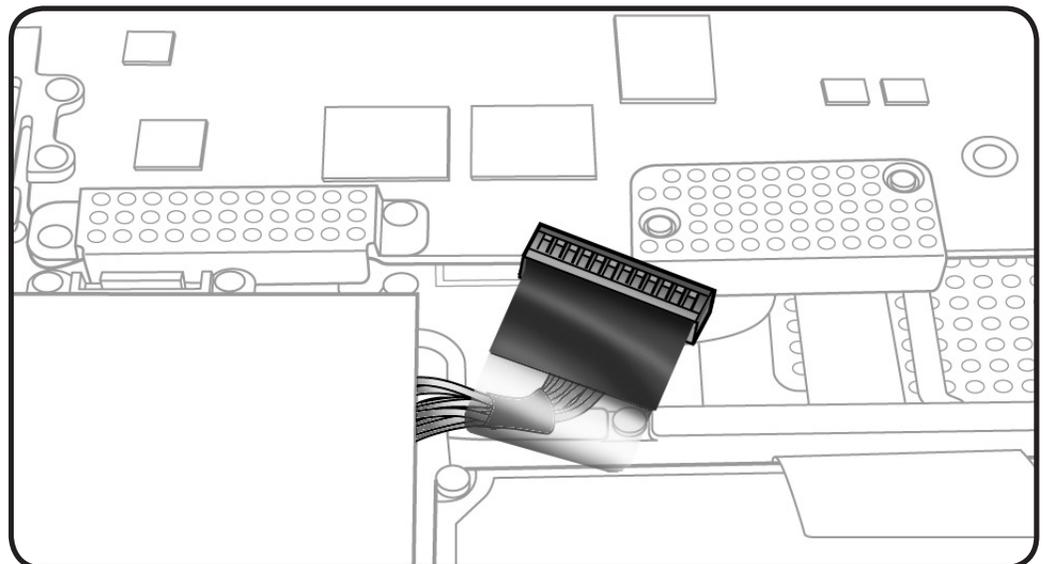




## Tools

- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Black stick
- Phillips #00 screwdriver



## Removal


- 1 Remove 4 screws:
  - 2 (3.1-mm) 922-8754
  - 2 (1.8-mm) 922-8983
- 2 Lift away 2 shields.

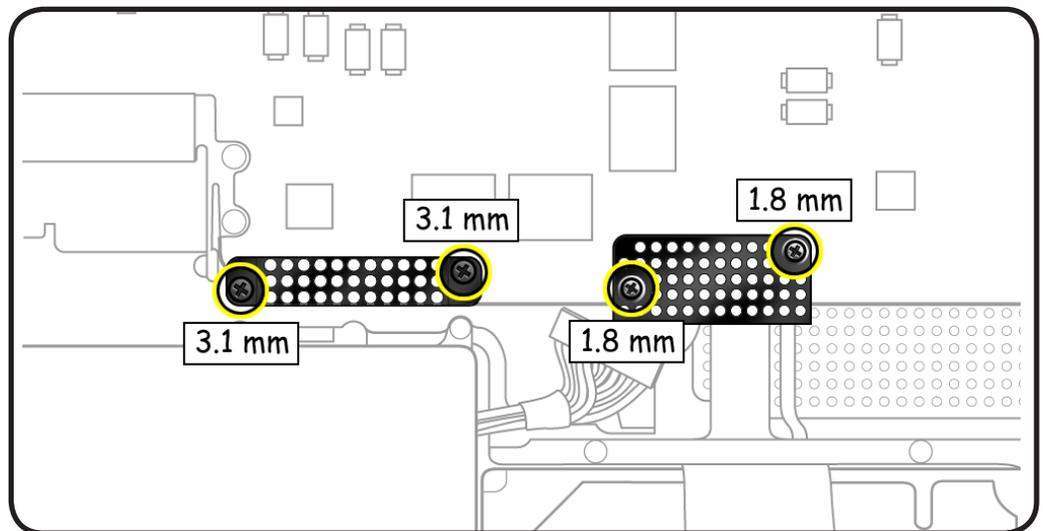




**3** Refer to [Connector Types](#) to carefully disconnect 11 cables:

- LVDS
- keyboard backlight
- camera
- optical drive
- right speaker
- IR/sleep
- trackpad
- keyboard
- Express card cage
- hard drive connector
- battery indicator light (BIL)

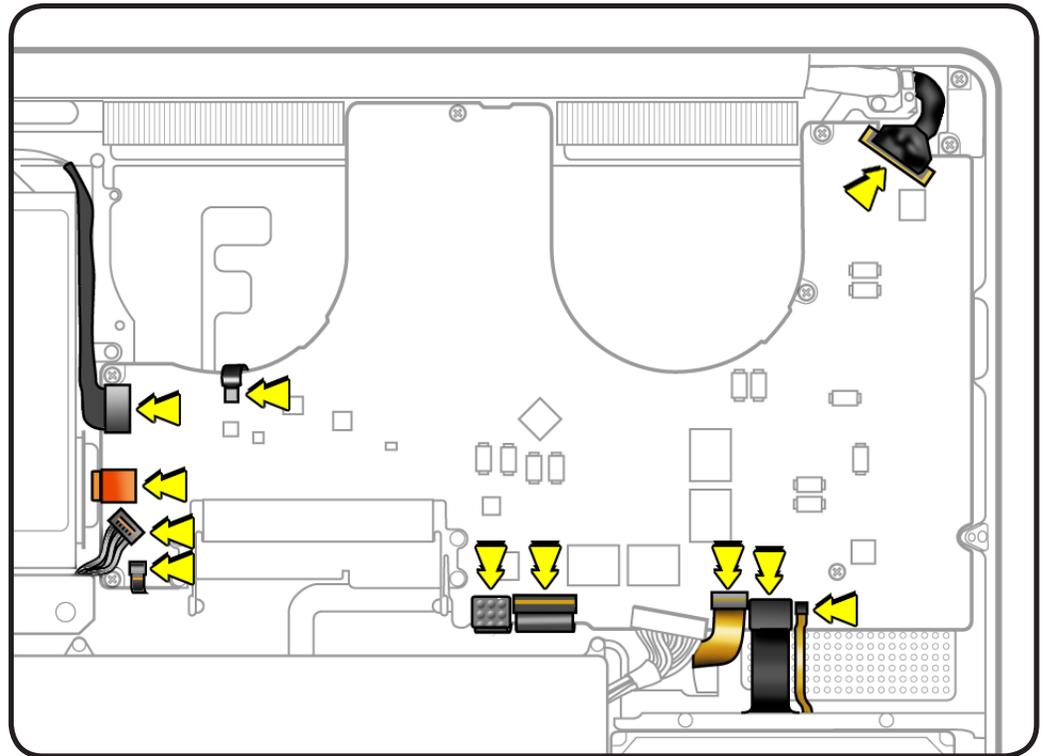


**4** Remove 6 (3.15-mm) 922-8754 screws.

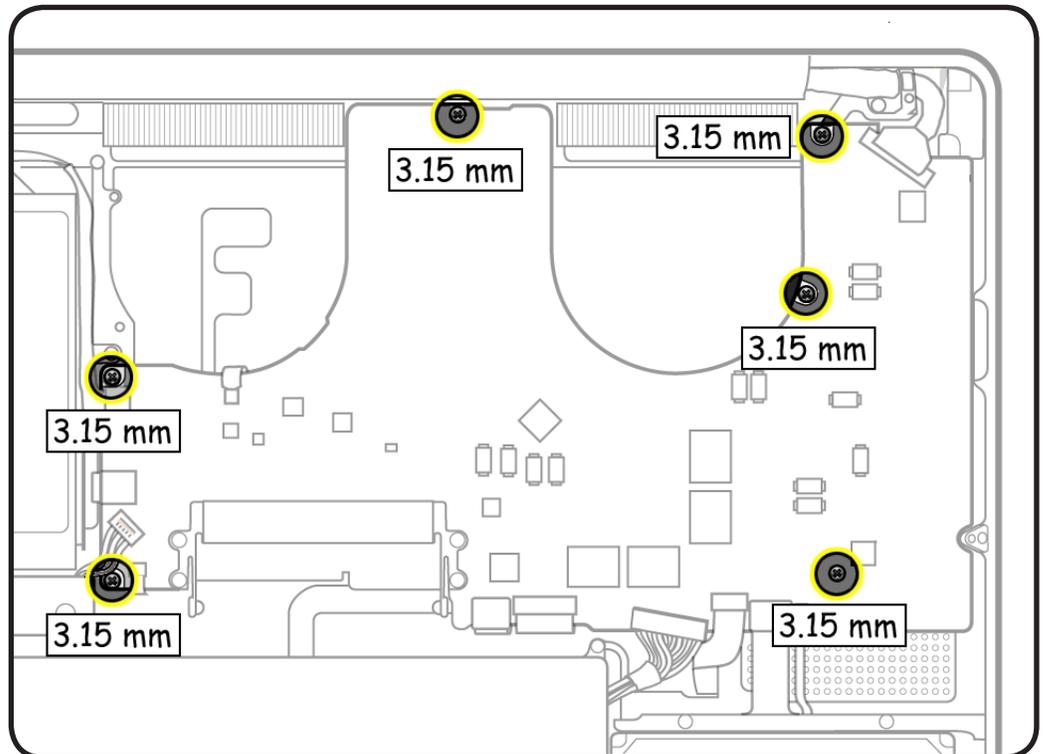




- 5 Tilt logic board away from ports.

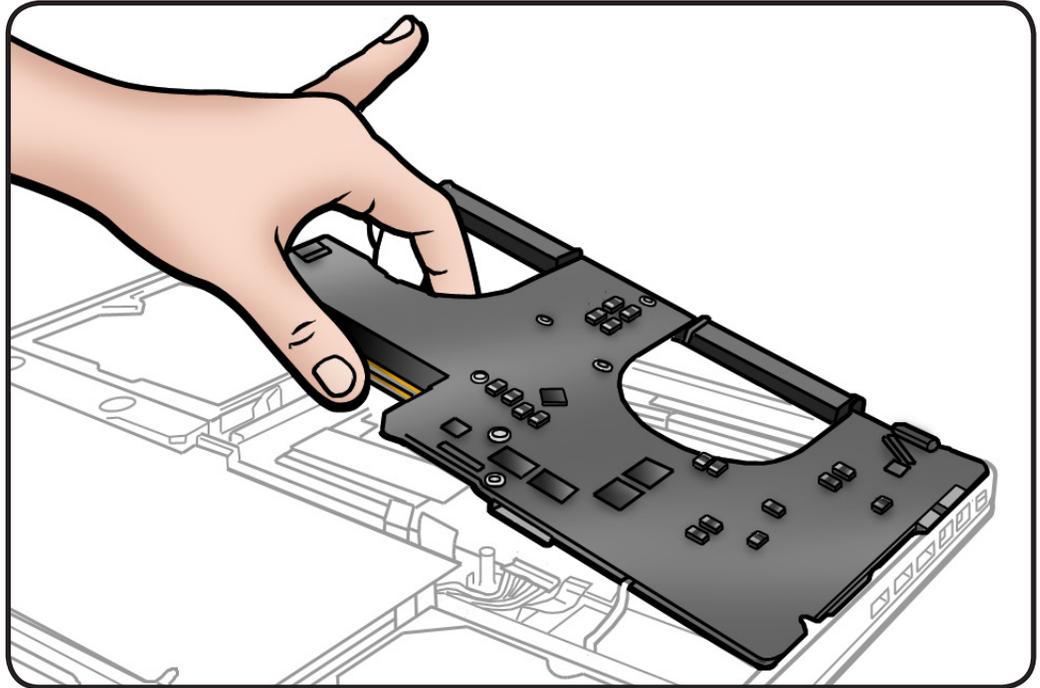

- 6 Holding board by edges, tilt it up and disconnect MagSafe connector.

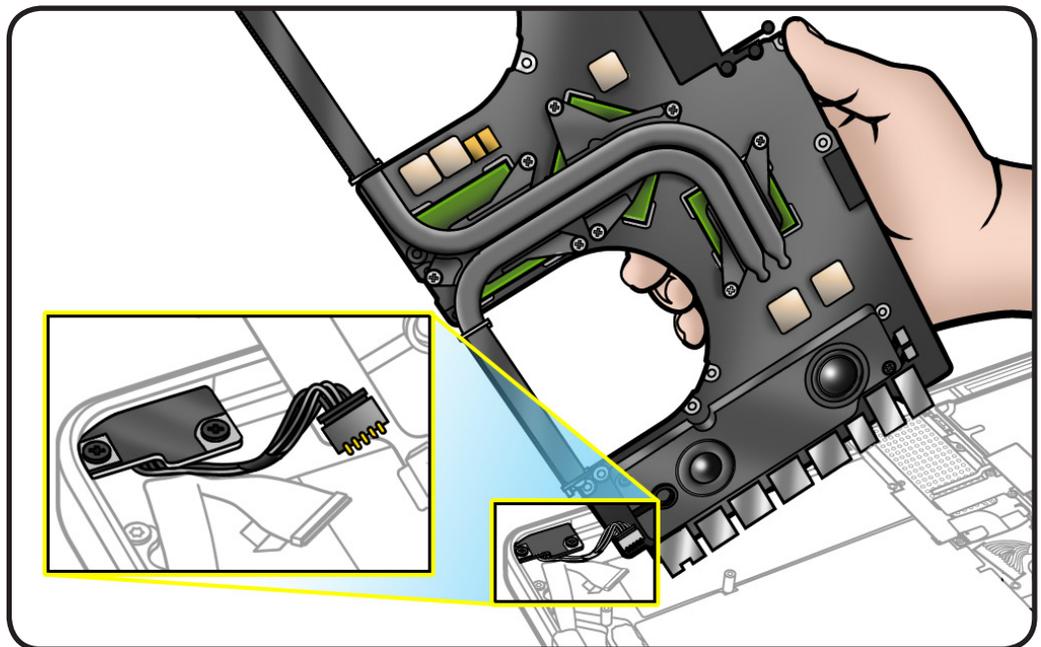




## Replacement


If replacing the logic board with a new one, transfer:

- left speaker
- microphone cable
- heatsink
- memory

- 1** Install MagSafe board connector.
- 2** Keeping all cables away, install logic board screws in order shown.

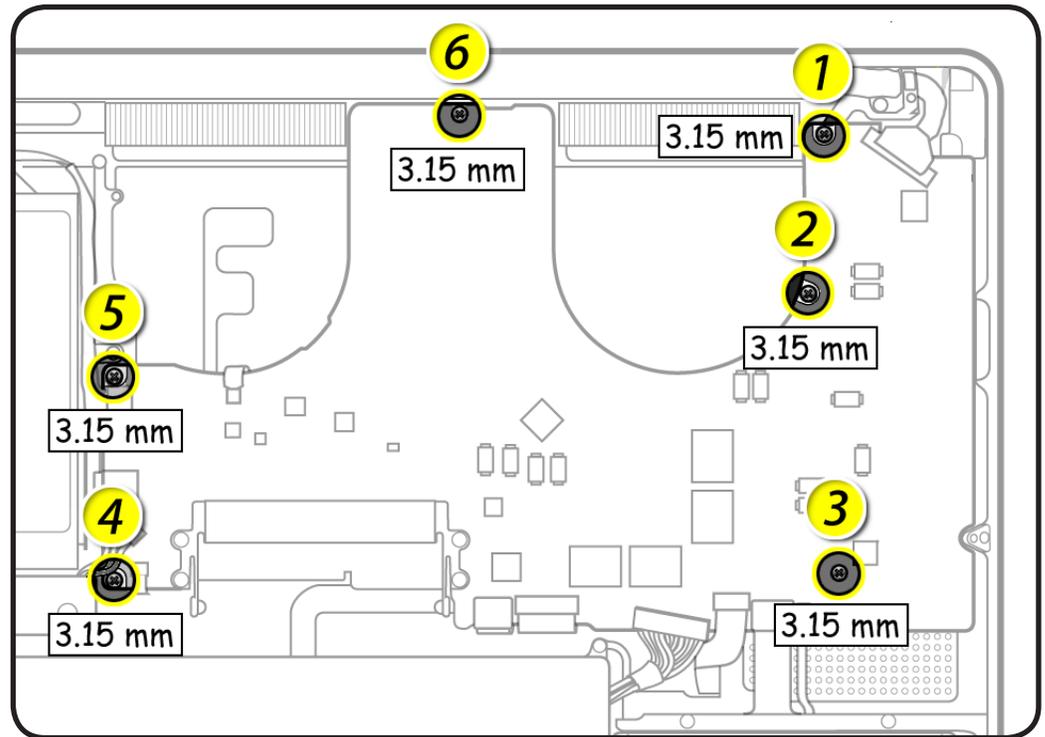

- 3** Connect cables following the instructions in [Connector Types](#).

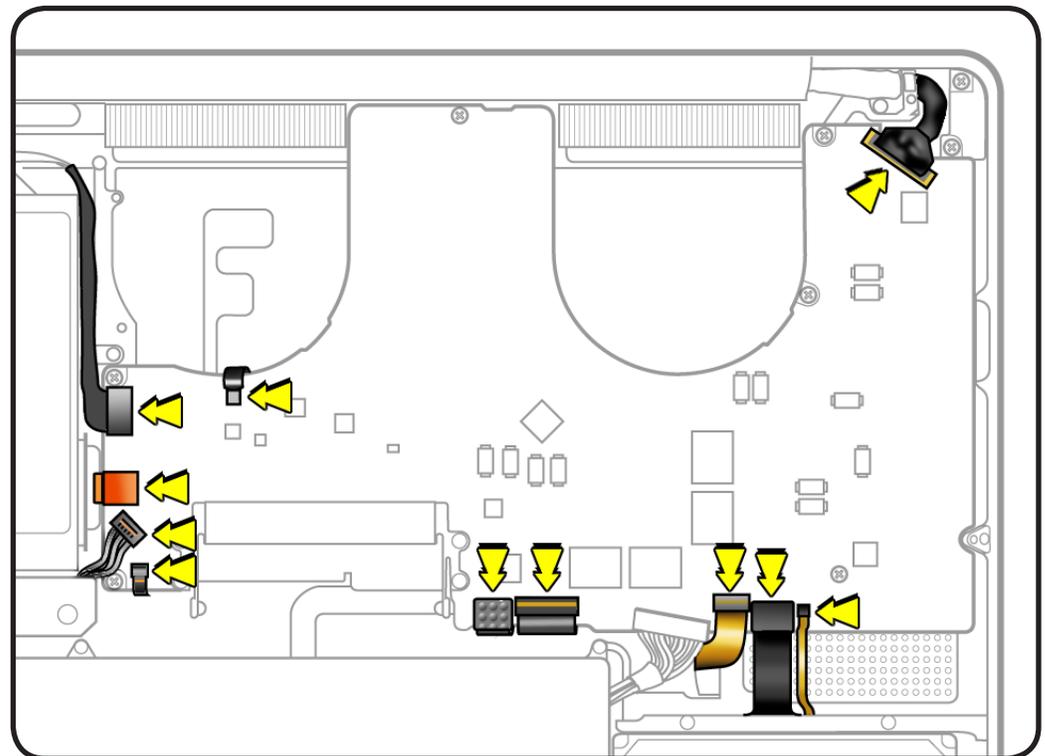



# Trackpad

## First Steps


Remove:

- [Bottom case](#)
- [Battery](#)
- [Memory](#)
- [Fans](#)
- [Logic board](#)

### Trackpad Kit 922-9009


includes:

- trackpad
- black label
- 10 bottom case screws (3-mm and 13.5-mm)
- 6 Phillips #000 (2-mm) screws
- 1 tri-lobe #0 set screw
- 2 metal flexures

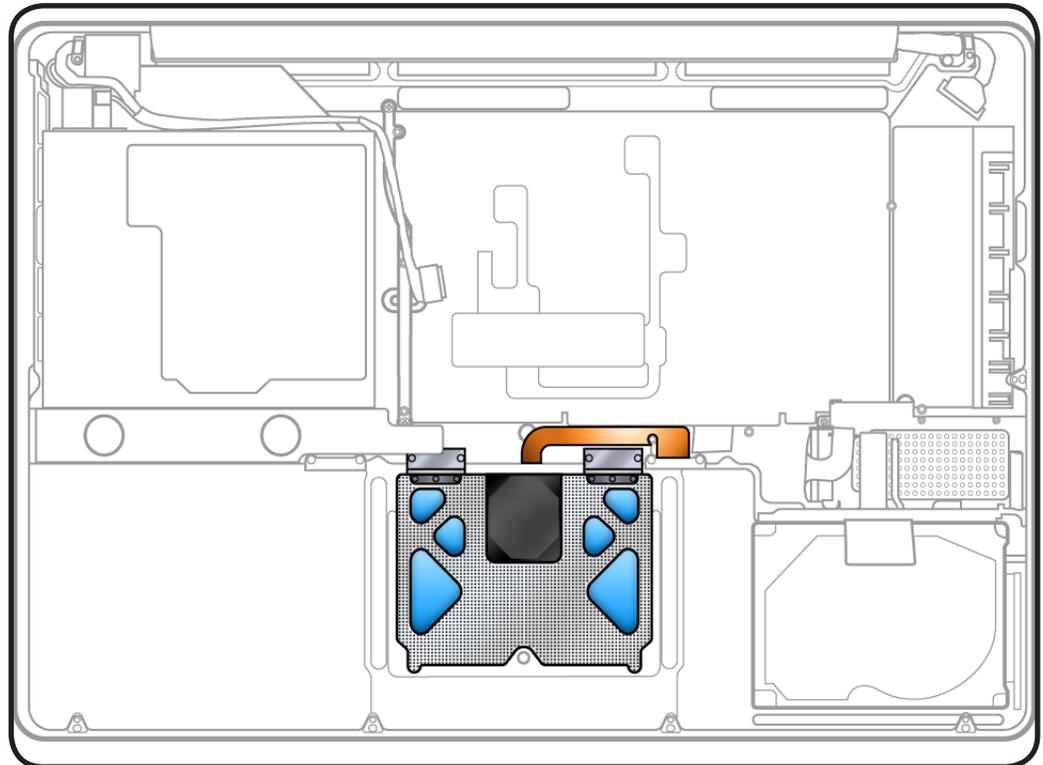

## Tools

- ESD wrist strap and mat
- Sticky (Post-It) notes
- Black stick
- Large tri-lobe #0 screwdriver (922-8991)
- Magnetized Phillips #00 screwdriver
- Magnetized Phillips #000 screwdriver
- Magnetized Torx T6 screwdriver

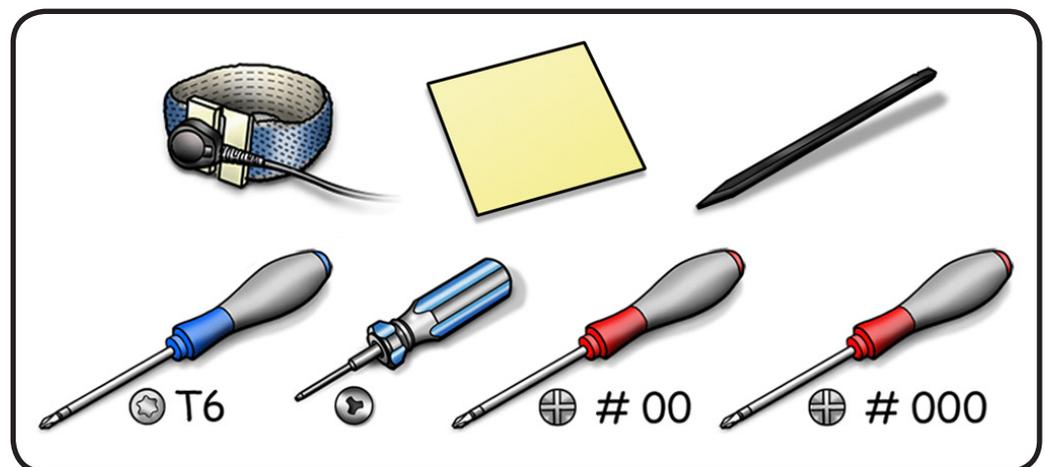



## Removal

- 1 Remove 6 #000 (2-mm) Phillips screws from flexures. Discard old screws; they lose their ability to hold securely if reused.



- 2 Remove 4 T6 (4-mm) screws from flexure stiffeners. Keep screws.





- 3 Remove 1 tri-lobe set screw. Discard old screw.



- 4 Slide out stiffeners and flexures. Keep stiffeners.


- 5 Dispose of flexures (thin metal pieces); they are matched to each individual trackpad by thickness.

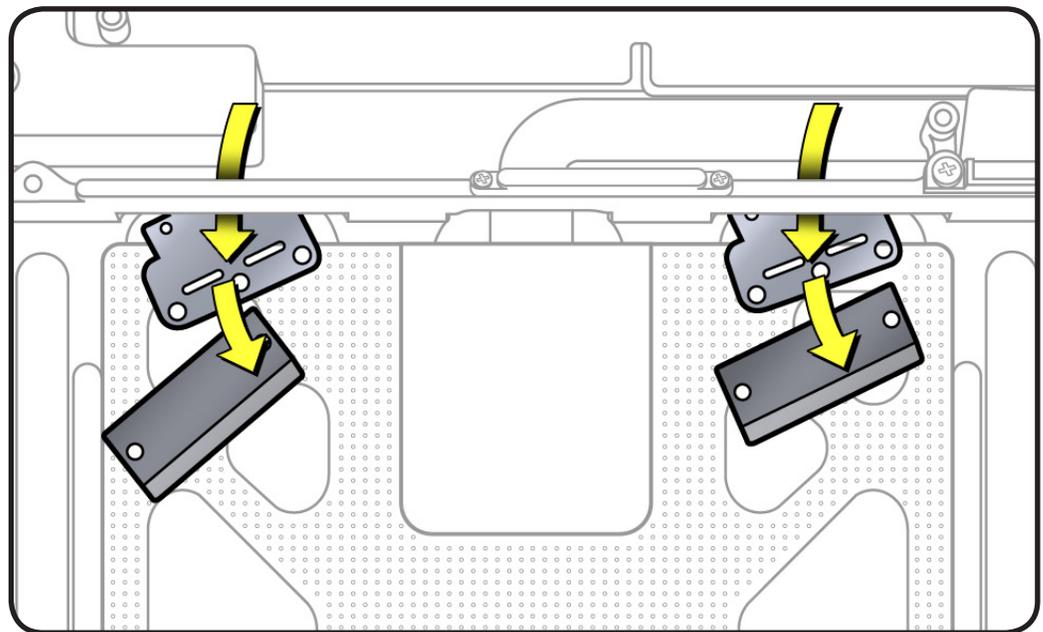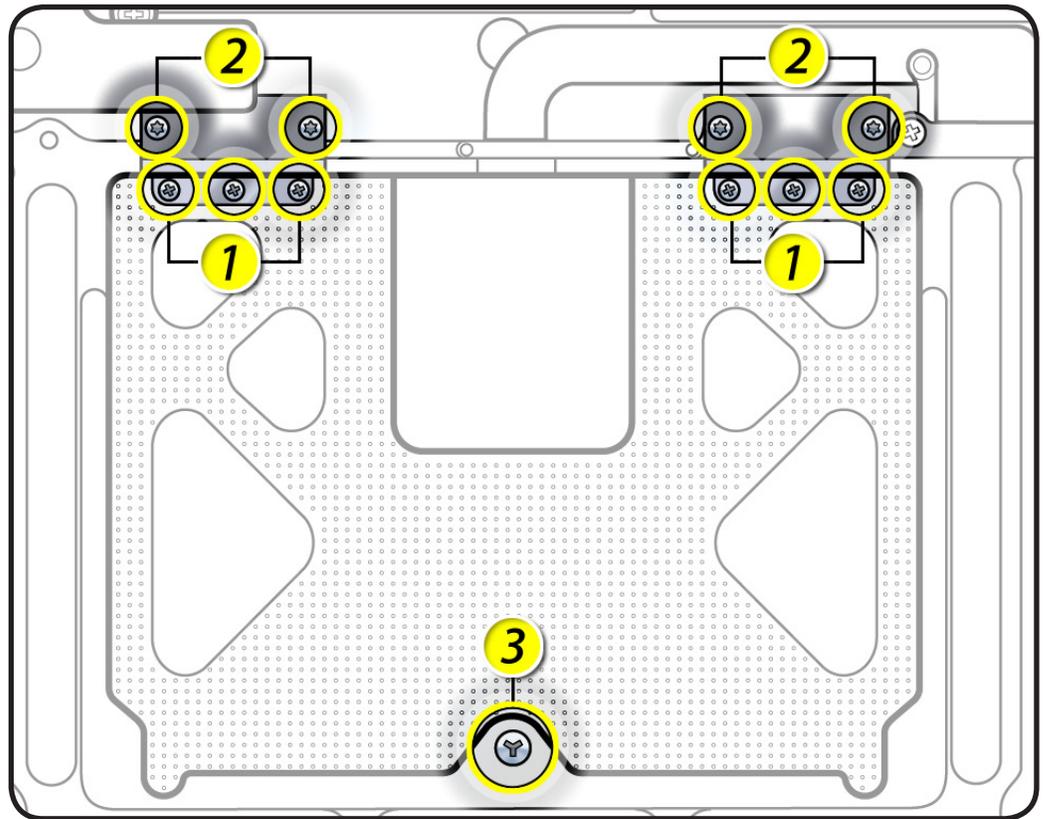




- 6** Carefully tilt up keyboard mylar as you peel up trackpad flex cable from adhesive on mounting ramp.

**Note:** If a bar code label stays stuck to adhesive, be sure to remove it.

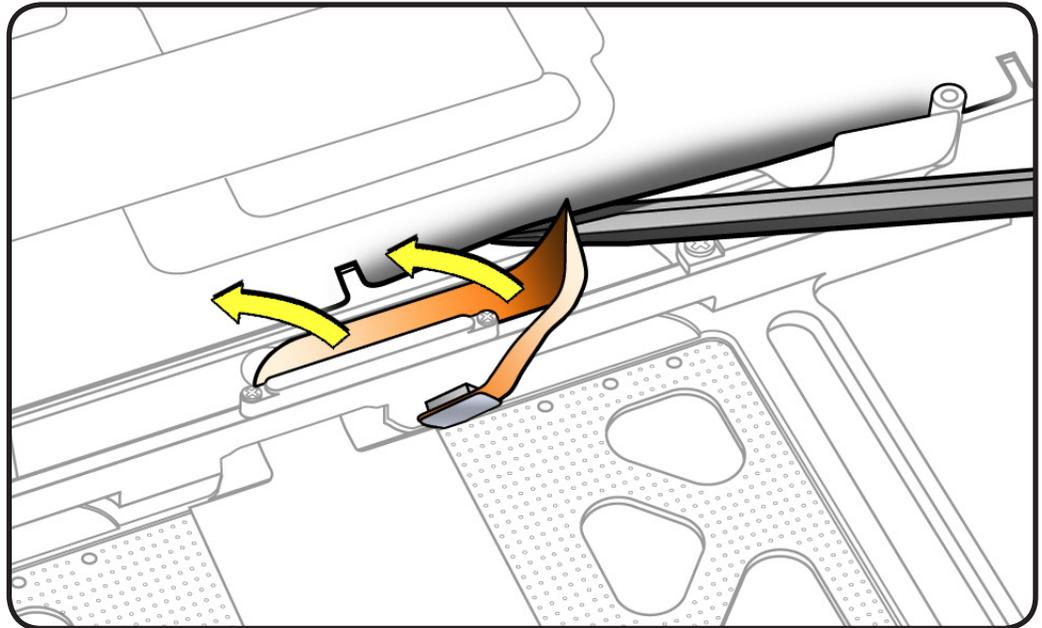


- 7** Hold trackpad and flex cable, and press down on edge closest to keyboard.

- 8** Slide trackpad down and back to clear supports in front edge of top case.

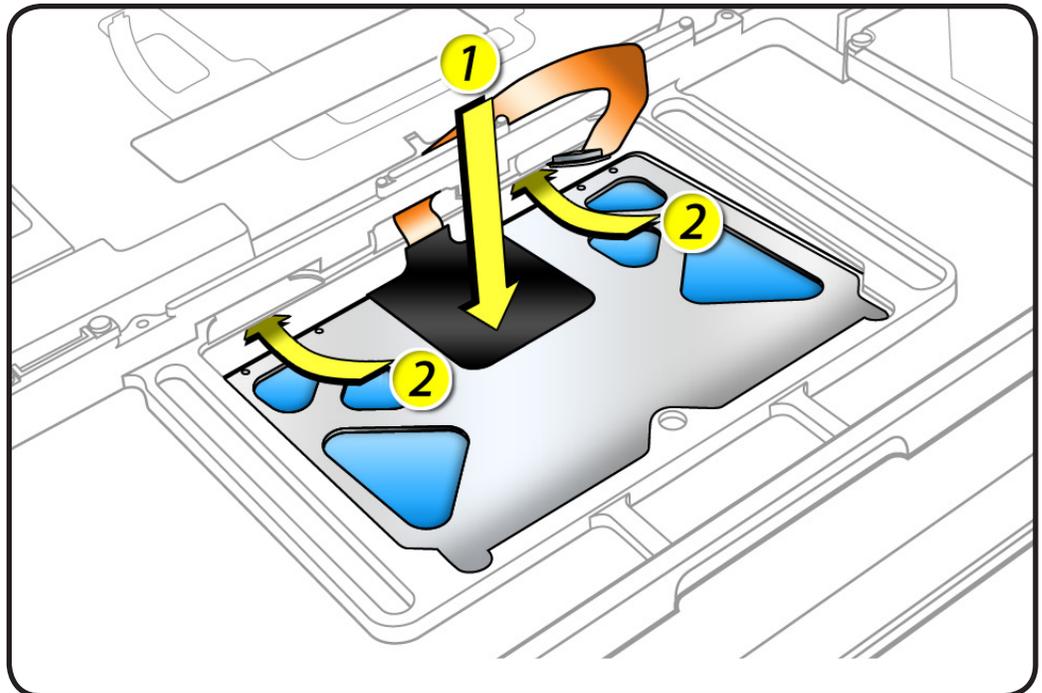



- 9 Tilt up top case, and spiral trackpad away from top case while carefully routing flex cable through hole.

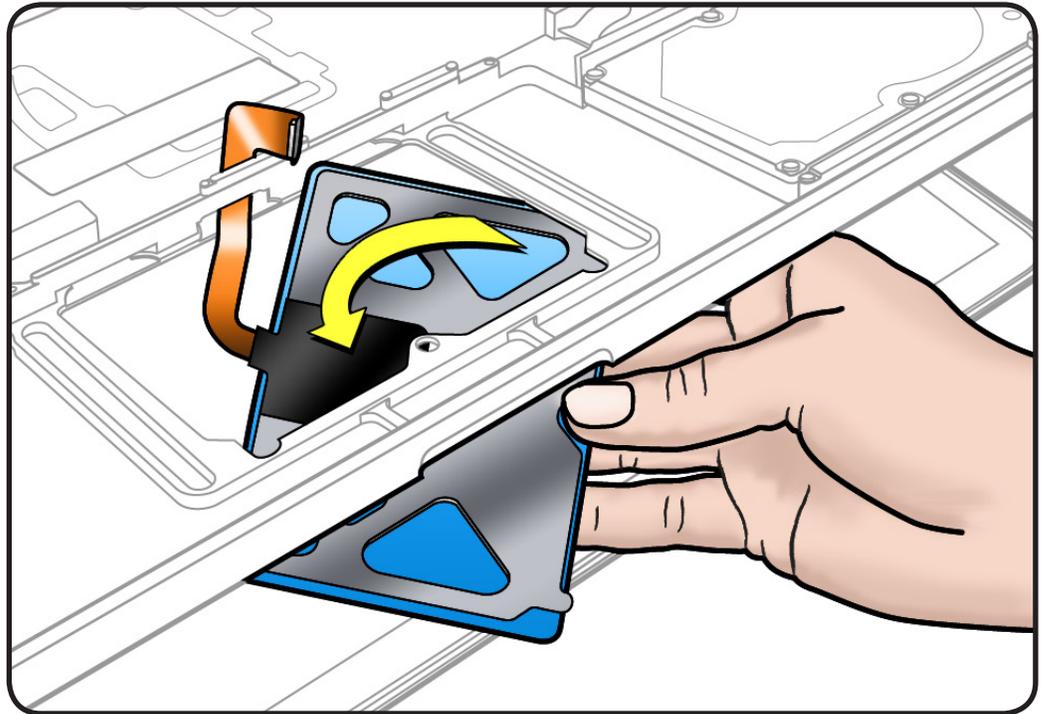




## Replacement


**Important:** Dispose of old flexures, 6 short Phillips screws, and 1 tri-lobe set screw, and only use new ones included with trackpad kit.

- 1 Peel and adhere black label (included with new trackpad) to cover trackpad stiffener as shown.

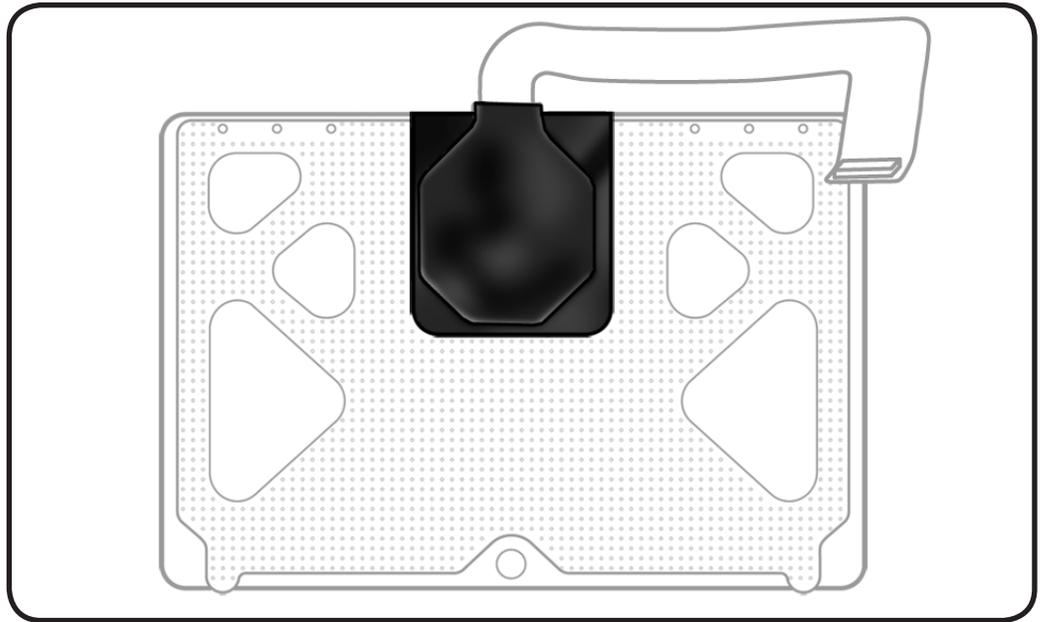


- 2 Align new flexures on positioning posts.

**Note:** This procedure will take patience and a steady hand. Try supporting the delicate flexures with a black stick.

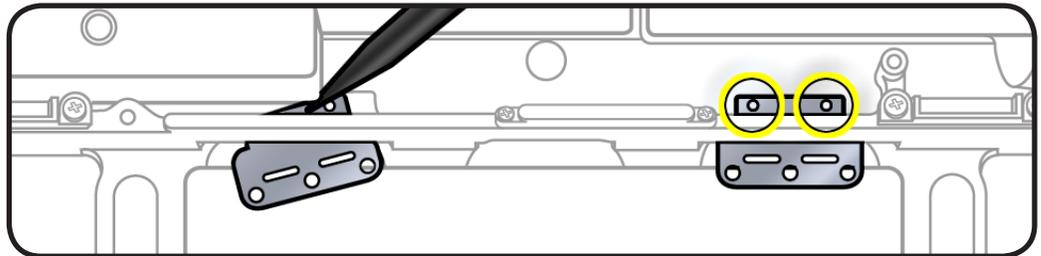



- 3** Slide stiffeners over the flexures and align the screw holes.

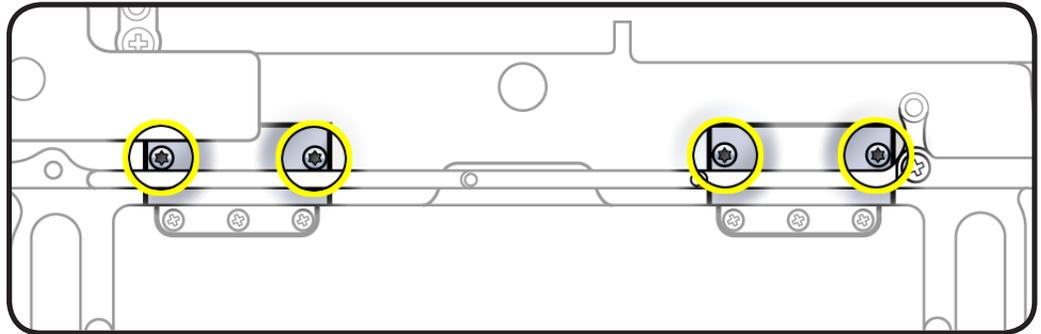


- 4** Tighten 4 Torx T6 screws on stiffeners.



- 5** Carefully route flex cable through guide hole.


- 6** Spiral and pivot trackpad into place, inserting front edge first.

**Important:** Minimize rubbing edges of trackpad against top case while installing. This could cause invisible cracks to form in the glass of the trackpad.

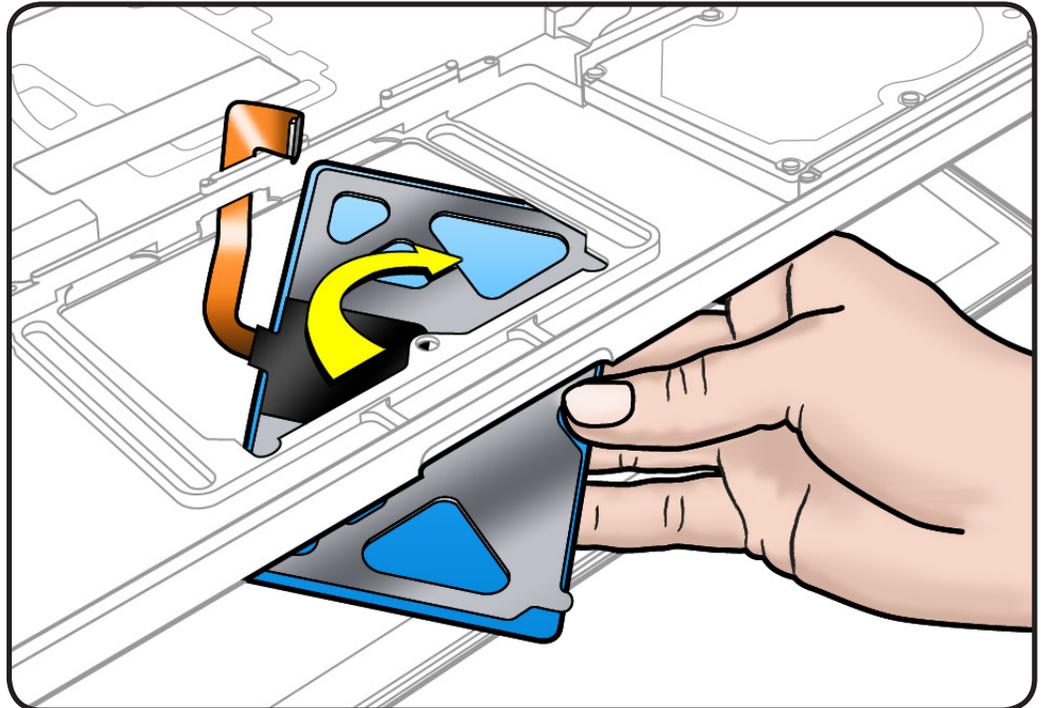




- 7** Loosely insert 6 short Phillips #000 screws into flexures. Do not tighten yet.

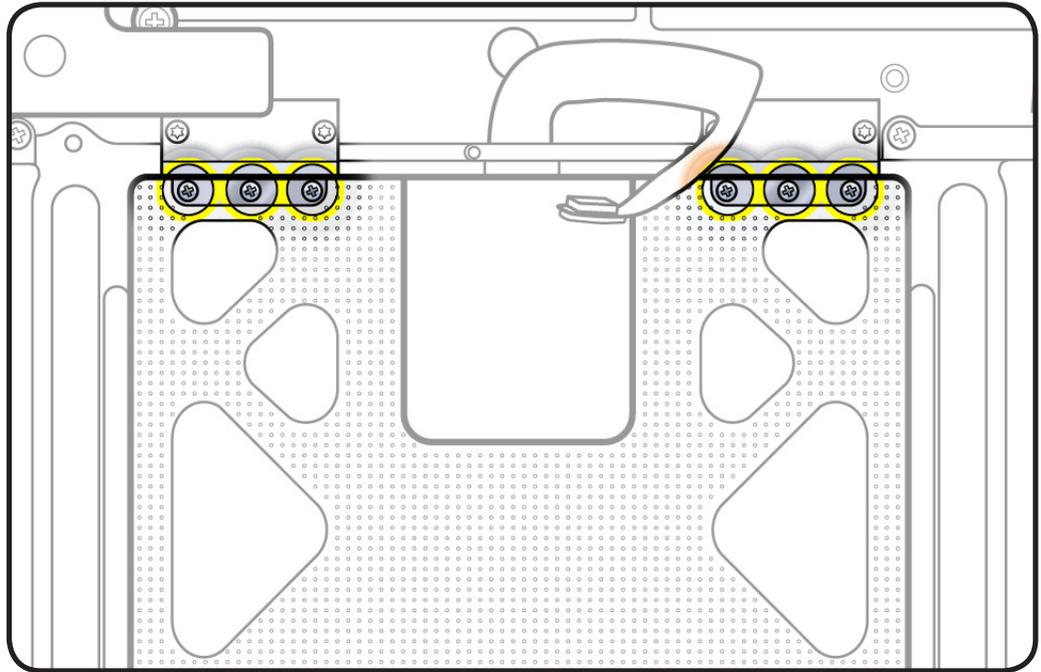


- 8** On the palm rest, insert one sticky (Post-It) note into gap on each of the four sides of trackpad.

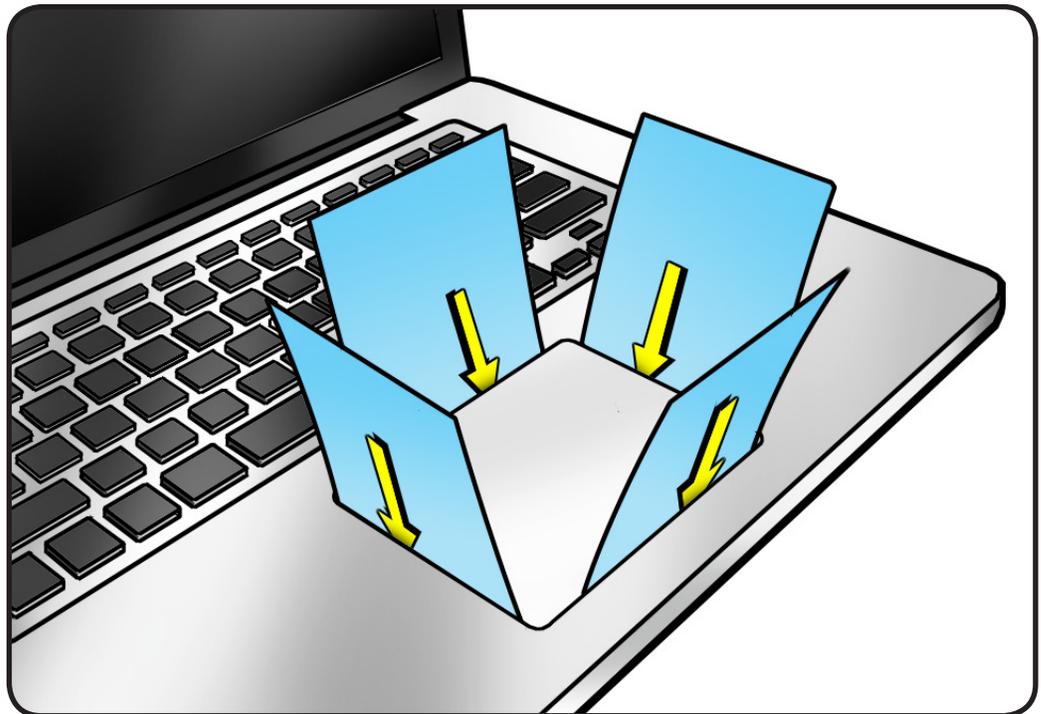




- 9** Fold sticky notes over so that top case can be laid flat.

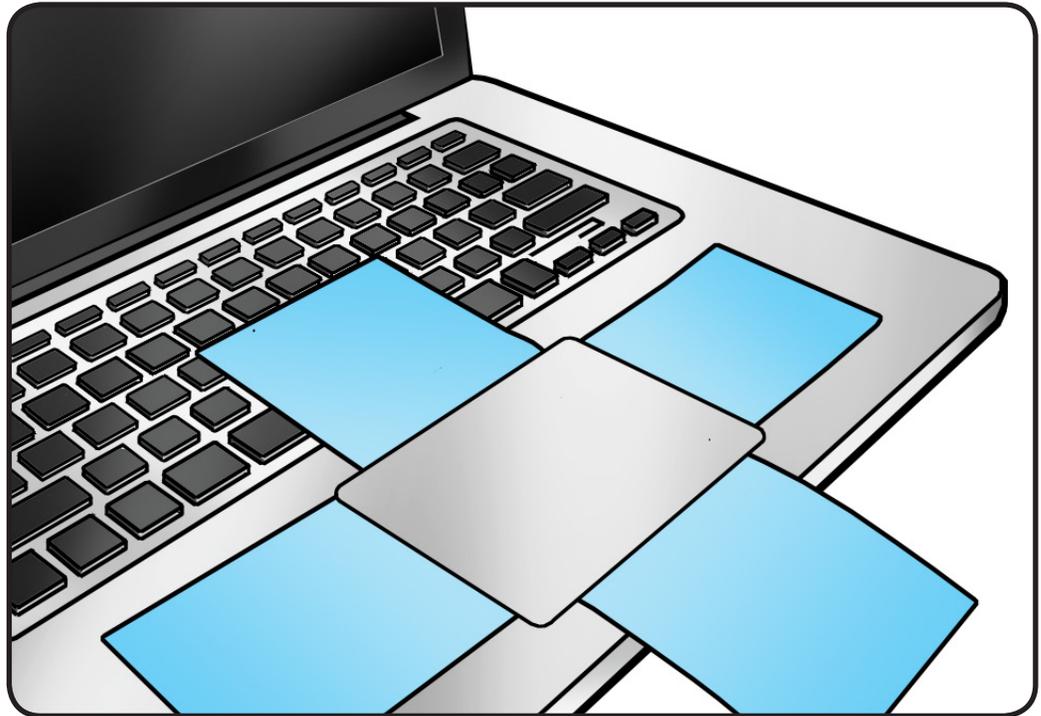

- 10** Tighten 6 short Phillips #000 screws at flexures.

- 11** Inspect that gaps between trackpad and top case are even on all sides. If not, loosen screws and adjust.

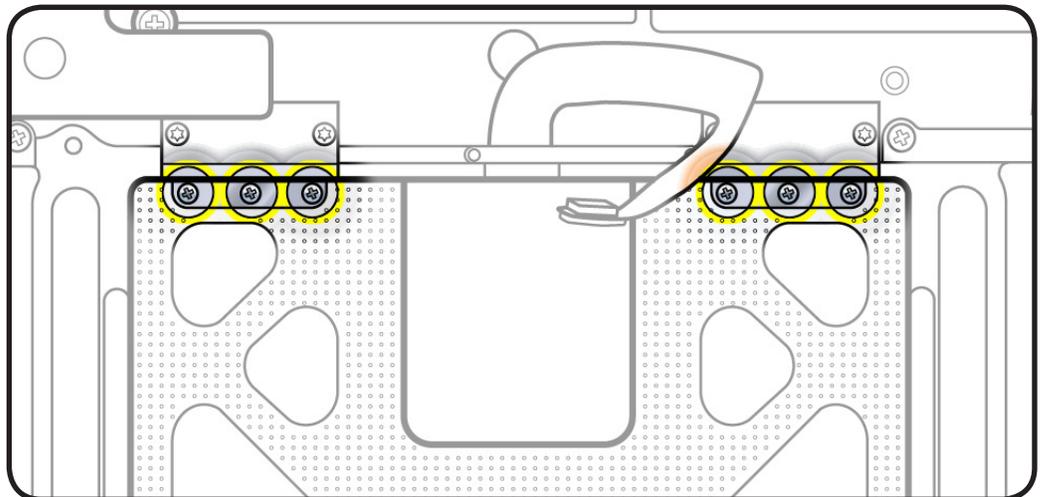




- 12** Insert tri-lobe #0 set screw.




- 13** Slowly turn set screw in small increments until trackpad has a normal clicking motion.

**Important:** Do not overtighten set screw or you may damage trackpad.

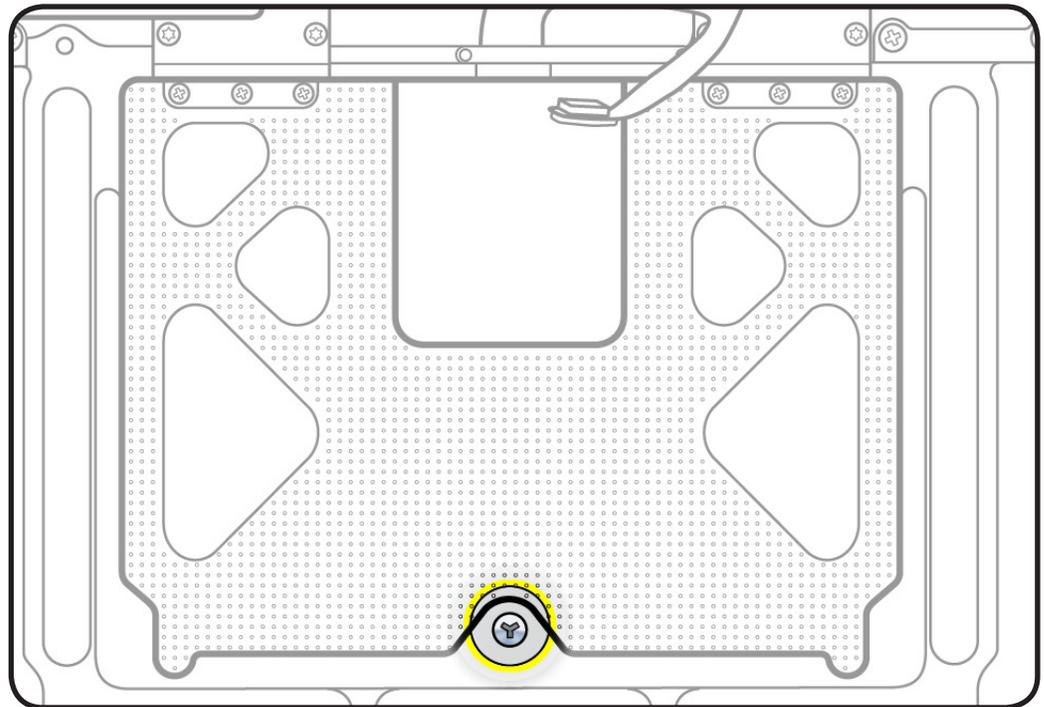

- 14** Adhere flex cable to mounting ramp.

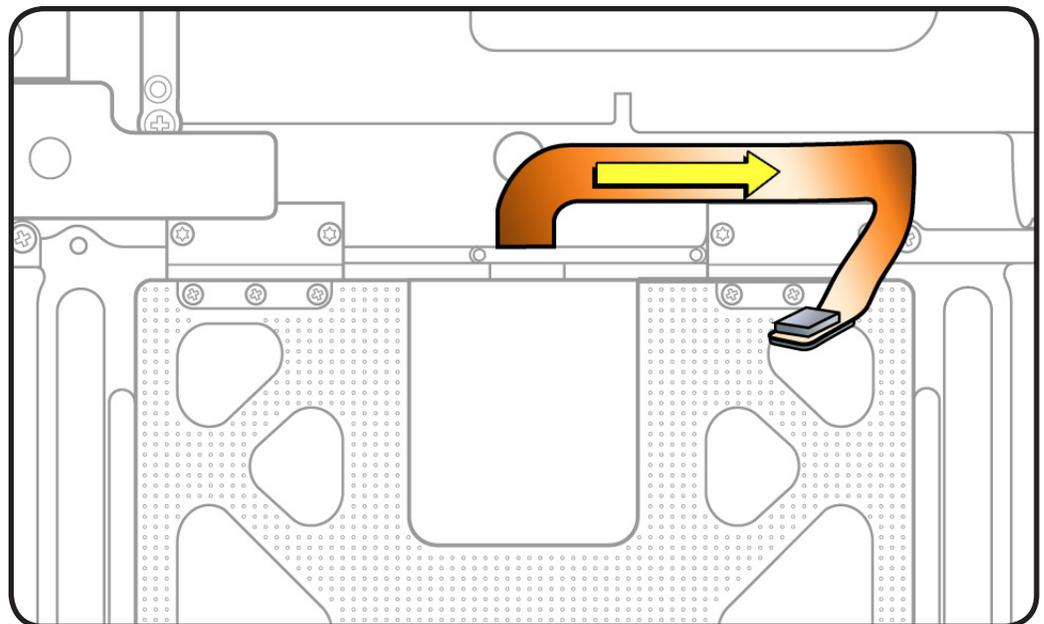




# MagSafe Board


## First Steps

Remove:

- [Bottom case](#)
- [Memory](#)
- [Fans](#)
- [Logic board](#)

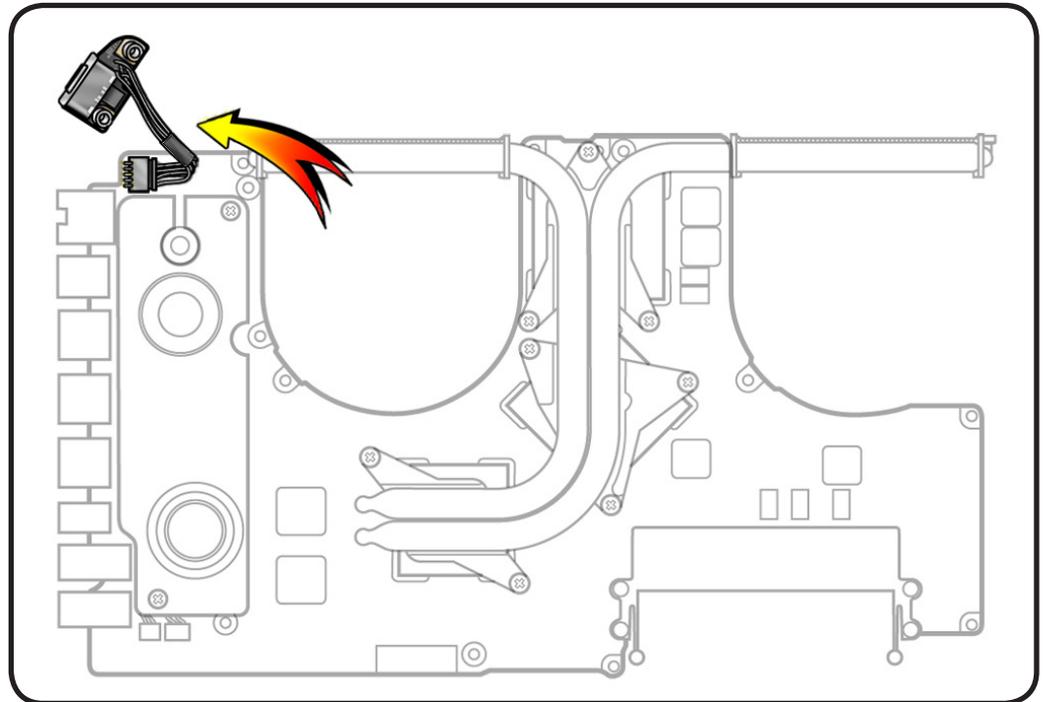


Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

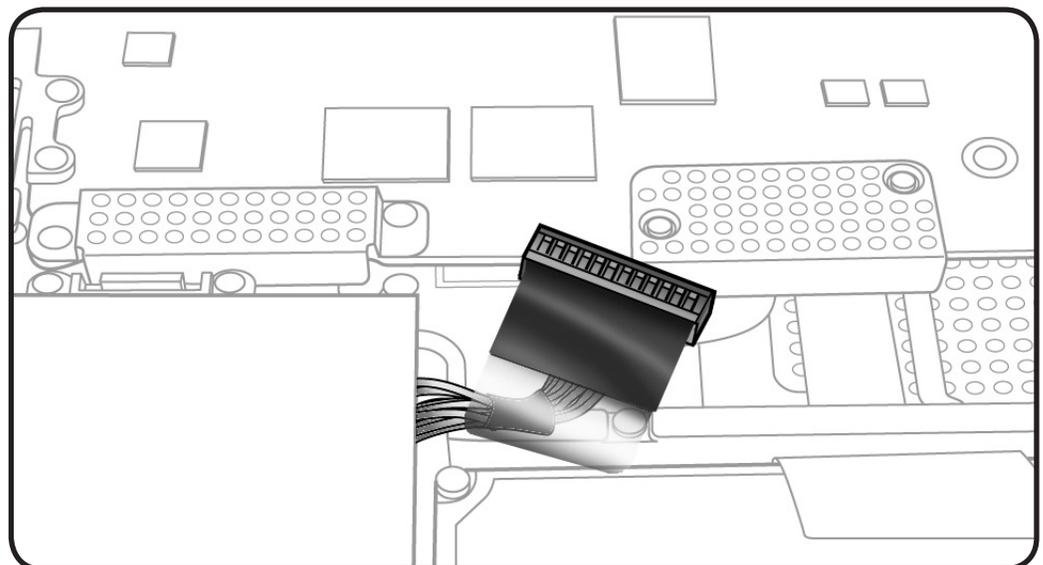



## Tools


- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Phillips #00 screwdriver

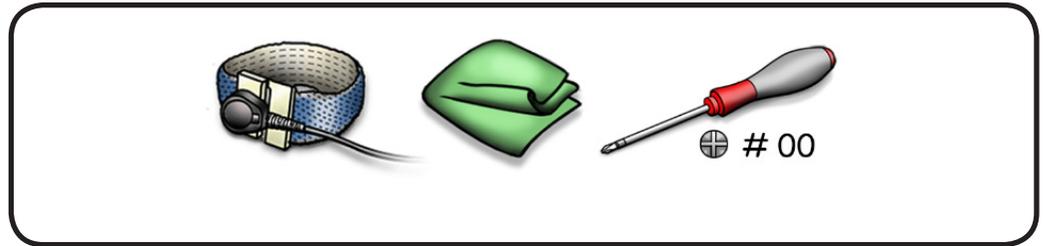

## Removal

**Note:** Although logic board is pictured here in relation to MagSafe board, the logic board would already be removed.

- 1** Remove 2 (7.6-mm) screws.
- 2** Lift out MagSafe board.

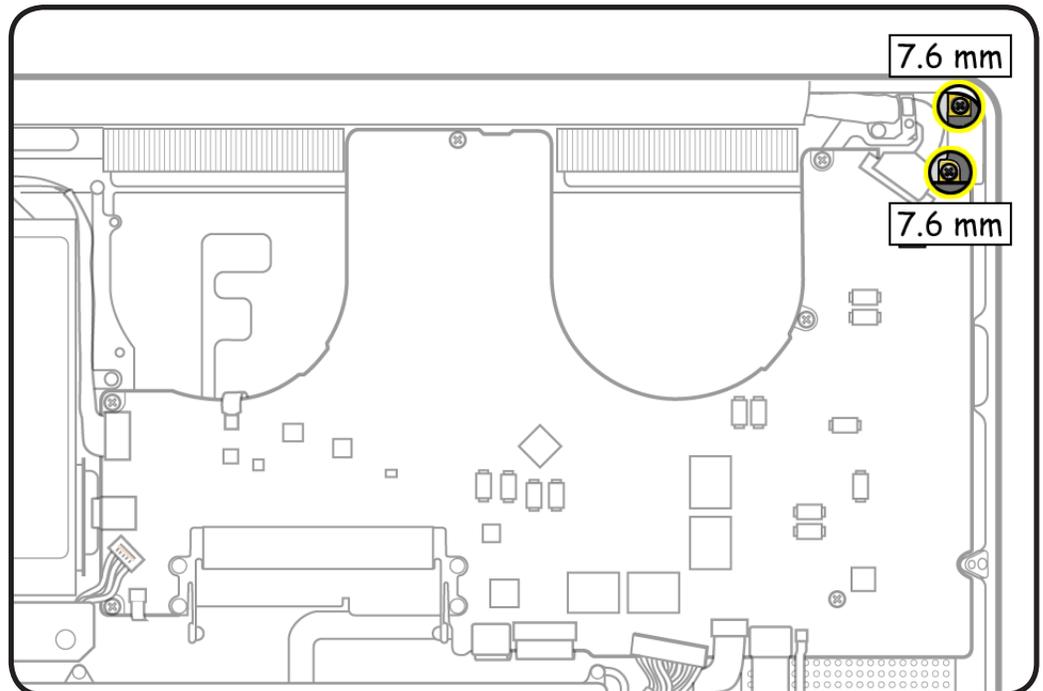





## Replacement

**Caution:** Plug in a **disconnected** adapter cable.



- 1 Making sure power is cut off, install MagSafe board screws.
- 2 Test port alignment by plugging in power cable from 4 angles.
  - If port is off center and cable does not seat securely, loosen MagSafe screws, realign port with cable in place, and secure screws.
  - If port seats correctly, continue.
- 3 Connect MagSafe cable to logic board.
- 4 Install logic board and remaining parts.
- 5 With computer fully assembled, test power with power cable.

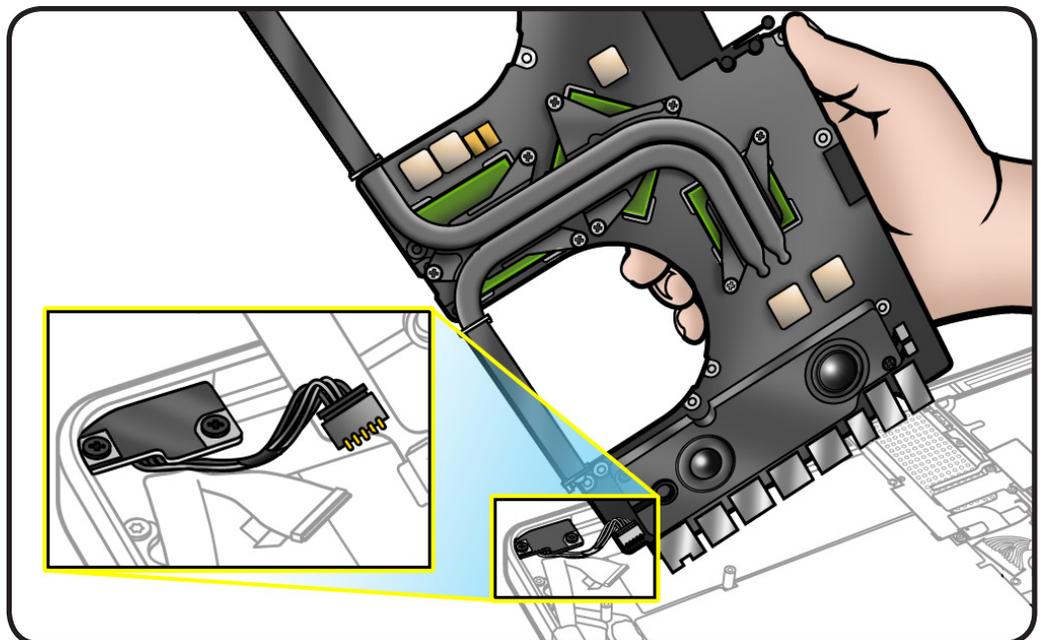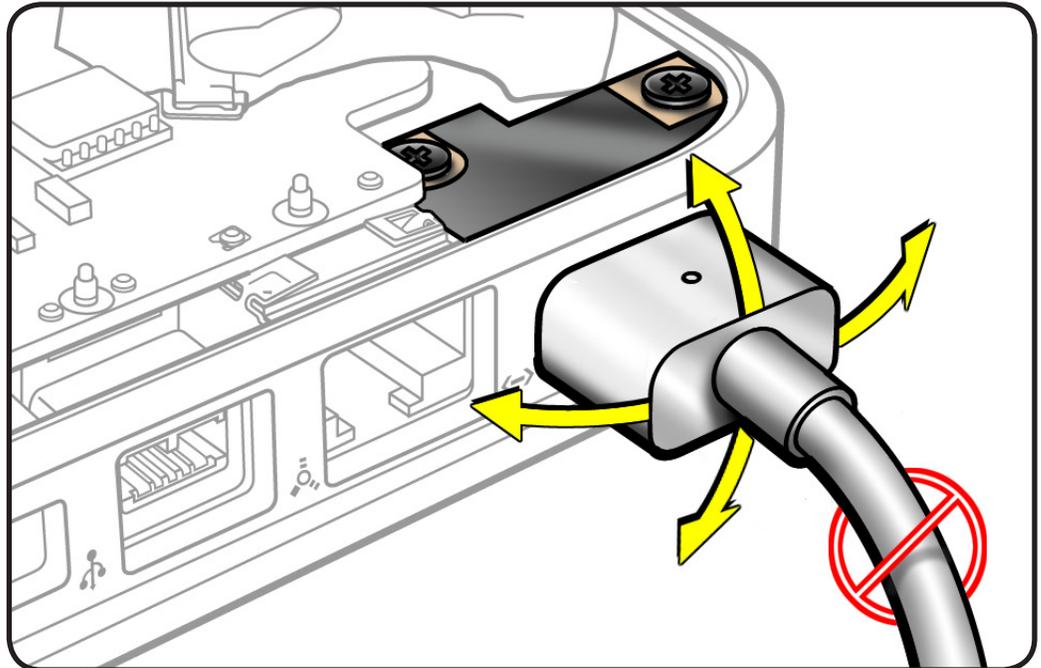




# Heatsink


## First Steps

Remove:

- [Bottom case](#)
- [Memory](#)
- [Fans](#)
- [Logic board](#)

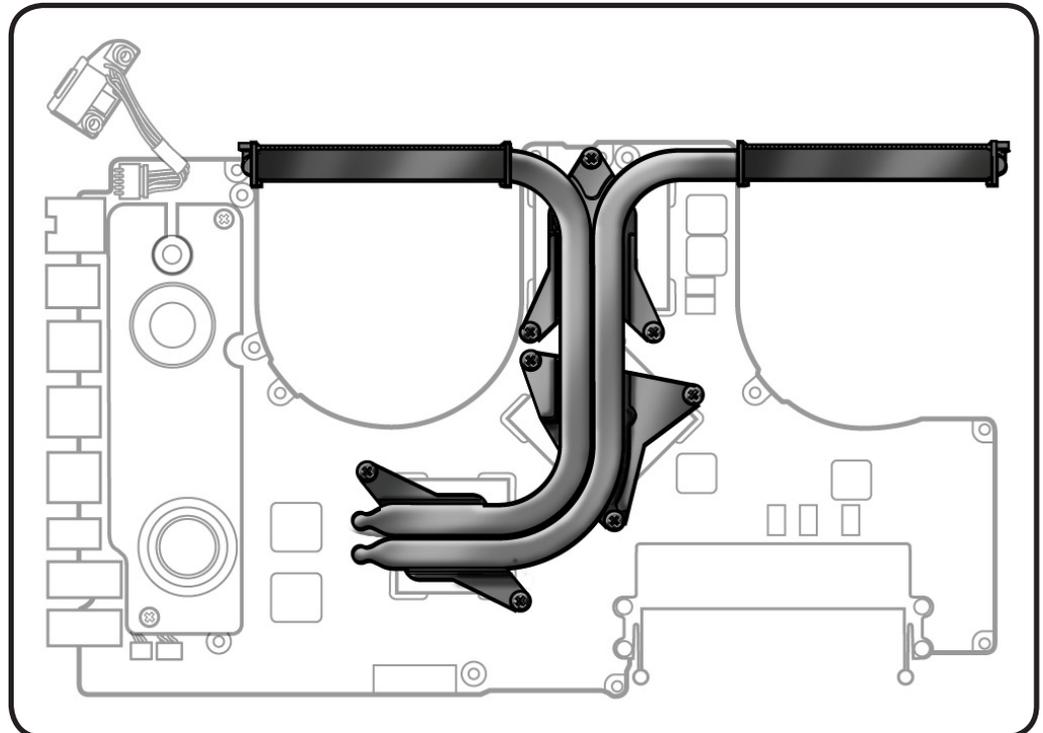


Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

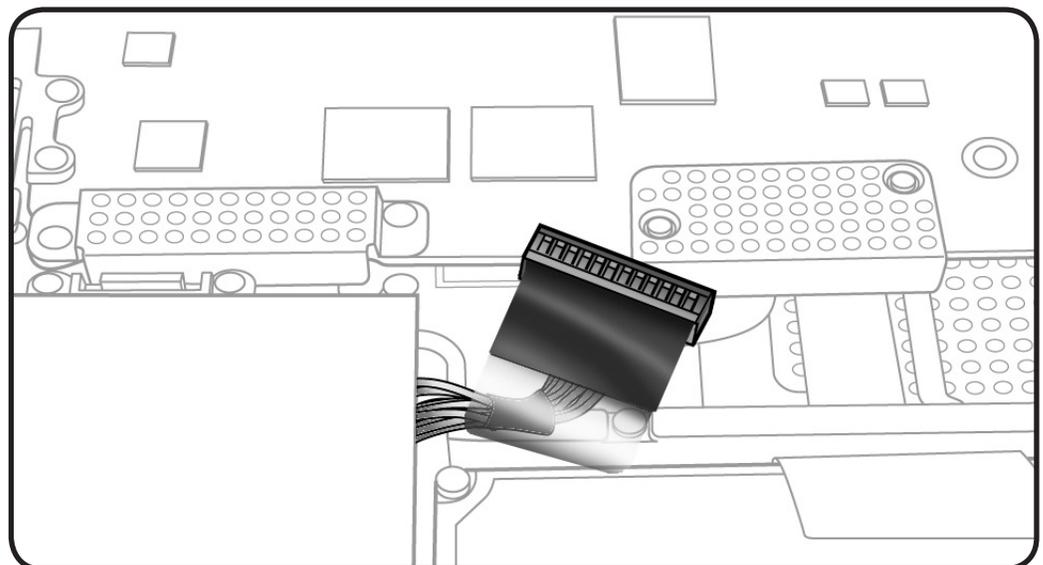



## Tools

- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Magnetized Phillips #0 or #1 screwdriver
- Thermal grease syringe
- Alcohol pads
- Black stick

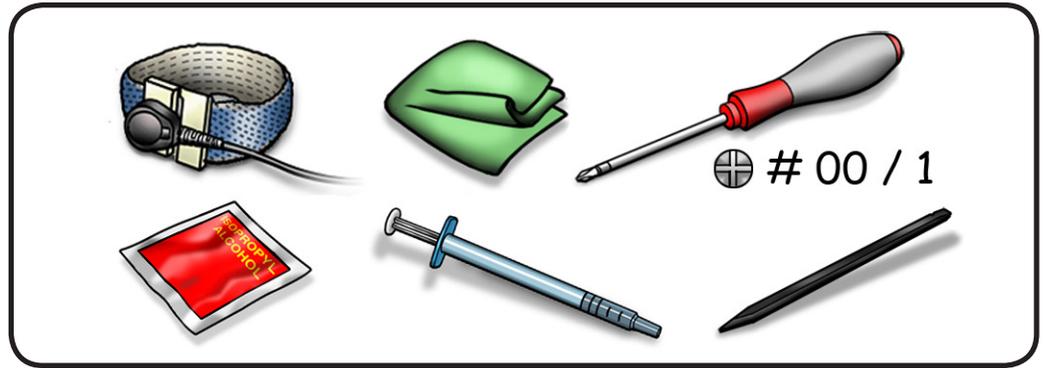


## Removal



**Caution:** Hold heatsink by edges, not by the heat pipes:


- 1 Disconnect the thermal sensor cable, if provided, using a black stick.

**Note:** Some heatsink models do not include a sensor cable.

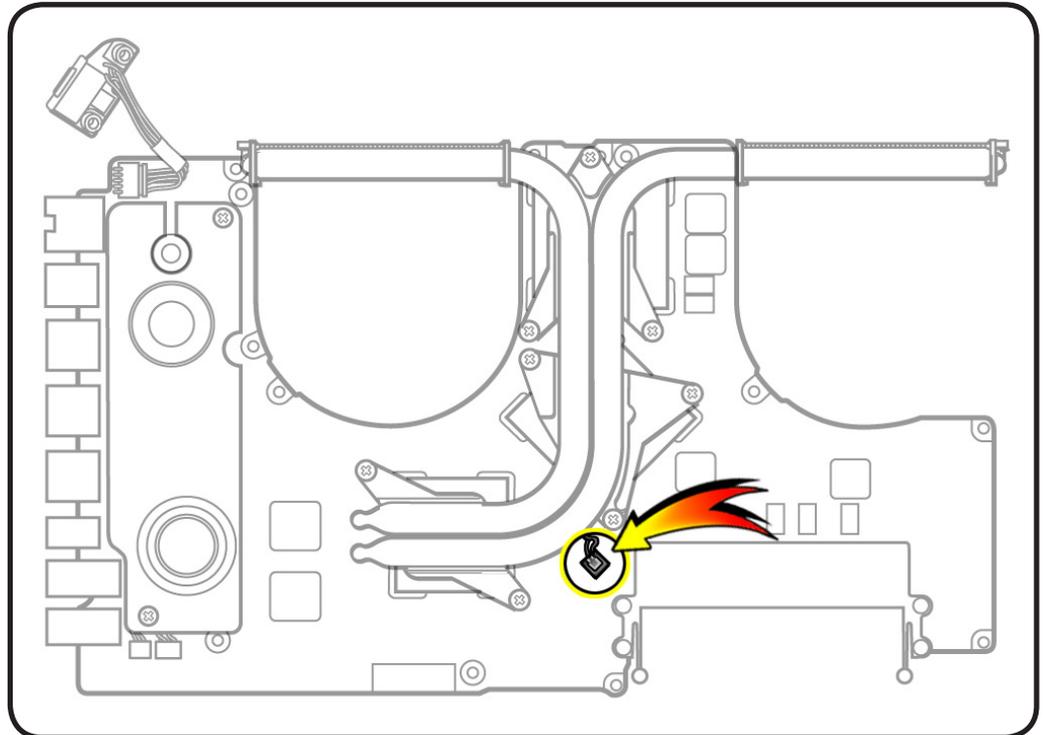




- 2** Remove 8 (8.35-mm) 922-8799 screws.

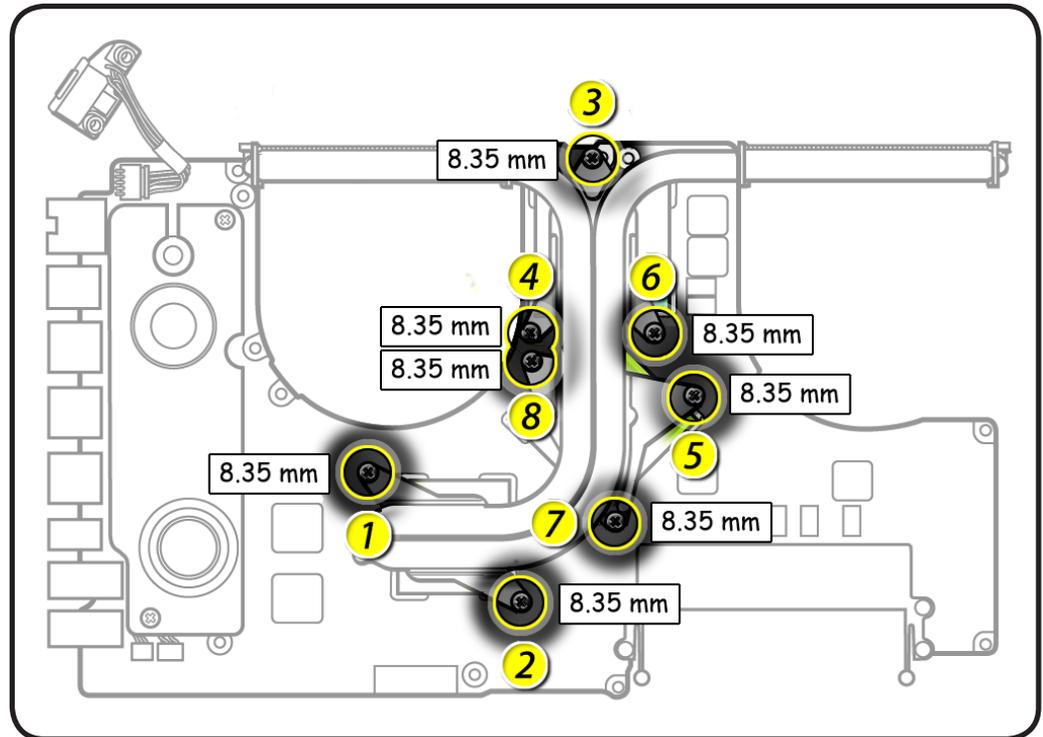


- 3** Keeping heatsink parallel to logic board, gently wiggle the heatsink to loosen the bond to the board.

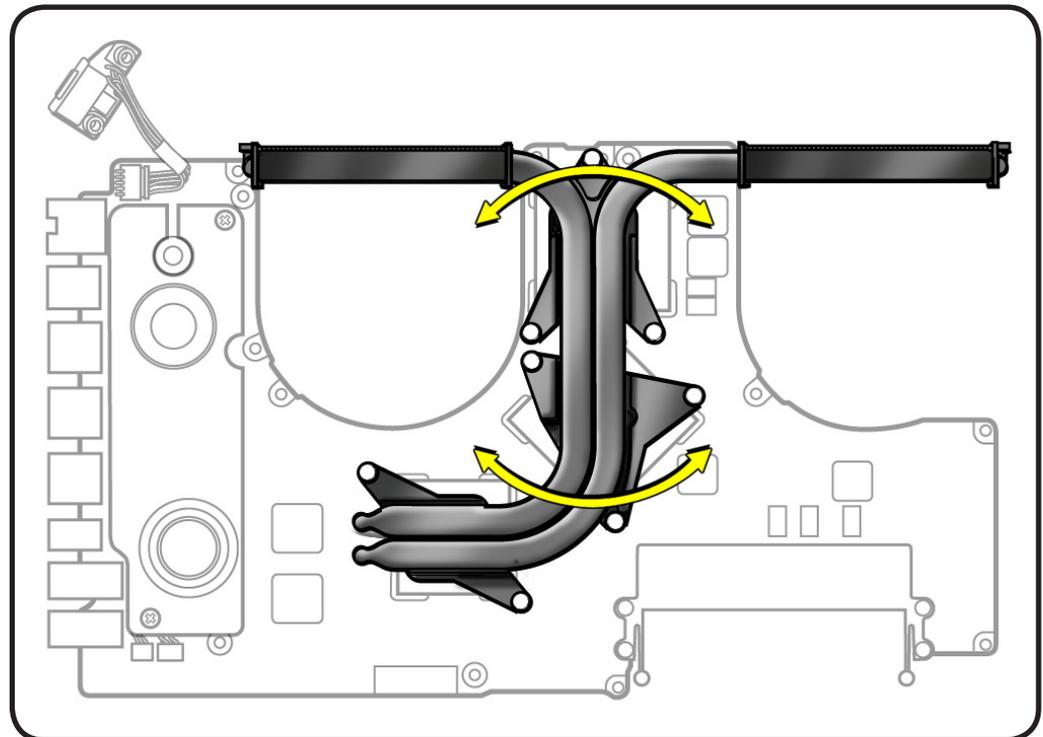



- 4 With a black stick, scrape off thermal grease and use alcohol pad to clean thermal pads and chips.

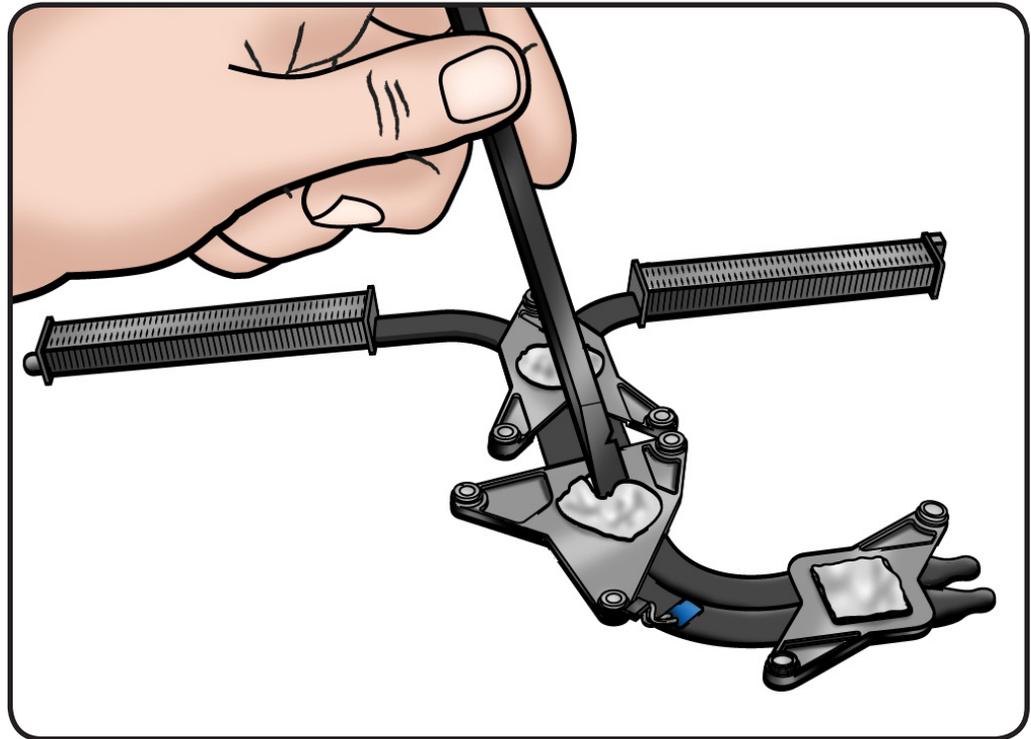


## Replacement

**Important:** New heatsinks include pre-applied thermal grease. Follow steps 1-2 only if re-installing the original heatsink.

- 1 **Caution:** The syringe contains enough thermal grease for 3 chips.

Use a pen to mark the syringe in thirds.

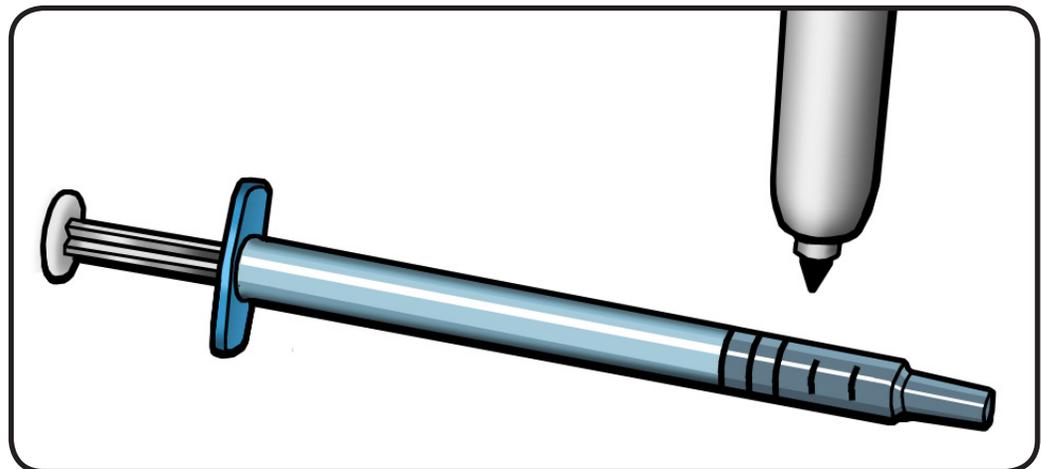





2 Inject 1/3 of grease on the center of each chip

3 **Important:** Connect the thermal sensor cable, if provided. The computer will not function with the sensor disconnected.

4 Lower the heatsink over the logic board.

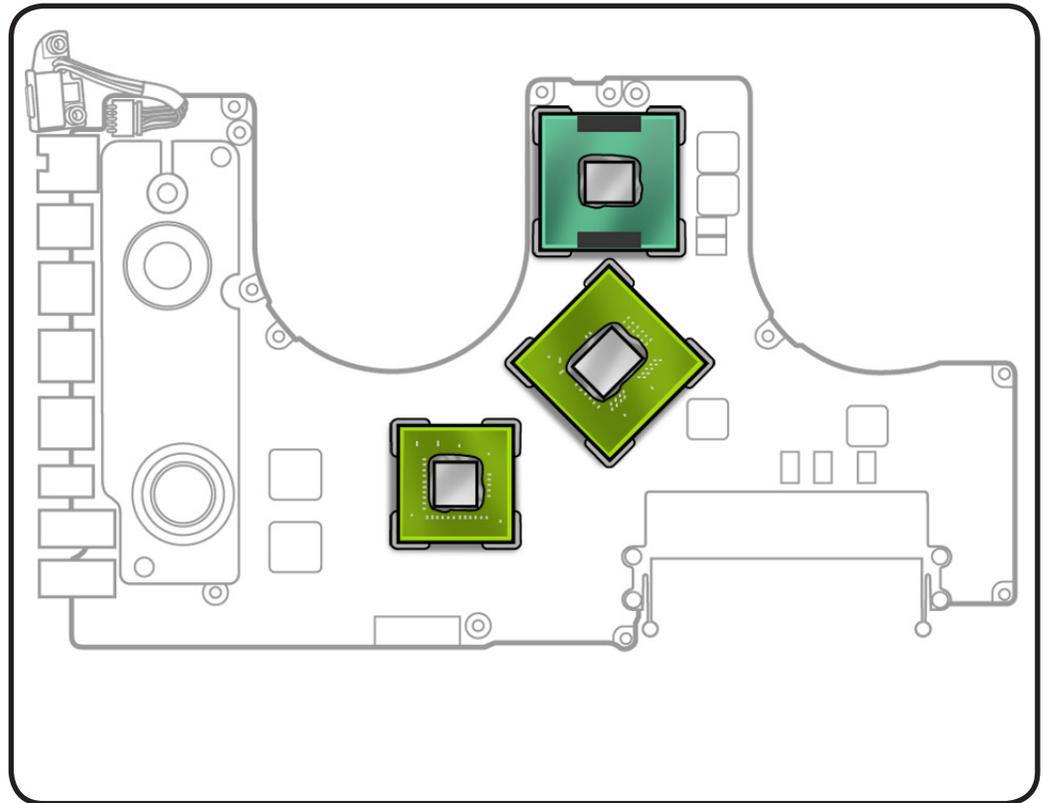

5 Install heatsink screws in order, 1/2 way first, then tighten the rest of the way.

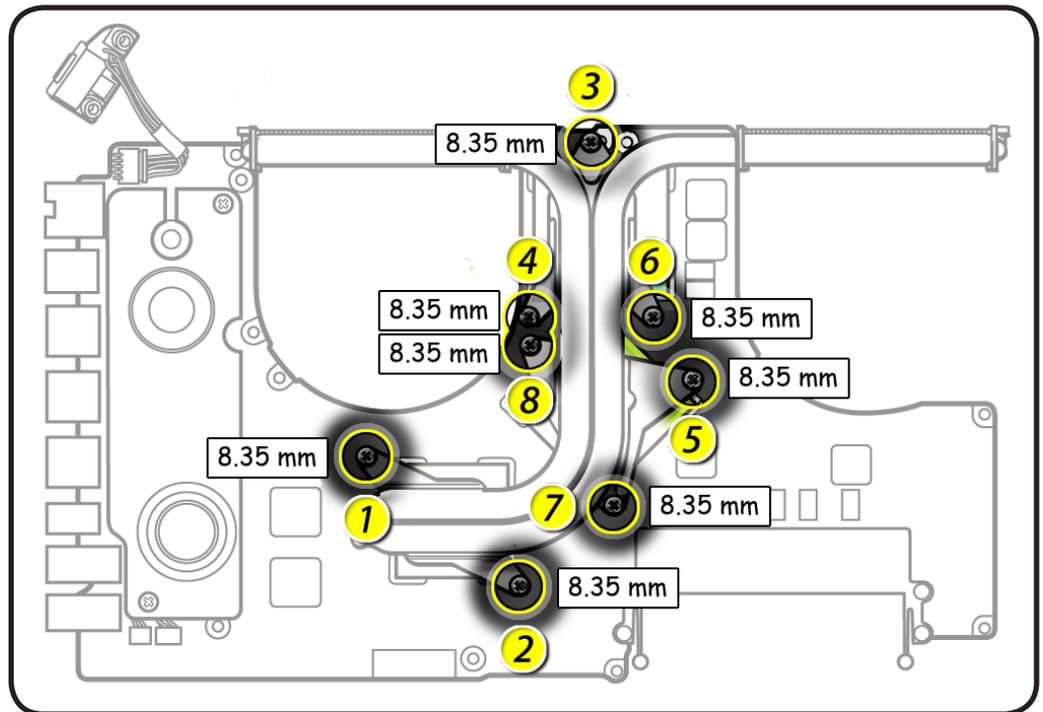




# Left Speaker


## First Steps

Remove:

- [Bottom case](#)
- [Memory](#)
- [Fans](#)
- [Logic board](#)

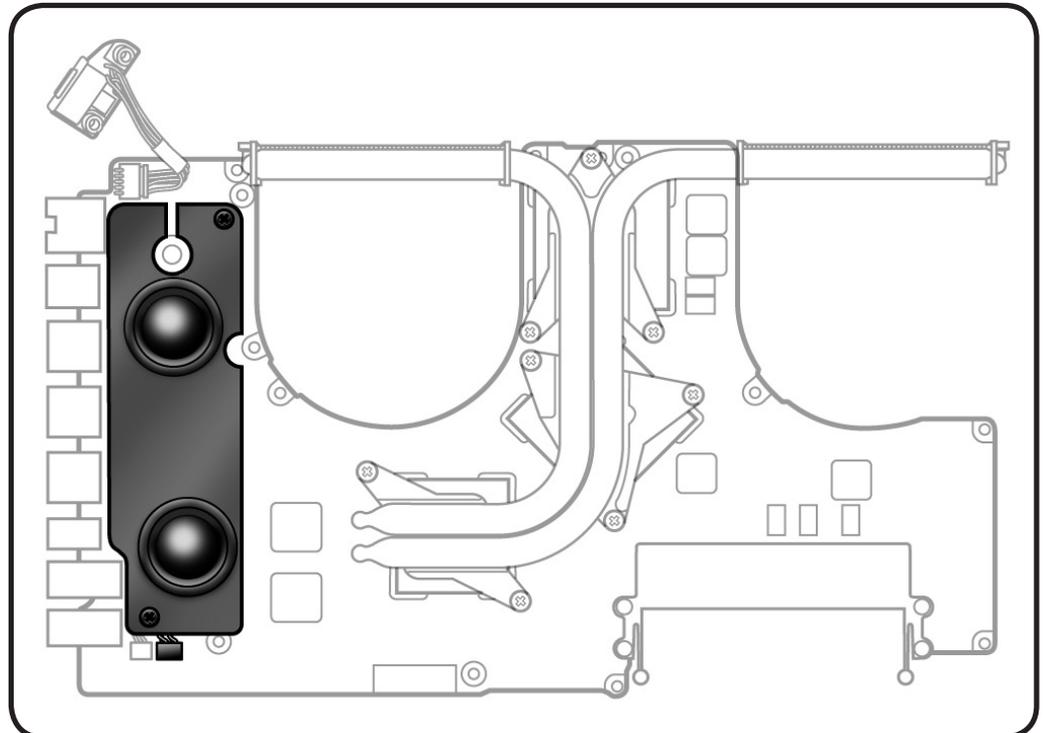


Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

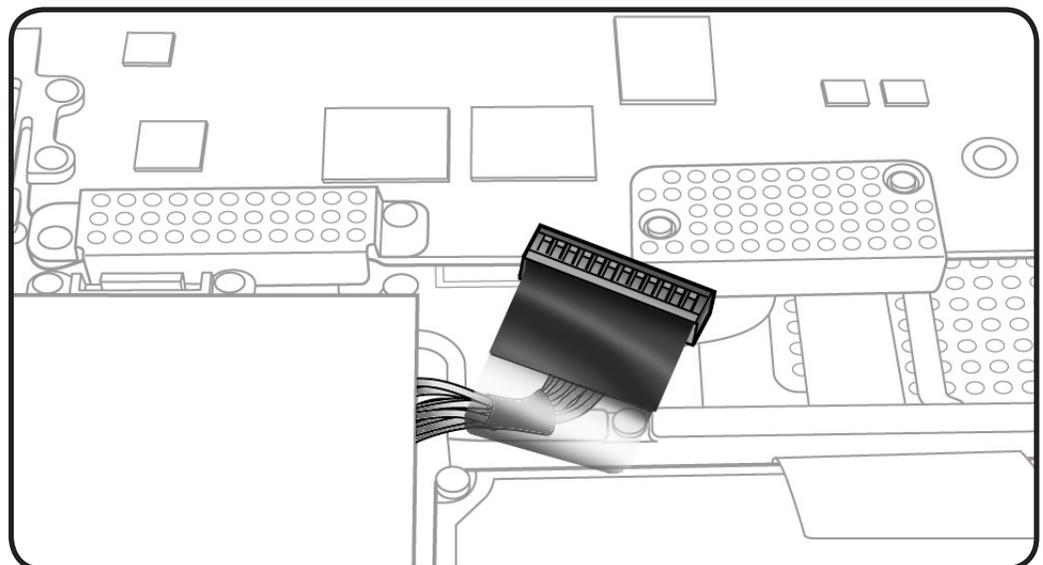



## Tools


- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Magnetized Phillips #00 screwdriver
- Black stick

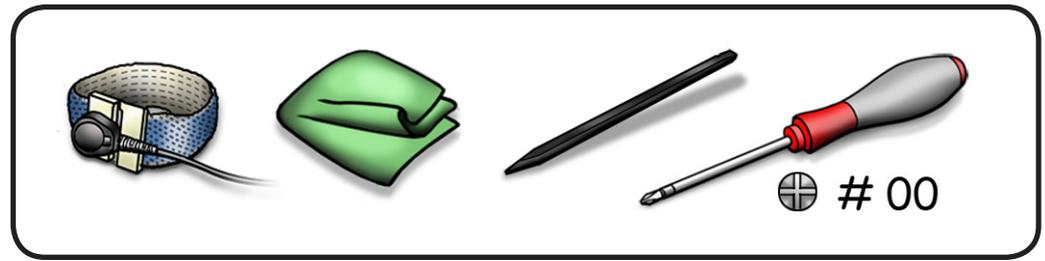

## Removal

**Note:** Do not touch the soft speaker cone.


- 1 Disconnect 2 cables:
  - microphone
  - speaker

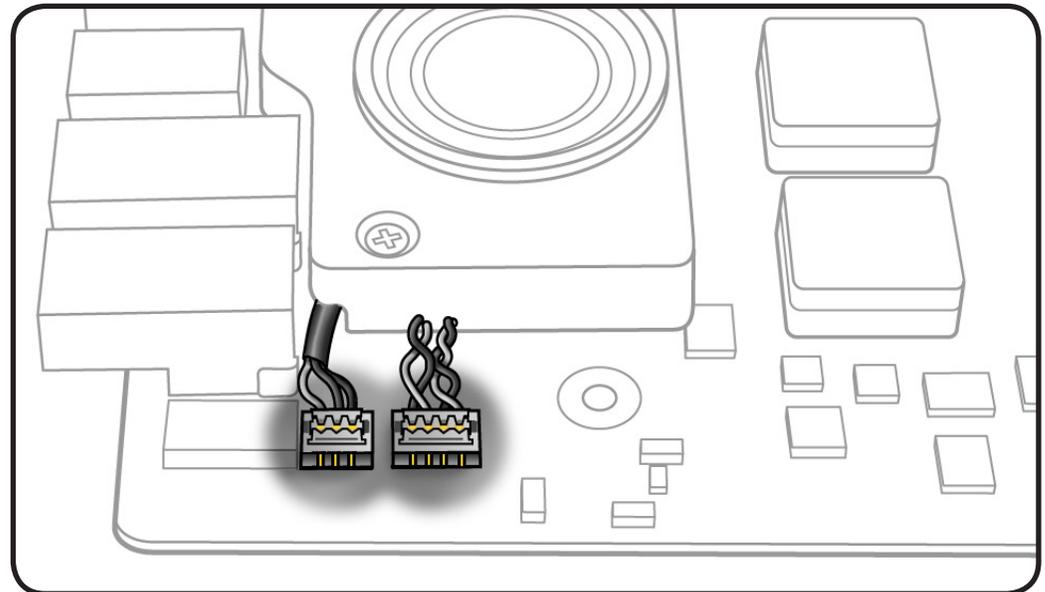



- 2 Remove 2 (8.1-mm) 922-8720 screws.

**Replacement Note:** If replacing the speaker, transfer [microphone cable](#) to replacement speaker.

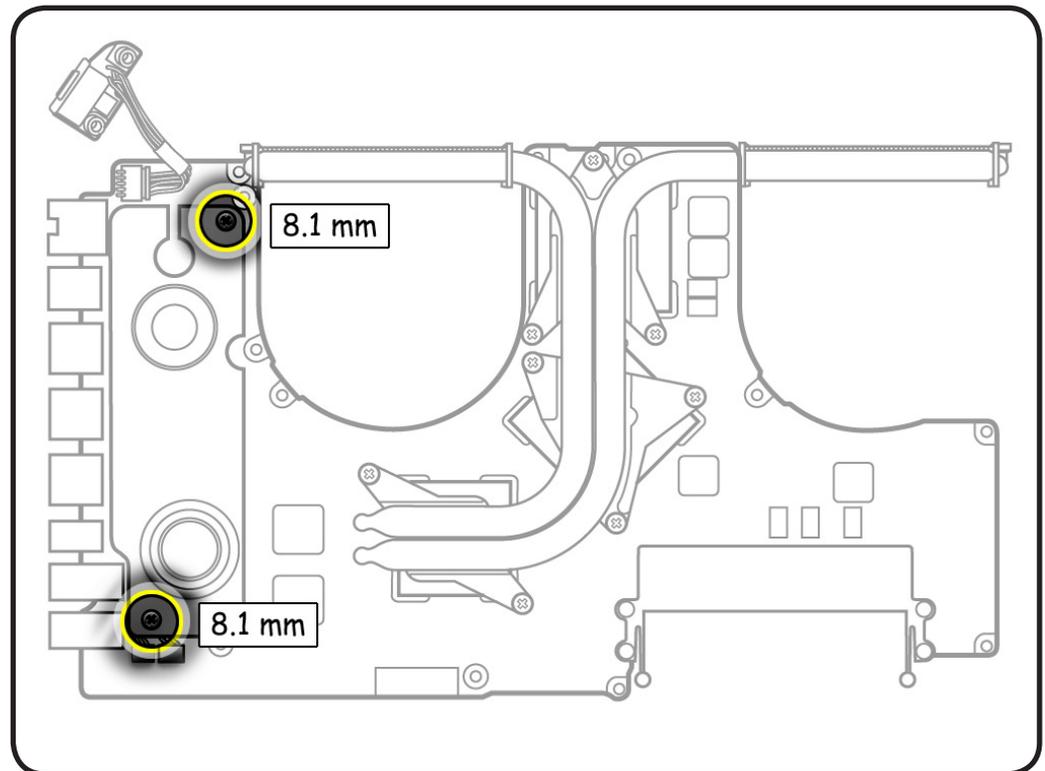




# Microphone Cable


## First Steps

Remove:

- [Bottom case](#)
- [Memory](#)
- [Fans](#)
- [Logic board](#)
- [Left speaker](#)

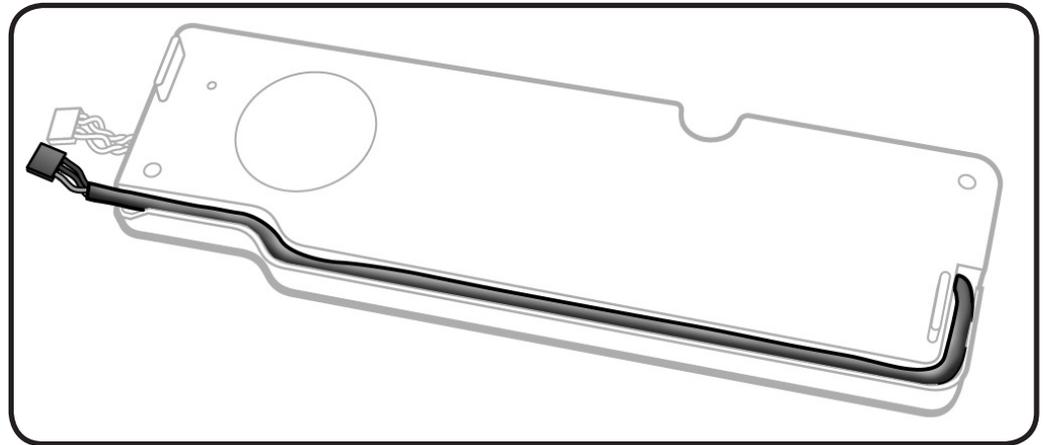

Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

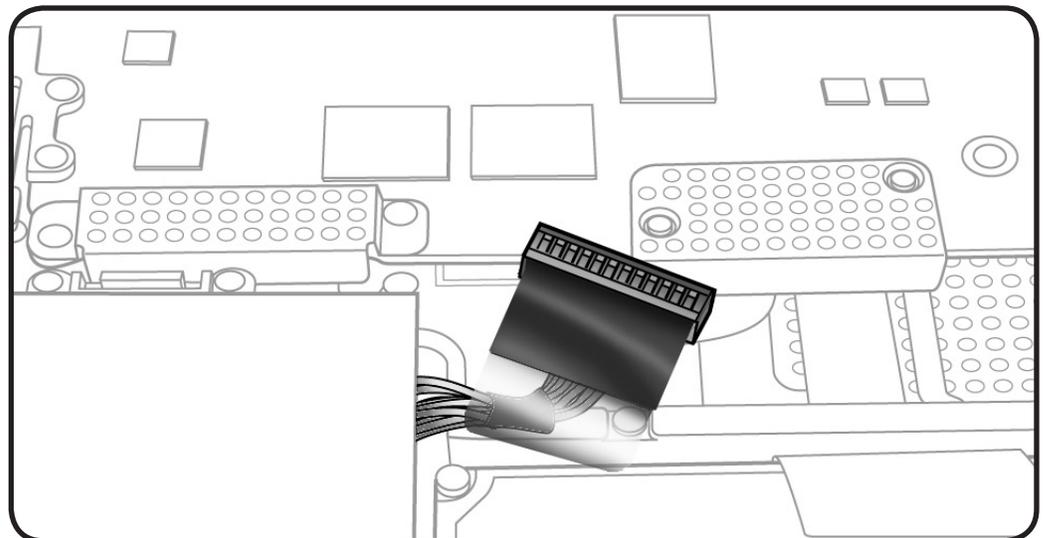

## Tools

- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Black stick






## Removal


**Note:** Do not touch the soft speaker cone.

- 1 Unroute microphone cable.

**Replacement Note:**  
When transferring microphone cable to speaker, make sure cable is recessed within speaker body.

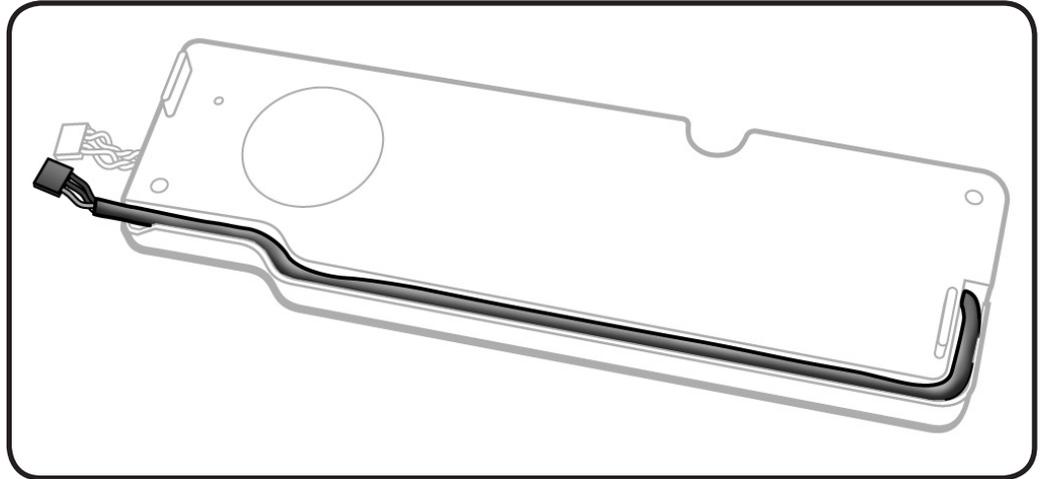

- 2 Turn over speaker, and carefully pry up the microphone gasket.

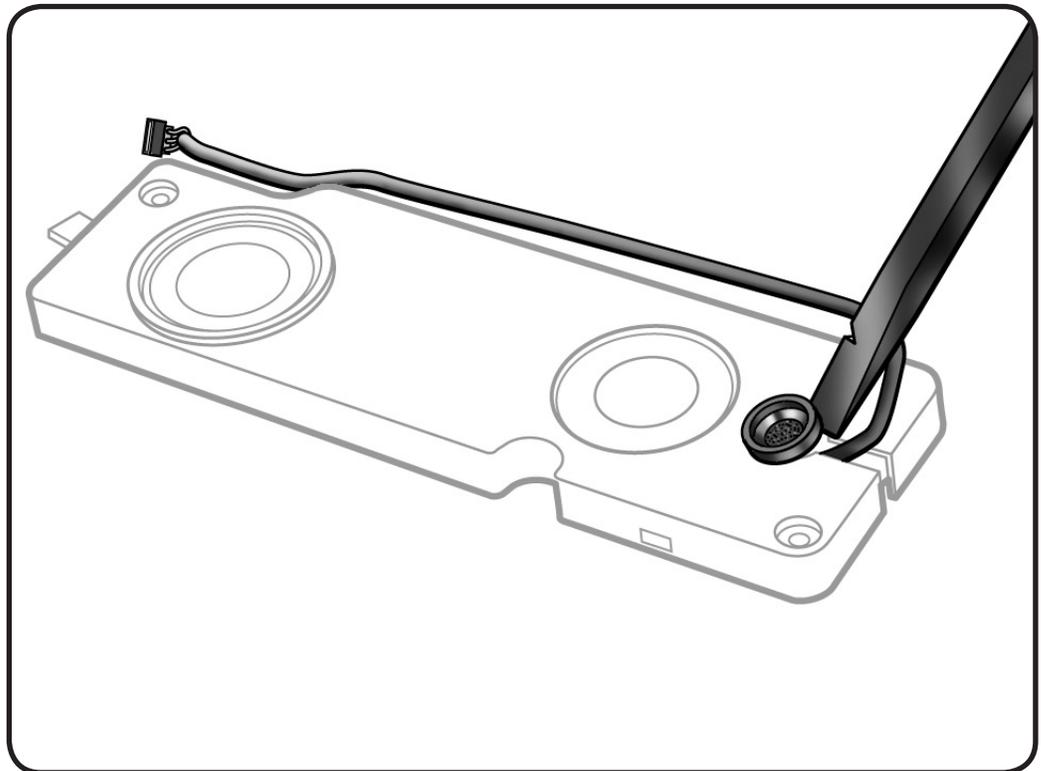




# Express Card Cage


## First Steps

Remove:

- [Bottom case](#)
- [Memory](#)
- [Fans](#)
- [Logic board](#)

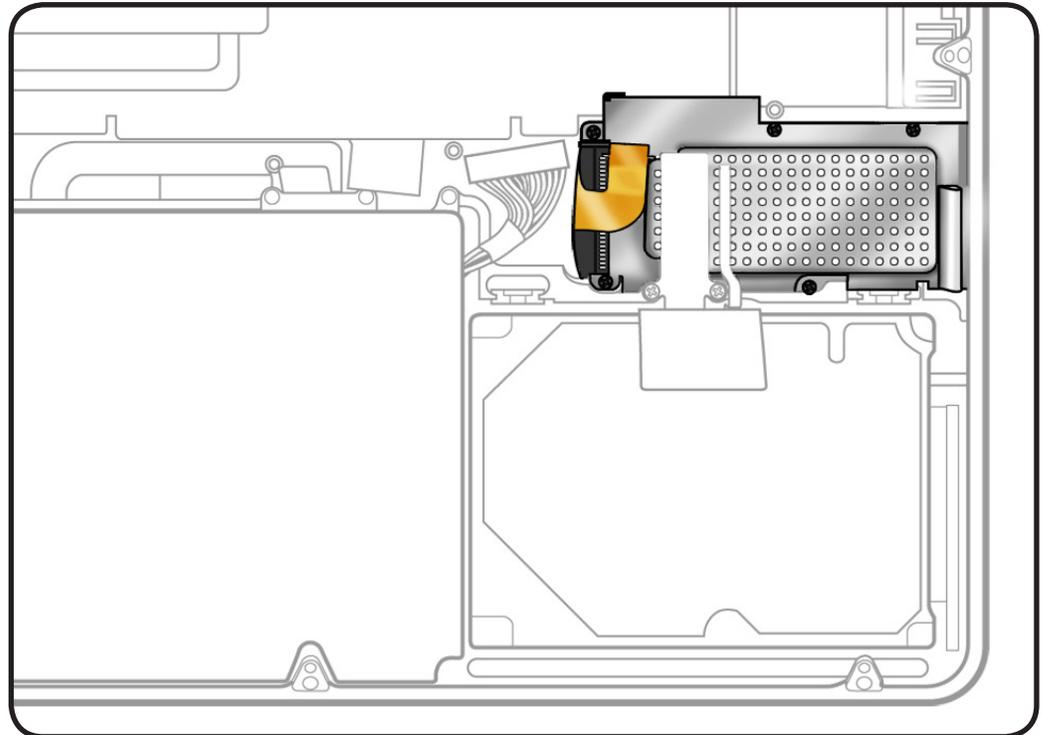

Before you begin this procedure, disconnect the battery from the logic board. Failure to do so could damage the computer.

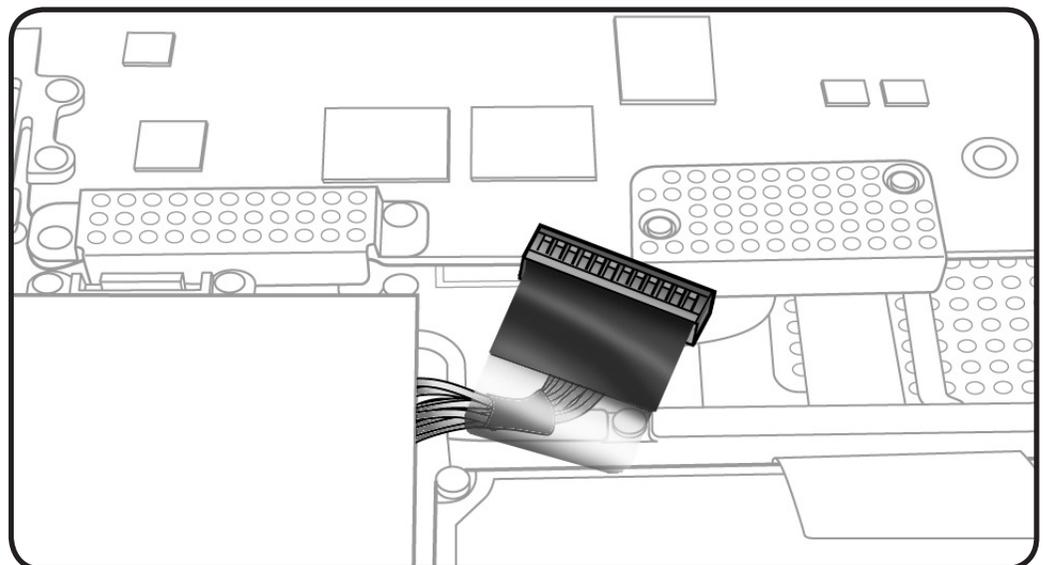




## Tools

- Clean, soft, lint-free cloth
- ESD wrist strap and mat
- Magnetized Phillips #00 screwdriver
- Black stick



## Removal

- 1 Remove 5 screws:
  - 2 (4-mm) 922-8981
  - 3 (2-mm) 922-8984

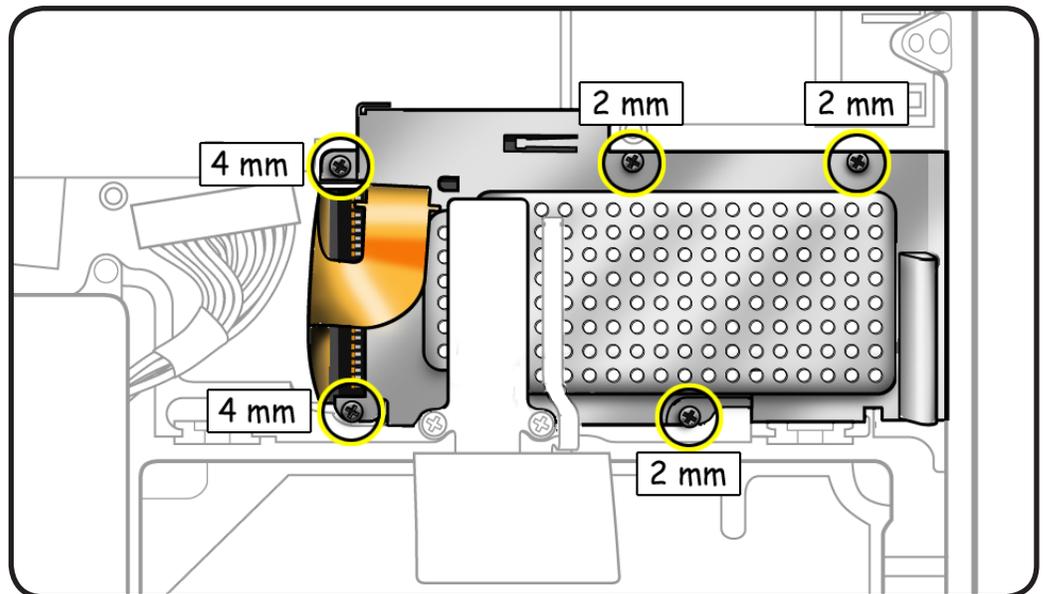




**2** Carefully peel up flex cables from card cage.

**3** Lift card cage from the top case.

**Replacement Note:**  
Carefully move aside flex cables to slide card cage into place.

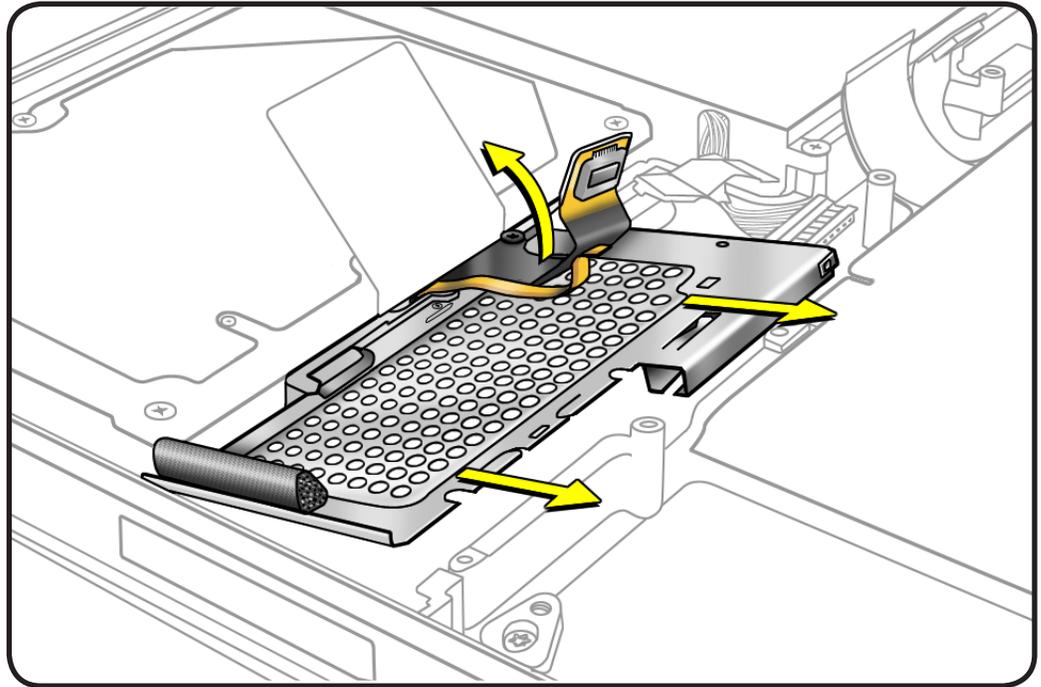



# Top Case

## First Steps


Remove:

- [Bottom case](#)
- [Battery](#)
- [Hard drive bracket](#)
- [Hard drive](#)
- [Memory](#)
- [Camera cable guide](#)
- [LVDS cable guide](#)
- [Fans](#)
- [Optical drive](#)
- [Display assembly](#)
- [Right speaker/  
subwoofer](#)
- [Logic board](#)
- [MagSafe board](#)
- [Express card cage](#)



## Tools

- Clean, soft, lint-free cloth
- ESD wrist strap
- Magnetized Phillips #00 screwdriver.

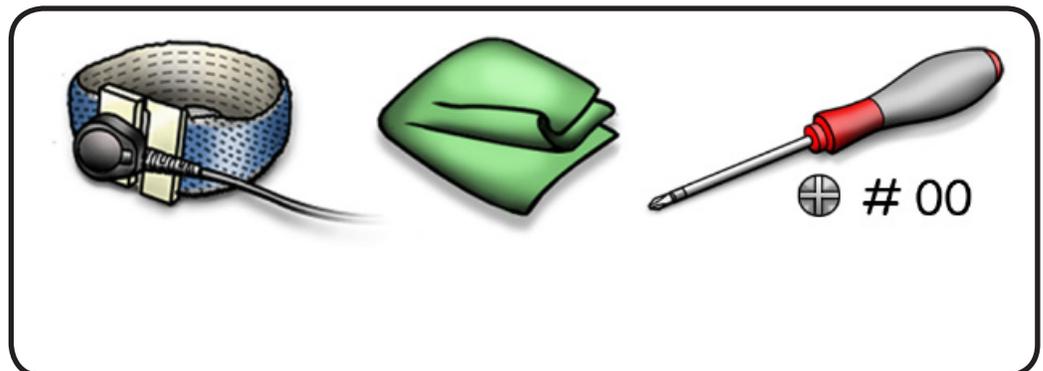




## Removal

With the first steps completed, the top case with keyboard is the remaining part.


The top case includes:

- battery indicator light (BIL) board and cable
- hard drive connector cable
- IR/sleep indicator cable
- center bracket

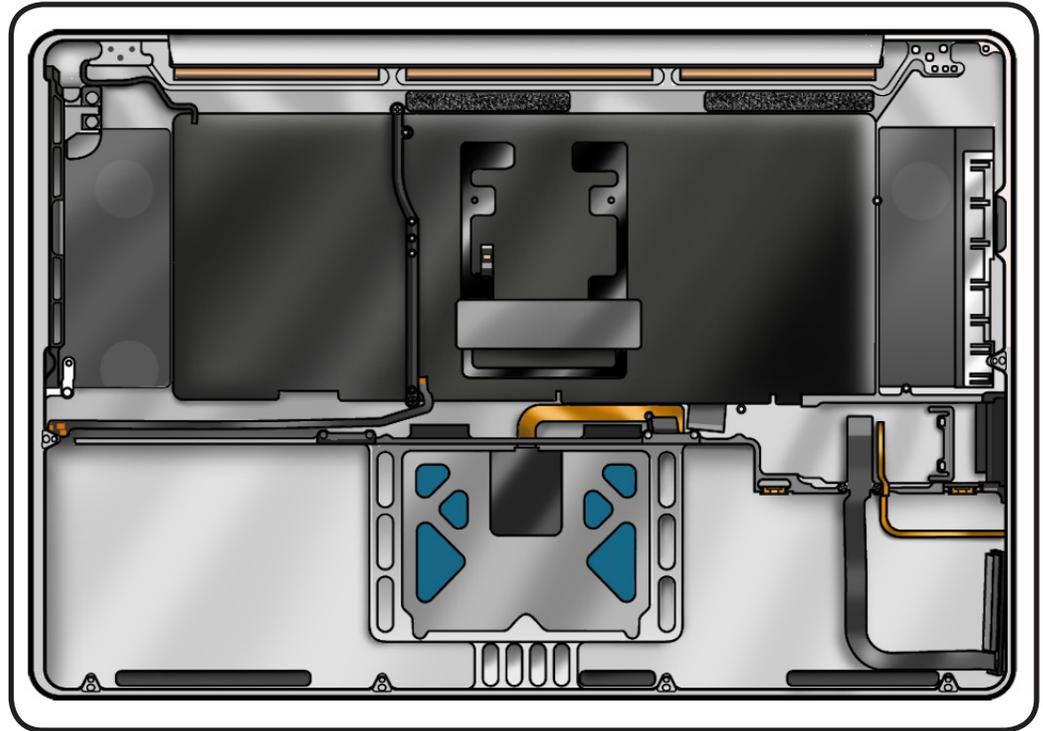

### Replacement Note:

Before assembling the computer, be sure to first transfer the [Express card cage](#) to the new top case.

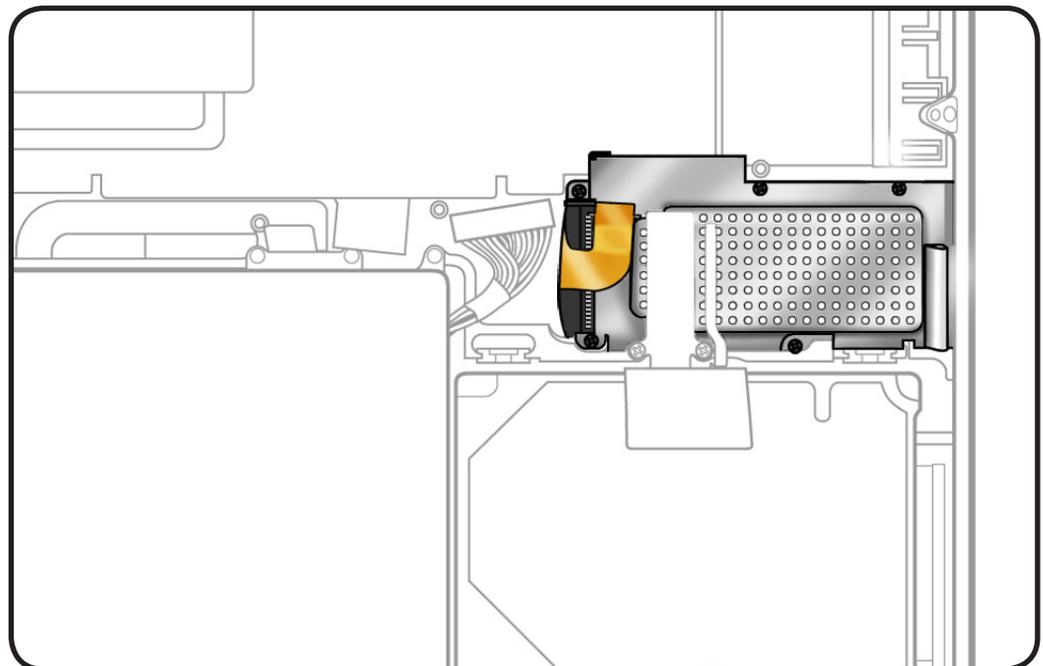

---

# **Apple Technician Guide**

## **Views**


---

### **MacBook Pro (17-inch, Early 2009)**




# Exploded View

## Main Assembly, 1 of 2: MacBook Pro (17-inch, Early 2009)

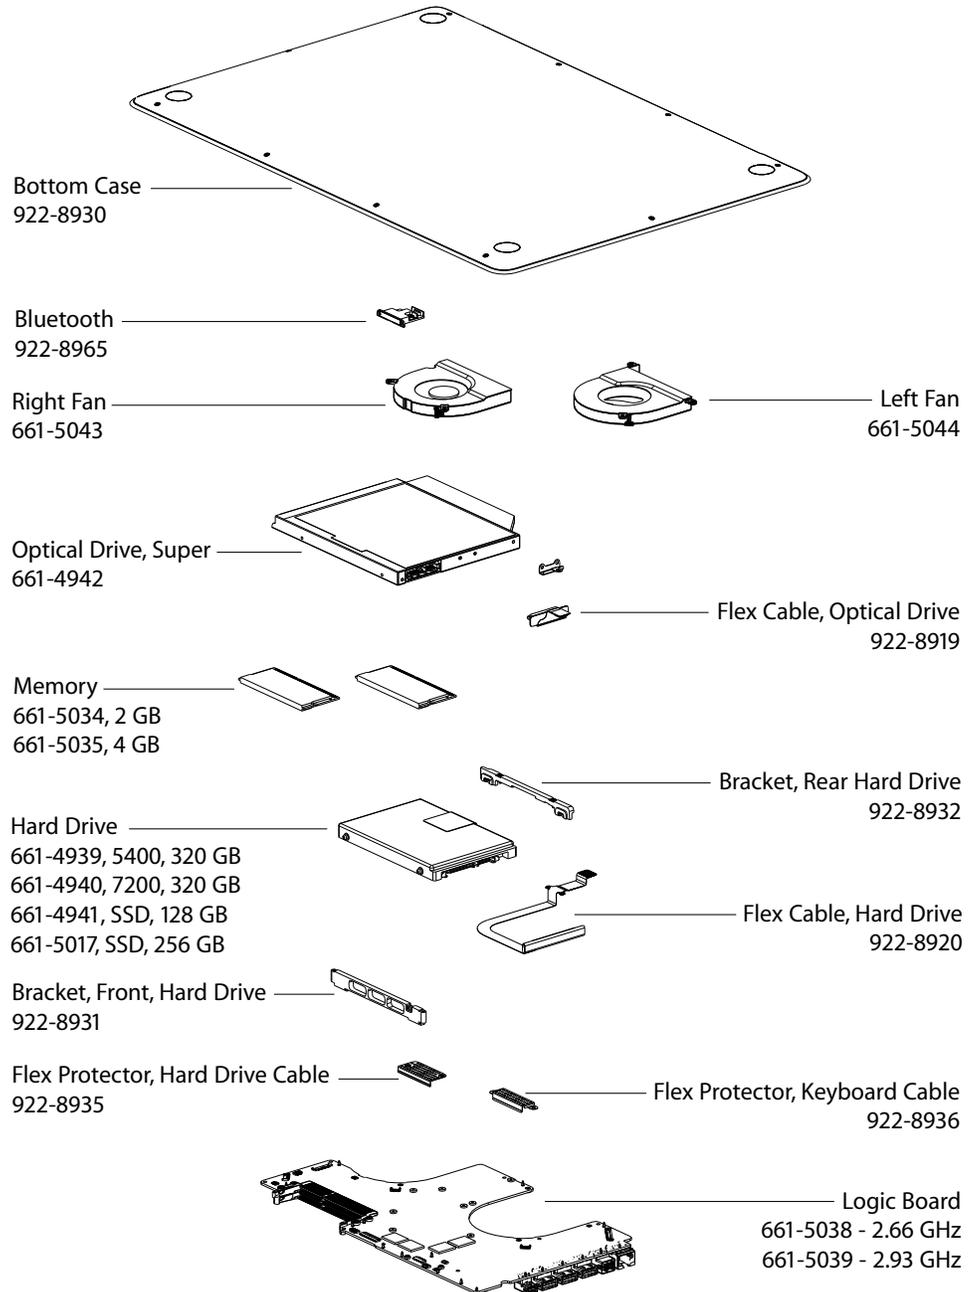




## Main Assembly, 2 of 2: MacBook Pro (17-inch, Early 2009)

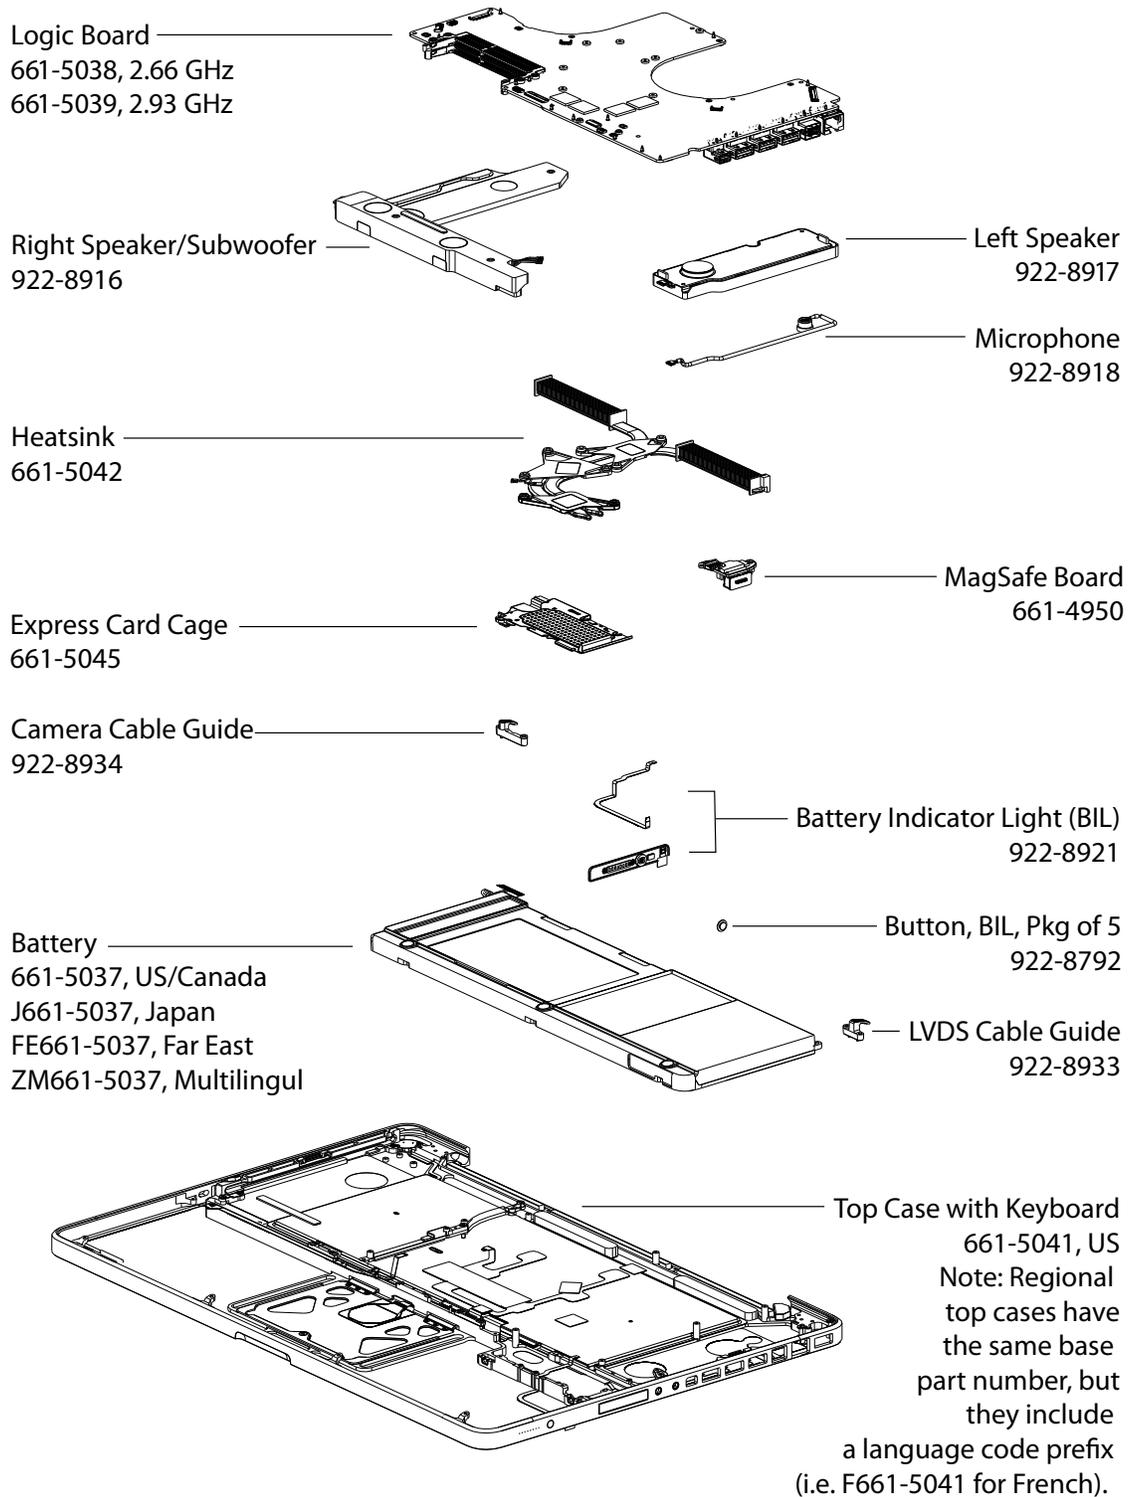



## Display Assembly (both models)

Display Clutch Cover, Pkg. of 5  
922-8937

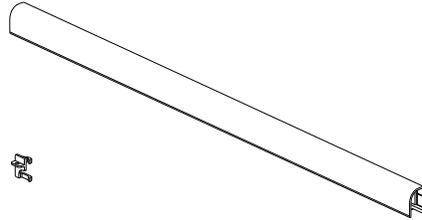


Clip, AirPort Antenna  
(in a 076-1343 kit)



AirPort Card  
661-4766, US/Canada/Latin America  
B661-4766, British  
J661-4766, Japanese - Kanji  
KH661-4766, Korean  
PA661-4766, PAL Pacific  
Z661-4766, International




AirPort Antenna  
922-8923

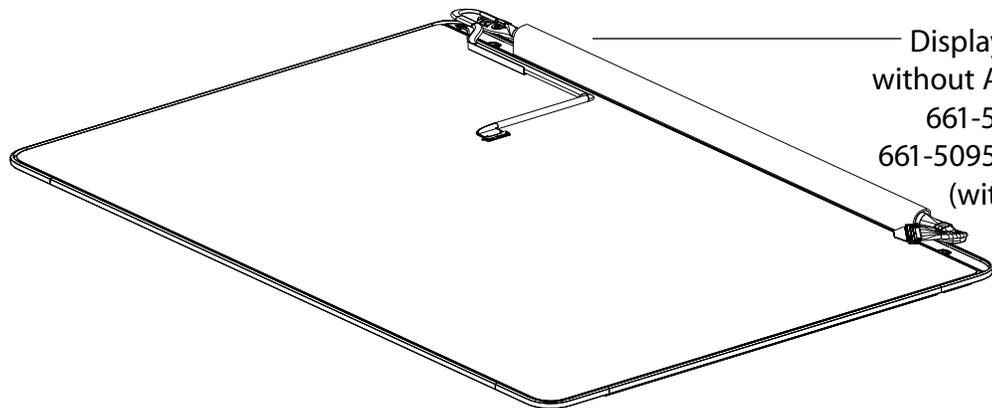

Display Assembly,  
without AirPort Card  
661-5040, Glossy  
661-5095, Anti-Glare  
(without glass)




## Main Assembly, 1 of 2: MacBook Pro (17-inch, Mid 2009)

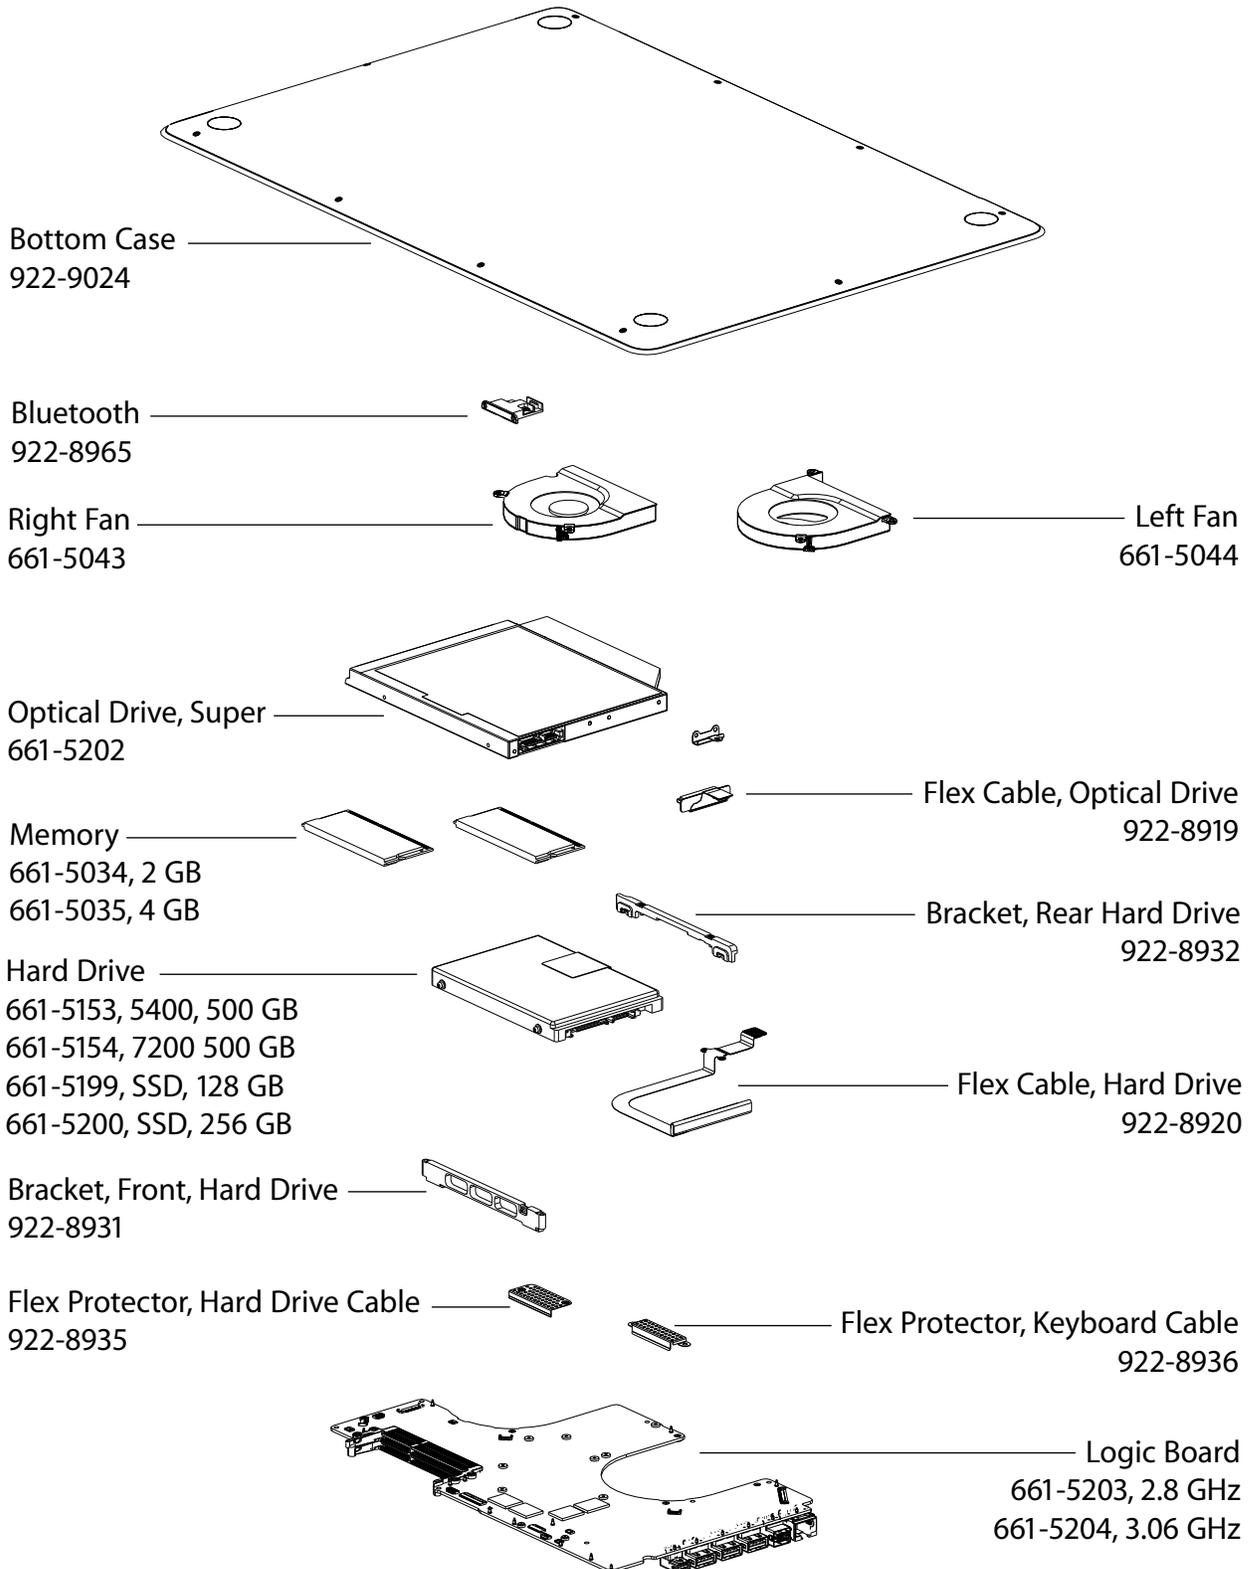



## Main Assembly, 2 of 2: MacBook Pro (17-inch, Mid 2009)

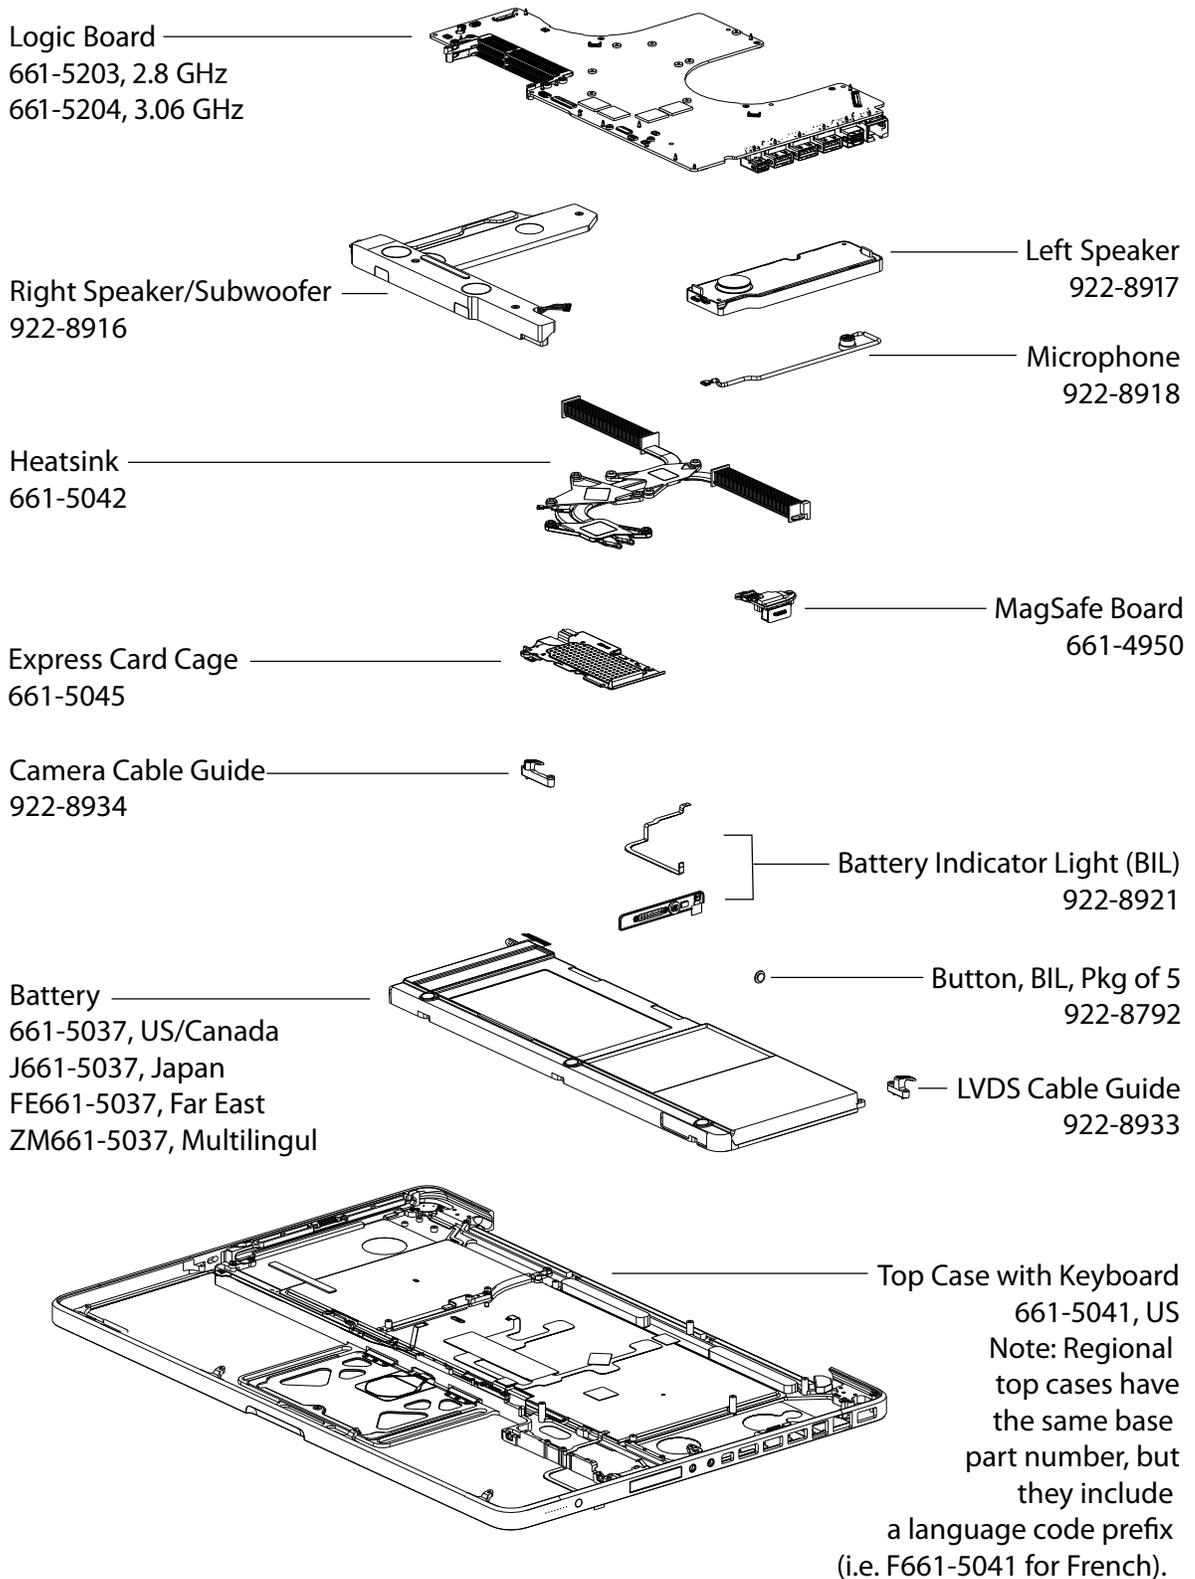




# External Views

## Front View





## Port View

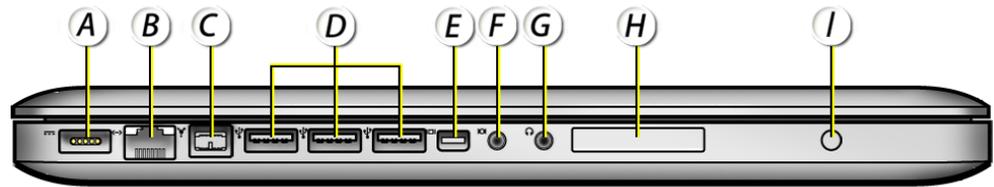

**A = MagSafe Power**

**B = Gigabit Ethernet**

**C = FireWire 800**

**D = USB 2.0 (3 high speed)**

**E = Mini DisplayPort (video out)**

**F = Audio In/Optical Digital Audio In**

**G = Headphone Out/Optical Digital Audio Out**

**H = Express Card Slot (34mm)**


**I = Battery Indicator Light (BIL) Button**



# Screw Location Diagrams

## Bottom Case

All screw sizes shown are approximate and represent the total length of the screw.

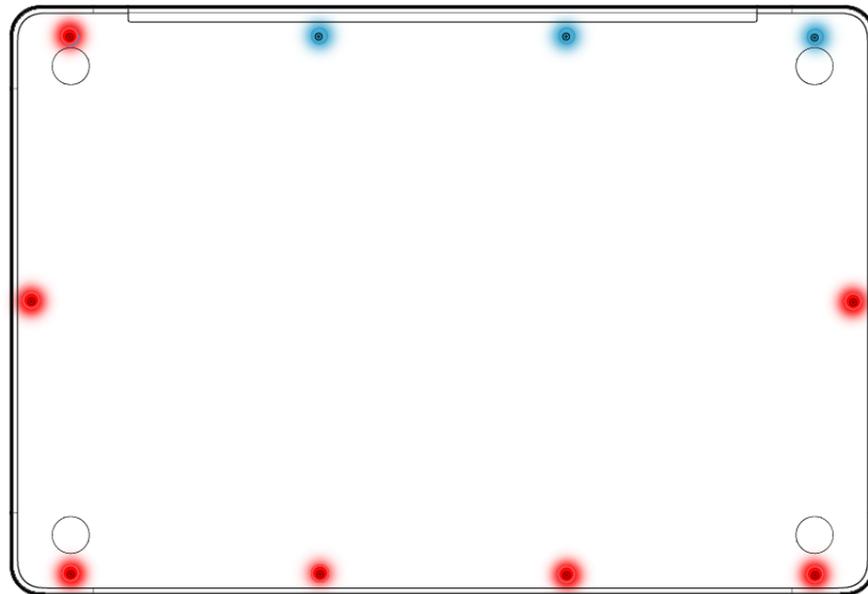

922-8986  
3 mm




922-8985  
13.5 mm





## Main Modules

All screw sizes shown are approximate and represent the total length of the screw.

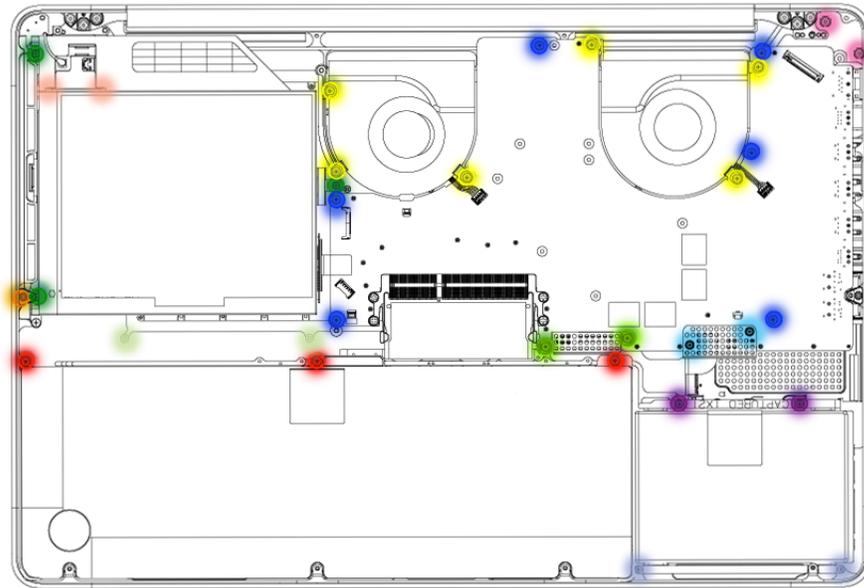

922-8987   
5 mm Tri-Lobe

922-8924   
3.1 mm T6

922-8719   
3.5 mm

922-8929   
7.6 mm

922-8329   
2.2 mm

922-8982   
12.4 mm

 922-8754  
3.1 mm

 922-8754  
3.1 mm

 922-xxxx  
(Captured)  
5.5 mm

 922-8754  
3.1 mm



 922-8983  
1.8 mm

 922-8648  
10 mm



## Display Assembly

All screw sizes shown are approximate and represent the total length of the screw.

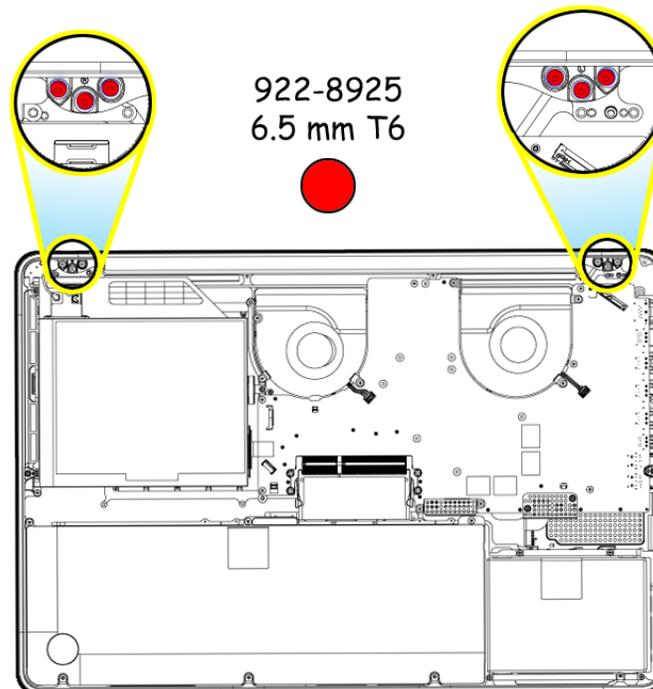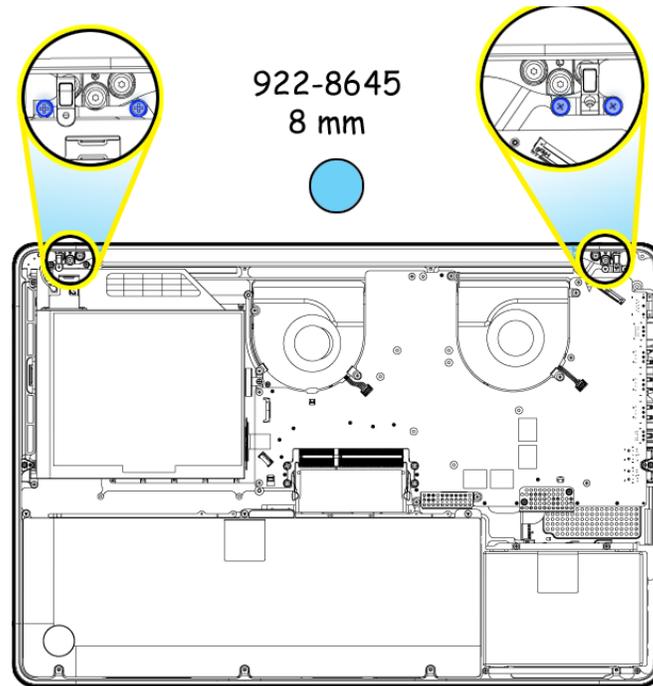

---

# Feedback

We want your feedback to help improve this and future Technician Guides!

Please email any comments to:

[smfeedback4@apple.com](mailto:smfeedback4@apple.com)